

# OPERATING INSTRUCTIONS

Original instructions



## Hygienic valves

### GEA Hygienic leakage butterfly valve

GEA Tuchenhagen GmbH  
Document number: 430BAL008984  
Language: EN-GB / Date: 25.09.2025

Copyright © GEA Tuchenhausen GmbH 2024. All rights reserved. No liability will be accepted for damage resulting from non-observance of this document. If you have any questions or require clarification concerning the use of this document, contact *Customer service*.

# Table of Contents

<b>1</b>	<b>General</b>	<b>8</b>
1.1	Information about the document	8
1.1.1	Purpose and structure of the document	8
1.1.2	Design elements	8
1.1.3	Reading obligation and storage	9
1.2	Manufacturer address	9
1.3	Customer service	9
1.4	Declarations of conformity	10
<b>2</b>	<b>Safety</b>	<b>13</b>
2.1	Intended use	13
2.1.1	Requirements for the operation	13
2.1.2	Flow speed	13
2.1.3	Pressure equipment directive	13
2.1.4	ATEX directive	14
2.1.5	Improper operating conditions	14
2.2	Modification	14
2.3	Structure of warning notices	14
2.3.1	Preceding warning notices	14
2.3.2	Integrated warning notices	15
2.3.3	Signal words	15
2.4	Personnel qualification	16
2.5	General safety instructions	16
2.5.1	General hazard	16
2.5.2	Mechanical hazard	17
2.5.3	Electrical hazard	17
2.5.4	Thermal hazard	17
2.6	Safety devices	18
2.7	Residual dangers	18
2.8	Safety signs	20
2.9	Emergency measures	21

<b>3</b>	<b>Description</b>	<b>22</b>
3.1	Structure and function	22
3.1.1	Design	22
3.1.1.1	Pneumatic Butterfly Valve with Control Top	22
3.1.1.2	Pneumatic Butterfly Valve without Control Top	22
3.1.1.3	Butterfly Valve Body without Actuator	23
3.1.1.4	Manual Actuator Type H	23
3.1.2	Functional description	23
3.1.2.1	Pneumatic Actuator	23
3.1.2.2	Actuator A.1	24
3.1.2.3	Actuator A.2	24
3.1.2.4	Manual Actuator Type H	24
3.1.2.5	Valve assembly without actuator	25
3.1.3	Signs	26
3.1.4	Protective devices	26
3.2	Technical data	27
3.2.1	Type plate	27
3.2.2	Technical data	27
3.2.2.1	Personal protective equipment	29
3.2.3	Resistance and permitted operating temperature of the sealing materials	30
3.2.4	Pipe ends - General table of measurements	31
3.2.5	Lubricants	32
<b>4</b>	<b>Storage and transport</b>	<b>33</b>
4.1	Scope of supply	33
4.2	Storage	33
4.3	Transport	33
<b>5</b>	<b>Assembly and installation</b>	<b>34</b>
5.1	Notes on installation	34
5.2	Pneumatic connection	34
5.2.1	Air requirement	34
5.2.2	Establishing hose connections	34
5.2.3	Actuator with T.VIS control top	34
5.2.4	Actuator without a control top	34
5.3	Electrical connections	35
5.3.1	Electrical connection with T.VIS control top	35
5.3.2	Adjusting the proximity switch – actuator without T.VIS	35
5.4	Retrofitting a proximity switch	37

<b>6</b>	<b>Commissioning</b> .....	<b>38</b>
6.1	Preparing commissioning.....	38
6.2	Restarting .....	38
<b>7</b>	<b>Operation and control</b> .....	<b>39</b>
7.1	Monitoring operation.....	39
7.2	Shutdown.....	39
<b>8</b>	<b>Cleaning</b> .....	<b>40</b>
8.1	General .....	40
	8.1.1 Cleaning process examples.....	40
	8.1.2 Cleaning results.....	40
	8.1.3 Cleaning the leakage cavity.....	41
8.2	Passivation .....	42

<b>9</b>	<b>Maintenance</b>	<b>43</b>
9.1	Carrying out inspections	43
9.1.1	Checking the pneumatic connection	43
9.1.2	Checking the electrical connection	43
9.1.3	Check mechanical connections	43
9.1.4	Checking the signs on the valve	43
9.2	Servicing intervals	44
9.3	List of tools	44
9.4	Prior to removal	44
9.5	Removing the valve	45
9.5.1	Removing control top T.VIS M-15	45
9.5.2	Dismantling actuator head T.VIS A-15	45
9.5.3	Removing the Valve	46
9.5.4	Disassembling the pneumatic actuator	47
9.5.4.1	Taking out the actuator	47
9.5.4.2	Dismantling the actuator parts	47
9.5.5	Disassembling the Manual Actuator	48
9.5.6	Dismantling the valve flap into individual parts	48
9.6	Installing the valve	49
9.6.1	Tightening torques	49
9.6.2	Mounting the valve flap from individual parts	50
9.6.3	Mounting the manual actuator H	51
9.6.4	Mounting the individual parts on the actuator	52
9.6.5	Mounting the drive	52
9.6.6	Installing the valve	53
9.6.7	Mounting the initiator	53
9.6.8	Mounting control top T.VIS M-15	53
9.6.9	Mounting control top T.VIS P-15 and A-15	54
9.7	Maintenance	56
9.7.1	Cleaning the valve	56
9.7.2	Lubricating seals and threads	57
<b>10</b>	<b>Malfunctions</b>	<b>58</b>
<b>11</b>	<b>Decommissioning, dismantling and disposal</b>	<b>59</b>
11.1	Decommissioning	59
11.2	Dismantling	59
11.3	Disposal	59

<b>12</b>	<b>Replacement parts</b> .....	<b>61</b>
12.1	Order information.....	61
12.2	Spare parts lists.....	61
<b>13</b>	<b>Annex</b> .....	<b>62</b>
13.1	List of abbreviations.....	62

# 1 General

This chapter contains basic instructions for using the valve and explanations of illustration conventions. It also contains information about the design and structure.

The term valve in these Operating Instructions refers to Hygienic valves.

## 1.1 Information about the document

### 1.1.1 Purpose and structure of the document

The objective of these Operating Instructions is to provide information on how to operate the valve. To achieve this, it is divided into several chapters which are oriented on the various life phases of the valve. Compliance with the instructions will enhance the valve's longevity and reliability, and reduce the likelihood of harm to individuals or damage to property. The Operating Instructions also acts as the basis for creating operating instructions.

### 1.1.2 Design elements

In this document, the following design elements are used as orientation aids.

#### General orientation aids

- Figure numbers
- Table numbers
- Chapter numbers
- Page numbers
- Headers and footers
- References
- Lists

#### Lists

Bullet points are shown in lists and do not prescribe a specific sequence.

- Bullet point
- Bullet point
  - Sub-point
  - Sub-point
- Bullet point

#### Numbered lists

In a sequence of actions, the order of the action steps is specified by a numbered list. Partial results and the result of a sequence of actions are marked by arrows.

1. Action step one
2. Action step two
  - 2.1 First sub-step two
  - 2.2 Second sub-step two
    - Partial result
3. Action step three
  - Partial result
4. Action step four
  - ⇒ Outcome

## INFO

Informational texts contain additional information about a description or action step.

### 1.1.3 Reading obligation and storage

Every person who works on or with the valve must have read these Operating Instructions. They must be available to these persons at all times.

## 1.2 Manufacturer address

GEA Tuchenhagen GmbH  
Am Industriepark 2-10  
Germany  
21514 Büchen

## 1.3 Customer service

Phone: +49 4155 49-0  
Fax: +49 4155 49-2035  
flowcomponents@gea.com  
www.gea.com

## 1.4 Declarations of conformity



### EU Declaration of conformity within the meaning of the EC machine directive 2006/42/EC

Manufacturer: **GEA Tuchenhagen GmbH**  
**Am Industriepark 2-10**  
**21514 Büchen, Germany**

Hereby, we declare that the machine designated in the following

Designation: GEA Hygienic Butterfly Valve with actuator  
GEA Hygienic Leakage Butterfly Valve with actuator

Type: 711-788  
988

by virtue of its design and construction and in the versions placed on the market by us, complies with the essential health and safety requirements of the following directive:

Relevant EC directives: 2006/42/EC EC Machinery Directive

Applicable harmonized standards, in particular: EN ISO 12100: 2010

- Remarks:
- In the event of a modification to the machine that was not agreed with us, this declaration loses its validity
  - Furthermore, we declare that the specific technical documentation for this machine has been drawn up in accordance with Annex VII, Part A, and undertake to forward this documentation by means of data medium upon justified request by the national authorities

Person authorised for compilation and handover of technical documentation:

**GEA Tuchenhagen GmbH**  
**Am Industriepark 2-10**  
**21514 Büchen, Germany**

Büchen, 23 July 2025

Sören de Boon  
Senior Vice President  
Business Unit Valves & Pumps

i.V. Stephan Dirks  
Senior Director Product Engineering & Development  
Business Line Hygienic Valves/ BU Valves & Pumps

## Translated copy of the EU - Declaration of conformity in accordance with the Pressure Equipment Directive 2006/42/EU

---

Manufacturer:	GEA Tuchenhagen GmbH Am Industriepark 2-10 21514 Büchen
---------------	---

We hereby declare that the machine named below

Designation:	GEA Hygienic butterfly valve GEA Hygienic leakage butterfly valve
--------------	--

Type:	711-788 988
-------	----------------

due to its design and construction as well as in the versions sold by us, meet the basic safety and health requirements of the following guideline:

Relevant EC directives:	2006/42/EC EC Machinery Directive
-------------------------	-----------------------------------

Applicable harmonized standards, in particular:	EN ISO 12100: 2010
---	--------------------

Remarks:	<ul style="list-style-type: none"> <li>This declaration will become invalid if any alterations are made to the machine which have not been agreed with us.</li> <li>We also declare that the relevant technical documentation for this machine has been prepared in accordance with Annex VII, Part A, and agree to submit the documentation on justified request of national authorities on a data carrier.</li> </ul>
----------	---

Person authorised for compilation and handover of technical documentation:	GEA Tuchenhagen GmbH Am Industriepark 2-10 21514 Büchen, Germany
--	--

Büchen, 23rd July 2025

Sören de Boon  
 Senior Vice President  
 Business Unit Valves & Pumps

Signed by Stephan Dirks  
 Senior Director Product Engineering & Development  
 Business Line Hygienic Valves/BU Valves & Pumps



**UK- Declaration of conformity by Supply of Machinery (Safety) Regulations 2008**

Manufacturer: **GEA Tuchenhagen GmbH**  
**Am Industriepark 2-10**  
**21514 Büchen, Germany**

Hereby, we declare that the machine designated in the following

---

Designation: GEA Hygienic Butterfly Valve with actuator  
GEA Hygienic Leakage Butterfly Valve with actuator

Type: 711-788  
988

---

by virtue of its design and construction and in the versions placed on the market by us, complies with the essential health and safety requirements of the following directive:

Relevant UK legislation: Supply of Machinery (Safety) Regulations 2008

Applicable harmonized standards, in particular: EN ISO 12100: 2010

---

- Remarks:
- In the event of a modification to the machine that was not agreed with us, this declaration loses its validity
  - Furthermore, we declare that the specific technical documentation for this machine has been drawn up in accordance with Annex VII, Part A, and undertake to forward this documentation by means of data medium upon justified request by the national authorities
- 

GEA Importer into UK

**GEA Mechanical Equipment UK Ltd.**  
Westfalia House  
Old Wolverton Road, Old Wolverton, Milton Keynes  
MK12 5PY, United Kingdom

---

Person authorised for compilation and handover of technical documentation:

Mike Kiely  
**GEA Mechanical Equipment UK Ltd.**  
Westfalia House  
Old Wolverton Road, Old Wolverton, Milton Keynes  
MK12 5PY, United Kingdom

---

Büchen, 23 July 2025

Sören de Boon  
Senior Vice President  
Business Unit Valves & Pumps

i.V. Stephan Dirks  
Senior Director Product Engineering & Development  
Business Line Hygienic Valves/ BU Valves & Pumps

## 2 Safety

This chapter describes the minimum requirements for the intended use of the valve. It forms the basis for safe operation of the valve.

### 2.1 Intended use

The leakage butterfly valve is intended exclusively for opening and for partially or fully shutting off sections of piping within a closed pipeline system. Additionally, shutting off a pipeline against the atmosphere is permitted, provided the medium involved poses no risks or hazards to health or life. For hazardous media, shutting off against the atmosphere is not permitted and is considered improper use.

Proper use of the valve also includes compliance with these Operating Instructions.

**INFO** The medium should preferably flow in the opening direction of the valve disk to avoid pipe hammers when the valve is opened or closed.

**INFO** In a closed pipe system, hydraulic pressure build-up may occur when the valve switches and result in seal damage.

The manufacturer will not accept any liability for damage resulting from any use of the valve which is not in accordance with the designated use of the valve. The risk is borne solely by the operating company.

#### 2.1.1 Requirements for the operation

The prerequisite for the reliable and safe operation of the valve is proper transportation and storage as well as professional installation and assembly. Operating the unit within the limits of its designated use also involves adhering to the operating, maintenance and servicing instructions.

#### 2.1.2 Flow speed

With slow flow speeds, existing solids holding space can potentially settle.

When the butterfly valve is closed quickly, this causes negative pressure on the disk and in the area of the butterfly valve seal, as a result of a stall. With flow speeds of  $\geq 3.5$  m/s, the valve may only be closed with significantly reduced speed.

#### 2.1.3 Pressure equipment directive

The valve is a piece of pressure equipment (without safety function) in the sense of the pressure equipment directive 2014/68/EU: Classified according to Annex II in category 1.

According to the scope of directive 2014/34/EC, article 1, paragraph 2, f), the exception of the directive applies, due to conformity with the Machinery Directive 2006/42/EC.

The nominal diameters smaller than DN 25 are subject to article 4, paragraph 3 of the Pressure Equipment Directive which specifies sound engineering practice.

Nominal diameters  $\geq$  IPS 4"; DN 125 valid for the fluid group II.

In the event of any deviations, GEA Tuchenhausen GmbH will supply a special Declaration of Conformity.

## 2.1.4 ATEX directive

In areas with an explosive atmosphere, only valves suitable for use in such areas may be used.

Refer to and observe the additional instruction manual “ATEX version valves”. For details regarding the marking of valves for potentially hazardous areas also refer to the additional instruction manual “ATEX version valves”.

If these valves are used in areas with a potentially explosive atmosphere, it is mandatory to comply with directive 2014/34/EC with respect to all ignition hazards.

## 2.1.5 Improper operating conditions

The operational reliability of the valve cannot be ensured under improper operating conditions. Therefore avoid improper operating conditions.

Operating the valve is not permitted if

- Persons or objects are in the danger zone.
- Safety devices are not working or were removed.
- Malfunctions have been detected on the valve.
- Damage has been detected on the valve.
- Maintenance intervals have been exceeded.

## 2.2 Modification

Subsequent alterations of the valve are not permitted. Otherwise you will have to undergo a new conformity process in accordance with the EC Machinery Directive on your own.

In general, only genuine spare parts supplied by GEA Tuchenhausen GmbH should be fitted. This ensures the reliable and economical operation of the valve.

## 2.3 Structure of warning notices

Warning notices warn of hazards that may exist when performing certain actions. In this document, the following warning notices are used. The extent of the hazards is categorized into risk levels and can be recognized by the corresponding signal words.

### 2.3.1 Preceding warning notices

Preceding warning notices are used when there is a hazard during a sequence of actions. Warning notices are colour-highlighted and supplemented by a pictogram in the event of possible personal injury.

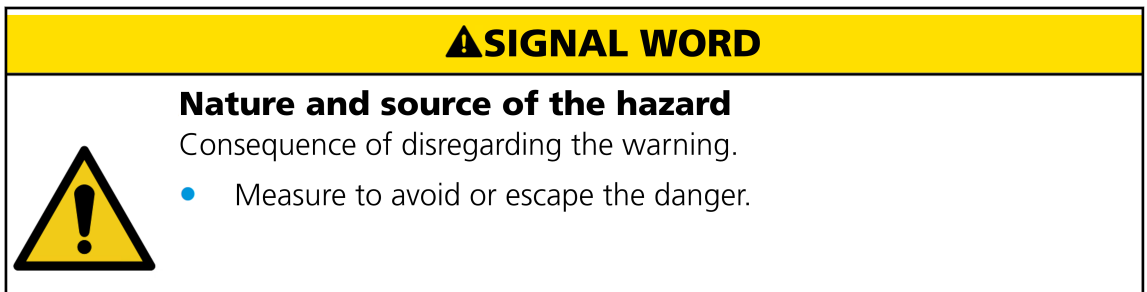


Figure 2-1 - Structure of a preceding warning notice

## 2.3.2 Integrated warning notices

Integrated warning notices are used when there is a hazard involved in a single action step.

1. **SIGNAL WORD** Nature and source of the hazard  
Consequence of disregarding the warning.
  - Measure to avoid or escape the danger.

Figure 2-2 - Structure of an integrated warning notice

## 2.3.3 Signal words

### ATTENTION

The signal word ATTENTION indicates a hazard that could result in property damage if not avoided.

### CAUTION

The signal word CAUTION indicates a hazard with a low risk level which could result in light to medium injuries if not avoided.

### WARNING

The signal word WARNING indicates a hazard with a medium risk level which could result in death or severe injury if not avoided.

### DANGER

The signal word DANGER indicates a hazard with a high risk level which will result in death or serious injury if not avoided.

## 2.4 Personnel qualification

The following basic requirements must be fulfilled for all actions carried out on the valve.

- These Operating Instructions have been read and understood.
- Safety tasks in and around the valve are regulated and assigned.
  - Maintaining order
  - Compliance with safety requirements
  - Securing hazard zones

Additionally, the following groups of people must possess the personnel qualifications or skills listed below and be authorised by the operator to perform actions on the valve.

### Operating staff

- Trained by the operating company, a qualified customer specialist or a GEA service expert

### Customer specialist

- Technical training

### Trained customer specialist

- Technical training in a specific field of expertise
- Training by GEA personnel or participation in training courses of the GEA Tuchen-  
hagen

### GEA service expert

- Personnel from GEA Tuchenhagen, see *1.3 Customer service*

Where necessary, reference is made to the respective group of individuals in these Operating Instructions.

## 2.5 General safety instructions

The valve was built in accordance with the state of the art and recognised safety regulations at the time of its launch. However, the safety measures stipulated by the operator and listed below must still be adhered to in order to ensure safety.

### 2.5.1 General hazard

Source	Consequences	Measures
Faulty valve	Injury and damage	Check that the valve is fully functional.
Non-compliance with these Operating Instructions	Injury and damage	Read and familiarise yourself with these Operating Instructions.
Operating materials	Injuries	<ul style="list-style-type: none"> <li>• Wear personal protective equipment.</li> <li>• Avoid contact with operating materials.</li> </ul>

Table 1: General hazard

## 2.5.2 Mechanical hazard

Source	Consequences	Measures
Moving or rotating components	<ul style="list-style-type: none"> <li>• Being drawn in or caught</li> <li>• Entrapment</li> <li>• Crushing</li> <li>• Impact</li> </ul>	<ul style="list-style-type: none"> <li>• Remove jewellery.</li> <li>• Tie hair back or wear a hair net.</li> <li>• Wear tight-fitting clothing.</li> </ul>
<ul style="list-style-type: none"> <li>• Sharp edges</li> <li>• Cutting parts</li> <li>• Pointed parts</li> </ul>	<ul style="list-style-type: none"> <li>• Cutting or shearing</li> <li>• Penetration or puncture</li> <li>• Shearing</li> <li>• Rubbing or grazing</li> </ul>	<ul style="list-style-type: none"> <li>• Wear personal protective gear.</li> <li>• Use transport protection and available jigs.</li> </ul>
<ul style="list-style-type: none"> <li>• Rough or slippery surfaces</li> <li>• Stumbling hazards</li> </ul>	<ul style="list-style-type: none"> <li>• Slipping</li> <li>• Stumbling</li> <li>• Falling</li> </ul>	<ul style="list-style-type: none"> <li>• Wear personal protective gear.</li> <li>• Eliminate leaked liquids and stumbling hazards.</li> </ul>
<ul style="list-style-type: none"> <li>• Gravity</li> <li>• Falling objects</li> </ul>	<ul style="list-style-type: none"> <li>• Impact</li> <li>• Crushing</li> </ul>	<ul style="list-style-type: none"> <li>• Do not walk under suspended loads.</li> <li>• Eliminate the stumbling hazards.</li> </ul>
Height above the ground	Falling	Use supports and permitted climbing aids.

## 2.5.3 Electrical hazard

Source	Consequences	Measures
Electromagnetic processes	Implications for electronic medical implants	People with medical implants must keep their distance.
Electrostatic processes	<ul style="list-style-type: none"> <li>• Electric shock</li> <li>• Fire</li> <li>• Chemical reaction</li> </ul>	<ul style="list-style-type: none"> <li>• Avoid contact to components.</li> <li>• Check the voltage of components.</li> <li>• Wear personal protective gear.</li> <li>• Eliminate leaked flammable substances.</li> </ul>

## 2.5.4 Thermal hazard

Source	Consequences	Measures
Objects or materials at high or low temperature	<ul style="list-style-type: none"> <li>• Freezing</li> <li>• Burns</li> <li>• Scalding</li> </ul>	<ul style="list-style-type: none"> <li>• Wear personal protective gear.</li> <li>• Wait for adjustment to room temperature.</li> </ul>
Radiation from heat sources	<ul style="list-style-type: none"> <li>• Burns</li> <li>• Discomfort</li> </ul>	<ul style="list-style-type: none"> <li>• Wear personal protective gear.</li> <li>• Keep time spent to a minimum.</li> </ul>

## 2.6 Safety devices

No safety devices are attached to this valve.

## 2.7 Residual dangers

Despite all the measures taken, the following residual hazards can lead to personal injuries and property damage at any time.

- Improper use
- Material fatigue
- Failure of safety devices

### Danger zones

Please observe the following notes:

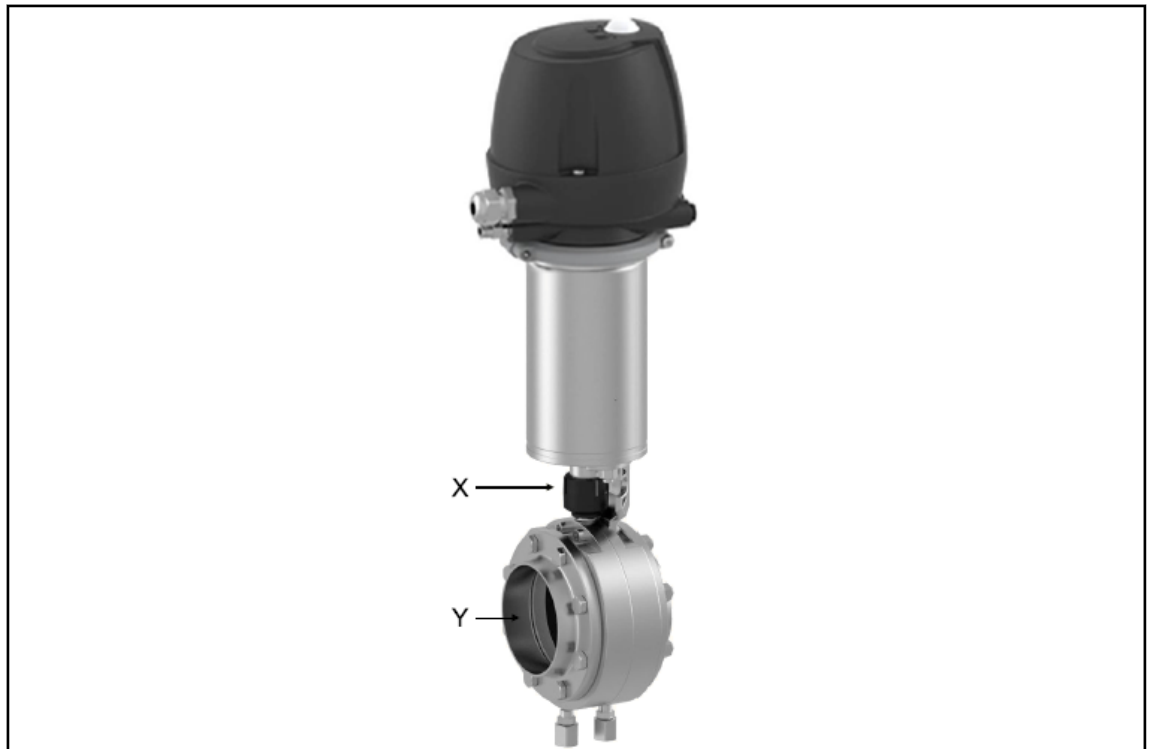


Figure 2-3 - Danger zone at the valve

- In the event of malfunctions, shut down the valve (disconnect from the power and air supply) and secure it against being used.
- Before starting any maintenance, servicing or repair work, disconnect the valve from the power supply and secure it against inadvertently being switched back on again.
- Only allow a qualified electrician to carry out any work on the electrical power supply.
- Check the electrical equipment of the valve at regular intervals. Immediately remedy loose connections and molten cables.
- If work on live parts cannot be avoided, call in a second person, who can operate the main switch in case of an emergency.
  
- When the valve is switching, never reach into pipe Y or into bracket X (on pneumatic actuators). Fingers can be crushed or cut off.

Dangerous situations can be avoided by safety-conscious and proactive behaviour of the personnel and by wearing personal protective equipment.

Residual dangers on the valve and measures

Danger	Cause	Measure
Danger to life	Inadvertent switch-on of the valve	Effectively disconnect all components, effectively prevent switch-on.
	Electric power	Observe the following safety rules: <ol style="list-style-type: none"> <li>1. Isolate from the power supply.</li> <li>2. Take appropriate measures to prevent switch on.</li> <li>3. Test absence of voltage.</li> <li>4. Earthing and short-circuiting.</li> <li>5. Cover or safeguard any adjacent live parts.</li> </ol>
	Spring tension in the actuator	Danger to life caused by the pressurised spring in the actuator. Do not open the actuator, rather return it to GEA Tuchenhausen for proper disposal.
Risk of injury	Danger presented by moving or sharp-edged parts	The operator must exercise caution and prudence. For all work: <ul style="list-style-type: none"> <li>• Wear suitable work clothing.</li> <li>• Never operate the machine if the cover panels are not correctly fitted.</li> <li>• Never open the cover panels during the operation.</li> <li>• Never reach into openings.</li> </ul> As a precautionary measure, wear personal protective equipment in the vicinity of the valve: <ul style="list-style-type: none"> <li>• Protective gloves</li> <li>• Safety shoes</li> </ul>
Environmental damage	Operating materials with properties which are harmful to the environment	For all work: <ul style="list-style-type: none"> <li>• Collect lubricants in suitable collecting vessels.</li> <li>• Dispose of lubricants in accordance with the pertinent regulations.</li> </ul>
Risk of injury	Danger due to liquid escaping from the leakage connections	Discharge the liquid in a controlled manner.

Table 2: Residual dangers and measures

## Instructions for the Safe Handling of Electronic Components During Welding Work

### ATTENTION

#### Stray welding currents during welding

Can cause damage to electronic components

- Follow the steps below to prevent this.

1. Before starting welding work, carry out the following preparations:
  - 1.1 Ensure the device is switched off and no electrical connections are active.
  - 1.2 Disconnect the device from the power supply.  
→ This protects the electronic components from potential damage caused by stray welding currents.
2. Establish a correct grounding connection:
  - 2.1 Place the ground connection of the welding machine as close as possible to the welding point.  
→ This minimises the risk of stray welding currents and helps protect nearby electronic components from damage.
3. After completing the welding work, proceed as follows:
  - 3.1 Remove the welding machine's ground connection.
  - 3.2 Reconnect the device to the power supply.
  - 3.3 Perform a function test.

## 2.8 Safety signs

The safety symbols listed below are attached to the valve.

The position of the applicable safety symbols on the valve are shown in an overview, see 3.1.3 *Signs*.

### Warning signs



General warning sign

Hazard for persons, conveyed by the additional sign.



Explosion-hazardous zones warning

Special explosion protection sign



Warning, spring tension

Hazard posed by spring tension. Do not open the actuator.

## 2.9 Emergency measures

In case of any emergencies on the valve, the operating regulations must be observed and the following actions implemented.

### Fire

- Call local specialists
- Use extinguishing agents as outlined in the operating regulations
- Exit the hazard zone
- Warn individuals that are endangered

### Injuries

- Administer first aid
- Call local emergency services

### 3 Description

This chapter contains instructions on how to install the valve and its functions.

#### 3.1 Structure and function

##### 3.1.1 Design

##### 3.1.1.1 Pneumatic Butterfly Valve with Control Top

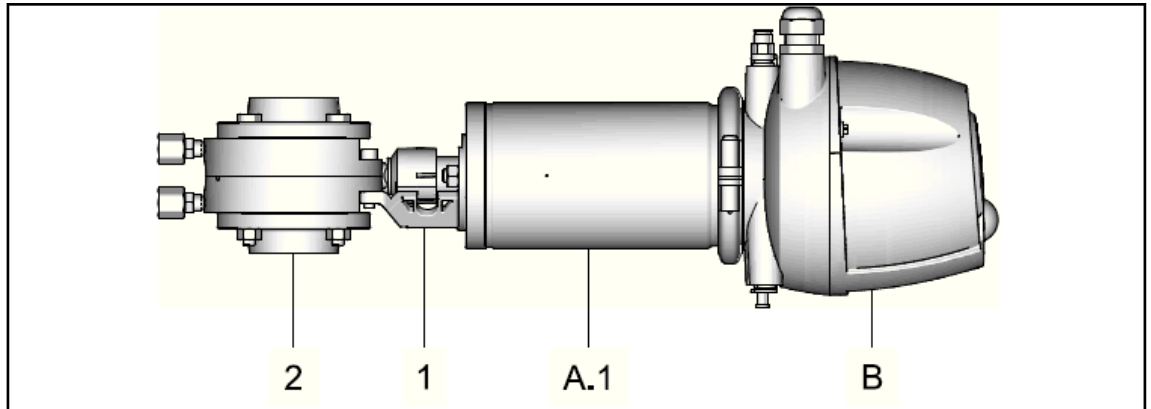


Figure 3-1 - Design of the pneumatic butterfly valve with control top

Position Description	Position Description
A.1 - Pneumatic actuator	B - T.VIS control top
1 - Bracket	2 - Butterfly valve body

##### 3.1.1.2 Pneumatic Butterfly Valve without Control Top

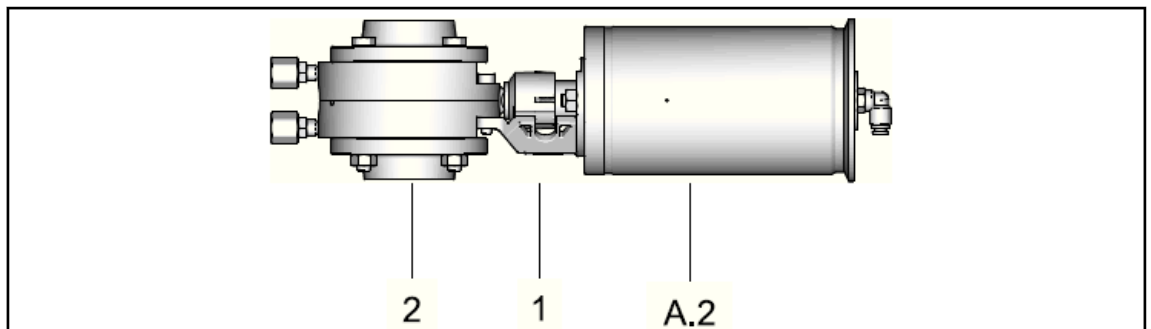


Figure 3-2 - Design of the pneumatic butterfly valve without control top

Position Description	Position Description
A.2 - Pneumatic actuator	1 - Bracket
2 - Butterfly valve body	Optional - Electrical feedback (initiator in the bracket)

### 3.1.1.3 Butterfly Valve Body without Actuator

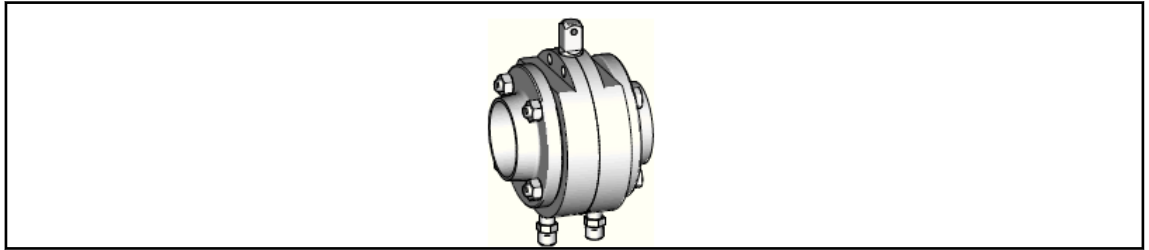


Figure 3-3 - Design of the butterfly valve body without actuator

Butterfly valve design for matrix-piped systems.

### 3.1.1.4 Manual Actuator Type H

Various manual actuator variants are available.

Standard design of manual actuator

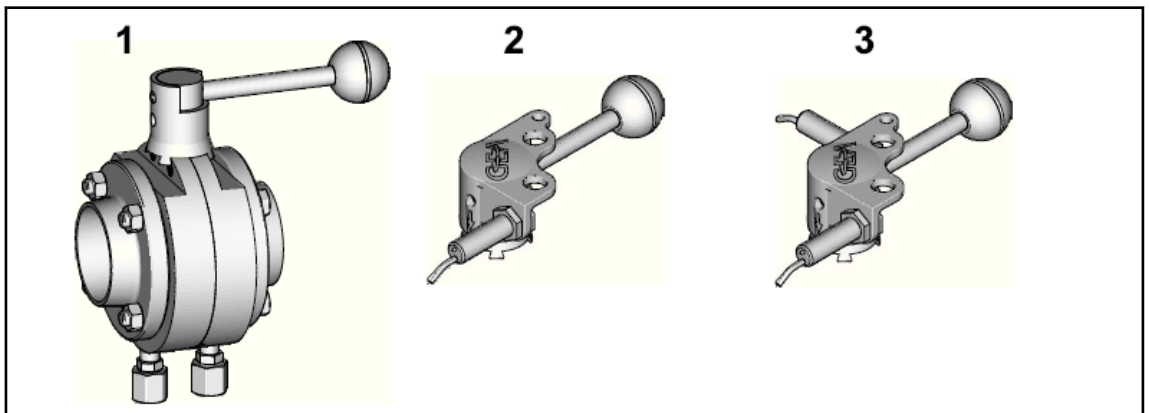


Figure 3-4 - Standard design of manual actuator

Position Description	Position Description
1 - Standard	2 - Optional – electrical feedback single
3 - Optional – electrical feedback dual	

## 3.1.2 Functional description

### 3.1.2.1 Pneumatic Actuator

The compressed air which enters above the piston causes a downwards movement of the piston and the flap of the valve opens or closes, depending on the definition of the resting position.

When the air supply is shut off, the valve closes automatically as a result of the pneumatic/spring force.

Optional air/air actuators are also available for the valve.

The stroke of the piston is converted into a rotary movement of the shaft. The travel of the piston is limited, so that the shaft performs a 90° rotation per stroke. This rotary movement corresponds precisely to the required angle for opening and closing the valve flap.

### 3.1.2.2 Actuator A.1

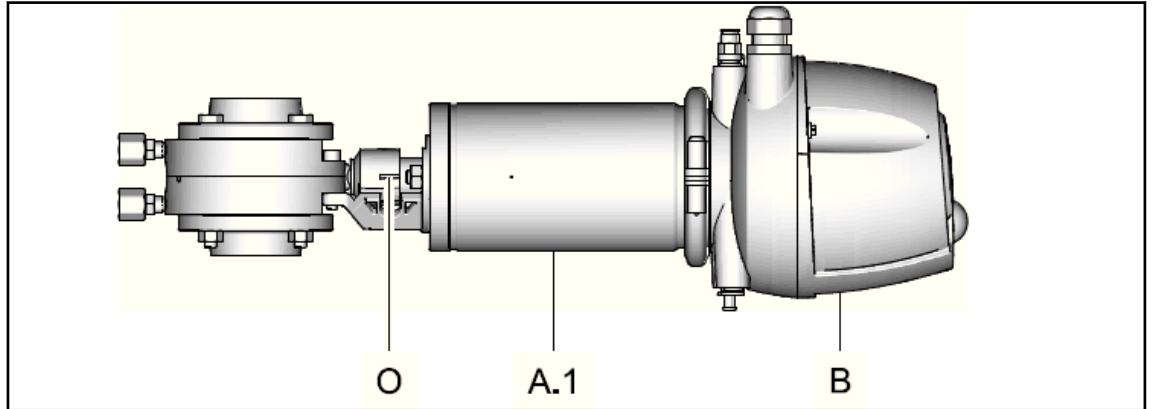


Figure 3-5 - Actuator A.1

The switching state is detected and indicated by the control top (B).

The visual position indication (O) can be recognized by the red marking.

### 3.1.2.3 Actuator A.2

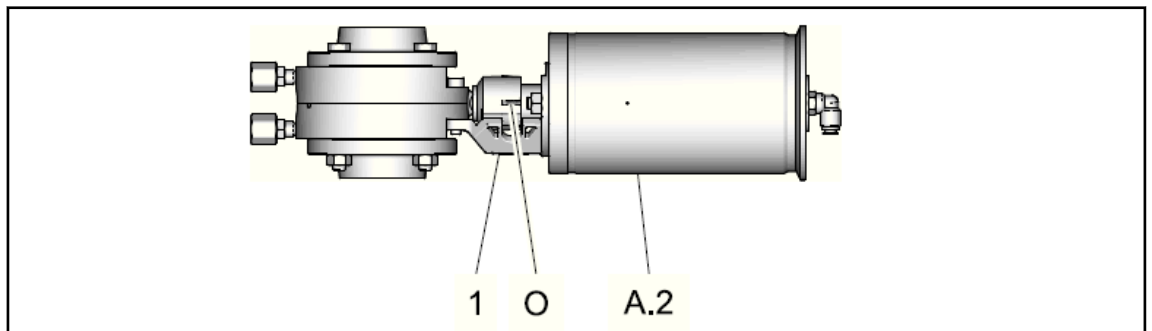


Figure 3-6 - Actuator A.

Feedback of switching states can be provided by proximity switches in the mounting bracket (1).

The visual position indication (O) can be recognized by the red marking.

### 3.1.2.4 Manual Actuator Type H

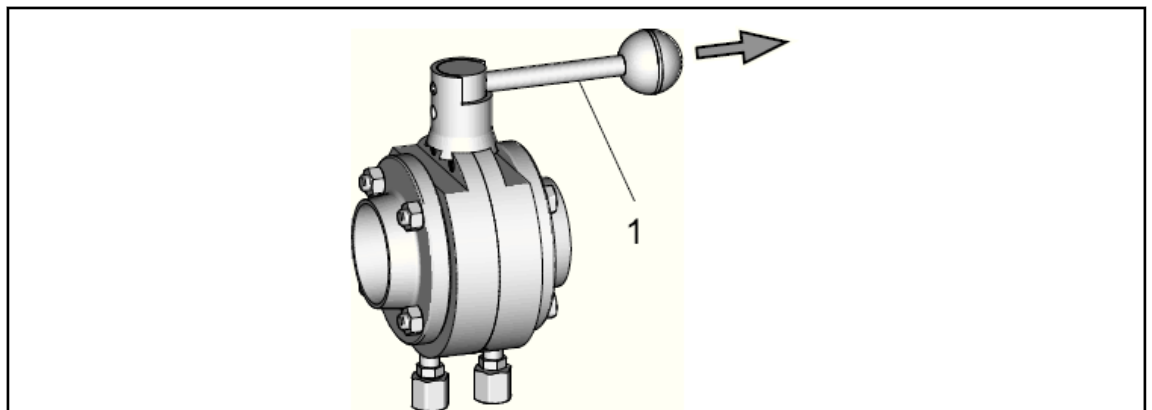


Figure 3-7 - Manual Actuator Type H

To open or close the mixproof butterfly valve, unlock the hand lever (1) by gently pulling it out of the locking device and turn it through 90°.

When the lever is released, it locks into place in the holes provided.

The limit positions of the mixproof butterfly valve can be detected by proximity switches.

### 3.1.2.5 Valve assembly without actuator

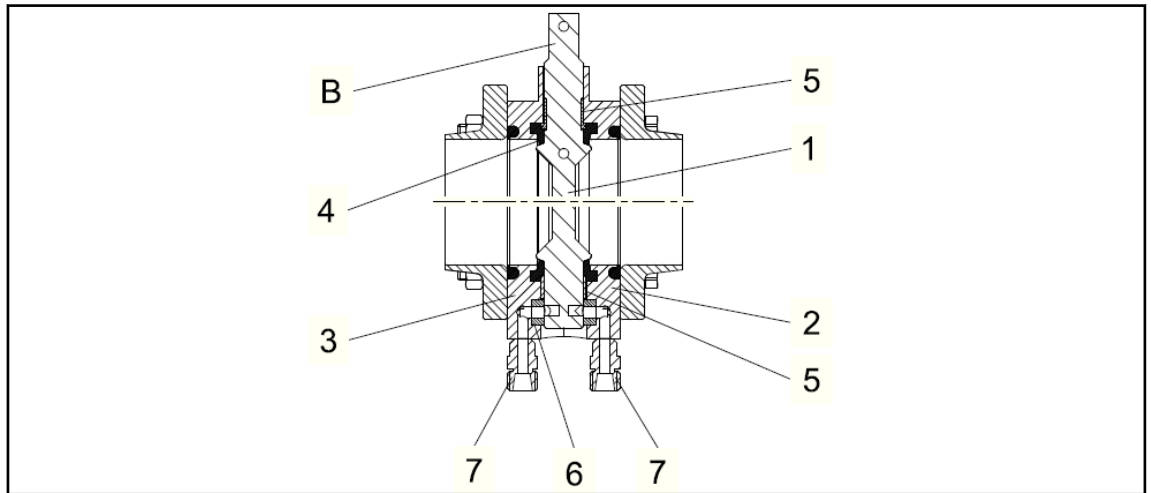


Figure 3-8 - Valve assembly without actuator

Position Description	Position Description
1 - Valve flap	2 - Flange
3 - Flange	4 - Flap seal
5 - Slide bearing	6 - Radial seal
7 - Leak connections	B - Borehole on the square end

The mixproof butterfly valve is used for separating media. The valve disk (1) as the shut-off element is supported between two flanges screwed together (2, 3) and plain bearings (5). The valve positions are OPEN / CLOSED.

In the CLOSED position, two media can be reliably separated from one another. The leakage cavity is open towards the atmosphere in this case. After switching, the medium in the valve disk leakage areas can drain by gravity (7).

In the OPEN position (maximum throughflow), the leakage paths towards the atmosphere are closed. The leakage cavity is sealed by the radial seal (6) on the short valve disk shaft.


**INFO** The hole (B) in the square end is used to indicate the position of the valve disk.

### 3.1.3 Signs

#### Overview and layout

All safety symbols and other signs must meet the following criteria throughout the life cycle of the valve.

- Complete
- Attached as shown
- Clean and legible

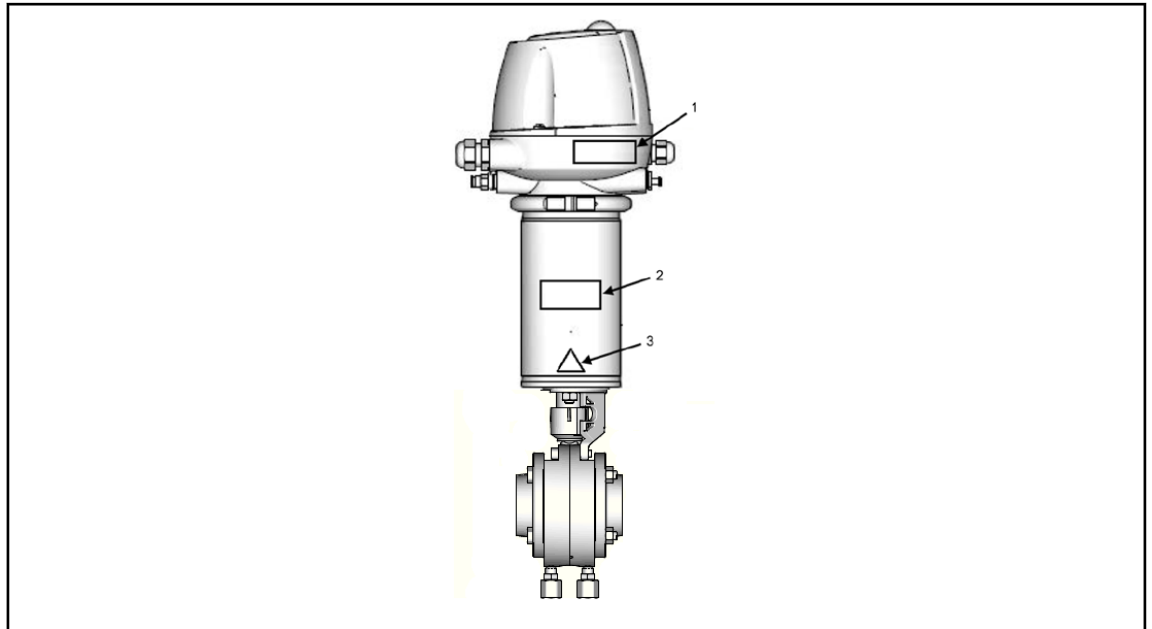

No.	Signs
1	Type plate T.VIS; adhered to T.VIS
2	Type plate valve; adhered to actuator
3	Warning: do not open, taut springs; adhered to actuator

The representation and meaning of the safety symbols used are listed in an overview corresponding to their category, see chapter 2.8 *Safety signs*

### 3.1.4 Protective devices


To avoid personal injuries, danger zones are made inaccessible by protective devices. The following protective devices are installed on this machine.

There are no protective devices installed on this machine.

## 3.2 Technical data

### 3.2.1 Type plate

The type plate clearly identifies the valve.

<b>GEA</b>		GEA Tuchenhausen GmbH Am Industriepark 2-10, 21514 Büchen, Germany		UK CA		CE		
Type Code	<input type="text"/>							
Feedback	<input type="text"/>			Serial	<input type="text"/>			
Material	<input type="text"/>							
Air bar/psi min.	<input type="text"/>	max.	<input type="text"/>	2025				
PS bar/psi	1 <input type="text"/>	2 <input type="text"/>	3 <input type="text"/>					
								

The type plate provides the following key data:

#### Key data of the valve

Characteristics	Values
Type	Hygienic leakage butterfly valve
Feedback	Order code control top T.VIS
Serial	Serial number
Material	AISI 316L (1.4404)/EPDM (FDA)
Control air pressure bar/psi	min. 4.8/69.6 max. 8.0/116
Product pressure bar/psi	10/ 145

### 3.2.2 Technical data

Refer to the following tables for the key technical data of the valve:

#### Technical data: Valve

Designation	Description
Size	DN 50 to DN 100 2" to 4" OD
Material of product contact parts	Stainless steel AISI 316L (1.4404) Check corrosion resistance with respect to media and detergents.

#### Technical data: Ambient temperatures

Designation	Description
Valve	0 to 45 °C (32 to 113 °F), standard < 0 °C (32 °F): Use control air with low dew point. Protect valve rods against freezing.
Proximity switch	-20 to +80 °C (-4 to +176 °F)

Designation	Description
Control top T.VIS M-15, A-15	-20 to +50 °C (-4 to +122 °F)
Control Top T.VIS P-15	0 to +50 °C (32 to +122 °F)
Product temperature and operating temperature	-40 to +135°C (-40 to 275 °F)

#### Technical data: Compressed air supply

Designation	Description
Air hose	
<ul style="list-style-type: none"> <li>Metric</li> </ul>	Material PE-LD Outside Ø 6 mm Inside Ø 4 mm
<ul style="list-style-type: none"> <li>Inch</li> </ul>	Material PA Outside Ø 6.35 mm Inside Ø 4.3 mm
Control air	acc. to ISO 8573
<ul style="list-style-type: none"> <li>Solid particle content:</li> </ul>	Quality class 6 Particle size max. 5 µm Particle density max. 5 mg/m <sup>3</sup>
<ul style="list-style-type: none"> <li>Water content:</li> </ul>	Quality class 4 max. dew point +3 °C If the unit is used at higher altitudes or at low ambient temperatures, the dew point must be adapted accordingly.
<ul style="list-style-type: none"> <li>Oil content:</li> </ul>	Quality class 3 preferably oil free max. 1 mg oil to 1 m <sup>3</sup> air
Control air pressure	min. 4.8 bar (69.6 psi) max. 8 bar (116.0 psi)
Control air pressure for air/air - A/A actuator	min. 4.8 bar (69.6 psi) max. 8 bar (116.0 psi)
Product pressure	max. 10 bar (145.0 psi)

#### Air requirement per switching operation

Actuator type	Actuator diameter [mm]	Air requirement (dm <sup>3</sup> <sub>n</sub> /stroke) dm <sup>3</sup> <sub>n</sub> at 1.01325 bar at 0 °C as per DIN 1343
DN 50, DN 65, 2" OD, 2.5" OD	88.9	0.325
DN 80, DN 100, 3" OD, 4" OD	114.3	0.530

The air requirement for the switching operations depends on the actuator type.

Equipment

**Initiators - actuator without T.VIS**

Operating voltage [V]	10...65 DC	20...25 AC
Switching distance [mm]	5	5
Max. continuous current [mA]	>3...<100	>3...<100
Ambient temperature [°C]	-25...+80	-25...+80
Protection class	IP 67	IP 67

**3.2.2.1 Personal protective equipment**

To prevent possible personal injuries, the personal protection equipment must be worn.

In addition, GEA recommends keeping the requirements listed below.

- Locally applicable accident prevention regulations
- Instruction manual from the operator or employer

**Weights**

TYPE GS - Leakage butterfly valve with drive [kg]

Size	Manual actuator	Pneumatic actuator without control top	Pneumatic actuator with T.VIS control top
DN 50	4.0	7.9	9.1
DN 65	5.0	8.9	10.1
DN 80	5.9	10.2	11.7
DN 100	8.3	12.4	13.9
OD 2"	4.0	7.9	9.1
OD 2 1/2"	5.1	9.0	10.2
OD 3"	6.1	10.4	11.8
OD 4"	8.3	12.4	13.8

### 3.2.3 Resistance and permitted operating temperature of the sealing materials

The resistance and permitted operating temperature of the sealing materials depend on the type and temperature of the medium conveyed. The exposure time can adversely affect the service life of the seals. The sealing materials comply with the regulations of FDA 21 CFR 177.2600 or FDA 21 CFR 177.1550.

The maximum operating temperature is defined by the seal type and its mechanical load.

Due to the versatile conditions of use (e.g. usage duration, switching frequency, type and temperature of product and cleaning agents as well as usage environment), GEA Tuchenhagen recommends that the user carries out resistance tests.

Resistance:

- + = good resistance
- o = reduced resistance
- – = no resistance

#### Seal resistance / permissible application temperature of the seal materials

Medium	Maximum operating temperatures	EPDM
Alkalis up to 3%	up to 80 °C (176°F)	+
Alkalis up to 5%	up to 40 °C (104°F)	+
Alkalis more than 5%	up to 80 °C (176°F)	+
Alkalis more than 5%		o
Inorganic acids ** up to 3%	up to 80 °C (176°F)	+
Inorganic acids ** up to 5%	up to 80 °C (176°F)	o
Inorganic acids ** up to 5%	up to 100 °C (212°F)	–
Water	up to 80 °C (176°F)	+
Water	up to 100 °C (212°F)	+
Steam	up to 135 °C (275°F)	+
Steam, approx. 30 min	up to 150 °C (302°F)	+
Fuels/hydrocarbons		–
Product with a fat content of max. 35%		+
Product with a fat content of more than 35%		–
Oils		–
Other applications upon request		
** Inorganic acids are, e.g. carbonic acid, nitric acid and sulphuric acid		

Table 3: Seal resistance / permissible application temperature of the seal materials

Temperature resistance of the sealing materials

Sealing materials	General temperature resistance*
EPDM	-40 to +135 °C (-40 °F to 275 °F)

\* The general resistance of the material does not correspond to the maximum operating temperature.

Table 4: Temperature resistance of the sealing materials

### 3.2.4 Pipe ends - General table of measurements

**INFO** Not every valve is available in every size. For information about the available sizes of valves, see 3.2.2 *Technical data*.

Dimensions for tubes in DN

Metric DN	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to DIN 11850
10	13	1.5	10	X
15	19	1.5	16	X
20	23	1.5	20	X
25	29	1.5	26	X
40	41	1.5	38	X
50	53	1.5	50	X
65	70	2.0	66	X
80	85	2.0	81	X
100	104	2.0	100	X
125	129	2.0	125	X
150	154	2.0	150	X

Table 5: Dimensions pipe DN

Dimensions for pipes in inch OD

Inch OD	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to BS 4825
0.5"	12.7	1.65	9.4	X
0.75"	19.05	1.65	15.75	X
1"	25.4	1.65	22.1	X
1.5"	38.1	1.65	34.8	X
2"	50.8	1.65	47.5	X
2.5"	63.5	1.65	60.2	X

Inch OD	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to BS 4825
3"	76.2	1.65	72.9	X
4"	101.6	2.11	97.38	X
6"	152.4	2.77	146.86	X

Table 6: Dimensions pipe OD

#### Dimensions for tubes in Inch IPS

Inch IPS	Outside diameter	Wall thickness	Inside diameter	Outside diameter according to DIN EN ISO 1127
2"	60.3	2	56.3	X
3"	88.9	2.3	84.3	X
4"	114.3	2.3	109.7	X
6"	168.3	2.77	162.76	X

Table 7: Dimensions pipe IPS

### 3.2.5 Lubricants

Lubricant designation	Material no.
Rivolta F.L.G. MD-2 (1000 g)	413-071
Rivolta F.L.G. MD-2 (100 g)	413-136

Table 8: Lubricants

## 4 Storage and transport

This chapter contains information about transporting the valve. It also describes the minimum requirements for storage after delivery and for any necessary intermediate storage.

The target group of this chapter is all persons who carry out actions related to the transport or storage of the valve.

### 4.1 Scope of supply

On receipt of the valve check whether

- the details on the type plate correspond to the data in the order and delivery documents,
- the equipment is complete and all components are in good order.

### 4.2 Storage

The valves, valve inserts or spare parts should be stored in a dry place, free of vibration and dust, and protected from light. To avoid damage, leave the components in their original packaging if possible.

If, during transport or storage, the valve is going to be exposed to temperatures  $\leq 0^{\circ}\text{C}$ , it must be dried beforehand and suitable measures must be taken to protect it from damage.

**INFO** We recommend storing at a temperature of  $\geq 5^{\circ}\text{C}$  for a period of 24 hours prior to any handling (removal of the housing / activation of actuators with compressed air) so that any ice crystals formed by condensation water can melt.

### 4.3 Transport

For transport, the following principles apply:

- Only use suitable hoist and slings for transporting the package units/valves.
- Observe the pictograms on the package.
- Handle valves with care to avoid damage caused by impact or careless loading and unloading. The outside synthetic materials are susceptible to breaking.
- Control tops must be protected from animal and vegetable fats.
- Only allow qualified staff to transport the valve.
- Movable parts must be properly secured.
- Only use approved, fully functional load lifting devices and lifting accessories which are suitable for the intended purpose. Observe the maximum load-bearing capacities.
- Secure the valve against slipping. Take the weight of the valve into account and the position of the point of gravity.
- Under no circumstances should anyone stand under a suspended load.
- Take care when transporting the valve. Do not grip sensitive parts of the unit to lift or push the unit or to support yourself. Avoid jerky movements when putting down the unit.

## 5 Assembly and installation

This chapter contains information and instructions about the assembly and installation of the valve.

The target group of this chapter is all persons who carry out actions related to the valve.

### 5.1 Notes on installation

The mixproof butterfly valve may only be installed in horizontal pipes, with the actuator in a vertically upright position.

To prevent damage, make sure that:

- the mixproof butterfly valve is installed in the pipe system free of tension.
- no foreign materials (e.g. tools, bolts, lubricants) are left in the system.

### 5.2 Pneumatic connection

#### 5.2.1 Air requirement

See *Air requirement per switching operation*.

#### 5.2.2 Establishing hose connections

**INFO** To ensure reliable operation, the compressed air hoses must be cut exactly at a right angle.

Tools

- Hose cutter

1. Shut off the compressed air supply.
2. Use the hose cutter to cut the pneumatic hoses at a right angle.
3. Push the air hose into the air connector on the control top.
4. Re-open the compressed air supply.

⇒ Hose connection has been established.

#### 5.2.3 Actuator with T.VIS control top

1. Push the air hose into the air connector on the control top.
2. Re-open the compressed air supply.

⇒ Hose connection has been established.

#### 5.2.4 Actuator without a control top

1. Remove the plug from the actuator.
2. Screw in connector G 1/8" or an exhaust air throttle for slow closing.
3. Push the air hose into the air connector.
4. Re-open the compressed air supply.

⇒ Hose connection has been established.

## 5.3 Electrical connections

### 5.3.1 Electrical connection with T.VIS control top

#### ⚠ DANGER

##### Live parts

Electrical shocks can cause serious personal injuries or death.

- Only allow properly qualified staff to work on the electrical equipment.
- Prior to establishing electrical connections, check the maximum permissible operating voltage.

#### ⚠ DANGER

##### Explosive gases or dusts

An explosion can cause serious personal injuries or death.

- Observe the installation and operating regulations for use in potentially explosive areas!

#### Prerequisites

- Valve is installed

1. Connect the control top in accordance with the connection diagram and the instructions in the operating instructions for T.VIS control tops.

⇒ Control top is connected.

**INFO** The proximity switches are set ex-works. Settings can become changed during transport and installation and may need to be reset, see the instruction manual for the control top.

### 5.3.2 Adjusting the proximity switch – actuator without T.VIS

#### ⚠ DANGER

##### Live parts

Electrical shocks can cause serious personal injuries or death.

- Only allow properly qualified staff to work on the electrical equipment.
- Prior to establishing electrical connections, check the maximum permissible operating voltage.

#### ⚠ DANGER

##### Explosive gases or dusts


An explosion can cause serious personal injuries or death.

- Observe the installation and operating regulations for use in potentially explosive areas!


1. Loosen the cap nuts on the proximity switch.
  2. Hold the proximity switch and turn the cap nuts until a switching gap of max. 4 mm to the associated contact element is achieved.
  3. Tighten the cap nuts.
- ⇒ The initiator has been adjusted.

## 5.4 Retrofitting a proximity switch


1. Place the proximity switch holder "overhead" on the workbench.

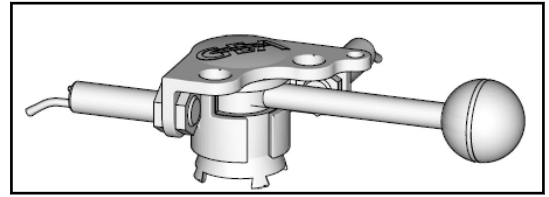

2. Angle the level of the manual actuator at 45°.
3. Insert the manual actuator in the proximity switch holder up to the fixation cam (A).  
→ Make sure that the components do not tilt together and position them so that the ball of the hand lever does not lie on the workbench during assembly.

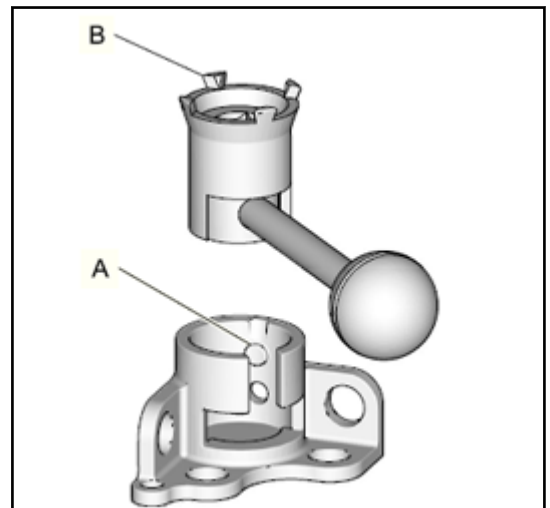

4. To protect against injuries, place a cloth or other suitable material over the four "retaining rods" (B) on the hand lever, press down slightly and insert a screwdriver into the side opening (C).
5. "Press on" the proximity switch holder using the screwdriver and push the hand lever up to the stop in the holder.

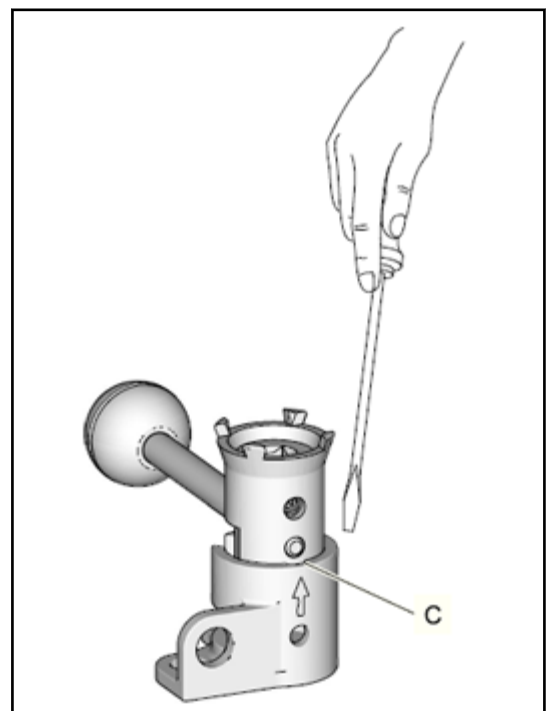

6. Check that the proximity switch is positioned correctly.
  7. If necessary, push the fixation cam downwards by applying slight pressure.
- ⇒ Proximity switch holder has been retrofitted.

## 6 Commissioning

This chapter contains information for the initial and any subsequent commissioning of the valve. It also describes the necessary checks and tests.

The target group of this chapter is all persons who carry out actions related to the valve.

### 6.1 Preparing commissioning

For initial commissioning, the following principles apply:

- Take protective measures against dangerous contact voltages in accordance with pertinent regulations.
- The valve must be completely assembled and correctly adjusted. All screw connections must be securely tightened. All electrical cables must be installed correctly.
- Reliably secure machine parts which have already been connected against inadvertently being switched on.
- Relubricate all lubricating points.
- Make sure lubricants are used properly.
- After conversion of the valve, residual risks must be reassessed.

#### Notes on commissioning

Before starting commissioning observe the following:

- Make sure that there are no foreign materials in the system.
- Actuate the valve once by applying compressed air.
- Clean the pipe system prior to the first product run.
- During commissioning, regularly check all sealing points for leaks. Replace defective seals.

### 6.2 Restarting

The following principles apply for restarting:

- Only allow properly qualified staff to set the valve into operation.
- Make sure all connections are connected properly.
- The safety devices for the valve must be complete, fully functional and in perfect condition. Check the function before starting any work.
- When the valve is switched on, the danger zones must be free.
- Remove any liquids that have escaped without leaving residues.

## 7 Operation and control

This chapter contains information on operating and shutting down the valve.

The target group of this chapter is the operators of the valve.

### 7.1 Monitoring operation

Dangerous situations during operation can be avoided by safety-conscious and proactive behaviour of the personnel.

For operation, the following principles apply:

- Monitor the valve during the operation.
- Safety devices must not be changed, removed or taken out of service. Check all safety devices at regular intervals.
- All guards and hoods must be mounted as intended.
- The place of installation of the valve must be adequately ventilated at all times.
- Structural alterations of the valve are not permitted. Immediately report any changes on the valve to the person responsible.
- Always keep danger zones clear. Do not leave any objects in the danger zone. Only allow persons to enter the danger zone when the machine is de-energized.
- Regularly check that all emergency stop devices are working correctly.

### 7.2 Shutdown

The following principles apply for shutdown:

- Switch off the compressed air.
- Switch off the valve.
- Padlock the main switch (if fitted) in the off position to prevent it from being switched back on. The key to the padlock must be deposited with the person responsible until the machine is restarted.
- In case of longer shut-downs, observe the storage conditions, see *4.2 Storage*.

## 8 Cleaning

This chapter contains information about cleaning the valve. It also contains information about cleaning intervals and the use of cleaning agents.

The target group of this chapter is all persons who carry out actions related to cleaning the valve.

### 8.1 General

All parts in contact with product must be cleaned at regular intervals. Always observe the safety data sheets issued by the cleaning agent manufacturers. Only use cleaning agents which do not cause damage to the seals and the inner parts of the valve. When the pipe is cleaned, the cleaning medium also flows through and cleans the valve housings.

With respect to the cleaning method and parameters like detergents, temperatures, times, and intervals, the component manufacturer can merely make recommendations but cannot provide any generally applicable details. Method and parameters should be determined and defined by the operator in accordance with the relevant process and product.

The cleaning effect must be checked regularly by the operating company!

#### 8.1.1 Cleaning process examples

##### Typical cleaning parameters in dairy operations

Example of a two-phase cleaning process:

- Sodium hydroxide solution and sodium hydroxide based combination products in concentrations from 0.5% to 2.5% at 75 °C (167 °F) to 80 °C (176 °F)
- Phosphoric or nitric acid, and combination products based thereon in the concentrations of 0.3 % to 1.5% at approx. 65 °C (149 °F).

Example of a cleaning operation in one cleaning step:

- Formic acid and formic acid-based combination products at up to 85 °C (185 °F).

##### Typical cleaning parameters in breweries

Example of a two-phase cleaning process:

- Sodium hydroxide solution and sodium hydroxide based combination products in concentrations of 1% to 4% at about 85 °C (185 °F).
- Phosphoric or nitric acid, and combination products based thereon in the concentrations of 0.3 to 1.5% at 20 °C (68 °F).

#### 8.1.2 Cleaning results

The cleaning result depends on the following factors:

- Temperature
- Time
- Mechanics
- Chemicals
- Degree of soiling

These factors can be combined in such a way as to make an optimal cleaning result probable.

### 8.1.3 Cleaning the leakage cavity

On the leakage butterfly valve, two connections for flushing are provided at the deepest point of the housing to enable cleaning of the leakage cavity.

A special sealing mechanism allows the valve to be operated without any additional shut-off valves.

- Cleaning liquid is flushed into the leakage cavity through one of the flushing connections.
- The second flushing connection is used for discharging medium and as a leakage indicator in the event of sealing damage.
- When the pipe is cleaned, it is recommended to completely open and close the flap twice per minute (at least 6 times per cleaning operation) so that medium flows around it, in order to clean the areas underneath the flap.

The leakage cavity can be flushed via the leakage connections when the flap is closed. The recommended admission pressure for the cleaning medium supply at the inlet valve to the leakage cavity is 2.5 bar ± 0.5 bar.

Pressure build-up between the seals on the valve disc should always be avoided. Non-pressurised discharging at the outlet valve is therefore required.

Generally also ensure a positive pressure difference from the product chamber to the leakage cavity.

We recommend also cleaning the leakage cavity as part of all cleaning steps using the relevant cleaning media.

The duration of the entire washing process depends on the type of soiling and typically ranges between 10 and 90 seconds.

#### Flow rates for cleaning the leakage cavity

Size DN Size OD	DN 50 2" OD	2.5" OD	DN 65 3" OD	DN 80	DN 100 4" OD	
Kvs values (l/h)	194	198	178	203	188	163

The table lists the values for the duration and number of rinsing operations.

Medium	Duration [s]	Number of rinsing operations
Beer	1...2	2...3
Yeast	1...2	2...3
Milk	2...5	3

During every cleaning phase:  
 1. Pre-flush  
 2. Hot lye  
 3. Intermediate flushing  
 4. Acid  
 5. Flush

Depending on the cleaning method (medium concentration, temperature and contact times), the seals are affected to different degrees. This can impair the function and the service life.

## 8.2 Passivation

Before a system with long pipes and tanks is commissioned, it usually needs to be passivated.

Valve blocks are usually excepted from this.

Passivation is usually carried out with nitric acid ( $\text{HNO}_3$ ) at about 80 °C (176 °F) in a concentration of 3 % and a contact time of 6 to 8 hours.

## 9 Maintenance

This chapter contains information about valve maintenance, inspection and repairs.

The target group of this chapter is all persons who carry out actions related to the valve.

### 9.1 Carrying out inspections

Between the maintenance periods, the valves must be checked for leakage and proper function.

#### 9.1.1 Checking the pneumatic connection

Prerequisites

- Access to the pneumatic connection

1. Check the operating pressure at the pressure reducing and filter station.
2. Regularly clean the air filter in the filter station.
3. Check that the air connections are tight.
4. Check the lines for kinks and leaks.
5. Check the solenoid valves for proper function.

⇒ The pneumatic connection has been checked.

#### 9.1.2 Checking the electrical connection

Prerequisites

- Access to the electrical connection

1. Check that the cap nut on the cable gland is tight.
2. Only for actuator head T.VIS: Check the cable connections on the adapter and connection module (see operating manual for T.VIS actuator heads).

⇒ The electrical connection has been checked.

**INFO** The electrical cable must be long enough to allow the control top to be removed via the switch bar!

#### 9.1.3 Check mechanical connections

1. Check that all screw connections and locking devices are firmly secured.

⇒ Mechanical connections have been tested.

#### 9.1.4 Checking the signs on the valve

Prerequisites

- Valve is accessible

1. Check the signs on the valve, see also 2.8 *Safety signs*.
2. If necessary, replace damaged or missing labels with new labels.

⇒ The signs on the valve have been checked.

## 9.2 Servicing intervals

To ensure the highest operational reliability, all wearing parts should be replaced at longer intervals.

The actual servicing intervals can only be determined by the operating company since they depend on the operating conditions, for instance:

- Daily period of use
- Switching frequency
- Type and temperature of the product
- Type and temperature of the cleaning solution
- Ambient conditions

### Servicing intervals

Applications	Servicing Intervals (Guideline Values)
Media at temperatures of 60 °C to 130 °C (140 °F to 266 °F)	approx. every 3 months
Media at temperatures of < 60 °C (< 140 °F)	approx. every 12 months

## 9.3 List of tools

Tool	Intended Purpose	Material no.
Hose cutter	Cutting the pneumatic hoses to size	407-065
Spanner sizes SW 8; 9; 10; 12; 13; 14; 15; 16; 17; 24		
Pin punch Ø 4		403-209
Belt wrench	Removing/mounting the actuator	408-142
Adjustable face wrench 80/4 mm	Removing / installing the valve	408-197
Hex. key a/f 3; 4; 5		
Installation mandrel BFV		229-000061

Table 9: List of tools

## 9.4 Prior to removal

### Prerequisites

- Ensure that no active processes are running in the relevant area during maintenance and servicing work .
1. Drain all pipe system elements that lead to the valve and, if necessary, clean or rinse them.
  2. Shut off the control air supply.
  3. Disconnect the power supply.
  4. Take the valve out of the pipe section, with all housings and housing connections if possible.

## 9.5 Removing the valve

### 9.5.1 Removing control top T.VIS M-15

#### ATTENTION

**The permanent magnet of the switch bar is fragile and must be protected against impact stress.**


Damage to the permanent magnet.

- Protect the permanent magnet against impact stress.

#### Prerequisites

- The pneumatic and electrical connections on the plant side can remain on the control top.

1. Loosen the screws (39).

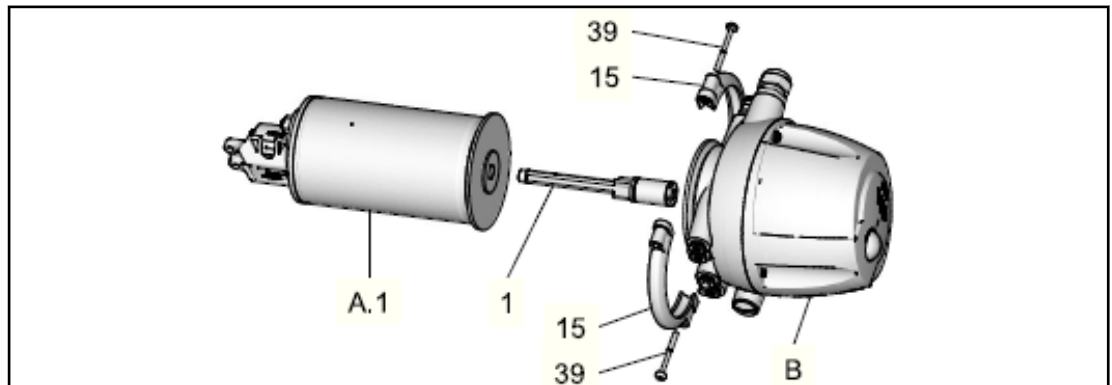

2. Remove the clamps (15).
3. Withdraw the control top (B) via the switch bar (1) from the actuator (A.1).
4. Unscrew the switch bar (1).

⇒ Control top is removed.

### 9.5.2 Dismantling actuator head T.VIS A-15

#### ATTENTION

**The permanent magnet of the switch bar is fragile and must be protected against impact stress.**

Damage to the permanent magnet.

- Protect the permanent magnet against impact stress.

#### ATTENTION

**The sensor is a sensitive component.**


Damage of the sensor and failure of the valve.

- Always handle the sensor with care!

### Prerequisites

- The pneumatic and electrical connections on the plant side can remain on the control top.


1. Loosen the screws (39).

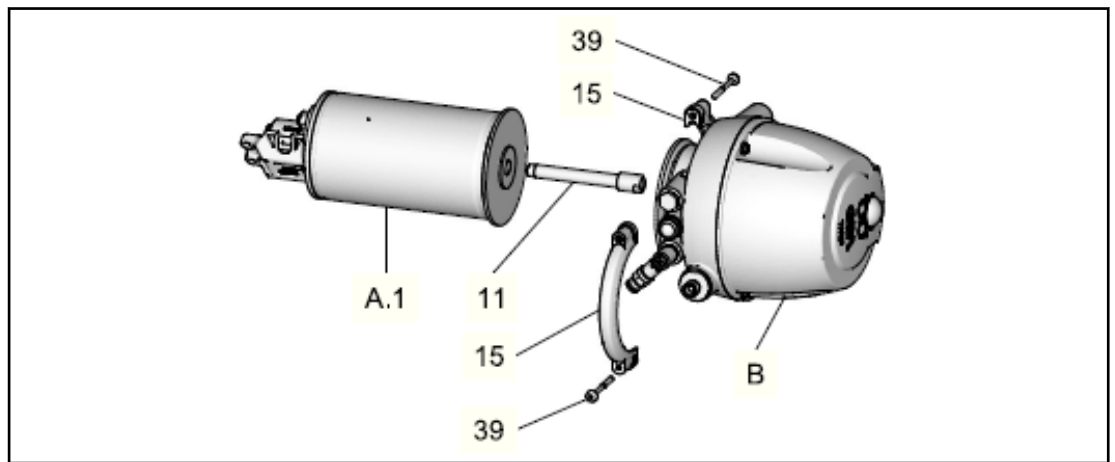

2. Remove the clamps (15).
  3. Withdraw the control top (B) via the switch bar (11) from the actuator (A.1).
  4. Unscrew the switch bar (11).
- ⇒ Control top is removed.

## 9.5.3 Removing the Valve

1. Undo the screw connections (3).

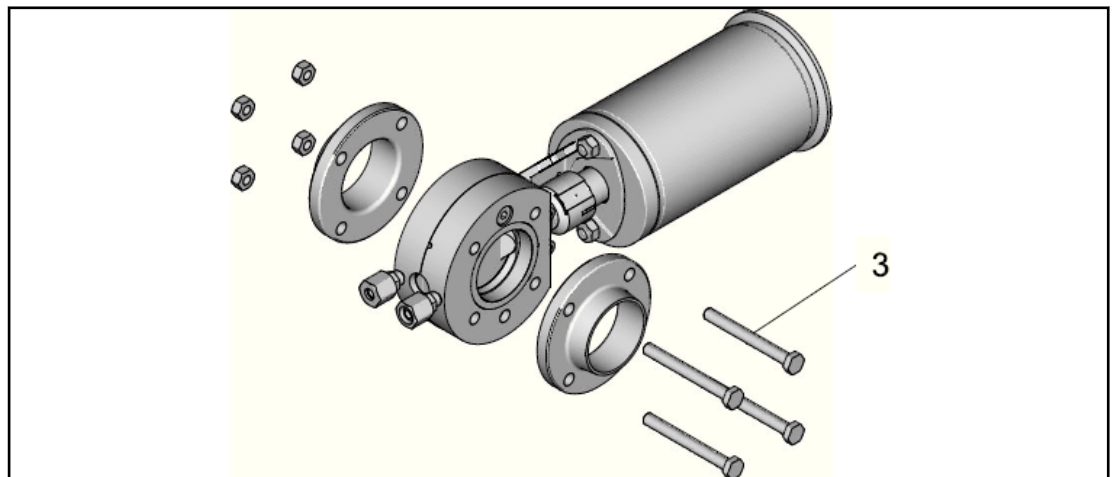


2. Remove the valve from the pipe.
- ⇒ The valve is removed.

## 9.5.4 Disassembling the pneumatic actuator

### 9.5.4.1 Taking out the actuator

1. Undo the screw connections (1).

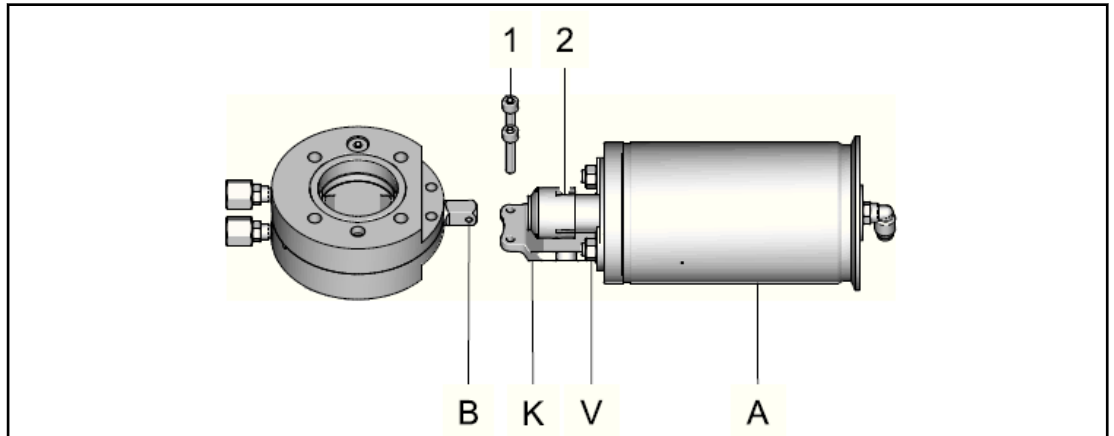


2. Lift out the actuator (A).

⇒ The actuator has been removed.

**INFO** The red position indication marker (2) is aligned with the hole (B) in the valve disk so that it indicates the position of the disk in the valve.

### 9.5.4.2 Dismantling the actuator parts

1. Undo the screw connections (7).

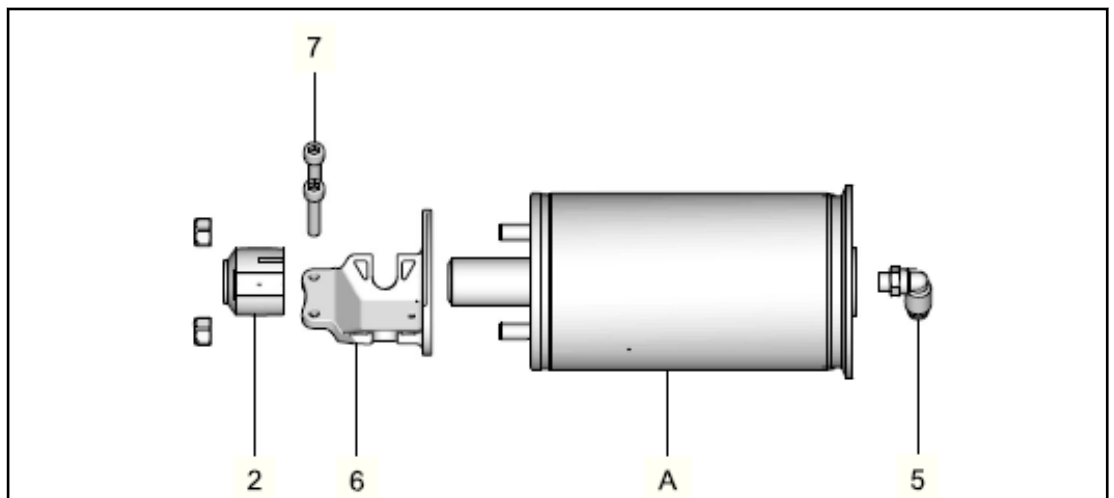


2. Take off the position indicator (2).
3. Remove the mounting bracket (6).
4. Unscrew the elbow screw-in plug connection (5).

⇒ Individual parts have been removed from the actuator.

## 9.5.5 Disassembling the Manual Actuator

### Dismantle initiator


1. Unscrewing the hex nut (2) of the initiators (1).

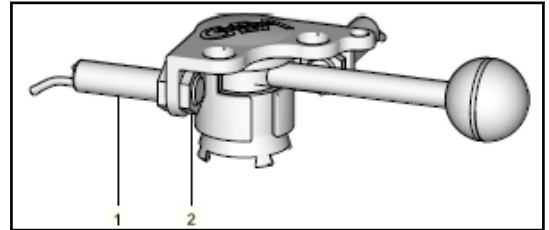

2. Remove the proximity switches (1).  
⇒ Initiators are dismantled.

### Disassembling the Manual Actuator

1. Use an AF 4 hex socket wrench to unscrew the locking screw (2) until it is flush with the bushing.

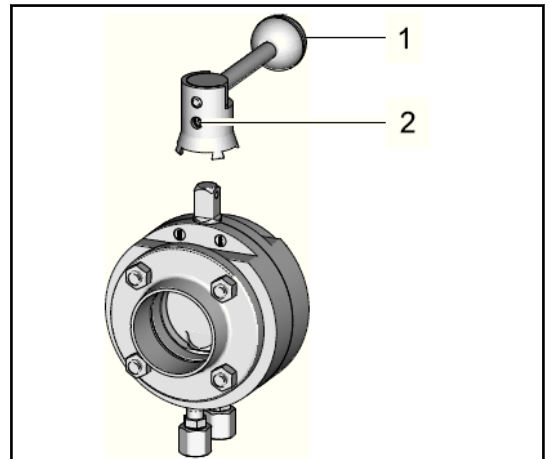


2. Take off the hand lever (1).  
⇒ Manual actuator is dismantled.

## 9.5.6 Dismantling the valve flap into individual parts

### Removing the Flanges


1. Undo the screw connections (3).
2. Pull the butterfly valve body apart.
3. Remove the radial seal (9).  
→ The radial seal protects the slide bearing (5) from contamination.
4. Take out the valve disk (4) with the disk seal (6).
5. Remove the O-ring (8).

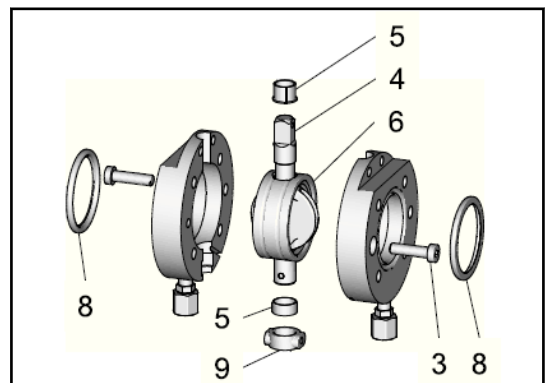


- ⇒ The flanges are removed.

## Removing the Seal

1. Pull off the plain bearings (5).
2. Turn the seal (6) until it is positioned at a 90° angle to the disk (4).
3. Pull the seal over the short end (9) of the disk.

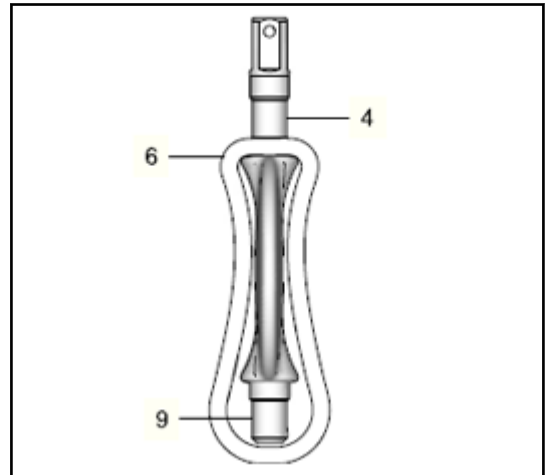

4. Unclamp the disk.
5. Pull the seal over the long end of the shaft (10).

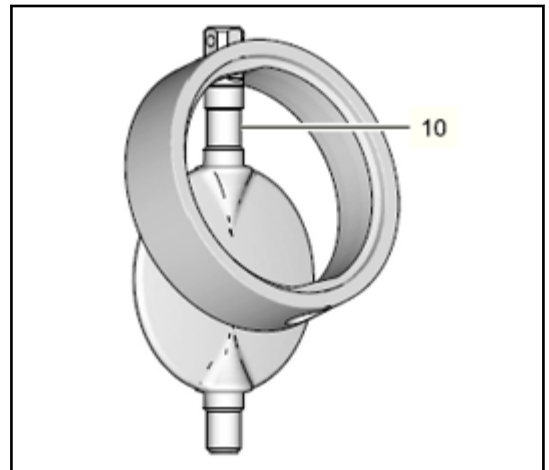

⇒ The disk seal has been removed.

## 9.6 Installing the valve

### 9.6.1 Tightening torques


Tighten the following valve connections to the torques specified in the table.

Tightening torques for		[Nm]	[lbft]
Clamps on the control top		1	0.7
Bolts	M6	8	5.9
	M8	15	11
	M10	45	33
	M12	78	57.5


## 9.6.2 Mounting the valve flap from individual parts

### Installing the seal


1. Pull the seal over the long end of the shaft (10).

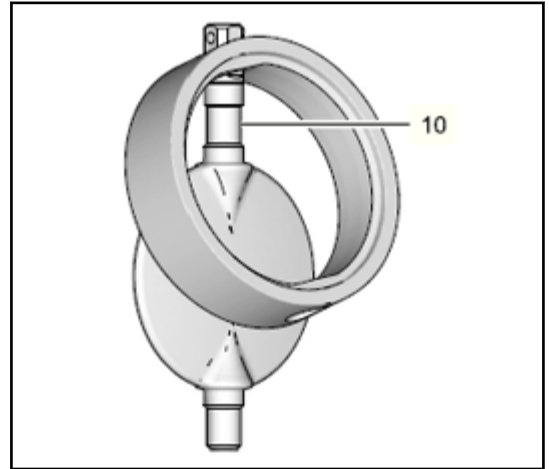

2. Clamping the flap.
3. Turn the seal (6) until it is positioned at a 90° angle to the disk (4).
4. Pull the seal over the short end (9) of the disk.

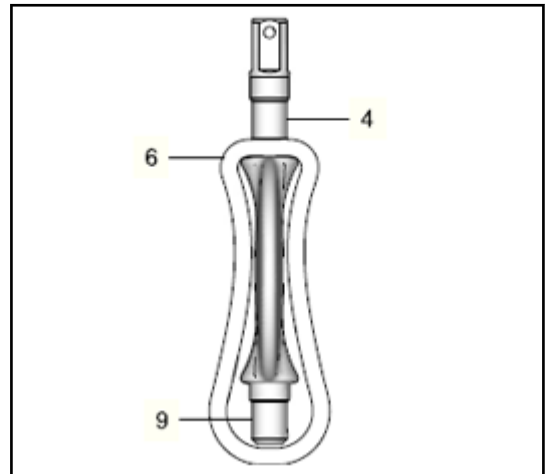


5. Pull off the slide bearings (5).  
→ To fit the upper plain bearing on valves with nominal widths DN 80 and DN 100 or 3" OD and 4" OD put installation mandrel 229-000061 over the square end to mount the plain bearing.

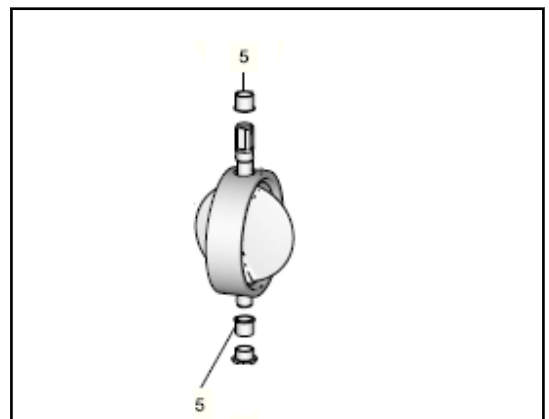

⇒ The flap seal has been installed.

### Installing the flanges


1. Position the shut-off flap (4) at a 90° angle to the seal and insert into the flanges.
2. Fit the plug.
  - The stopper protects the plain bearing from soiling.
3. Assemble butterfly valve body
4. Install screw connections (3).
5. Insert O-rings (8).

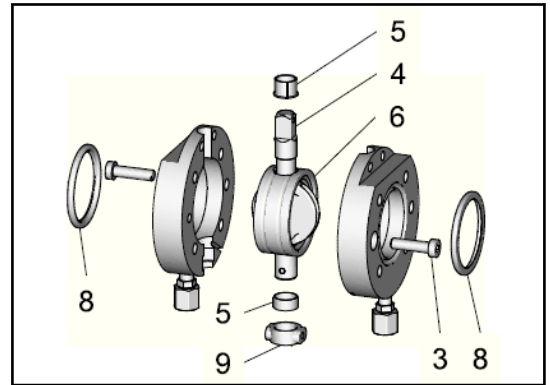

⇒ Flanges are installed.

### 9.6.3 Mounting the manual actuator H


1. Fit hand lever (1).
2. Screw in locking bolt (2) using a hexagon socket wrench AF 4.

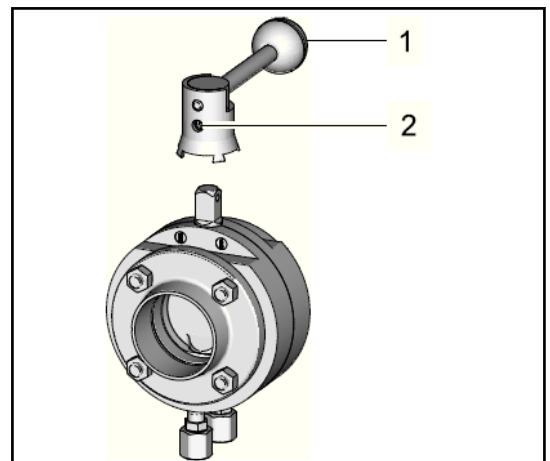

⇒ Manual actuator H is mounted.

## 9.6.4 Mounting the individual parts on the actuator

1. Screw in the elbow screw-in plug connection (5).

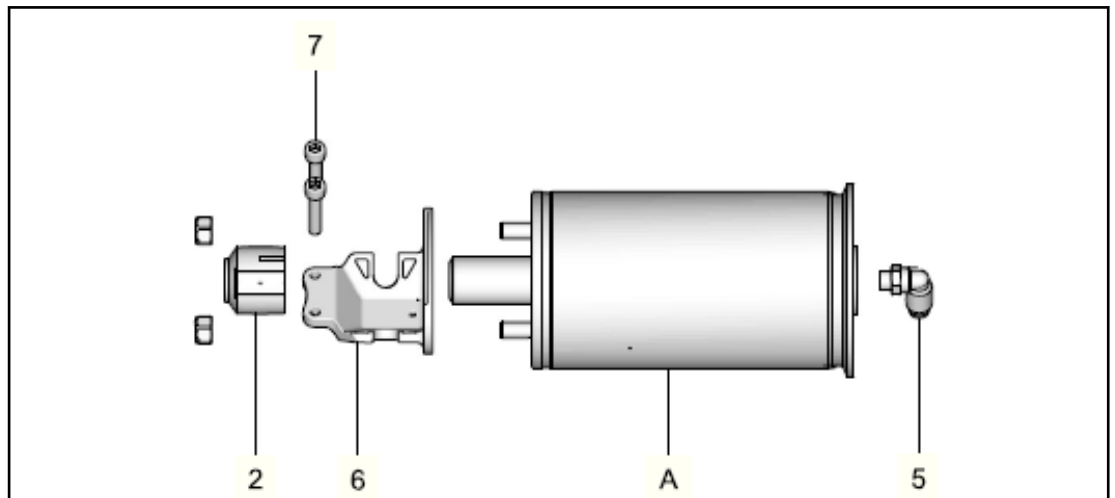


→ For air/air actuators: Screw in both elbow screw-in plug connections.

2. Mounting the position indicator (2) together with the bracket (6).
3. Mounting the screw connections (7).

⇒ The individual parts are mounted on the actuator.

## 9.6.5 Mounting the drive

1. Mount actuator (A) onto the butterfly valve body.

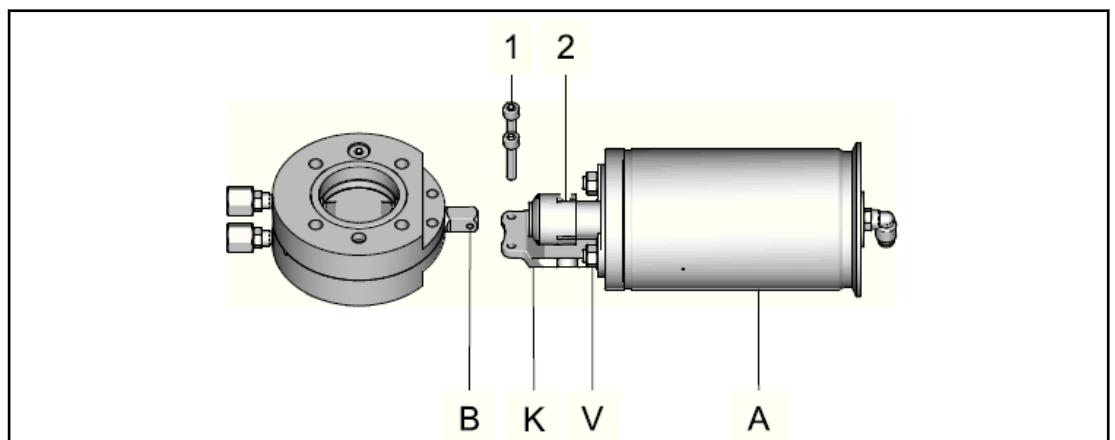


2. Mounting the screws (1).

⇒ The actuator is mounted.

**INFO** The red marking of the position indicator (2) is aligned with the bore of the flap, thus indicating the flap position inside the valve.

### 9.6.6 Installing the valve

1. Insert the valve into the pipe.

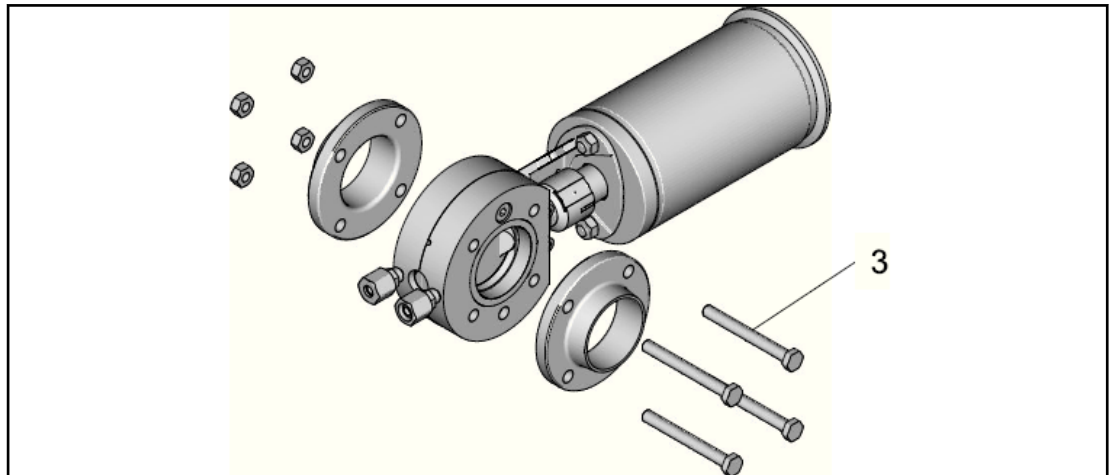


→ Arrange additional holes so that the bracket can be removed when installed.

2. Installing screw connections (3).

⇒ The valve is installed.

### 9.6.7 Mounting the initiator

1. Inserting the initiators (1).
2. Mounting the hexagon nuts (2) on the initiators (1).

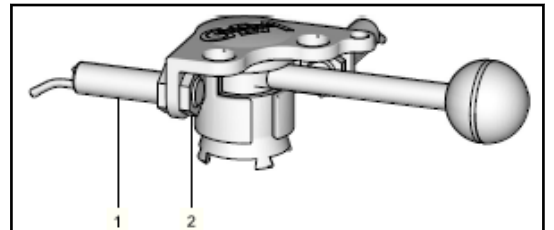

⇒ The initiators are mounted.

### 9.6.8 Mounting control top T.VIS M-15

#### ATTENTION


**The permanent magnet of the switch bar is fragile and must be protected against impact stress.**

Damage to the permanent magnet.

- Protect the permanent magnet against impact stress.

**INFO** Also refer to the instruction manual for the T.VIS M-15.

1. Screw in the switch bar (1).

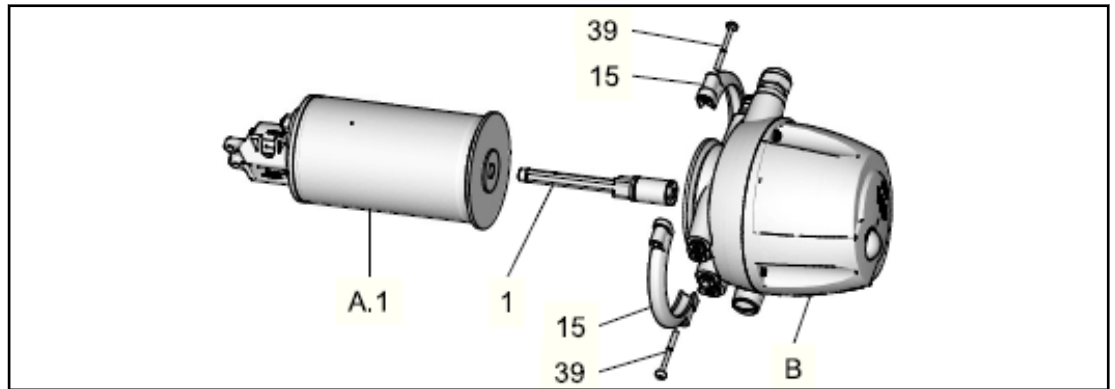

2. Push the control top (B) via the switch bar (1) onto the actuator (A.1).
  3. Mounting the half-rings (15).
  4. Mounting the screws (39).
- ⇒ Control top is fitted.

### 9.6.9 Mounting control top T.VIS P-15 and A-15

#### ATTENTION

**The permanent magnet of the switch bar is fragile and must be protected against impact stress.**

Damage to the permanent magnet.

- Protect the permanent magnet against impact stress.

#### ATTENTION

**The sensor is a sensitive component.**

Damage of the sensor and failure of the valve.


- Always handle the sensor with care!

**INFO** Also refer to the instruction manual for the T.VIS P-15 / A-15.

**Prerequisites**

- The pneumatic and electrical connections on the plant side can remain on the control top.

1. Screw in the switch bar (11).

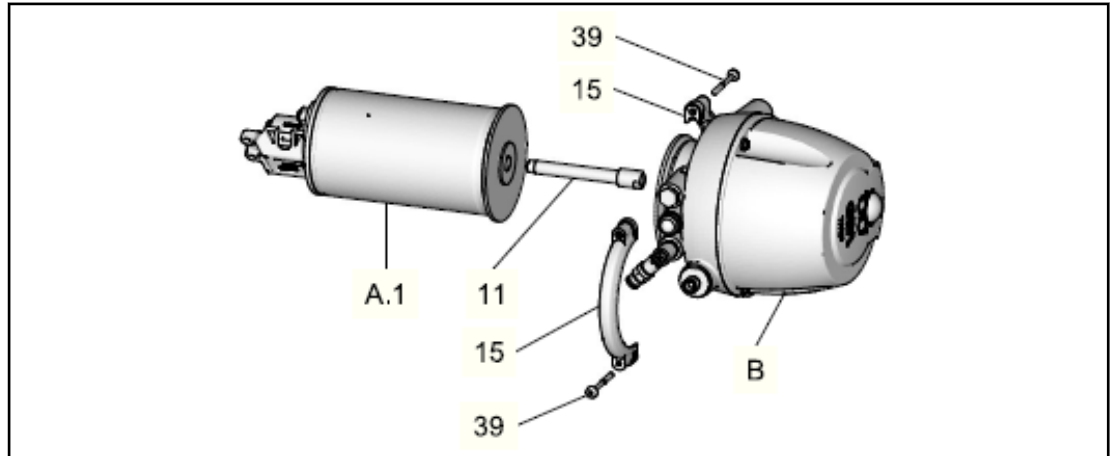

2. Push the control top (B) via the switch bar (11) onto the actuator (A.1).
  3. Mounting the half-rings (15).
  4. Mounting the screws (39).
- ⇒ Control top is fitted.

## 9.7 Maintenance

### 9.7.1 Cleaning the valve


#### ATTENTION

##### Damage to the valve

Damage to the valve parts can result in a malfunction.

- Observe the safety information sheets issued by the detergent manufacturers!
- Only use detergents which are non-abrasive and not aggressive towards stainless steel.
- Use only cleaning mediums which do not damage the materials of the control top (PPE, PA).

1. Disassemble the valve, see 9.5 *Removing the valve*.
2. Carefully clean the individual parts.
3. Check that air can exit freely from the vent screw (3).

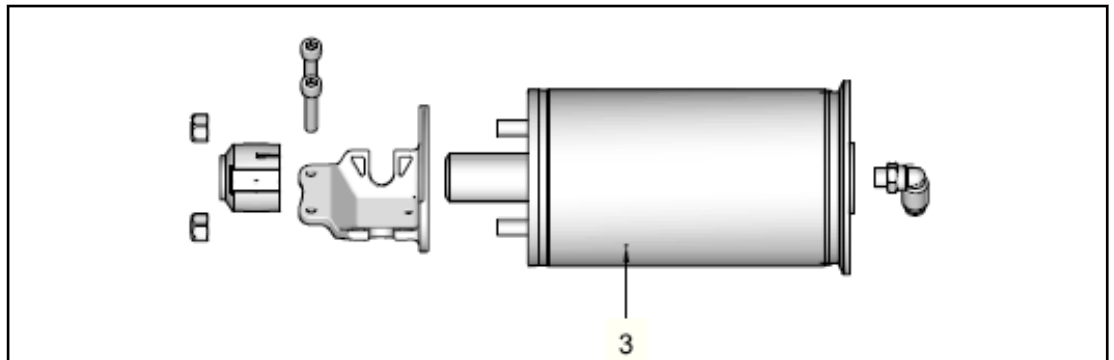

⇒ The valve has been cleaned.

**INFO** Observe the safety data sheets supplied by the detergent manufacturers. Only use detergents which are non-abrasive and not aggressive towards stainless steel.

## 9.7.2 Lubricating seals and threads

### Prerequisites

- The valve has been removed, see 9.5 *Removing the valve*.

### Tools

- Lubricants Rivolta F.L.G. MD-2 and PARALIQ GTE

## ATTENTION

### Damage to seals and threads

Stainless steel threads tend to seize and stick, and must be greased. Damage to seals and threads can result in malfunction.

- Ensure that an adequate film of lubricant is applied. No grease residues must be visible once the valve has been assembled completely.
- For product contact seals only use suitable greases and oils.
- Observe the safety data sheets issued by the lubricant manufacturer.

1. Apply a light film of lubricant to all threads.
2. Apply a light film of lubricant to all seals.
3. Apply a light film of lubricant to the shaft ends.

⇒ Seals and threads have been lubricated.

### INFO

GEA Tuchenhausen recommends Rivolta F.L.G. MD-2 und PARALIQ GTE 703. These lubricants are approved for foodstuff and are resistant to beer froth. They have the NSF-H1 (USDA H1) registration. They do not affect the taste or the consistency of the products and are compatible with the seals in contact with product. Rivolta F.L.G. MD-2 can be ordered from GEA Tuchenhausen. Using other types of grease can result in malfunctions or in premature seal failure. The warranty will also become null and void. A Manufacturer's Declaration for these products can be obtained from GEA Tuchenhausen if required. A thin film of grease is required on the seals to ensure the proper function of the fittings. It reduces friction and extends the service life of the seals. This is absolutely harmless from a health and hygienic point of view. Running dry must be avoided!

## 10 Malfunctions

This chapter contains information about how to rectify problems with the valve.

The target group of this chapter is all persons who carry out actions related to the valve.

<b>Fault</b>	<b>Possible cause</b>	<b>Measure</b>
Actuator does not work	Air hoses clogged or leaking	Clean or replace the air hoses
	Control air pressure too low	Increase the control air pressure
	Solenoid valve defective	Replace the solenoid valve
	Valve disk is blocked	Clear the blockage
No feedback signal	Proximity switch adjusted	Adjusting the proximity switch
	Proximity switch not connected correctly	Check and correct the wiring correctly
	Proximity switch faulty	Replace the proximity switch
	Valve disk is blocked	Clear the blockage
Leakage at flanges	Disk seal defective	Replace the disk seal
	O-ring defective	
Leak within the pipe	Disk seal defective	Replace the disk seal
	Flap defective	Replace the flap

Table 10: Malfunctions

## 11 Decommissioning, dismantling and disposal

This chapter contains information about decommissioning the valve. It also describes the removal and disposal processes. The target group of this chapter is all persons who carry out actions related to the valve.

### 11.1 Decommissioning

The following principles apply for decommissioning:

- Switch off the compressed air.
- Switch off the component with the main switch.
- Padlock the main switch (if fitted) in the off position to prevent it from being switched back on. The key to the padlock must be deposited with the person responsible until the machine is restarted.
- For longer periods of standstill, observe the storage conditions, see 4.2 *Storage*.

### 11.2 Dismantling

Prerequisites

- Ensure that no active processes are running in the relevant area during dismantling.
1. Empty all pipe elements that lead to the valve.
  2. Shut off the control air supply.
  3. Disconnect the power supply.
  4. Take the valve out of the pipe section, with all housings and housing connections if possible.  
→ The valve has been dismantled.

### 11.3 Disposal

Dispose of the valve in an environmentally friendly manner. Observe the statutory waste disposal regulations applicable at the place of installation.

The valve is made of the following materials:

- Metals
- Synthetic materials
- Electronic parts
- Lubricants containing oil and grease

Separate the different materials and dispose of them correctly sorted. Also observe the instructions regarding disposal in the instruction manual for the individual components.

## **⚠ DANGER**

**The spring forces in the actuator can be as high as 24 kN.**

The pre-stressed spring can cause serious personal injury or death.

- Never open the actuator.
- GEA Tuchenhagen accepts unopened actuators and arranges the proper disposal free of charge.

### Prerequisites

- The valve should be disposed of
1. Remove the actuator.
  2. Pack the actuator securely and send it to GEA Tuchenhagen GmbH.
- ⇒ The valve actuator has been disposed of.

## 12 Replacement parts

This chapter contains information on ordering replacement parts for the valve and is aimed at all users of the valve.

### 12.1 Order information

Only original spare parts from GEA may be used. All spare parts are packed in GEA original packaging and marked accordingly.

The spare parts are not included in the scope of supply of the machine.

The specifications listed below must be cited on every spare part order.

- Machine type: see type plate
- Machine number: see type plate
- Order number: see spare parts list
- Name: see spare parts list

### 12.2 Spare parts lists

- Dimension sheet - Manual operation hygienic leakage butterfly valve
- Spare parts list - Pneumatic actuator hygienic leakage butterfly valve
- Spare parts list - Hygienic leakage butterfly valve (valve assembly without actuator)
- Dimension sheet - Hygienic leakage butterfly valve
- Dimension sheet - Hygienic butterfly valve - seals



[www.assets.gea.com](http://www.assets.gea.com)

Link to spare parts list for: GEA Hygienic leakage butterfly valve



[www.assets.gea.com](http://www.assets.gea.com)

Link to seal set: GEA Hygienic leakage butterfly valve



[www.assets.gea.com](http://www.assets.gea.com)

Link to dimensional sheets for: GEA Hygienic leakage butterfly valve

## 13 Annex

### 13.1 List of abbreviations

Abbreviation	Explanation
BS	British Standard
bar	Unit of measurement of pressure [bar] All pressure data expressed in [bar/psi] is assumed to be gauge pressure [barg/psig] unless explicitly specified otherwise.
approx.	approximately
°C	Unit of measurement of temperature [degree Celsius]
CIP	Clean in Place
dm <sup>3</sup> n	Unit of measurement of volume [cubic decimetre] standard volume (standard litres)
DN	DIN nominal width
DIN	German standard issued by DIN (Deutsches Institut für Normung e.V., German Institute for Standardization)
EN	European Standard
EPDM	Material designation, Brief designation according to DIN/ISO 1629: Ethylene-propylene-diene- rubber
°F	Unit of measurement of temperature [degree Fahrenheit]
FKM	Material designation, short designation according to DIN/ISO 1629: Fluorine rubber
h	Unit of measurement of time [hour]
HNBR	Material designation,  short designation according to DIN/ISO 1629: Hydrated nitrile butadiene rubber
IP	Protection class
ISO	International Standard of the International Organization for Standardization
kg	Unit of measurement of weight [kilogram]
kN	Unit of measurement of force [kilonewton]
Kv value	Flow coefficient [m <sup>3</sup> /s] 1 KV = 0.86 x Cv
l	Unit of measurement of volume [litre]
max.	maximum
mm	Unit of measurement of length [millimetre]
µm	Unit of measurement of length [micrometre]
M	Metric
NC	Normally Closed; actuator is spring-to-close, valve is closed in idle position

Abbreviation	Explanation
Nm	Unit of measurement for the tightening torque [newton metre] 1 Nm = 0.737 lbft Pound-Force (lb) + Feet (ft)
NO	Normally Open; actuator is spring-to-open, valve is open in idle position
PA	Polyamide
PE-LD	Low-density polyethylene
PPE	Polytetrafluoroethylene
psi	Anglo-American unit of measurement for pressure [pound-force per square inch] All pressure data expressed in [bar/psi] is assumed to be gauge pressure [barg/psig] unless explicitly specified otherwise.
PTFE	Polytetrafluoroethylene
SET-UP	Self-learning installation During commissioning and maintenance, the SET-UP procedure carries out all the necessary settings for the generation of messages.
AF	Indicates the size of spanners [width across flats]
T.VIS	Tuchenhagen valve information system
V AC	Volt alternating current
V DC	Volt direct current
W	Unit of measurement of power [Watt]
TIG	Welding method Tungsten inert gas welding
Inch	Unit of measurement of length in the Anglo-American language area
Inch OD	Tube measurement according to British Standard (BS), outside diameter
Inch IPS	American pipe measurement, iron pipe size

**GEA Tuchenhagen GmbH**  
**Am Industriepark 2-10**  
**21514 Büchen , Germany**

**Phone +49 4155 49-0**

430BAL008984 Copyright © GEA Tuchenhagen - All rights reserved - Subject to modifications.