





|                                            |    |
|--------------------------------------------|----|
| TABLE OF CONTENTS.....                     | 01 |
| HARDWARE IDENTIFICATION.....               | 02 |
| TRAILER PUMP.....                          | 03 |
| STATIONARY ENGINE.....                     | 04 |
| BEARING HOUSING.....                       | 05 |
| HOUSING AND IMPELLER.....                  | 06 |
| PRIMER PUMP.....                           | 07 |
| SAFETY GUARDS - BEFORE SEPTEMBER 2014..... | 08 |

| Hardware Identification     |             |
|-----------------------------|-------------|
| Type                        | Designation |
| Hexagonal bolt              | -           |
| Carriage bolt               | CB          |
| Square head bolt            | SB          |
| Socket head cap screw       | SCS         |
| Socket head set screw       | SSS         |
| Flat head cap screw         | FCS         |
|                             |             |
| Hexagon nut                 | -           |
| Hexagon nylon lock nut      | N           |
| Hexagon oval lock nut       | OVL         |
| Hexagon tri-lock nut        | TRI         |
| Castle nut                  | CSL         |
| Flange nut                  | FLN         |
| Wing nut                    | WNG         |
|                             |             |
| Flat washer                 | -           |
| Lock washer                 | L           |
| SAE washer                  | SAE         |
| Large ext. dia. washer      | LD          |
| Small ext. dia. washer      | SD          |
|                             |             |
| Stainless steel bolts parts | SS          |

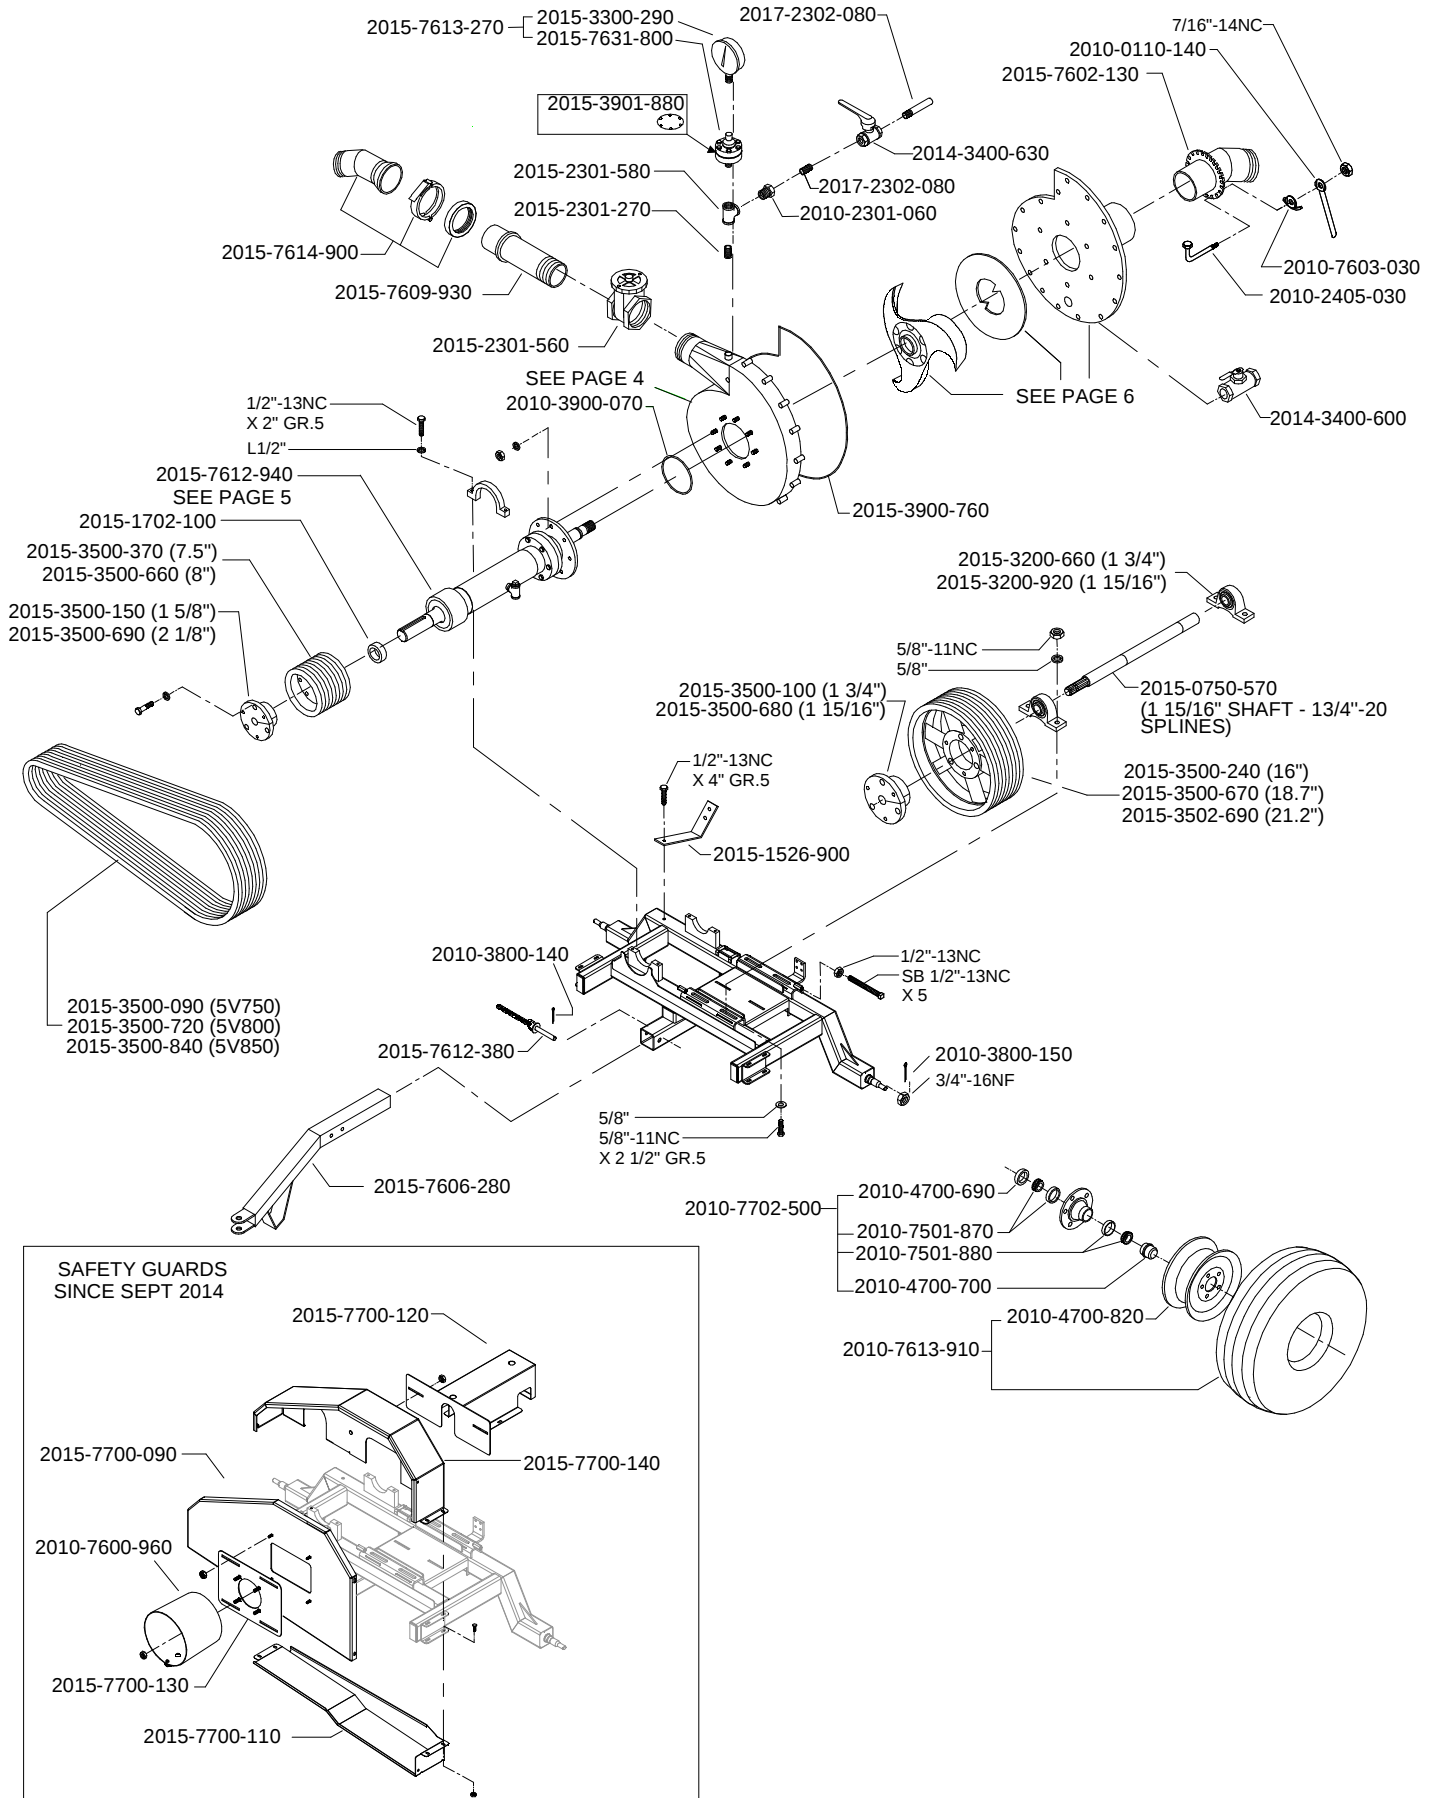


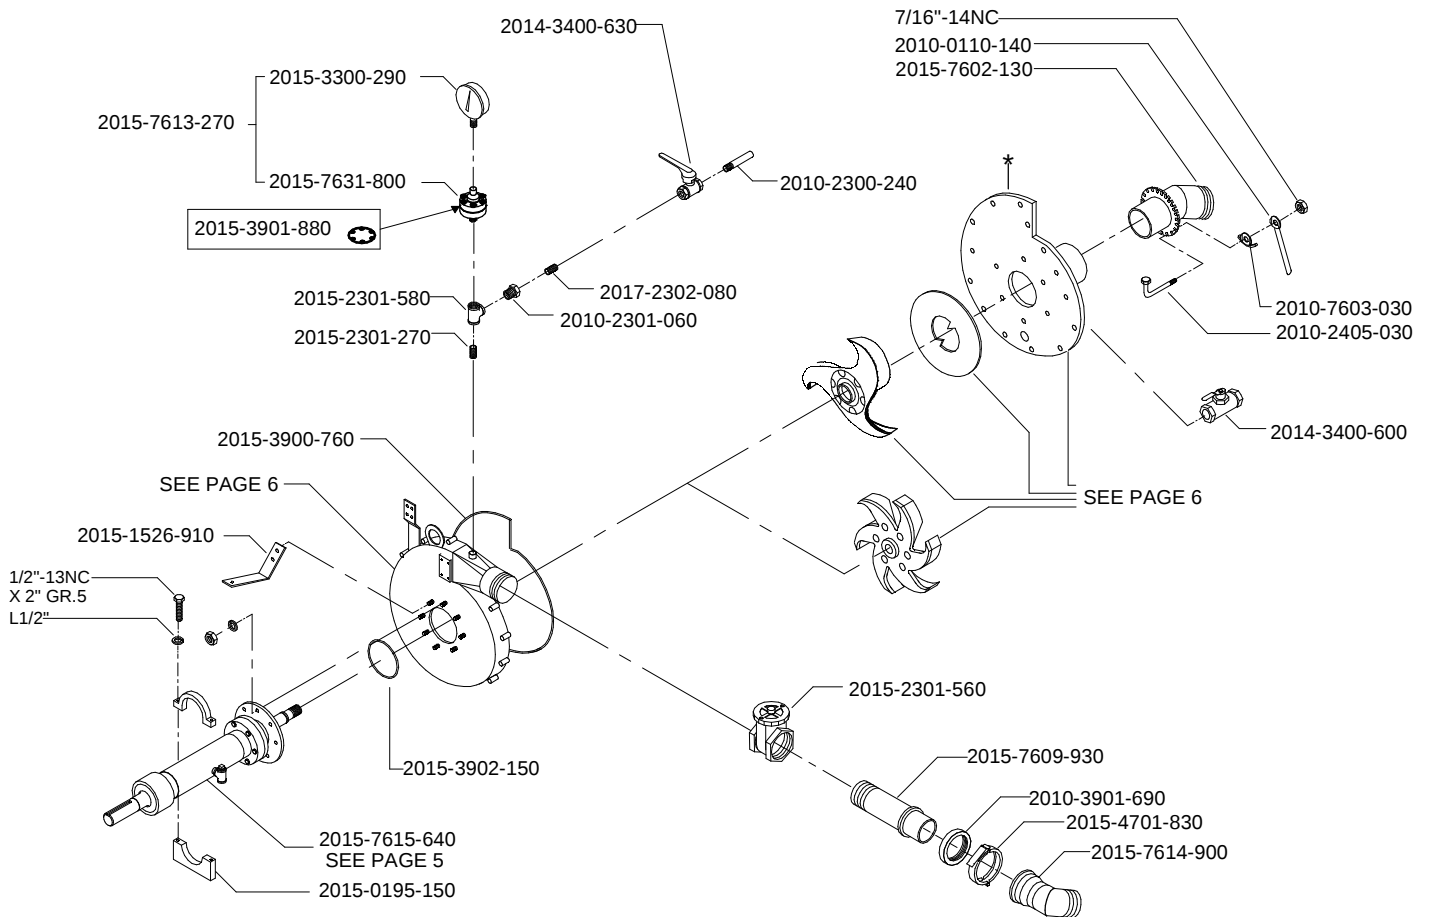

2015-7615-640 COMPLETE BEARING HOUSING - STATIONARY  
2015-7612-940 COMPLETE BEARING HOUSING - TRAILER

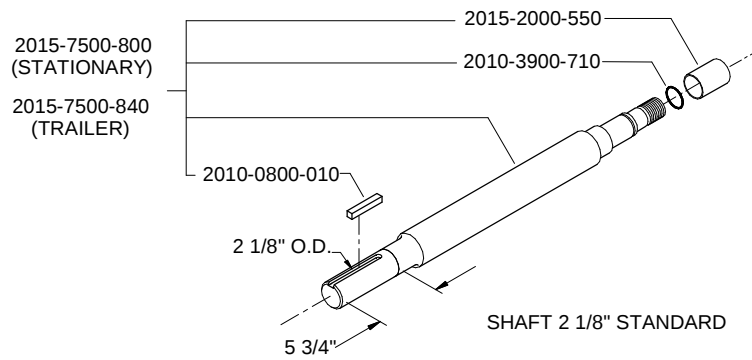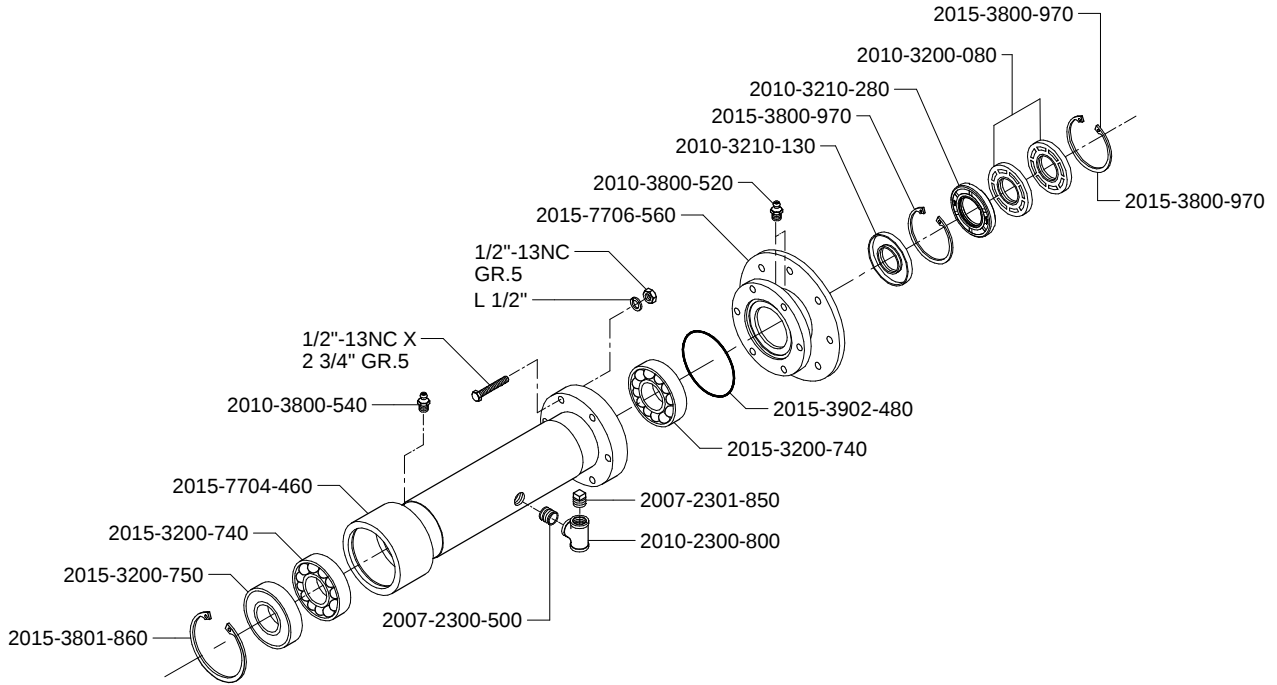


### FOR TRACTOR

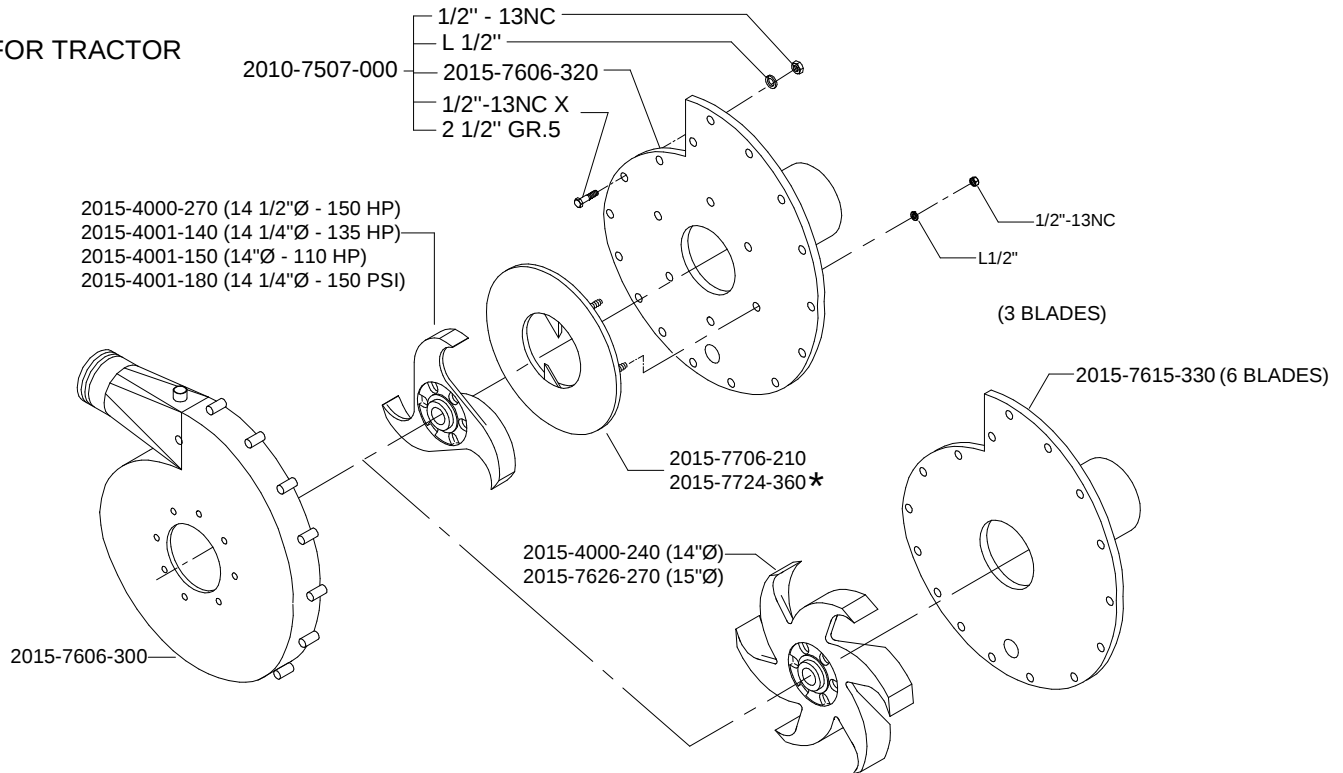


\* SPACER FOR IMPELLER #2015-4001-180 ONLY

### STATIONARY ENGINE

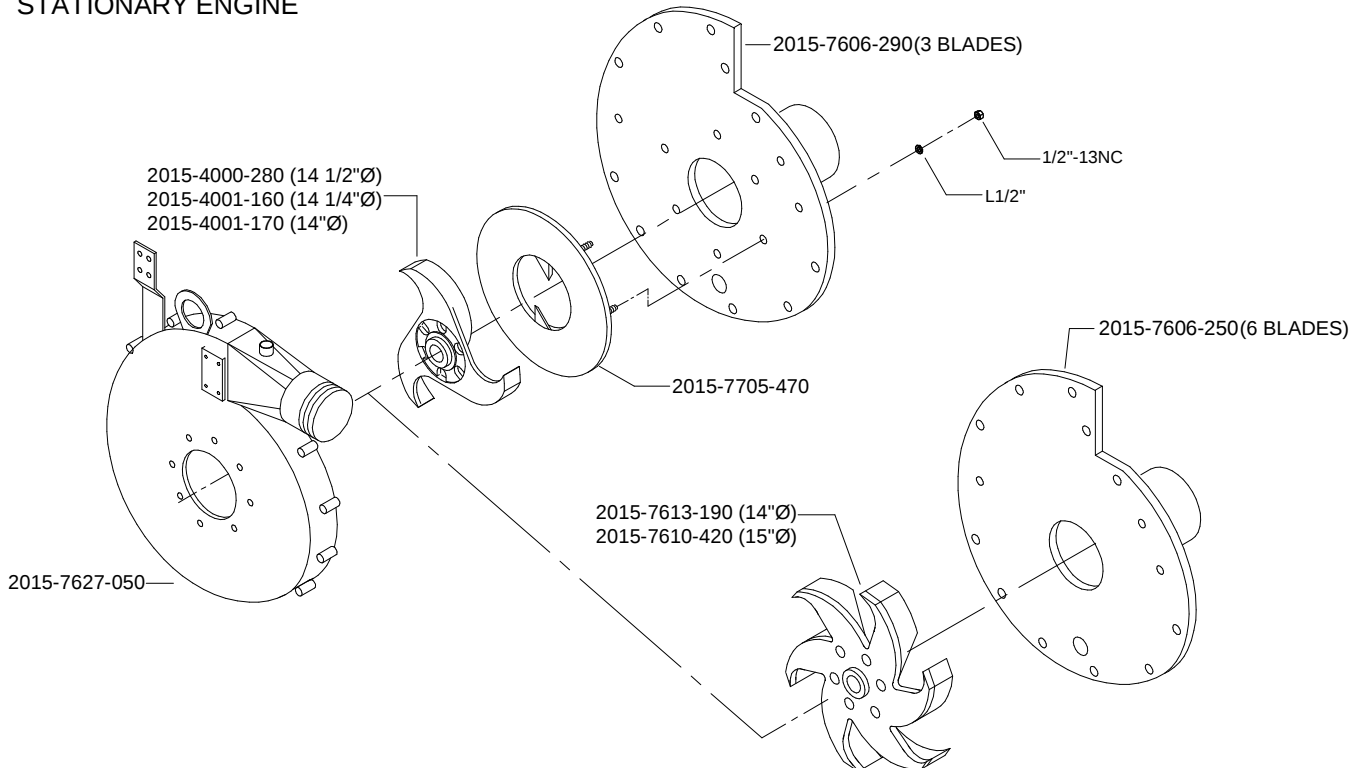

#### COMPLETE HYDRAULIC PRIMING PUMP

2014-8014-200

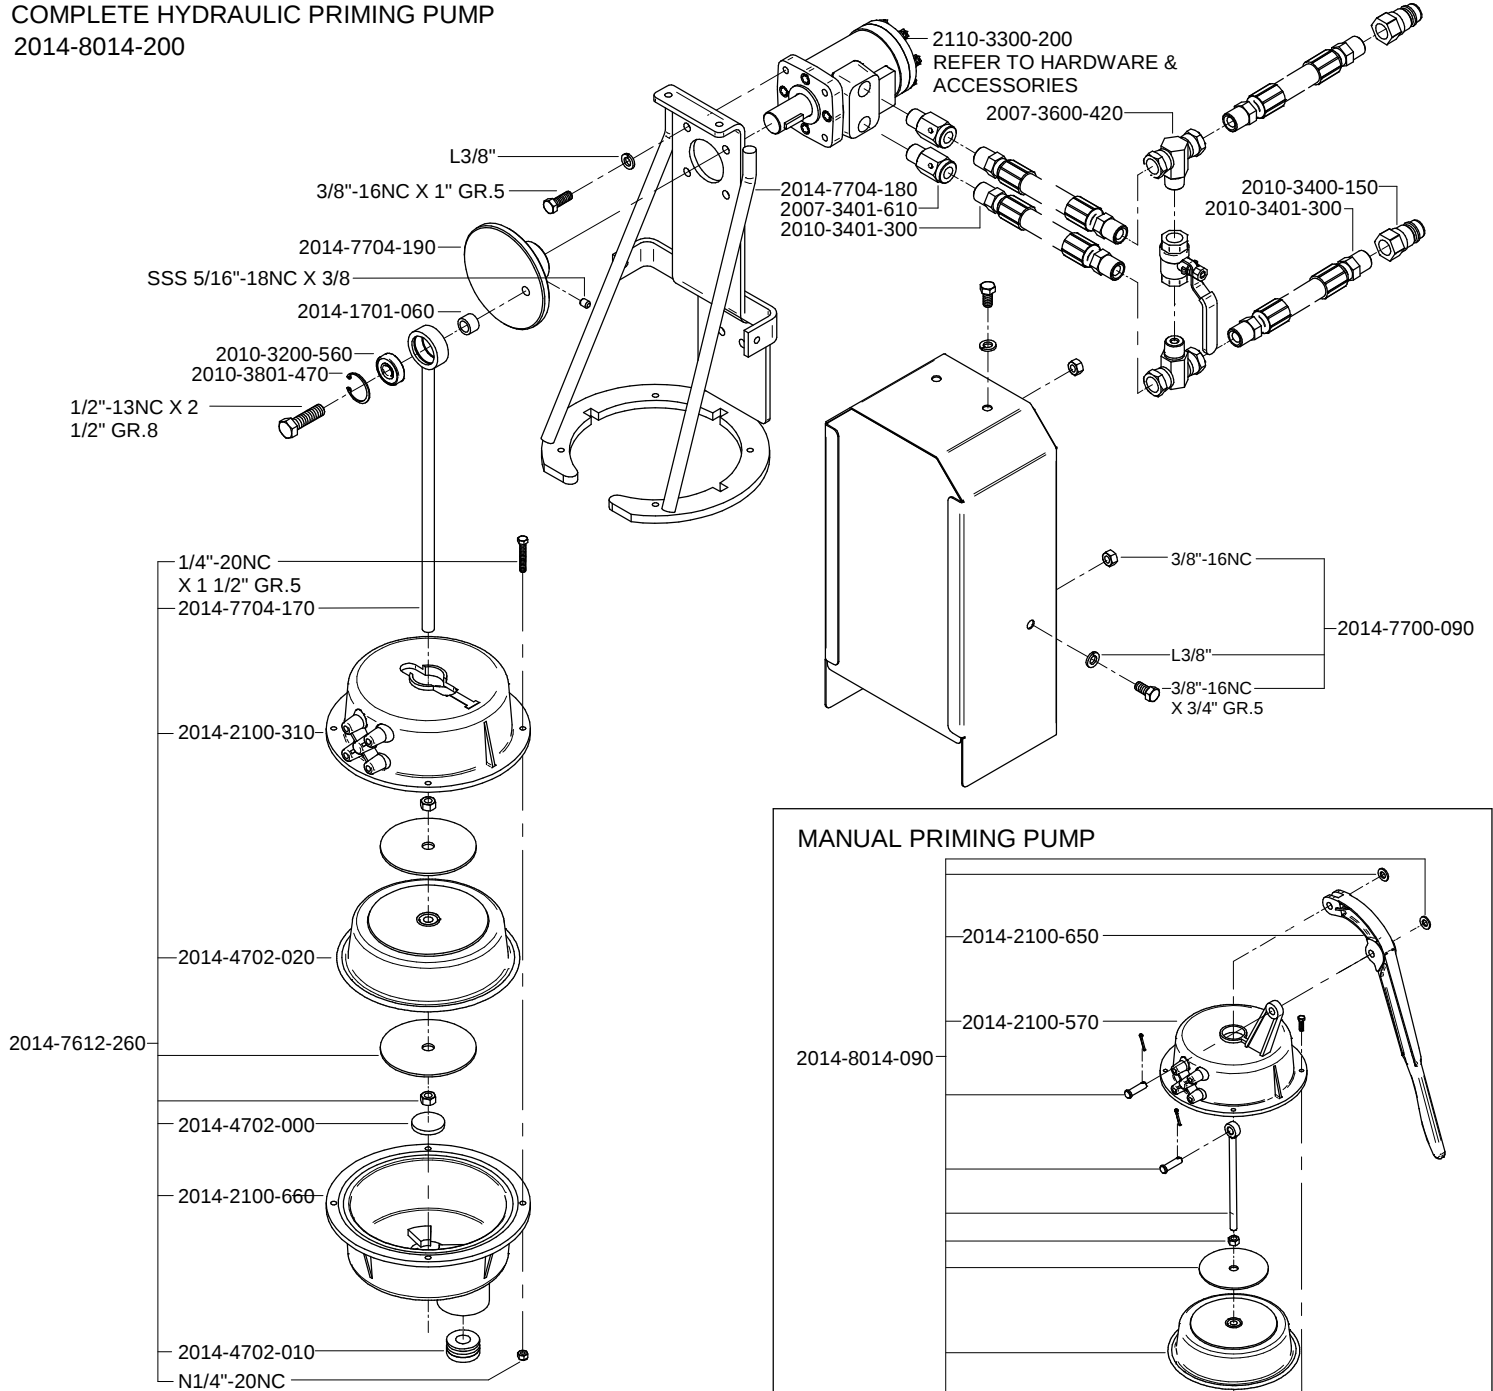

#### MANUAL PRIMING PUMP

