

OPERATING INSTRUCTIONS

Original instructions



Hygienic valves

GEA ECOVENT® Valve Type N_/ECO DN 10+15

GEA Tuchenhausen GmbH
Document number: 430BAL008462
Language: EN-GB / Date: 16.05.2025

Copyright © GEA Tuchenhausen GmbH 2024. All rights reserved. No liability will be accepted for damage resulting from non-observance of this document. If you have any questions or require clarification concerning the use of this document, contact *Customer service*.

Table of Contents

1	General	7
1.1	Information about the document	7
1.1.1	Purpose and structure of the document	7
1.1.2	Design elements	7
1.1.3	Reading obligation and storage	8
1.2	Manufacturer address	8
1.3	Customer service	8
1.4	Declarations of conformity	9
2	Safety	11
2.1	Intended use	11
2.1.1	Requirements for the operation	11
2.1.2	Pressure equipment directive	11
2.1.3	ATEX directive	11
2.1.4	Improper operating conditions	12
2.2	Modification	12
2.3	Structure of warning notices	12
2.3.1	Preceding warning notices	12
2.3.2	Integrated warning notices	12
2.3.3	Signal words	13
2.4	Personnel qualification	13
2.5	General safety instructions	13
2.5.1	General hazard	14
2.5.2	Mechanical hazard	14
2.5.3	Electrical hazard	14
2.5.4	Thermal hazard	14
2.6	Personal protective equipment	15
2.7	Safety devices	15
2.8	Residual dangers	15
2.9	Safety signs	18
2.10	Emergency measures	19

3	Description	20
3.1	Structure and function	20
3.1.1	Design	20
3.1.2	Functional description	21
3.1.2.1	Spring-to-close actuator function (NC)	21
3.1.2.2	Spring-To-Open actuator function (NO)	22
3.1.2.3	Modifying the actuator closing direction	22
3.1.3	Signs	24
3.1.4	Protective devices	24
3.2	Technical data	25
3.2.1	Type plate	25
3.2.2	Technical data	25
3.2.3	Resistance and permitted operating temperature of the sealing materials	27
3.2.4	Pipe ends - General table of measurements	28
3.2.5	Lubricants	29
4	Storage and transport	30
4.1	Scope of supply	30
4.2	Storage	30
4.3	Transport	31
5	Assembly and installation	32
5.1	Notes on installation	32
5.2	Control top	32
5.3	Install the valve with detachable pipe connection elements	32
5.4	Install valve with welding ends	32
5.5	Checking the pneumatic connection	34
5.5.1	Air requirement	34
5.5.2	Establishing hose connections	34
5.6	Electrical connection with T.VIS control top	36
6	Commissioning	37
6.1	Preparing commissioning	37
6.2	Restarting	37
7	Operation and control	38
7.1	Monitoring operation	38
7.2	Shutdown	38

8	Cleaning	39
8.1	General	39
8.1.1	Cleaning process examples	39
8.1.2	Cleaning results	39
8.2	Passivation	40
9	Maintenance	41
9.1	Carrying out inspections	41
9.1.1	Checking seals that come into contact with the product	41
9.1.2	Checking the pneumatic connection	41
9.1.3	Checking the electrical connection	42
9.1.4	Checking the signs on the valve	42
9.2	Servicing intervals	42
9.3	List of tools	42
9.4	Prior to removal	43
9.5	Removing the valve	44
9.5.1	Removing the control top	44
9.5.2	Removing the valve insert	44
9.5.3	Dismantling the valve insert into individual parts	46
9.6	Installing the valve	47
9.6.1	Tightening torques	47
9.6.2	Assembling the valve insert from individual parts	48
9.6.3	Installing the valve insert	50
9.6.4	Mounting the control top	52
9.6.5	Checking the function	53
9.7	Maintenance	53
9.7.1	Cleaning the valve	53
9.7.2	Replacing seals	55
9.7.2.1	Replacing the V-ring	55
9.7.2.2	Replacing more seals	57
9.7.3	Lubricating seals and threads	58
10	Malfunctions	59
11	Decommissioning, dismantling and disposal	60
11.1	Decommissioning	60
11.2	Dismantling	60
11.3	Disposal	60

12 Replacement parts..... 62

12.1 Order information.....62

12.2 Spare parts lists.....62

13 Annex..... 63

13.1 Dimension sheet.....63

13.2 List of abbreviations.....63

1 General

This chapter contains basic instructions for using the valve and explanations of illustration conventions. It also contains information about the design and structure.

The term valve in these Operating Instructions refers to Hygienic valves.

1.1 Information about the document

1.1.1 Purpose and structure of the document

The objective of these Operating Instructions is to provide information on how to operate the valve. To achieve this, it is divided into several chapters which are oriented on the various life phases of the valve. Compliance with the instructions will enhance the valve's longevity and reliability, and reduce the likelihood of harm to individuals or damage to property. The Operating Instructions also acts as the basis for creating operating instructions.

1.1.2 Design elements

In this document, the following design elements are used as orientation aids.

General orientation aids

- Figure numbers
- Table numbers
- Chapter numbers
- Page numbers
- Headers and footers
- References
- Lists

Lists

Bullet points are shown in lists and do not prescribe a specific sequence.

- Bullet point
- Bullet point
 - Sub-point
 - Sub-point
- Bullet point

Numbered lists

In a sequence of actions, the order of the action steps is specified by a numbered list. Partial results and the result of a sequence of actions are marked by arrows.

1. Action step one
2. Action step two
 - 2.1 First sub-step two
 - 2.2 Second sub-step two
 - Partial result
3. Action step three
 - Partial result
4. Action step four
 - ⇒ Outcome

INFO

Informational texts contain additional information about a description or action step.

1.1.3 Reading obligation and storage

Every person who works on or with the valve must have read these Operating Instructions. They must be available to these persons at all times.

1.2 Manufacturer address

GEA Tuchenhausen GmbH
Am Industriepark 2-10
Germany
21514 Büchen

1.3 Customer service

Phone: +49 4155 49-0
Fax: +49 4155 49-2035
flowcomponents@gea.com
www.gea.com

1.4 Declarations of conformity



EU Declaration of conformity within the meaning of the EC machine directive 2006/42/EC

Manufacturer: **GEA Tuchenhausen GmbH**
Am Industriepark 2-10
21514 Büchen, Germany

Hereby, we declare that the machine designated in the following

Designation: Valve with actuator

Type: ECOVENT®

by virtue of its design and construction and in the versions placed on the market by us, complies with the essential health and safety requirements of the following directive:

Relevant EC directives: 2006/42/EC EC Machinery Directive


Applicable harmonized standards, in particular: EN ISO 12100: 2010


- Remarks:
- In the event of a modification to the machine that was not agreed with us, this declaration loses its validity
 - Furthermore, we declare that the specific technical documentation for this machine has been drawn up in accordance with Annex VII, Part A, and undertake to forward this documentation by means of data medium upon justified request by the national authorities

Person authorised for compilation and handover of technical documentation:

GEA Tuchenhausen GmbH
CE Documentation Officer
Am Industriepark 2-10
21514 Büchen, Germany

Büchen, 08 January 2021

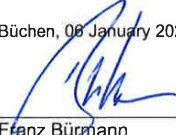
Franz Bürmann
Managing Director


pp. Matthias Südel
Head of Engineering

Translated copy of the EU - Declaration of conformity in accordance with the Pressure Equipment Directive 2006/42/EU

Manufacturer:	GEA Tuchenhausen GmbH Am Industriepark 2-10 21514 Büchen
---------------	--

We hereby declare that the machine named below

Designation:	Valve with actuator
--------------	---------------------

Type:	ECOVENT®
-------	----------

on the basis of its design and construction, as well as the version that we have put into circulation, corresponds with the relevant fundamental health and safety requirements of the following guideline:

Relevant EC directives:	2006/42/EC EC Machinery Directive
-------------------------	-----------------------------------

Applicable harmonized standards, in particular:	EN ISO 12100: 2010
---	--------------------

Remarks:	• This declaration will become invalid if any alterations are made to the machine which have not been agreed with us • We also declare that the relevant technical documentation for this machine has been prepared in accordance with Annex VII, Part A, and agree to submit the documentation on justified request of national authorities on a data carrier
----------	--

Person authorised for compilation and handover of technical documentation:	GEA Tuchenhausen GmbH CE Documentation Officer Am Industriepark 2-10 21514 Büchen, Germany
--	---

Büchen, 06 January 2021

Franz Bürmann Managing Director	i.V. Matthias Südel Head of Engineering
------------------------------------	--

2 Safety

This chapter describes the minimum requirements for the intended use of the valve. It forms the basis for safe operation of the valve.

2.1 Intended use

The valve is used for opening and closing pipeline sections.

Proper use of the valve also includes compliance with these Operating Instructions.

INFO The medium should preferably flow in the opening direction of the valve disk to avoid pipe hammers when the valve is opened or closed.

INFO In a closed pipe system, hydraulic pressure build-up may occur when the valve switches and result in seal damage.

The manufacturer will not accept any liability for damage resulting from any use of the valve which is not in accordance with the designated use of the valve. The risk is borne solely by the operating company.

2.1.1 Requirements for the operation

The prerequisite for the reliable and safe operation of the valve is proper transportation and storage as well as professional installation and assembly. Operating the unit within the limits of its designated use also involves adhering to the operating, maintenance and servicing instructions.

2.1.2 Pressure equipment directive

The valve is a piece of pressure equipment (without safety function) in the sense of the pressure equipment directive 2014/68/EU: Classified according to Annex II in category 1.

According to the scope of directive 2014/34/EC, article 1, paragraph 2, f), the exception of the directive applies, due to conformity with the Machinery Directive 2006/42/EC.

The nominal diameters smaller than DN 25 are subject to article 4, paragraph 3 of the Pressure Equipment Directive which specifies sound engineering practice.

Nominal diameters $\geq$ IPS 4"; DN 125 valid for the fluid group II.

In the event of any deviations, GEA Tuchenhausen GmbH will supply a special Declaration of Conformity.

2.1.3 ATEX directive

In areas with an explosive atmosphere, only valves suitable for use in such areas may be used.

Refer to and observe the additional instruction manual "ATEX version valves". For details regarding the marking of valves for potentially hazardous areas also refer to the additional instruction manual "ATEX version valves".

If these valves are used in areas with a potentially explosive atmosphere, it is mandatory to comply with directive 2014/34/EC with respect to all ignition hazards.

2.1.4 Improper operating conditions

The operational reliability of the valve cannot be ensured under improper operating conditions. Therefore avoid improper operating conditions.

Operating the valve is not permitted if

- Persons or objects are in the danger zone.
- Safety devices are not working or were removed.
- Malfunctions have been detected on the valve.
- Damage has been detected on the valve.
- Maintenance intervals have been exceeded.

2.2 Modification

Subsequent alterations of the valve are not permitted. Otherwise you will have to undergo a new conformity process in accordance with the EC Machinery Directive on your own.

In general, only genuine spare parts supplied by GEA Tuchenhausen GmbH should be fitted. This ensures the reliable and economical operation of the valve.

2.3 Structure of warning notices

Warning notices warn of hazards that may exist when performing certain actions. In this document, the following warning notices are used. The extent of the hazards is categorized into risk levels and can be recognized by the corresponding signal words.

2.3.1 Preceding warning notices

Preceding warning notices are used when there is a hazard during a sequence of actions. Warning notices are colour-highlighted and supplemented by a pictogram in the event of possible personal injury.

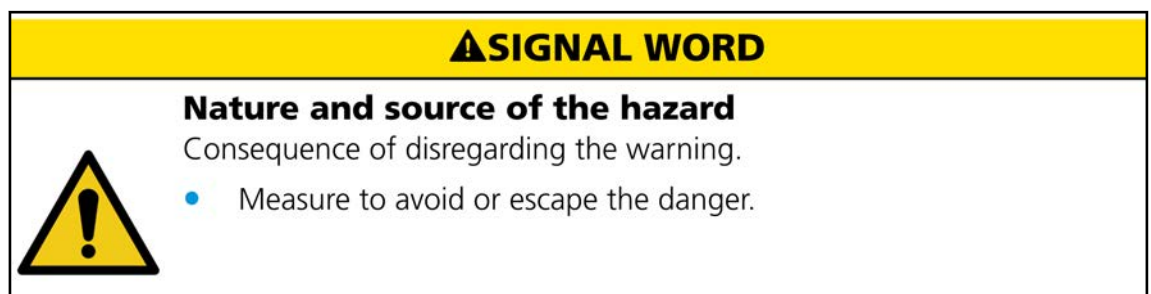


Figure 2-1 - Structure of a preceding warning notice

2.3.2 Integrated warning notices

Integrated warning notices are used when there is a hazard involved in a single action step.

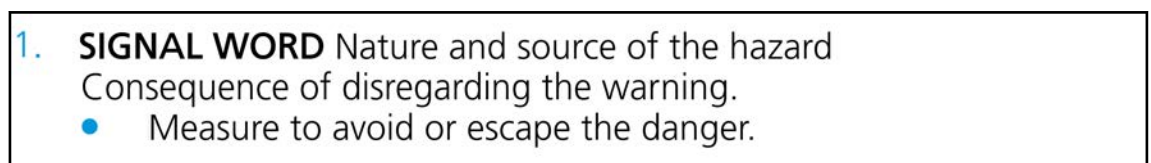


Figure 2-2 - Structure of an integrated warning notice

2.3.3 Signal words

ATTENTION

The signal word ATTENTION indicates a hazard that could result in property damage if not avoided.

CAUTION

The signal word CAUTION indicates a hazard with a low risk level which could result in light to medium injuries if not avoided.

WARNING

The signal word WARNING indicates a hazard with a medium risk level which could result in death or severe injury if not avoided.

DANGER

The signal word DANGER indicates a hazard with a high risk level which will result in death or serious injury if not avoided.

2.4 Personnel qualification

The following basic requirements must be fulfilled for all actions carried out on the valve.

- These Operating Instructions have been read and understood.
- Safety tasks in and around the valve are regulated and assigned.
 - Maintaining order
 - Compliance with safety requirements
 - Securing hazard zones

Additionally, the following groups of people must possess the personnel qualifications or skills listed below and be authorised by the operator to perform actions on the valve.

Operating staff

- Trained by the operating company, a qualified customer specialist or a GEA service expert

Customer specialist

- Technical training

Trained customer specialist

- Technical training in a specific field of expertise
- Training by GEA personnel or participation in training courses of the GEA Tuchen-hagen

GEA service expert

- Personnel from GEA Tuchenhausen, see *1.3 Customer service*

Where necessary, reference is made to the respective group of individuals in these Operating Instructions.

2.5 General safety instructions

The valve was built in accordance with the state of the art and recognised safety regulations at the time of its launch. However, the safety measures stipulated by the operator and listed below must still be adhered to in order to ensure safety.

2.5.1 General hazard

Source	Consequences	Measures
Faulty valve	Injury and damage	Check that the valve is fully functional.
Non-compliance with these Operating Instructions	Injury and damage	Read and familiarise yourself with these Operating Instructions.
Operating materials	Injuries	- Wear personal protective equipment. - Avoid contact with operating materials.

Table 1: General hazard

2.5.2 Mechanical hazard

Source	Consequences	Measures
Moving or rotating components	- Being drawn in or caught - Entrapment - Crushing - Impact	- Remove jewellery. - Tie hair back or wear a hair net. - Wear tight-fitting clothing.
- Gravity - Falling objects	- Impact - Crushing	- Do not walk under suspended loads. - Eliminate the stumbling hazards.

2.5.3 Electrical hazard

Source	Consequences	Measures
Electromagnetic processes	Implications for electronic medical implants	People with medical implants must keep their distance.
Electrostatic processes	- Electric shock - Fire - Chemical reaction	- Avoid contact to components. - Check the voltage of components. - Wear personal protective gear. - Eliminate leaked flammable substances.

2.5.4 Thermal hazard

Source	Consequences	Measures
Objects or materials at high or low temperature	- Freezing - Burns - Scalding	- Wear personal protective gear. - Wait for adjustment to room temperature.

2.6 Personal protective equipment

To prevent possible personal injuries, the personal protection equipment must be worn.

In addition, GEA recommends keeping the requirements listed below.

- Locally applicable accident prevention regulations
- Instruction manual from the operator or employer

2.7 Safety devices

No safety devices are attached to this valve.


2.8 Residual dangers

Despite all the measures taken, the following residual hazards can lead to personal injuries and property damage at any time.

- Improper use
- Material fatigue
- Failure of safety devices

Danger zones

Please observe the following notes:

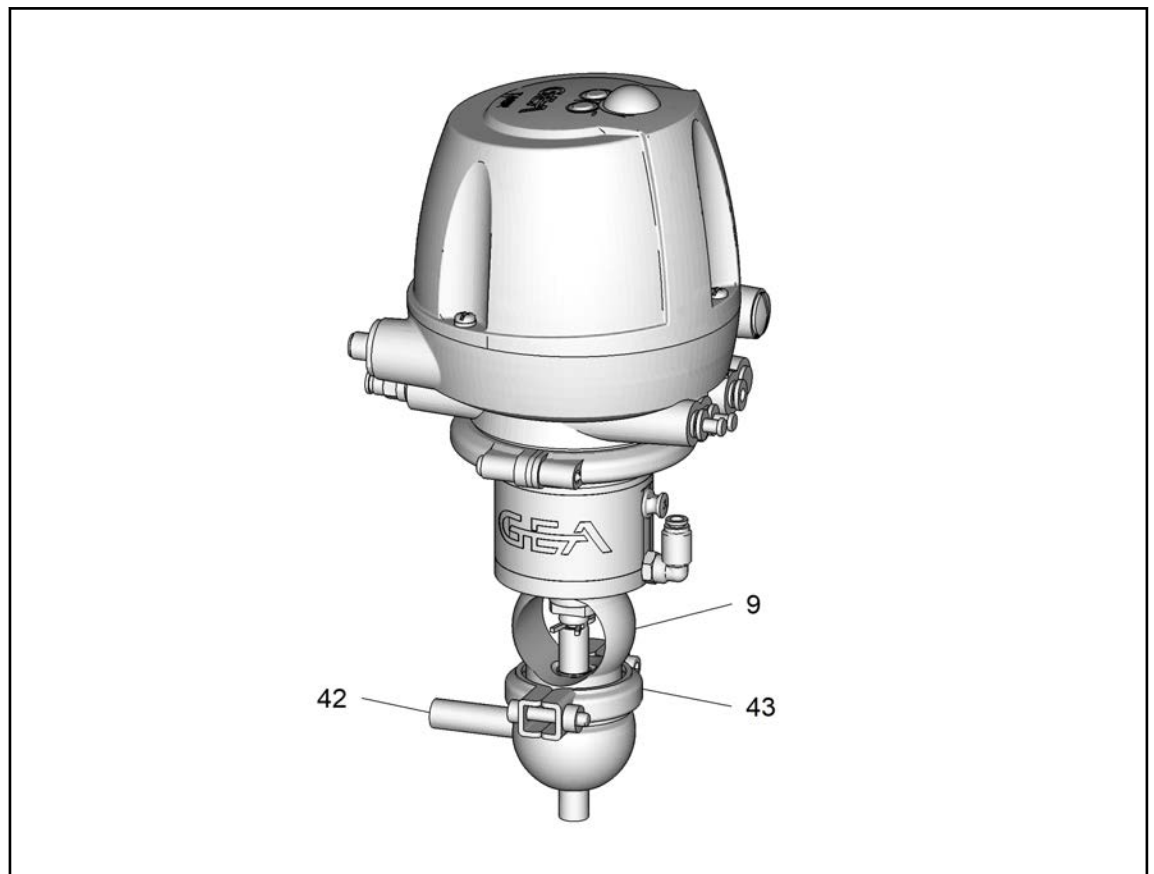

- In the event of malfunctions, shut down the valve (disconnect from the power and air supply) and secure it against being used.
 - Before starting any maintenance, servicing or repair work, disconnect the valve from the power supply and secure it against inadvertently being switched back on again.
 - Only allow a qualified electrician to carry out any work on the electrical power supply.
 - Check the electrical equipment of the valve at regular intervals. Immediately remedy loose connections and molten cables.
 - If work on live parts cannot be avoided, call in a second person, who can operate the main switch in case of an emergency.
-
- Never reach into the lantern (9) or the valve housing (42) when the valve is switching. Fingers can be crushed or cut off.
 - On a spring-closing valve there is danger of injury when the clamp connection (43) is opened, as the released spring pretension will suddenly lift the actuator. Therefore, release the spring tension before detaching the clamp connection (43) by supplying the actuator with compressed air.
 - The housing sockets (42) have very sharp edges. When transporting and installing the valve be sure to wear suitable protective gloves.
 - On versions with proximity switch holder do not put your fingers in the slots.

Dangerous situations can be avoided by safety-conscious and proactive behaviour of the personnel and by wearing personal protective equipment.

Residual dangers on the valve and measures

Danger	Cause	Measure
Danger to life	Inadvertent switch-on of the valve	Effectively disconnect all components, effectively prevent switch-on.
	Electric power	Observe the following safety rules: 1. Isolate from the power supply. 2. Take appropriate measures to prevent switch on. 3. Test absence of voltage. 4. Earthing and short-circuiting. 5. Cover or safeguard any adjacent live parts.

Danger	Cause	Measure
	Spring tension in the actuator	Danger to life caused by the pressurised spring in the actuator. Do not open the actuator, rather return it to GEA Tuchenhausen for proper disposal.
Risk of injury	Danger presented by moving or sharp-edged parts	The operator must exercise caution and prudence. For all work: • Wear suitable work clothing. • Never operate the machine if the cover panels are not correctly fitted. • Never open the cover panels during the operation. • Never reach into openings. As a precautionary measure, wear personal protective equipment in the vicinity of the valve: • Protective gloves • Safety shoes
Environmental damage	Operating materials with properties which are harmful to the environment	For all work: • Collect lubricants in suitable collecting vessels. • Dispose of lubricants in accordance with the pertinent regulations.

Table 2: Residual dangers and measures

Instructions for the Safe Handling of Electronic Components During Welding Work

ATTENTION

Stray welding currents during welding

Can cause damage to electronic components

- Follow the steps below to prevent this.

1. Before starting welding work, carry out the following preparations:
 - 1.1 Ensure the device is switched off and no electrical connections are active.
 - 1.2 Disconnect the device from the power supply.
→ This protects the electronic components from potential damage caused by stray welding currents.
2. Establish a correct grounding connection:
 - 2.1 Place the ground connection of the welding machine as close as possible to the welding point.
→ This minimises the risk of stray welding currents and helps protect nearby electronic components from damage.
3. After completing the welding work, proceed as follows:
 - 3.1 Remove the welding machine's ground connection.
 - 3.2 Reconnect the device to the power supply.
 - 3.3 Perform a function test.

2.9 Safety signs

The safety symbols listed below are attached to the valve.

The position of the applicable safety symbols on the valve are shown in an overview, see 3.1.3 *Signs*.

Warning signs



General warning sign

Hazard for persons, conveyed by the additional sign.



Warning, risk of hand injuries

Hazard posed by closing mechanical components on the valve.



Warning, spring tension

Hazard posed by spring tension. Do not open the actuator.



Explosion-hazardous zones warning

Special explosion protection sign

2.10 Emergency measures

In case of any emergencies on the valve, the operating regulations must be observed and the following actions implemented.

Fire

- Call local specialists
- Use extinguishing agents as outlined in the operating regulations
- Exit the hazard zone
- Warn individuals that are endangered

Injuries

- Administer first aid
- Call local emergency services

3 Description

This chapter contains instructions on how to install the valve and its functions.

3.1 Structure and function

3.1.1 Design

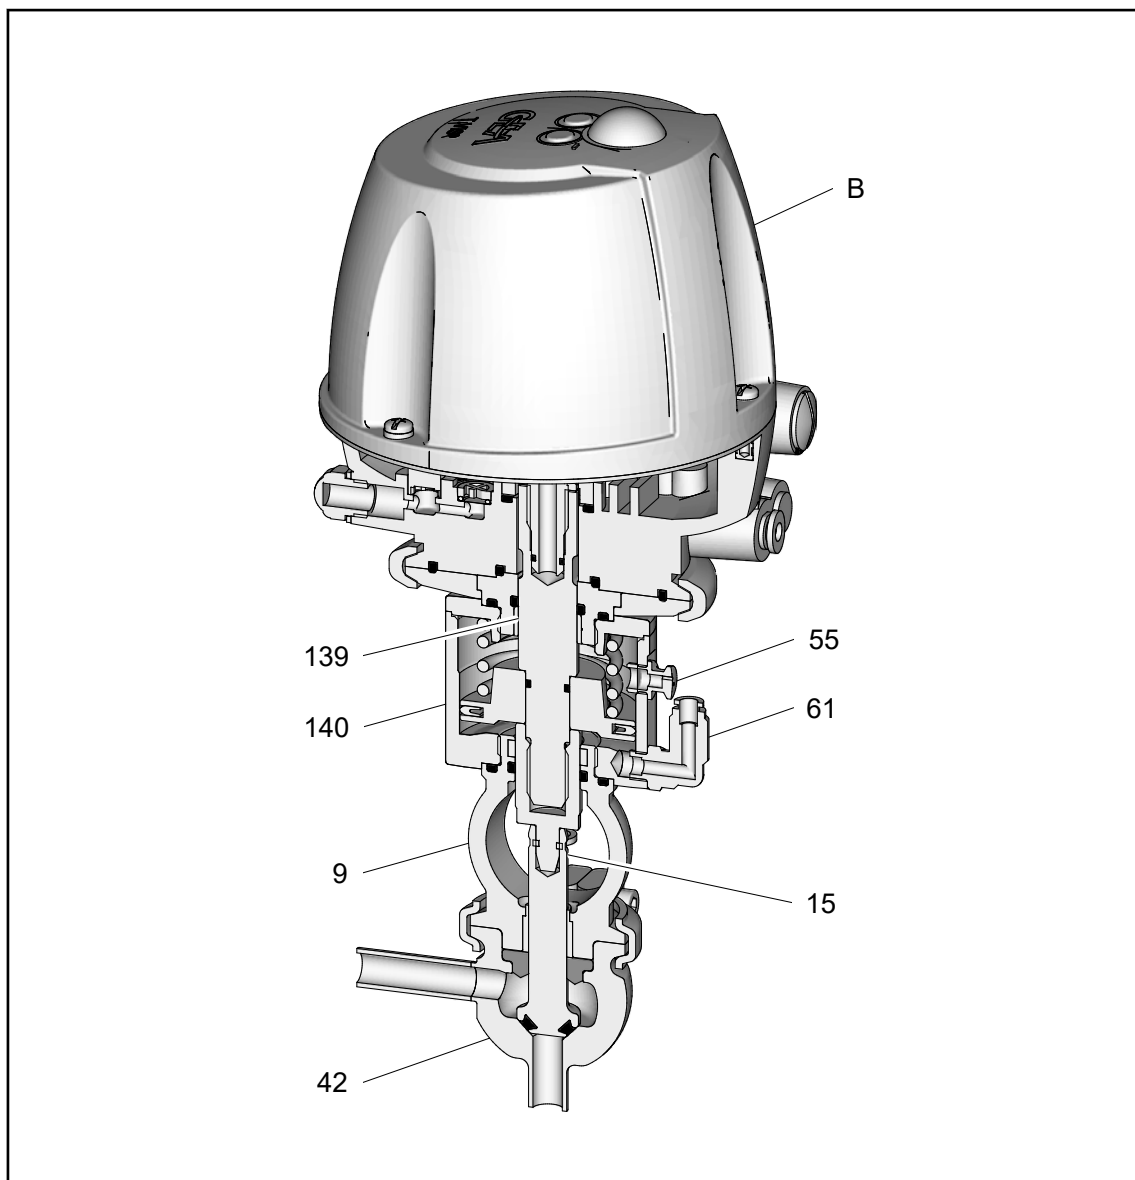


Figure 3-1 - Design of the valve

Position Description	Position Description
B - T.VIS control top	9 - Lantern
15 - Valve disk	42- Valve housing / see spare parts drawings for housing configurations
55 - Venting screw	61 - Elbow push-in fitting
139 - Adapter T.VIS	140 - Actuator

3.1.2 Functional description

3.1.2.1 Spring-to-close actuator function (NC)

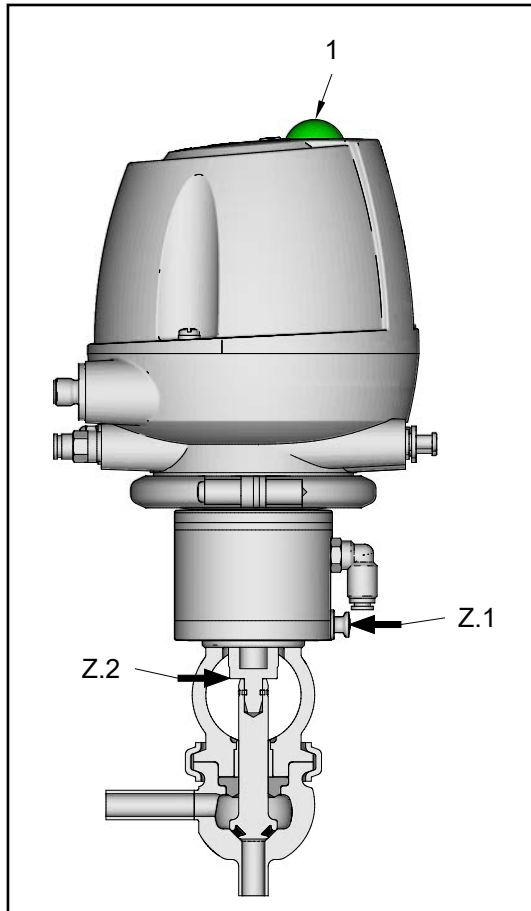


Figure 3-2 - Valve Type N_ECO closed in idle position (NC)

The actuator is of the spring-closing type (NC). The valve is closed in the idle position.

Identification:

- Shoulder of the valve disk is at the bottom in the lantern (Z.2).
- Air connection/ locking screw below (Z.1).

Identification on the T.VIS control top once the installation (SET-UP) has been completed:

- Permanent light (1) green: valve is closed (in idle position)
- Permanent light (1) yellow: valve is open (actuator is activated)

3.1.2.2 Spring-To-Open actuator function (NO)

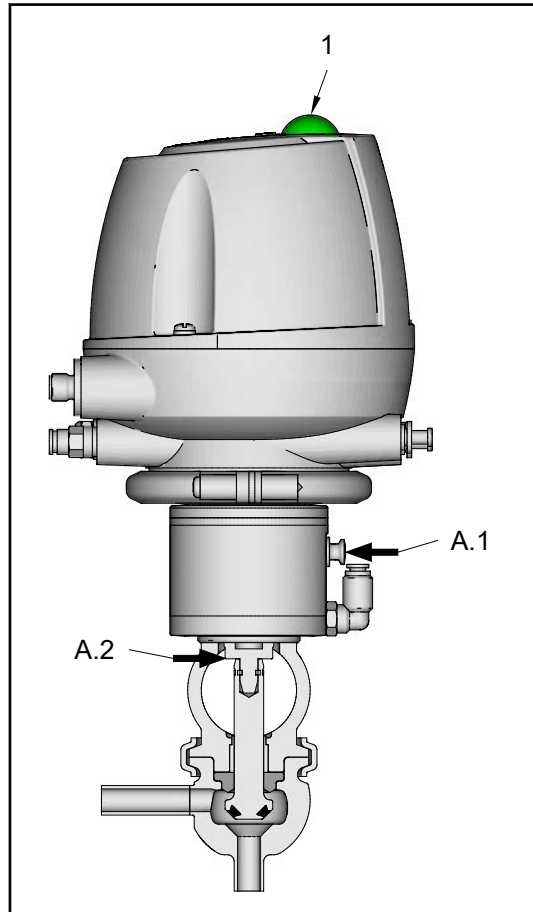


Figure 3-3 - Valve Type N_ECO open in idle position (NO)

The actuator is spring-to-open (NO). The valve is open in the non-actuated position.

Identification:

- Shoulder of the valve disk is at the top in the lantern (A.2).

- Air connection/ locking screw top (A.1).

Identification on the T.VIS control top once the installation (SET-UP) has been completed:

- Permanent light (1) green: valve is open (in idle position)
- Permanent light (1) yellow: valve is closed (actuator is activated)

3.1.2.3 Modifying the actuator closing direction

INFO

When the idle position is reversed by turning the actuator, the actuation forces may no longer be sufficient for the application. Therefore, check the actuator size before changing the closing direction.

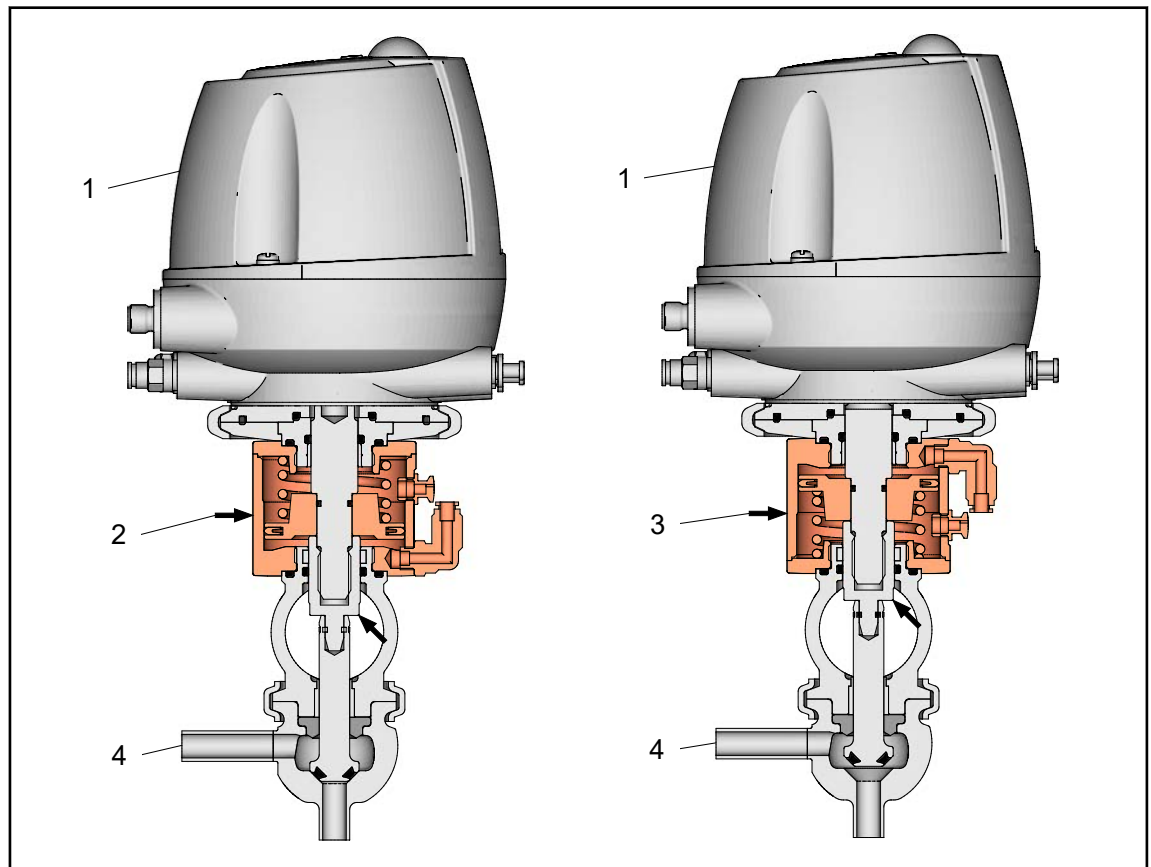


Figure 3-4 - 3.3 Reverse idle position

No.	Designation
1	Feedback side
2	Installation position spring-to-close actuator (NC), idle position closed
3	Installation position spring-to-open actuator (NO), idle position
4	Valve side

Reversing the idle position

Prerequisites

- The valve has been removed, see 9.4 *Prior to removal*.
- sufficient actuator size for application, check the actuator size if necessary

1. Turn the actuator to reverse the idle position.
2. Remove the valve, see 9.6 *Installing the valve*.

⇒ The idle position is reversed.


INFO After modification, reset the proximity switches and feedback button!

3.1.3 Signs

Overview and layout

All safety symbols and other signs must meet the following criteria throughout the life cycle of the valve.

- Complete
- Attached as shown
- Clean and legible

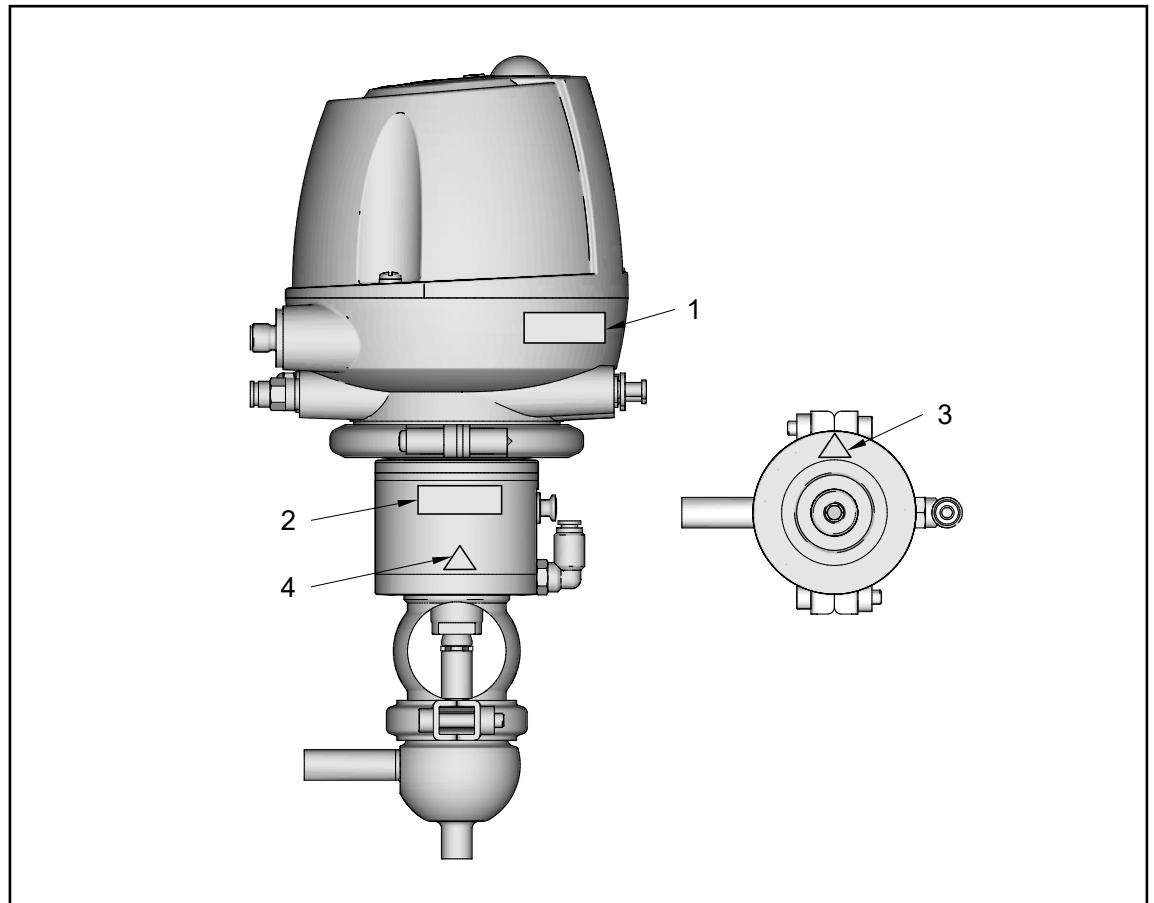

No.	Signs
1	Type plate T.VIS; adhered to T.VIS
2	Type plate valve; adhered to actuator
3	Warning: do not open, taut springs; adhered to actuator
4	Warning: crushing (refers to the lantern) adhered to actuator after lantern

The representation and meaning of the safety symbols used are listed in an overview corresponding to their category, see chapter 2.9 *Safety signs*

3.1.4 Protective devices

To avoid personal injuries, danger zones are made inaccessible by protective devices. The following protective devices are installed on this machine.

There are no protective devices installed on this machine.

3.2 Technical data

3.2.1 Type plate

The type plate clearly identifies the valve.

GEA		GEA Tuchenhausen GmbH Am Industriepark 2-10, 21514 Büchen, Germany		UK CA		CE	
Type Code							
Feedback				Serial			
Material							
Air bar/psi min.		max.					
PS bar/psi	1	2	3				

The type plate provides the following key data:

Key data of the valve

Characteristics	Values
Type	N_/ECO DN 10+15
Serial	Serial number
Material	1.4404 (AISI 316L) / EPDM (FDA)
Control air pressure bar/psi	min. 5.0/72.5 max. 8.0/116
Product pressure bar/psi	10/ 145

3.2.2 Technical data

Refer to the following tables for the key technical data of the valve:

Technical data: Valve

Designation	Description
Size	DN 10 and DN 15
Material of product contact parts	Stainless steel 1.4404 / 316L
Fitting position	Any position, if valve and pipe system can drain properly

Technical data: Ambient temperatures

Designation	Description
Valve	0 to 60 °C (32 to 140 °F), standard < 0 °C (32 °F): Use control air with low dew point. Protect valve rods against freezing. < -15 °C: no solenoid valves in the control top < +50 °C: no solenoid valves in the control top
Proximity switch	-20 to +80 °C (-4 to +176 °F)

Designation	Description
Control top T.VIS M-20, M-15, A-15, P-15	-20 to +55 °C (-4 to +131 °F)
Control top E-20	Ambient temperatures according to the specific values stated for the gas or dust ignition protection
Product temperature and operating temperature	Dependent on the seal material, see 3.2.3 <i>Resistance and permitted operating temperature of the sealing materials</i>

Table 3: Technical data - Ambient temperatures

Technical data: compressed air supply, product pressure and CIP pressure

Designation	Description
Air hose	
Metric	Material PE-LD Outside Ø 6 mm Inside Ø 4 mm
Inch	Material PA Outside Ø 6.35 mm Inside Ø 4.3 mm
Control air	acc. to ISO 8573-1
Solid particle content:	Quality class 6 Particle size max. 5 µm Particle density max. 5 mg/m ³
Water content:	Quality class 4 max. dew point +3 °C If the unit is used at higher altitudes or at low ambient temperatures, the dew point must be adapted accordingly.
Oil content:	Quality class 3 preferably oil free max. 1 mg oil to 1 m ³ air
Control air pressure	6 bar (87 psi), max. 8 bar (116 psi) configuration with standard drive Alternative combinations of product pressure and control air pressure on request Special model: min. 4.8 bar, max. 6 bar Pneumatic support: spring side max. 6 bar
Product pressure	5 bar (72.5 psi) configuration with standard drive max. 10 bar (116 psi) configuration with correspondingly designed actuator > 10 bar (145.0 psi) for static applications and on request
CIP pressure	2-5 bar, a test may be necessary for higher CIP pressures
Resistance to pressure hammers 1 1/2" OD, when valve is closed	max. 50 bar

Weights valve N_/ECO DN 10+15

Size		Weight [kg]
Metric	DN 10	4
	DN 15	4

3.2.3 Resistance and permitted operating temperature of the sealing materials

The resistance and permitted operating temperature of the sealing materials depend on the type and temperature of the medium conveyed. The exposure time can adversely affect the service life of the seals. The sealing materials comply with the regulations of FDA 21 CFR 177.2600 or FDA 21 CFR 177.1550.

The maximum operating temperature is defined by the sealing type and its mechanical load.

GEA Tuchenhausen recommends that user should carry out the resistance test himself in order to check the suitability of the selected elastomer for their application.

The resistance of sealing materials can only be determined by the user, as it depends on the operating conditions, such as the time the seals are in contact with the media, process temperature, flow rate, concentration of cleaning agents, and environmental conditions.

If necessary, GEA Tuchenhausen will provide support with further information for special applications if necessary.

Resistance information in the following table:

- + = good resistance
- o = reduced resistance
- – = no resistance

Seal resistance / permissible application temperature of the seal materials

Medium	Maximum operating temperatures	EPDM	FKM
Alkalis up to 3%	up to 80 °C (176°F)	+	o
Alkalis up to 5%	up to 40 °C (104°F)	+	o
Alkalis more than 5%	up to 80 °C (176°F)	+	–
Alkalis more than 5%		o	–
Inorganic acids up to 3%	up to 80 °C (176°F)	+	+
Inorganic acids up to 5%	up to 80 °C (176°F)	o	+
Inorganic acids up to 5%	up to 100 °C (212°F)	–	+
Water	up to 100 °C (176°F)	+	+
Steam	up to 135 °C (275°F)	+	o
Steam, approx. 30 min	up to 150 °C (302°F)	+	o
Fuels/hydrocarbons		–	+
Product with a fat content of max. 35%		+	+

Medium	Maximum operating temperatures	EPDM	FKM
Product with a fat content of more than 35%		-	+
Oils		-	+

Temperature resistance of the sealing materials

Sealing materials	General temperature resistance*
EPDM	-40 to +135 °C (-40 °F to 275 °F)
FKM	-10 to +200 °C (+14 °F to +392 °F)

* The general resistance of the material does not correspond to the maximum operating temperature.

3.2.4 Pipe ends - General table of measurements

INFO Not every valve is available in every size. For information about the available sizes of valves, see 3.2.2 *Technical data*.

Dimensions for tubes in DN

Metric DN	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to DIN 11850
10	13	1.5	10	X
15	19	1.5	16	X
20	23	1.5	20	X
25	29	1.5	26	X
40	41	1.5	38	X
50	53	1.5	50	X
65	70	2.0	66	X
80	85	2.0	81	X
100	104	2.0	100	X
125	129	2.0	125	X
150	154	2.0	150	X

Table 4: Dimensions pipe DN

Dimensions for pipes in inch OD

Inch OD	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to BS 4825
0.5"	12.7	1.65	9.4	X
0.75"	19.05	1.65	15.75	X
1"	25.4	1.65	22.1	X
1.5"	38.1	1.65	34.8	X
2"	50.8	1.65	47.5	X
2.5"	63.5	1.65	60.2	X
3"	76.2	1.65	72.9	X
4"	101.6	2.11	97.38	X
6"	152.4	2.77	146.86	X

Table 5: Dimensions pipe OD

Dimensions for tubes in Inch IPS

Inch IPS	Outside diameter	Wall thickness	Inside diameter	Outside diameter according to DIN EN ISO 1127
2"	60.3	2	56.3	X
3"	88.9	2.3	84.3	X
4"	114.3	2.3	109.7	X
6"	168.3	2.77	162.76	X

Table 6: Dimensions pipe IPS

3.2.5 Lubricants

Lubricant designation	Material no.
Rivolta F.L.G. MD-2 (1000 g)	413-071
Rivolta F.L.G. MD-2 (100 g)	413-136

Table 7: Lubricants

4 Storage and transport

This chapter contains information about transporting the valve. It also describes the minimum requirements for storage after delivery and for any necessary intermediate storage.

The target group of this chapter is all persons who carry out actions related to the transport or storage of the valve.

4.1 Scope of supply

On receipt of the valve check whether

- the details on the type plate correspond to the data in the order and delivery documents,
- the equipment is complete and all components are in good order.

4.2 Storage

The valves, valve inserts or spare parts should be stored in a dry place, free of vibration and dust, and protected from light. To avoid damage, leave the components in their original packaging if possible.

If, during transport or storage, the valve is going to be exposed to temperatures $\leq 0^{\circ}\text{C}$, it must be dried beforehand and suitable measures must be taken to protect it from damage.

INFO We recommend storing at a temperature of $\geq 5^{\circ}\text{C}$ for a period of 24 hours prior to any handling (removal of the housing / activation of actuators with compressed air) so that any ice crystals formed by condensation water can melt.

4.3 Transport

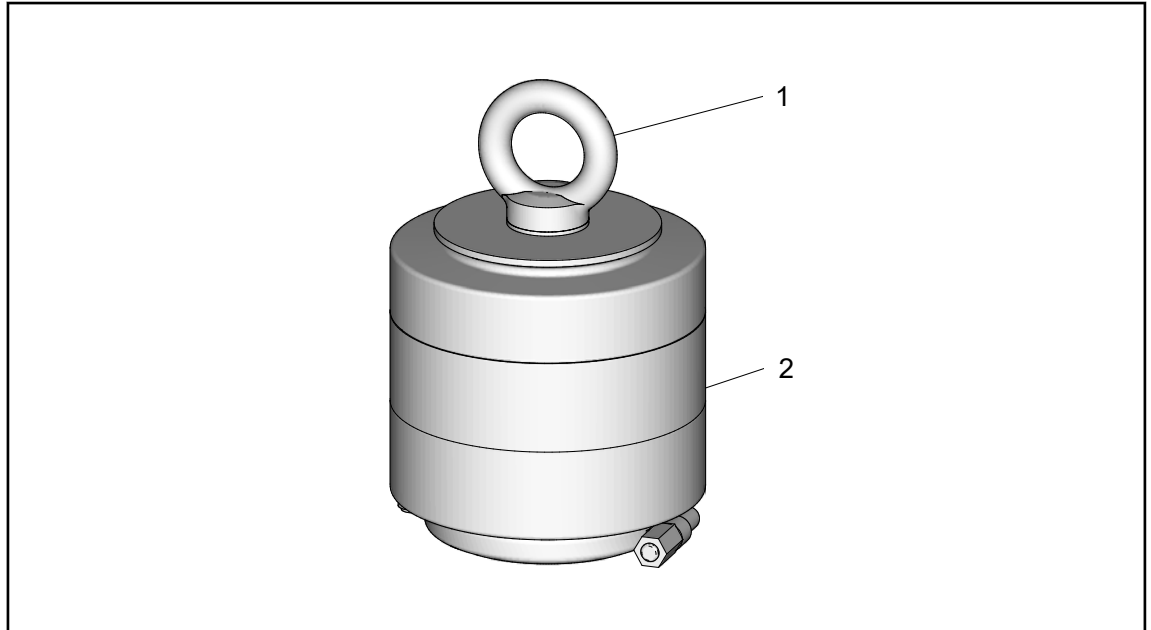


Figure 4-1 - Valve transport

For transport, the following principles apply:

- When transporting the valve be sure to unscrew the control top and the switch bar from the actuator (2) and use the screwed-in eye bolt (1) to lift the valve.
- Only use suitable hoist and slings for transporting the package units/valves.
- Observe the pictograms on the package.
- Handle valves with care to avoid damage caused by impact or careless loading and unloading. The outside synthetic materials are susceptible to breaking.
- Control tops must be protected from animal and vegetable fats.
- Only allow qualified staff to transport the valve.
- Movable parts must be properly secured.
- Only use approved, fully functional load lifting devices and lifting accessories which are suitable for the intended purpose. Observe the maximum load-bearing capacities.
- Secure the valve against slipping. Take the weight of the valve and the position of the point of gravity into account, see *Weights valve N_/ECO DN 10+15*.
- Under no circumstances should anyone stand under a suspended load.
- Take care when transporting the valve. Do not grip sensitive parts of the unit to lift or push the unit or to support yourself. Avoid jerky movements when putting down the unit.

5 Assembly and installation

This chapter contains information and instructions about the assembly and installation of the valve.

The target group of this chapter is all persons who carry out actions related to the valve.

5.1 Notes on installation

The valve can be installed in any position. Steps must be taken to ensure that the valve housing and the pipe system can drain properly.

If the valve is installed in the horizontal position, pay attention that the vent hole in the actuator is aligned horizontally on one side.

To avoid damage, ensure that the valve is installed into the pipe system without tension and no objects remain in the system after assembly (e.g. tools, screws, lubrication oils).

If the valve is installed horizontally, the stress on the valve stem seals is higher than in the vertical installation position. Therefore, support the actuator and regularly check the valve for leakage.

5.2 Control top

If different valves are operated via a control top, it must be ensured for each of the connected valves that the air supply does not fall below the required operating points.

5.3 Install the valve with detachable pipe connection elements

Prerequisites

- The pipe is drained, and cleaned or rinsed, if necessary.
- The pipe section for the valve to be mounted must be separated from the remaining pipe system.

1. Fit valves with detachable pipe connection elements – using suitable connection fittings – directly into the pipe system.

⇒ Valve is installed.

5.4 Install valve with welding ends

WARNING

Spring tension in the valve (NC)

Danger of injury when opening the clamp connections on the actuator or on the housing as the released spring pretension will suddenly lift the actuator.

- Therefore, release the spring tension before detaching the clamp connection by supplying the actuator with compressed air at max. 8 bar.

ATTENTION**Welding distortions**

The housing can warp during welding.

- Tack the pipe sockets of the housings without and gaps and tension to the pipe and housing and weld.

ATTENTION**Stray welding currents during welding**

Can cause damage to electronic components

- For avoidance measures, see *Instructions for the Safe Handling of Electronic Components During Welding Work*.

INFO

Welding method: We recommend using the automatic orbital welding method. All welding work should only be performed by certified welders or machine operators (orbital welders).

Prerequisites

- The pipe is drained, and cleaned or rinsed, if necessary.
- The pipe section for the valve to be mounted must be separated from the remaining pipe system.

1. Release the spring tension.
2. Remove the valve insert, see 9.5.2 *Removing the valve insert*.
3. Weld the housing, without gaskets, into position, ensuring that the connection is free of stress.
 - 3.1 Fit the housing into place and tack it.
 - 3.2 Flush the housing with forming gas from the inside to push the oxygen out of the system.
 - 3.3 Weld the housing into the pipe system; use welding additive, if necessary.
 - When technically possible, use the WIG-orbital welding process with pulse configuration, according to the EHEDG D.35 guideline.
4. Passivate the seam after welding.
5. **INFO**

When assembling the valve, always replace the housing O-rings to ensure that the valve is tight.

Insert the seals.

6. Depending on the actuator closing direction:
 - 6.1 Spring-to-close actuator (NC): pressurize the actuator. Assemble the valve. Depressurize the actuator to lower the valve disk.
 - 6.2 Spring-to-open actuator (NO): install the valve.

⇒ Install the valve with welded ends.

5.5 Checking the pneumatic connection

5.5.1 Air requirement

Actuator type	Actuator Ø [mm]	Air pressure (bar) max.	Air pressure (bar) min.	Air requirement (dm ³ _n /stroke)
				dm ³ _n at 1.01325 bar at 0 °C as per DIN 1343
60/ 4	74	8	5	0.03

5.5.2 Establishing hose connections

INFO To ensure reliable operation, the compressed air hoses must be cut exactly at a right angle.

Tools

- Hose cutter

1. Shut off the compressed air supply.
2. Use the hose cutter to cut the pneumatic hoses at a right angle.
3. Push the air hose into the air connector on the control top.
4. Re-open the compressed air supply.

⇒ Hose connection has been established.

Hose connection diagram with T.VIS control top

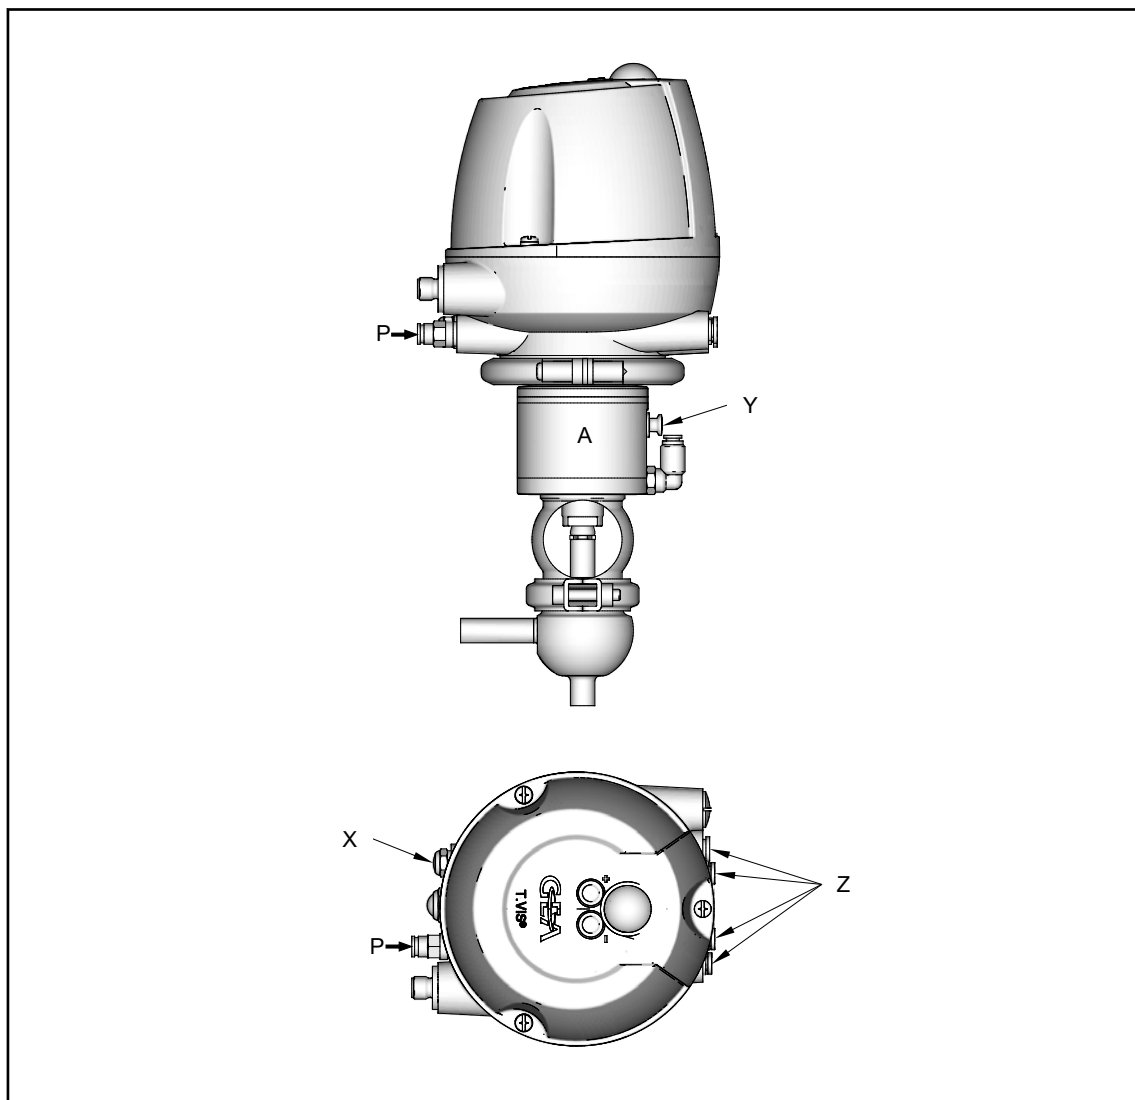


Figure 5-1 - Hose Connection Diagram

Position	Designation
A	Actuator
P	Central air supply
X	Sound absorber
Y	Locking screw
Z	Plug

5.6 Electrical connection with T.VIS control top

⚠ DANGER

Live parts

Electrical shocks can cause serious personal injuries or death.

- Only allow properly qualified staff to work on the electrical equipment.
- Prior to establishing electrical connections, check the maximum permissible operating voltage.

⚠ DANGER

Explosive gases or dusts

An explosion can cause serious personal injuries or death.

- Observe the installation and operating regulations for use in potentially explosive areas!

⚠ DANGER

Live parts

Electrical shocks can cause serious personal injuries or death.

- Only allow properly qualified staff to work on the electrical equipment.
- Prior to establishing electrical connections, check the maximum permissible operating voltage.

⚠ DANGER

Explosive gases or dusts

An explosion can cause serious personal injuries or death.

- Observe the installation and operating regulations for use in potentially explosive areas!

Prerequisites

- Valve is installed

1. Connect the control top in accordance with the connection diagram and the instructions in the operating instructions for T.VIS control tops.

⇒ Control top is connected.

INFO

The proximity switches are set ex-works. Settings can become changed during transport and installation and may need to be reset, see the instruction manual for the control top.

6 Commissioning

This chapter contains information for the initial and any subsequent commissioning of the valve. It also describes the necessary checks and tests.

The target group of this chapter is all persons who carry out actions related to the valve.

6.1 Preparing commissioning

For initial commissioning, the following principles apply:

- Take protective measures against dangerous contact voltages in accordance with pertinent regulations.
- The valve must be completely assembled and correctly adjusted. All screw connections must be securely tightened. All electrical cables must be installed correctly.
- Reliably secure machine parts which have already been connected against inadvertently being switched on.
- Relubricate all lubricating points.
- Make sure lubricants are used properly.
- After conversion of the valve, residual risks must be reassessed.

Notes on commissioning

Before starting commissioning observe the following:

- Make sure that there are no foreign materials in the system.
- Actuate the valve once by applying compressed air.
- Clean the pipe system prior to the first product run.
- During commissioning, regularly check all sealing points for leaks. Replace defective seals.

6.2 Restarting

The following principles apply for restarting:

- Only allow properly qualified staff to set the valve into operation.
- Make sure all connections are connected properly.
- The safety devices for the valve must be complete, fully functional and in perfect condition. Check the function before starting any work.
- When the valve is switched on, the danger zones must be free.
- Remove any liquids that have escaped without leaving residues.

7 Operation and control

This chapter contains information on operating and shutting down the valve.

The target group of this chapter is the operators of the valve.

7.1 Monitoring operation

Dangerous situations during operation can be avoided by safety-conscious and proactive behaviour of the personnel.

For operation, the following principles apply:

- Monitor the valve during the operation.
- Safety devices must not be changed, removed or taken out of service. Check all safety devices at regular intervals.
- All guards and hoods must be mounted as intended.
- The place of installation of the valve must be adequately ventilated at all times.
- Structural alterations of the valve are not permitted. Immediately report any changes on the valve to the person responsible.
- Always keep danger zones clear. Do not leave any objects in the danger zone. Only allow persons to enter the danger zone when the machine is de-energized.
- Regularly check that all emergency stop devices are working correctly.

7.2 Shutdown

The following principles apply for shutdown:

- Switch off the compressed air.
- Switch off the valve.
- Padlock the main switch (if fitted) in the off position to prevent it from being switched back on. The key to the padlock must be deposited with the person responsible until the machine is restarted.
- In case of longer shut-downs, observe the storage conditions, see *4.2 Storage*.

8 Cleaning

This chapter contains information about cleaning the valve. It also contains information about cleaning intervals and the use of cleaning agents.

The target group of this chapter is all persons who carry out actions related to cleaning the valve.

8.1 General

All parts in contact with product must be cleaned at regular intervals. Always observe the safety data sheets issued by the cleaning agent manufacturers. Only use cleaning agents which do not cause damage to the seals and the inner parts of the valve. When the pipe is cleaned, the cleaning medium also flows through and cleans the valve housings.

With respect to the cleaning method and parameters like detergents, temperatures, times, and intervals, the component manufacturer can merely make recommendations but cannot provide any generally applicable details. Method and parameters should be determined and defined by the operator in accordance with the relevant process and product.

The cleaning effect must be checked regularly by the operating company!

8.1.1 Cleaning process examples

Typical cleaning parameters in dairy operations

Example of a two-phase cleaning process:

- Sodium hydroxide solution and sodium hydroxide based combination products in concentrations from 0.5% to 2.5% at 75 °C (167 °F) to 80 °C (176 °F)
- Phosphoric or nitric acid, and combination products based thereon in the concentrations of 0.3 % to 1.5% at approx. 65 °C (149 °F).

Example of a cleaning operation in one cleaning step:

- Formic acid and formic acid-based combination products at up to 85 °C (185 °F).

Typical cleaning parameters in breweries

Example of a two-phase cleaning process:

- Sodium hydroxide solution and sodium hydroxide based combination products in concentrations of 1% to 4% at about 85 °C (185 °F).
- Phosphoric or nitric acid, and combination products based thereon in the concentrations of 0.3 to 1.5% at 20 °C (68 °F).

8.1.2 Cleaning results

The cleaning result depends on the following factors:

- Temperature
- Time
- Mechanics
- Chemicals
- Degree of soiling

These factors can be combined in such a way as to make an optimal cleaning result probable.

8.2 Passivation

Before a system with long pipes and tanks is commissioned, it usually needs to be passivated.

Valve blocks are usually excepted from this.

Passivation is usually carried out with nitric acid (HNO_3) at about 80 °C (176 °F) in a concentration of 3 % and a contact time of 6 to 8 hours.

9 Maintenance

This chapter contains information about valve maintenance, inspection and repairs.

The target group of this chapter is all persons who carry out actions related to the valve.

9.1 Carrying out inspections

Between the maintenance periods, the valves must be checked for leakage and proper function.


9.1.1 Checking seals that come into contact with the product

Prerequisites

- Access to seals that come into contact with the product

1. Regularly check the seals that come into contact with the product:

- 1.1 Check the sealing ring (1) between upper housing and lantern.
 - 1.2 Check the V-ring (7) in the valve disks.

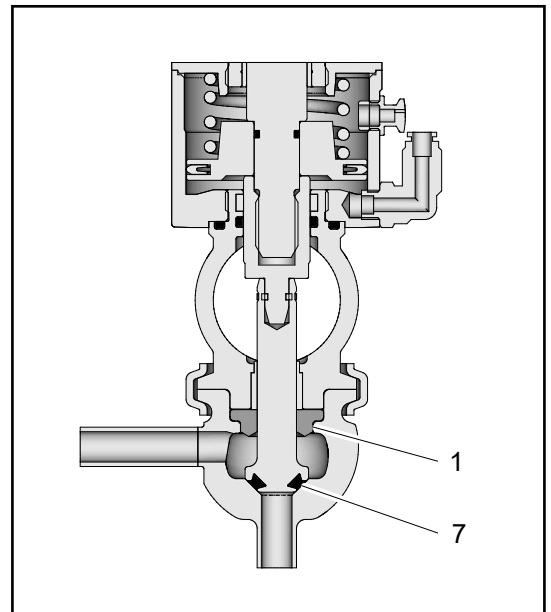

⇒ Seals that come into contact with the product have been tested.

9.1.2 Checking the pneumatic connection

Prerequisites

- Access to the pneumatic connection

1. Check the operating pressure at the pressure reducing and filter station.
2. Regularly clean the air filter in the filter station.
3. Check that the air connections are tight.
4. Check the lines for kinks and leaks.
5. Check the solenoid valves for proper function.

⇒ The pneumatic connection has been checked.

9.1.3 Checking the electrical connection

Prerequisites

- Access to the electrical connection

1. Check that the union nut on the cable gland is tight
2. Check that the cable connections are firmly secured.
3. Check the solenoid valves for proper function.
4. Check that the proximity switch connections are clean.

⇒ The electrical connection has been checked.

INFO The electrical cable must be long enough to allow the control top to be removed via the switch bar!

9.1.4 Checking the signs on the valve

Prerequisites

- Valve is accessible

1. Check the signs on the valve, see also 2.9 *Safety signs*.
2. If necessary, replace damaged or missing labels with new labels.

⇒ The signs on the valve have been checked.

9.2 Servicing intervals

To ensure the highest operational reliability, all wearing parts should be replaced at longer intervals.

The actual servicing intervals can only be determined by the operating company since they depend on the operating conditions, for instance:

- Daily period of use
- Switching frequency
- Type and temperature of the product
- Type and temperature of the cleaning solution
- Ambient conditions

Servicing intervals

Applications	Servicing Intervals (Guideline Values)
Media at temperatures of 60 °C to 130 °C (140 °F to 266 °F)	approx. every 3 months
Media at temperatures of < 60 °C (< 140 °F)	approx. every 12 months

9.3 List of tools

Tool	Intended Purpose	Material no.
Hose cutter	Cutting the pneumatic hoses to size	407-065

Tool	Intended Purpose	Material no.
V-ring insertion tool	Mount the V-rings	229-109.88
Hexagon socket SW 5		408-123
Pick-Set	Removing the seals	221-007248
Pin-type face spanner, pin dia. 4		408-133

Table 8: List of tools

9.4 Prior to removal

Prerequisites

- Ensure that no active processes are running in the relevant area during maintenance and servicing work .
1. Drain all pipe system elements that lead to the valve and, if necessary, clean or rinse them.
 2. Disconnect the power supply.
 3. Take the valve out of the pipe section, with all housings and housing connections if possible.


9.5 Removing the valve

9.5.1 Removing the control top

Tools

- Hex socket key

1. Slide back the retaining ring (S) of the air connection and pull out the control top's air hose.
2. Release the screws (39) and remove the clamps (15).
3. Lift off the control top (B), also refer to the operating instructions for the "T.VIS control top".

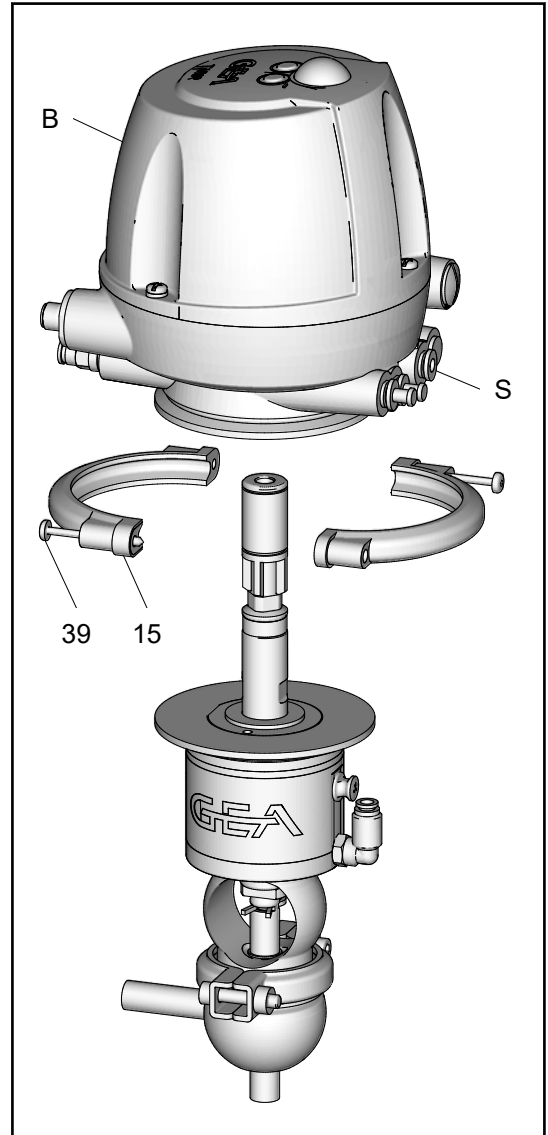

⇒ Control top is removed.

9.5.2 Removing the valve insert

ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.

Spring-closing valve (NC)

⚠ WARNING

Spring tension in the valve (NC)

Danger of injury when opening the clamp connections on the actuator or on the housing as the released spring pretension will suddenly lift the actuator.

- Therefore, release the spring tension before detaching the clamp connection by supplying the actuator with compressed air at max. 8 bar.


ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.

1. Apply pressure to the actuator at the connection (61).
→ The valve disc (15) is raised.

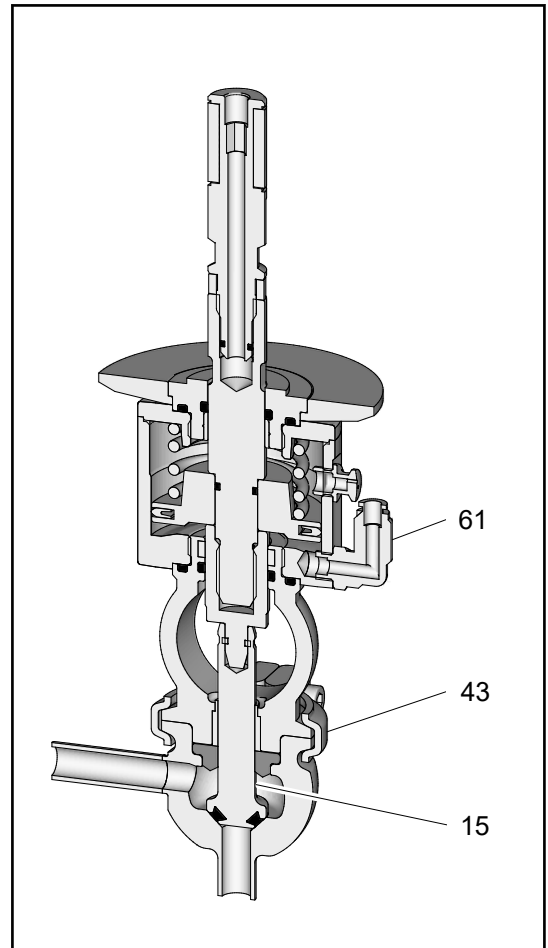

2. Remove the clamp (43).
3. Depressurize the actuator at (61).
→ The valve insert is lifted out of the housing.
4. Pull the valve insert out of the housing.
→ The valve insert has been removed.

Spring-to-open valve (NO)


ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.

1. Depressurize the actuator at (61).
→ The valve disc (15) is raised.

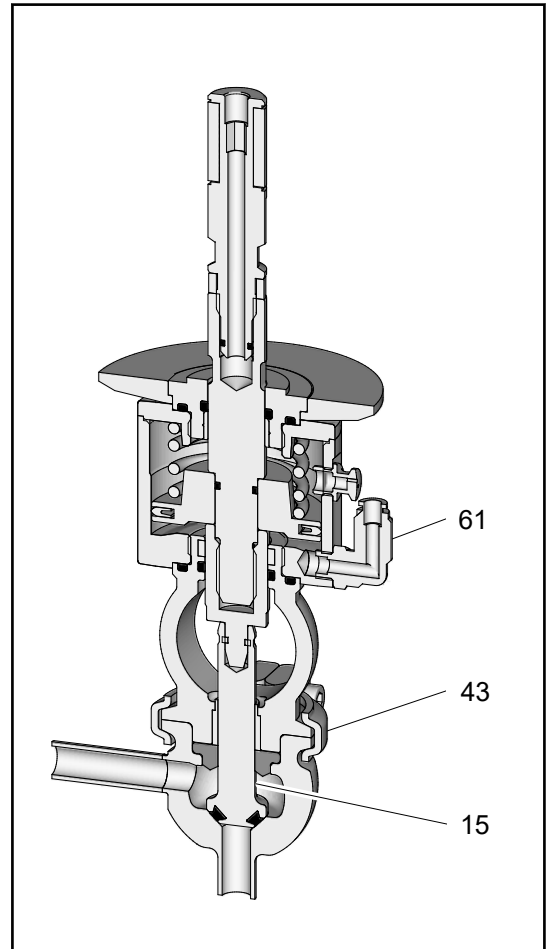

2. Remove the clamp (43).
 3. Pull the valve insert out of the housing.
- ⇒ The valve insert has been removed.

9.5.3 Dismantling the valve insert into individual parts

ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.

Tools

- Open-ended wrench
- Vice with protective jaws
- Face wrench

ATTENTION

- Take care no dirt enters the actuator. The sealing surfaces on the cylinder can be damaged by dirt.

1. Lift out the square ring (10).
2. Remove the valve disk(15), sealing ring (1) and bearing (2) from the lantern.
3. Hold the adapter (141) at the wrench flat with an open-ended spanner and unscrew the control rod (139).
4. Clamp the actuator in a vice and unscrew the lantern (9) from the actuator using a rod or tube ($d \leq 42$ mm).
5. Unscrew mounting base (198) with a face wrench.

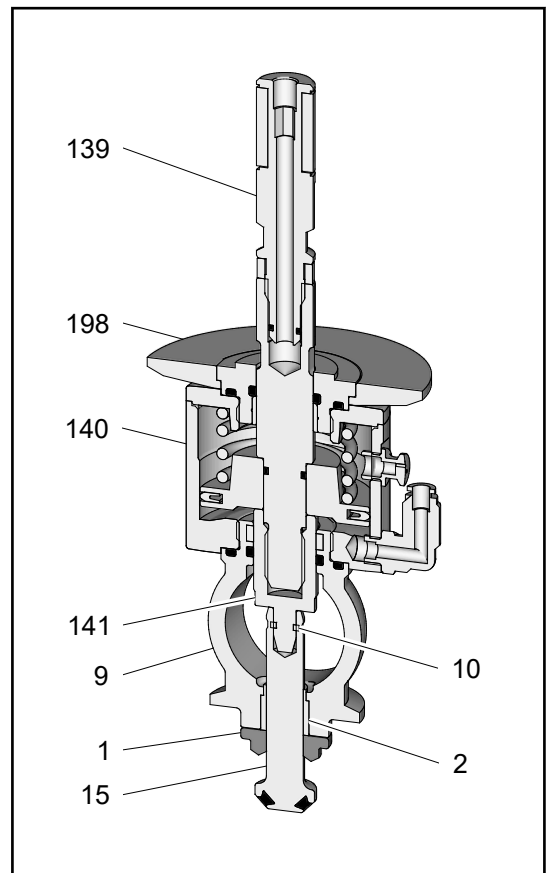


Figure 9-1 - Dismantling the valve insert into individual parts

⇒ Valve insert has been dismantled into its individual parts. All seals are freely accessible.

9.6 Installing the valve

9.6.1 Tightening torques

Tighten the following valve connections to the torques specified in the table.

Tightening torques		[Nm]	[lbft]
Adapter	M14	25	18
Lantern	M34	60	44.2

Tightening torques		[Nm]	[lbft]
Mounting base	M34	60	44.2
Proximity switch holder	M34	60	44.2
Switch bar	M14	2-2.5	1.5-1.8
Clamps on the control top		1	0.7
Cap		1	0.7

9.6.2 Assembling the valve insert from individual parts

ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.


Tools

- Open-ended wrench
- Vice with protective jaws
- Face wrench

ATTENTION

- Take care no dirt enters the actuator. The sealing surfaces on the cylinder can be damaged by dirt.

1. Clamp the actuator in a vice. Screw the lantern (9) into the actuator using a rod or tube ($d \leq 42$ mm).
→ Observe torques, see 9.6.1 *Tightening torques*.
2. Hold the adapter (141) at the wrench flat with an open-ended spanner and screw in the control rod (139).
→ Observe torques, see 9.6.1 *Tightening torques*.
3. Insert the valve disk (15), sealing ring (1) and bearing (2) into the lantern.
4. Push the square ring (10) onto the adapter.
5. Screw on the mounting base (198) with a face wrench.
→ Observe torques, see 9.6.1 *Tightening torques*.

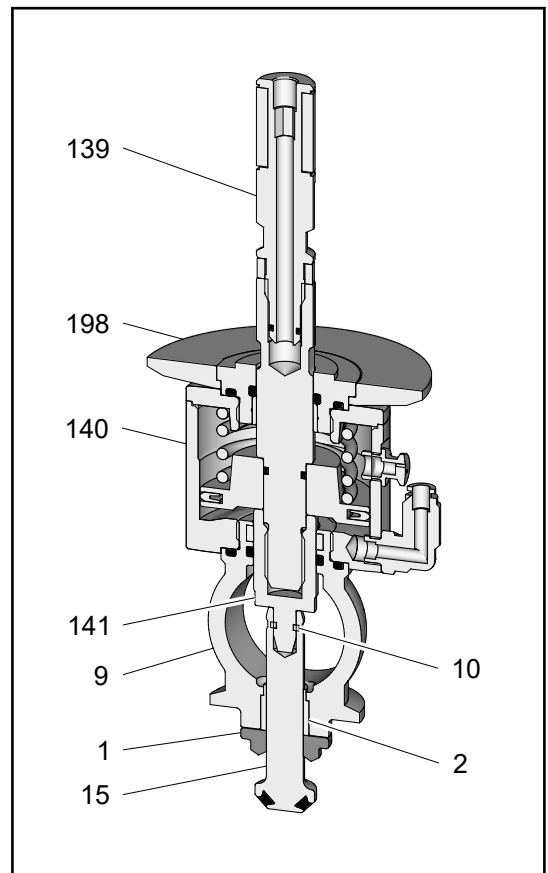


⇒ Valve insert has been fitted.

9.6.3 Installing the valve insert

Spring-closing valve (NC)


1. Place the valve insert into the housing.
2. Apply pressure to the actuator at (61).
→ The valve disc (15) is raised. The valve insert lowers into the housing.
3. Mount the clamp (43).
4. Depressurize the actuator at (61).

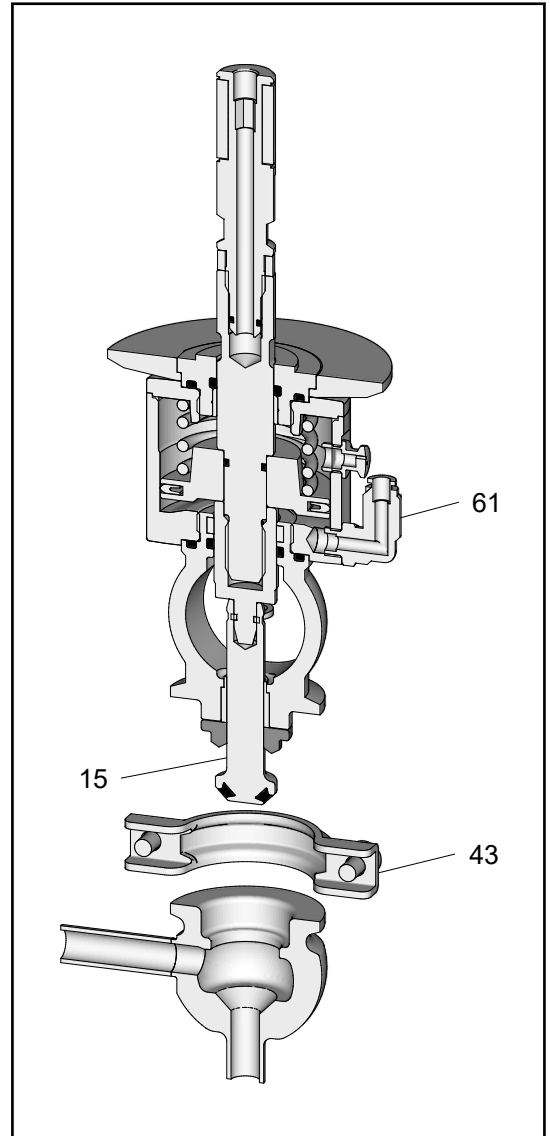

⇒ The valve insert has been installed.

Spring-to-open valve (NO)

1. Depressurize the actuator at (61).
→ The valve disc (15) is raised. The valve insert lowers into the housing.
2. Place the valve insert into the housing.
3. Mount the clamp (43).

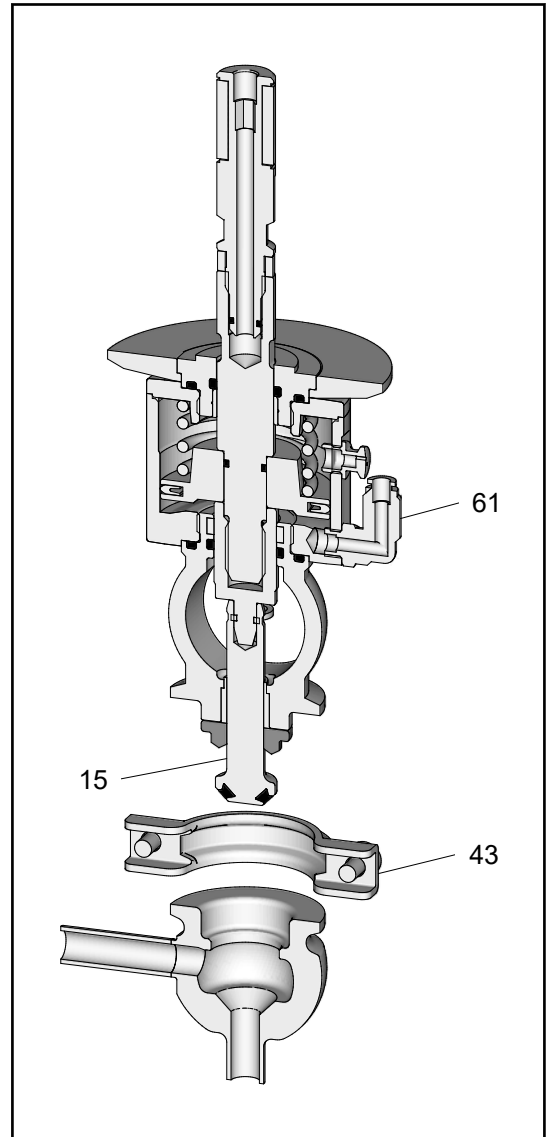


⇒ The valve insert has been installed.

9.6.4 Mounting the control top

Tools

- Hex socket key

1. Place the control top (B) onto the switch bar (139) and installation base from above.
2. Mount the half-rings (15) with screws (39) on the control top (B).
→ Ensure that the half-rings are mounted correctly!
Observe torques, see 9.6.1 *Tightening torques*.
3. Insert the air hose into the air connection on the control module.

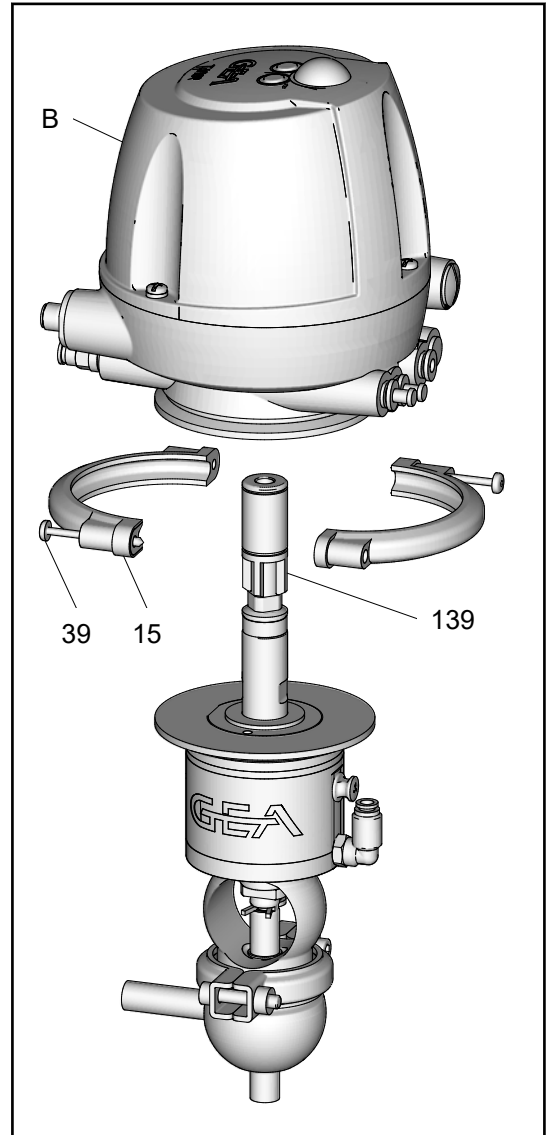


⇒ Control top is fitted.

9.6.5 Checking the function

Check valve stroke and adjust feedback

1. Actuate the valve with compressed air.
2. Check the valve stroke (c), also refer to table *The valve strokes depending on size*.

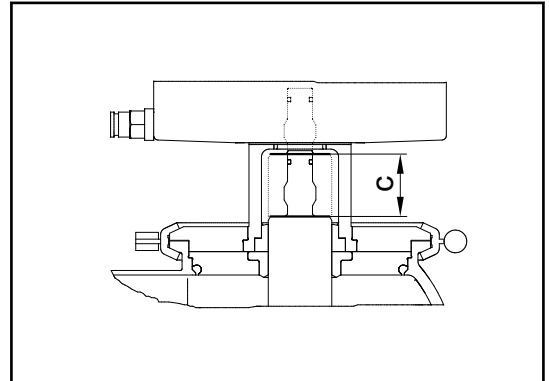

3. INFO

Please take the operating instructions for the respective control top into account for adjustment of the feedbacks.

If the strokes are correct, the feedback can be adjusted and checked.

⇒ The valve stroke has been tested.

The valve strokes depending on size

Valve size		Valve stroke [mm]
Metric	10	8.5
	15	8.5

9.7 Maintenance

9.7.1 Cleaning the valve

ATTENTION

Sensitive valve parts

Damage to the valve parts can lead to a malfunction.

- Protect the valve parts against impact stress.

Prerequisites

- The valve has been removed, see 9.5 *Removing the valve*.


ATTENTION

Damage to the valve

Damage to the valve parts can result in a malfunction.

- Observe the safety information sheets issued by the detergent manufacturers!
- Only use detergents which are non-abrasive and not aggressive towards stainless steel.
- Use only cleaning mediums which do not damage the materials of the control top (PPE, PA).

1. Carefully clean the individual parts.

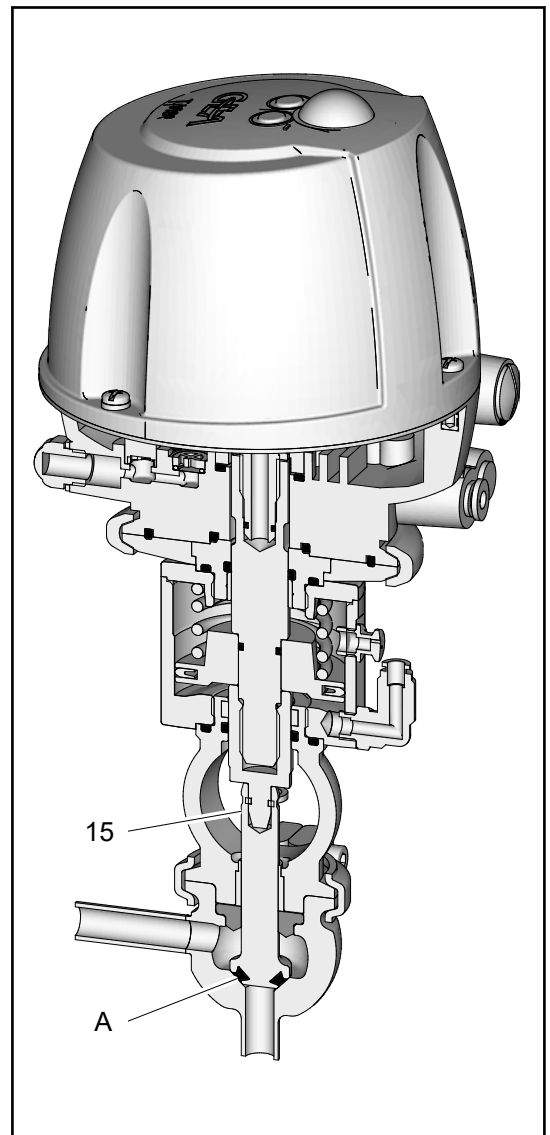

⇒ The valve has been cleaned.

INFO


Observe the safety data sheets supplied by the detergent manufacturers. Only use detergents which are non-abrasive and not aggressive towards stainless steel.

9.7.2 Replacing seals

9.7.2.1 Replacing the V-ring

INFO

Replace defective seals, but always fit new housing O-rings to ensure the tightness of the valve. Always use genuine spare parts.



V-ring insertion tool

Prerequisites

- The valve has been removed, see 9.5 *Removing the valve*.
- V-ring groove must be clean and dry.
- Insert V-Ring without grease.

Tools

- Pickset
- V-ring insertion tool
- Vice support

⚠ CAUTION

Sharp-edged tool


Risk of injury if the pickset tool slips when removing the V-ring.

- Clamp the valve disk with the vice mount into the vice.


INFO Functional and running surfaces of the valves may not be damaged.

INFO Do not grease the V-ring. To facilitate fitting, use water with a drop of washing-up liquid to remove the surface tension. To ensure that no rust is transferred, the washing-up liquid solution must be mixed in a ceramic, plastic, or stainless steel container.


1. Put a tool from the pickset into the V-ring and take it out.

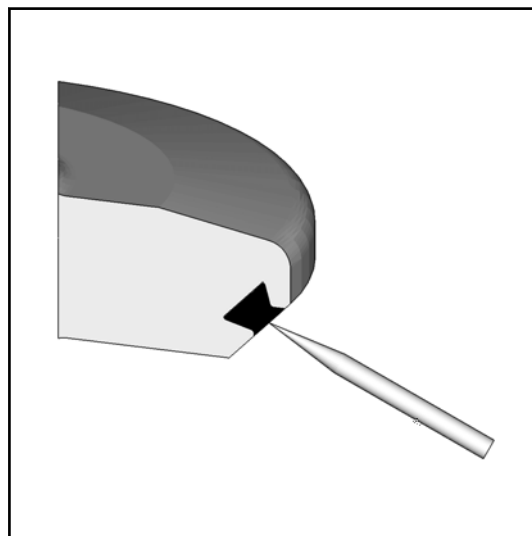

2. Check the V-ring groove: it must be clean and dry.
3. Wet the V-ring with water before fitting.
4. Put in the V-ring. Make sure the installation position of the V-ring is correct.

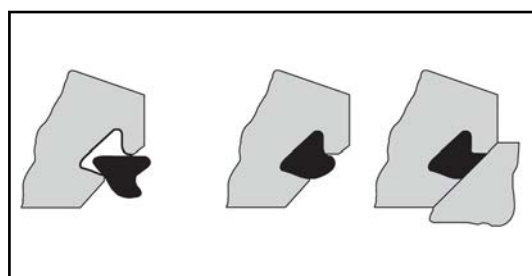

5. Use the insertion tool to press in the V-ring – press in evenly at several opposite points along the circumference.

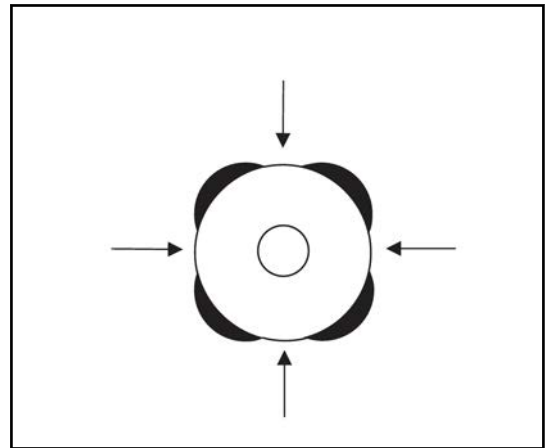

6. Insert the V-ring evenly.

⇒ V-ring has been exchanged.

INFO Used seals must not be used again, since the proper function of the seal can then no longer be ensured.

9.7.2.2 Replacing more seals

Prerequisites

- The valve has been removed, see 9.5 *Removing the valve*.
- Insert V-Ring without grease. To facilitate fitting, use water with a drop of washing-up liquid to remove the surface tension. In order that no rust is transferred, the washing-up liquid solution must be made up in a ceramic, plastic, or stainless steel container.

INFO Functional and running surfaces of the valve disks must not get damaged.

1. Replace all the other seals identified in the spare parts lists. See spare parts list 12 *Replacement parts*.

⇒ Seals have been replaced.

INFO Used seals must not be used again, since the proper function of the seal can then no longer be ensured.

9.7.3 Lubricating seals and threads

Prerequisites

- The valve has been removed, see 9.5 *Removing the valve*.

Tools

- Lubricants Rivolta F.L.G. MD-2 and PARALIQ GTE

ATTENTION

Damage to seals and threads

Stainless steel threads tend to seize and stick, and must be greased. Damage to seals and threads can result in malfunction.

- Ensure that an adequate film of lubricant is applied. No grease residues must be visible once the valve has been assembled completely.
- For product contact seals only use suitable greases and oils.
- Observe the safety data sheets issued by the lubricant manufacturer.

1. Apply a light film of lubricant to all threads.
2. Grease all seals – including the O-rings at the top and bottom of the actuator piston stem – very thinly.
→ Do not grease the V-ring.
3. Grease the inside of the seal ring (1) (contact surface).

⇒ Seals and threads have been lubricated.

INFO

GEA Tuchenhausen recommends Rivolta F.L.G. MD-2 and PARALIQ GTE 703. These lubricants are approved for foodstuff and are resistant to beer froth. They have the NSF-H1 (USDA H1) registration. They do not affect the taste or the consistency of the products and are compatible with the seals in contact with product. Rivolta F.L.G. MD-2 can be ordered from GEA Tuchenhausen. Using other types of grease can result in malfunctions or in premature seal failure. The warranty will also become null and void. A Manufacturer's Declaration for these products can be obtained from GEA Tuchenhausen if required. A thin film of grease is required on the seals to ensure the proper function of the fittings. It reduces friction and extends the service life of the seals. This is absolutely harmless from a health and hygienic point of view. Running dry must be avoided!

10 Malfunctions

This chapter contains information about how to rectify problems with the valve.

The target group of this chapter is all persons who carry out actions related to the valve.

Fault	Possible cause	Measure
Valve does not work	Fault in the controller	Check the system configuration
	No compressed air or compressed air too low	Check the compressed air supply Check air hoses for free passage and air tightness
	Fault in the electrical system	Check actuation / external controller and routing of electrical wires
	Solenoid valve defective	Replace the solenoid valve
	Faulty installation position of the valve housing	Install the valve housing aligned correctly upwards
Valve does not close	Dirt/foreign material between valve seat and valve disk	Clean valve housing and valve seat
Valve closes too slowly	O-rings in the actuator and control top are dry (friction losses)	Grease O-rings
Leakage in the area of the valve housing	Housing O-rings defective	Removing the valve Change housing O-rings
Leakage on the valve shaft	Seal ring defective	Replace the seal ring

Table 9: Malfunctions

11 Decommissioning, dismantling and disposal

This chapter contains information about decommissioning the valve. It also describes the removal and disposal processes. The target group of this chapter is all persons who carry out actions related to the valve.

11.1 Decommissioning

The following principles apply for decommissioning:

- Switch off the compressed air.
- Switch off the component with the main switch.
- Padlock the main switch (if fitted) in the off position to prevent it from being switched back on. The key to the padlock must be deposited with the person responsible until the machine is restarted.
- For longer periods of standstill, observe the storage conditions, see 4.2 *Storage*.

11.2 Dismantling

Prerequisites

- Ensure that no active processes are running in the relevant area during dismantling.
1. Empty all pipe elements that lead to the valve.
 2. Shut off the control air supply.
 3. Disconnect the power supply.
 4. Take the valve out of the pipe section, with all housings and housing connections if possible.
→ The valve has been dismantled.

11.3 Disposal

Dispose of the valve in an environmentally friendly manner. Observe the statutory waste disposal regulations applicable at the place of installation.

The valve is made of the following materials:

- Metals
- Synthetic materials
- Electronic parts
- Lubricants containing oil and grease

Separate the different materials and dispose of them correctly sorted. Also observe the instructions regarding disposal in the instruction manual for the individual components.

⚠ DANGER

The spring forces in the actuator can be as high as 24 kN.

The pre-stressed spring can cause serious personal injury or death.

- Never open the actuator.
- GEA Tuchenhausen accepts unopened actuators and arranges the proper disposal free of charge.

Prerequisites

- The valve should be disposed of

1. Remove the actuator.
2. Pack the actuator securely and send it to GEA Tuchenhausen GmbH.

⇒ The valve actuator has been disposed of.

12 Replacement parts

This chapter contains information on ordering replacement parts for the valve and is aimed at all users of the valve.

12.1 Order information

Only original spare parts from GEA may be used. All spare parts are packed in GEA original packaging and marked accordingly.

The spare parts are not included in the scope of supply of the machine.

The specifications listed below must be cited on every spare part order.

- Machine type: see type plate
- Machine number: see type plate
- Order number: see spare parts list
- Name: see spare parts list

12.2 Spare parts lists



www.assets.gea.com

Link to spare parts list: GEA ECOVENT® valve N_/ECO DN 10/15

Link to spare parts list: Manual drive – ECOVENT®

13 Annex

13.1 Dimension sheet



www.assets.gea.com

Link to dimensional drawing: GEA ECOVENT® valve type N_/ECO DN 10 + 15

13.2 List of abbreviations

Abbreviations and terms

Abbreviation	Explanation
BS	British Standard
bar	Unit of measurement of pressure [bar] All pressure data expressed in [bar/psi] is assumed to be gauge pressure [barg/psig] unless explicitly specified otherwise.
approx.	approximately
°C	Unit of measurement of temperature [degree Celsius]
C _v	valve coefficient, non-metric flow coefficient, see K _v
dm ³ _n	Unit of measurement of volume [cubic decimetre] standard volume (standard litres)
DN	DIN nominal width
DIN	German standard issued by DIN (Deutsches Institut für Normung e.V., German Institute for Standardization)
EN	European Standard
EPDM	Material designation Brief designation according to DIN/ISO 1629: Ethylene-propylene-diene- rubber
°F	Unit of measurement of temperature [degree Fahrenheit]
FKM	Material designation, short designation according to DIN/ISO 1629: Fluorine rubber
h	Unit of measurement of time [hour]
HNBR	Material designation short designation according to DIN/ISO 1629: Hydrated nitrile butadiene rubber
IP	Protection class
ISO	International Standard of the International Organization for Standardization
kg	Unit of measurement of weight [kilogram]
kN	Unit of measurement of force [kilonewton]

Abbreviation	Explanation
K _V value	Flow coefficient [m ³ /s], 1 K _V = 0.86 × C _V
l	Unit of measurement of volume [litre]
max.	maximum
mm	Unit of measurement of length [millimetre]
µm	Unit of measurement of length [micrometre]
M	Metric
NC	normal closed
NO	normal opened
Nm	Unit of measurement of work [newton metre] SPECIFICATION FOR THE TORQUE: 1 Nm = 0.737 lb-ft Pound-Force (lb)× Feet (ft)
PA	Polyamide
PE-LD	Low-density polyethylene
PPE	Polytetrafluoroethylene
psi	Anglo-American unit of measurement for pressure [pound-force per square inch] All pressure data expressed in [bar/psi] is assumed to be gauge pressure [barg/psig] unless explicitly specified otherwise.
PTFE	Polytetrafluoroethylene
SET-UP	Self-learning installation During commissioning and maintenance, the SET-UP procedure carries out all the necessary settings for the generation of messages.
AF	Indicates the size of spanners [width across flats]
T.VIS	Tuchenhagen valve information system
V AC	Volt alternating current
V DC	Volt direct current
W	Unit of measurement of power [Watt]
TIG	Welding method Tungsten inert gas welding
Inch	Unit of measurement of length in the Anglo-American language area
Inch OD	Tube measurement according to British Standard (BS), outside diameter
Inch IPS	American pipe measurement, iron pipe size

GEA Tuchenhausen GmbH
Am Industriepark 2-10
21514 Büchen , Germany

Phone +49 4155 49-0