



Lagoon Agitator

PTO Agitator

Instruction Manual / Installation Instructions
(Original instructions)

2010-9015-017
04-2015

Contents

1	Preface	4
1.1	About this manual	4
1.2	Manufacturer's address	5
1.3	Customer service	5
1.4	Declaration of conformity	6
1.5	GEA Farm Technologies Canada Inc. / Division GEA Houle - general equipment warranty	7
2	Safety	11
2.1	Owner's obligation of care	11
2.2	Explanation of safety symbols	12
2.3	Basic safety instructions	13
2.4	Personnel qualifications	14
2.5	Protective devices	15
3	Description (overview)	16
3.1	Product applications	16
3.2	Changes to the product	16
4	Main view	17
4.1	Lagoon Agitator	17
5	Technical data	19
5.1	Geometric data	19
5.2	Hydraulic hoses	19
5.3	Undercarriage	19
5.4	Tire	21
5.5	Tractor specifications	21
5.6	Performance data	22
5.7	Bolt torque chart	22
5.8	Lubricant specifications	22
6	Handling and assembly	23
6.1	Special personnel qualification required for handling	23
6.2	Safety instructions for handling and assembly	23
6.3	Preparation	23
6.4	Packing material disposal	24
6.5	Handling the product and accessories	24
6.6	Lagoon Agitator assembly	25
7	Initial commissioning	31
7.1	Special personnel qualification required for initial commissioning	31
7.2	Safety instructions for initial commissioning	31
7.3	Hydraulic control valve setup	31
7.4	Spare safety shear bolts	33
7.5	Initial commissioning checklist	33
7.6	Checks after initial commissioning	37
7.7	Handing over to the owner	37
8	Operating	38
8.1	Special personnel qualification required for operation	38
8.2	Safety instructions for operation	38
8.3	Checks before operating	38
8.4	Description of controls	39
8.5	Connecting the Lagoon Agitator	39
8.6	Moving the Lagoon Agitator	42
8.7	Positioning the agitator	43
8.8	Agitation mode	46
8.9	Removing the agitator	47

9	Troubleshooting	50
9.1	Special personnel qualification required for troubleshooting	50
9.2	Safety instructions for troubleshooting	50
9.3	Troubleshooting possible faults	51
10	Maintenance	52
10.1	Special personnel qualification required for maintenance work	52
10.2	Safety instructions for maintenance	52
10.3	Scheduled maintenance responsibilities	53
10.4	Visual inspection	54
10.5	Check oil level in oil bath	54
10.6	Check oil level in oil tank	54
10.7	Grease the PTO driveline	54
10.8	Grease driving shaft bearings	55
10.9	Grease swivel hitch	55
10.10	Grease undercarriage pivot points	55
10.11	Grease bearing housing	56
10.12	Clean the equipment	56
10.13	Replace propeller knife	56
11	Decommissioning	57
11.1	Special personnel qualification required for decommissioning	57
11.2	Safety instructions for decommissioning	57
11.3	Temporary decommissioning	57
11.4	Final decommissioning/disposal	57
12	Appendix	58
12.1	Label position	58
12.2	Abbreviations	59
12.3	Hydraulic diagrams	60

1 Preface

This is a GEA product. GEA is the manufacturer of the Houle product line. This product was formerly known under HOULE trademark.



1.1 About this manual

The manufacturer reserves the right to make changes due to technical developments in the data and images given in this manual.

Reproductions, translations and copies of any kind, even of extracts, require written authorization from the manufacturer.

Abbreviations, units, specialist terms, special names or terminology are explained in detail in section Appendix.

This manual is supplied with the product.

- This manual should be kept close at hand and remain with the equipment even if the equipment is sold.
- This manual is not subject to an amendment service. The most recent version can be obtained through the dealer or directly from the manufacturer.

Pictograms used



This pictogram indicates information that will be helpful toward a better understanding of the working processes.



This symbol indicates another document or section to refer to.

All manuals have a reference number. The 4 middle digits specify the language of the instruction manual:

	language		language		language
-9000-	German	-9013-	Dutch	-9032-	Serbian
-9001-	English (United Kingdom)	-9015-	English (North American)	-9034-	Slovak
-9002-	French (France)	-9016-	Polish	-9035-	Chinese
-9003-	Italian	-9018-	Japanese	-9036-	Lithuanian
-9004-	Romanian	-9021-	Danish	-9038-	Portuguese (Brazil)
-9005-	Spanish (Spain)	-9022-	Hungarian	-9039-	French (Canada)
-9007-	Swedish	-9023-	Czech	-9040-	Latvian
-9008-	Norwegian	-9024-	Finnish	-9041-	Estonian
-9009-	Russian	-9025-	Croatian	-9043-	Spanish (Central America)
-9010-	Greek	-9027-	Bulgarian		
-9012-	Turkish	-9029-	Slovenian		
The instruction manuals may not be available in all the listed languages.					

1.2 Manufacturer's address

GEA Farm Technologies Canada Inc. / Division GEA Houle
4591 boul. St-Joseph
Drummondville, Qc, J2A 0C6

 +1 819 477 - 7444
 +1 819 477 - 5565
 geahoule@gea.com
 @ www.gea-farmtechnologies.com

1.3 Customer service

Dealer

If necessary, please contact your nearest dealer.

There is a comprehensive dealer Internet search function on our website at the following address:

www.gea-farmtechnologies.com

European contact information:

GEA Farm Technologies GmbH
Siemensstraße 25-27
D-59199 Bönen

 +49 (0) 2383 / 93-70
 +49 (0) 2383 / 93-80
 contact@gea.com
 @ www.gea-farmtechnologies.com

US contact information:

GEA Farm Technologies, Inc.
1880 Country Farm Dr.
Naperville, IL 60563

 +1 630 369 - 8100
 +1 630 369 - 9875
 contact_us@gea.com
 @ www.gea-farmtechnologies.com

1.4 Declaration of conformity

Manufacturer:	GEA Farm Technologies Canada Inc. / Division GEA Houle 4591 boul. St-Joseph Drummondville, Qc, J2A 0C6																			
Product description:	Lagoon Agitator																			
Type of product:	PTO agitator																			
The named product is in conformity with the requirements of the following European directives:																				
2006/42/EC	Machinery Directive																			
Conformity with the requirements of these directives is testified by complete adherence to the following standards:																				
<ul style="list-style-type: none"> Harmonized European standards <table border="0"> <tr> <td>EN 894-2+A1 (2008-12)</td> <td>Safety of machinery - Ergonomics requirements for the design of displays and control actuators Part 2: Displays</td> </tr> <tr> <td>EN 953+A1 (2009-05)</td> <td>Safety of machinery - Guards General requirements for the design and construction of fixed and movable guards</td> </tr> <tr> <td>EN ISO 4254-1 (2010-01)</td> <td>Agricultural Machinery - Safety Part 1: General requirements</td> </tr> <tr> <td>ISO 4413 (1999-08)</td> <td>Hydraulic fluid power General rules relating to systems</td> </tr> <tr> <td>EN ISO 12100-1 (2004-01)</td> <td>Safety of machinery - Basic concepts, general principles for design Part 1: Basic terminology, methodology</td> </tr> <tr> <td>EN ISO 12100-2 (2004-01)</td> <td>Safety of machinery - Basic concepts, general principles for design Part 2: Technical principles</td> </tr> <tr> <td>EN ISO 14121-1 (2007-11)</td> <td>Safety of machinery - Risk assessment Part 1: Principles</td> </tr> <tr> <td>ISO/TR 14121-2 (2008-02)</td> <td>Safety of machinery - Risk assessment Part 2: Practical guidance and examples of methods</td> </tr> <tr> <td>NF X 08-003-1 (2006-07)</td> <td>Graphical symbols - Safety colours and visual safety signs Part 1: Design principles</td> </tr> </table>			EN 894-2+A1 (2008-12)	Safety of machinery - Ergonomics requirements for the design of displays and control actuators Part 2: Displays	EN 953+A1 (2009-05)	Safety of machinery - Guards General requirements for the design and construction of fixed and movable guards	EN ISO 4254-1 (2010-01)	Agricultural Machinery - Safety Part 1: General requirements	ISO 4413 (1999-08)	Hydraulic fluid power General rules relating to systems	EN ISO 12100-1 (2004-01)	Safety of machinery - Basic concepts, general principles for design Part 1: Basic terminology, methodology	EN ISO 12100-2 (2004-01)	Safety of machinery - Basic concepts, general principles for design Part 2: Technical principles	EN ISO 14121-1 (2007-11)	Safety of machinery - Risk assessment Part 1: Principles	ISO/TR 14121-2 (2008-02)	Safety of machinery - Risk assessment Part 2: Practical guidance and examples of methods	NF X 08-003-1 (2006-07)	Graphical symbols - Safety colours and visual safety signs Part 1: Design principles
EN 894-2+A1 (2008-12)	Safety of machinery - Ergonomics requirements for the design of displays and control actuators Part 2: Displays																			
EN 953+A1 (2009-05)	Safety of machinery - Guards General requirements for the design and construction of fixed and movable guards																			
EN ISO 4254-1 (2010-01)	Agricultural Machinery - Safety Part 1: General requirements																			
ISO 4413 (1999-08)	Hydraulic fluid power General rules relating to systems																			
EN ISO 12100-1 (2004-01)	Safety of machinery - Basic concepts, general principles for design Part 1: Basic terminology, methodology																			
EN ISO 12100-2 (2004-01)	Safety of machinery - Basic concepts, general principles for design Part 2: Technical principles																			
EN ISO 14121-1 (2007-11)	Safety of machinery - Risk assessment Part 1: Principles																			
ISO/TR 14121-2 (2008-02)	Safety of machinery - Risk assessment Part 2: Practical guidance and examples of methods																			
NF X 08-003-1 (2006-07)	Graphical symbols - Safety colours and visual safety signs Part 1: Design principles																			
Person responsible for compiling the relevant technical documents:	Josef Schröer GEA Farm Technologies GmbH Siemensstraße 25-27 D-59199 Bönen +49 (0) 2383 / 93-70																			
Drummondville, 01 April 2015		Yann Desrochers (Head of Research and Development)																		
The undersigned is acting by virtue of power of attorney from the management of: GEA Farm Technologies Canada Inc. / Division GEA Houle, 4591 boul. St-Joseph, Drummondville, Qc, J2A 0C6																				
This declaration certifies compliance with the guidelines indicated, but does not establish any guarantee in the sense of paragraphs 443, 444 BGB. This declaration of conformity becomes invalid if design changes are made which affect the technical data given in the instructions and the correct use of the product, thereby significantly altering the machine!																				

1.5 GEA Farm Technologies Canada Inc. / Division GEA Houle - general equipment warranty**Important notice!**

THIS GENERAL WARRANTY APPLIES TO ALL EQUIPMENT SOLD UNDER THE GEA HOULE TRADEMARK.

1.5.1 Limited warranty

GEA Farm Technologies Canada Inc. / Division GEA Houle (hereinafter referred to as "the Company") warrants to the original buyer and end user (hereinafter referred to as the "Purchaser") that the parts of all equipment sold under the Company trademark are free from defects in material or workmanship for a period of twelve (12) months from the date of delivery of the equipment to the Purchaser. This written warranty takes precedence over any other written warranty included in previous versions of the Company's manuals. Any equipment used for commercial usage, commercial lease on one or more farms is warranted for a reduced period of thirty (30) days only.

Components from third-party manufacturers that are not built by the Company, and which are accessory to the equipment sold under the Company trademark (including, without limitation, the motors and tires), are subject to such third-party manufacturers' specific warranty coverage.

THIS WARRANTY EXTENDS ONLY TO THE PURCHASER AND DOES NOT APPLY IN THE EVENT THAT THE EQUIPMENT IS SOLD OR OTHERWISE TRANSFERRED.

1.5.2 Condition of the limited warranty

The Company, through its GEA authorized dealers only (hereinafter referred to as "Dealer", reserves the right to either repair or replace all parts deemed defective under the following conditions:

1. That the equipment is installed, operated and maintained in accordance with the Company directives;
2. That the Purchaser uses the equipment in accordance with specific instructions, under normal conditions, for the sole purpose for which the equipment was designed;
3. That the Purchaser notifies in writing his Dealer or the Company (whichever the case may be) of any defect of the equipment. In either case the notification must be made within the twelve (12) months following the date of the delivery to the Purchaser;
4. The Purchaser or the Dealer must keep the defective parts or equipment for inspection by the Company and return such defective parts or equipment prepaid to the Company, if requested;
5. That the Purchaser does not modify the equipment, nor attempts to repair any equipment or parts without proper authorization from the Company;
6. Depending on the nature of the equipment involved and whether it is fixed or transportable, the Company will repair or replace the defective parts of the equipment free of charge where installed, or at the business place of the Dealer or the Company, at its sole discretion.

1.5.3 Extent of limited warranty

This limited warranty DOES NOT cover:

- Defects caused by negligence of the Purchaser in the maintenance of the equipment, improper use resulting from failure to adhere strictly to the Company's manuals or non-compliance with prescribed maintenance instructions provided by the Company (including, without limitation, lack of lubrication of the equipment), as well as damages arising from non-conforming installation of the equipment, or ambient temperature or conditions of storage of the equipment that do not comply with the Company's recommendations (including, without limitation, any damages resulting from storage or operation of the equipment at a temperature equal or below (5°C/41°F));
- Damages to equipment due to normal wear and tear or to external causes, including issues of power or inadequate electrical conditions (including, without limitation, inadequate tension (neutral/ground), abnormal mechanical or environmental conditions (including, without limitation, damages caused by fire, lightning, flood or other natural disaster), damages caused by the use of sand litter or other abrasive or inadequate material (including, without limitation, damages caused by solids in the manure, such as stone, wood, iron, concrete, and strings), as well as damages caused by ice or frozen manure blocking the evacuation line of the equipment or the introduction of such solids in the equipment;

- Freight and shipping associated with repair or replacement of equipment under this limited warranty, as well as all costs relating to removal or replacement of any equipment that is welded or affixed permanently to the ground or a building (including, without limitation, labor costs, and costs related to concrete or excavation);
- Claims arising from repairs or replacements made by the Purchaser without the prior written consent of the Company. The Purchaser shall not remove or alter any safety device, guard, or warning sign.

If the Purchaser fails to comply with any of its obligations referred to in this paragraph, the Purchaser agrees to save the Company and the Dealer harmless in respect of any liability or obligation incurred by the Company or the Dealer resulting from such failure of the Purchaser.

1.5.4 Warranty limitations and exclusion

NO WARRANTY, ORAL OR WRITTEN, EXPRESS OR IMPLIED, OTHER THAN THE ABOVE WARRANTY IS PROVIDED IN RESPECT OF THE EQUIPMENT SOLD.

Some states (or jurisdictions) do not allow the exclusion of implied warranties so it is possible that this limitation may not apply.

THE COMPANY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ADAPTABILITY OR OF PERFORMANCE, PROVIDED THAT SUCH EXCLUSION OF LIABILITY COMPLIES WITH THE LAWS HAVING APPLICABLE REGULATORY JURISDICTION.

THE LIABILITY OF THE COMPANY AND ITS DEALERS UNDER THIS WARRANTY IS LIMITED TO REPAIR OR REPLACEMENT OF DEFECTIVE PARTS UP TO THE CONTRACT VALUE FOR THE PURCHASED EQUIPMENT. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL, PUNITIVE OR EXEMPLARY DAMAGES IN ANY KIND OR CHARACTER, INCLUDING INDIRECT COSTS, LOSS OF PRODUCTION, LOSS OF REVENUES OR PROFITS, AND OTHER DISBURSEMENTS WHICH MAY OCCUR.

Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages and so it is possible that these limitations or exclusions may not apply.

1.5.5 General statements

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY JURISDICTION.

THE DEALER IS NOT AUTHORIZED TO MAKE ANY ADDITIONAL REPRESENTATIONS OR PROMISES THAT DIFFER IN ANY WAY FROM THE TERM OF THIS LIMITED WARRANTY, OR MODIFY THE PROVISIONS, DURATION AND CONDITIONS OF THIS LIMITED WARRANTY. NO WAIVER OR MODIFICATION OF THIS LIMITED WARRANTY IS VALID UNLESS AGREED TO IN WRITING AND SIGNED BY THE AUTHORIZED REPRESENTATIVES OF THE COMPANY.

IN THE EVENT OF ANY CONFLICT BETWEEN THE ENGLISH LANGUAGE VERSION AND ANY OTHER TRANSLATED VERSION OF THIS LIMITED WARRANTY (WITH THE EXCEPTION OF THE FRENCH LANGUAGE VERSION) THE ENGLISH VERSION SHALL PREVAIL.

2 Safety

2.1 Owner's obligation of care

This product is designed and constructed while taking into account a potential risk analysis, a selection of harmonized standards and other technical specifications to be complied with in order to guarantee a maximum level of safety.

This product is designed for agricultural purposes only and is not intended for use on public roads.

Safety is achieved when the safety instructions are followed. It is part of the owner's obligation of care to implement these safety measures and make sure they are carried out at all times.

In particular, the owner must ensure that:

- everyone working with or performing activities in connection with this product, including himself, read the instructions contained in this instruction manual and follow those instructions;
- everyone is regularly instructed on relevant matters;
- the equipment will not be towed on public road. If the equipment needs to be towed on public road, the owner must adapt the equipment in accordance with local towing safety regulations.

The owner must ensure a safe environment by providing:

- this instruction manual with this product;
- adequate lighting in all areas where activities in connection with this product are performed. A minimum of 200 lux is required to ensure visibility of the equipment, the controls and the safety labels;
- all required personal safety gear such as hearing, eye, feet protection, etc. in all areas where activities in connection with this product are performed;
- supervision for inexperienced personnel working or performing activities in connection with this product;
- the tools listed in this manual to perform activities in connection with this product;
- an adequate installation of the product in order to use it for the sole purpose for which it was designed;
- new parts to replace any defective, worn or damaged parts on this product;
- appropriate devices such as motor, engine, hydraulic unit, etc. to safely operate this product. To meet the technical requirements, refer to section Technical data;
- a product meeting the local rules and regulations.

2.2 Explanation of safety symbols

Safety symbols draw attention to the importance of the adjacent text.

The design of the warnings is based on ISO 3864-2 and ANSI535.6.

Safety symbols and key words



Danger!

The indication "Danger" signals immediate danger to life or health of personnel.

Death or serious injury will result if the danger is not avoided.



Warning!

The indication "Warning" signals potential danger to life or health of personnel.

Death or serious injury may result if the danger is not avoided.



Caution!

The indication "Caution" signals dangerous situations.

Minor or moderate injury may result if the danger is not avoided.



Attention!

The indication "Attention" signals important information on risks for the product or the environment.

2.3 Basic safety instructions

- Read and follow the instructions of this instruction manual before performing activities in connection with this product. Keep the instruction manual with this product allowing anyone to refer to it at any time.
- Only trained personnel can operate this product to ensure safe operating methods. Make sure the personnel performing activities in connection with this product have the skills when special qualifications are required. Read the section Safety - Personnel qualifications.
- Always wear personal safety gear such as hearing, eye, feet protection, etc. when performing activities in connection with this product. Inspect the personal gear and replace if worn and/or defective.
- Make sure the environment is safe through all steps listed in this manual. Always be familiar with the environment surrounding the working area. Locate the elements that can be dangerous in order to avoid them. Beware of leaks and spills such as grease, oil, water, etc. which can make a surface slippery causing injuries.
- No one stands near this product unless they are performing instructions included in this manual. When near this product, keep body parts such as hands, feet, hair as well as clothing away from dangerous parts such as rotating parts, articulated parts, sharp edges, etc.
- Use this product only when in perfect working condition and for the sole purpose for which it was designed. Do not use damaged, worn or defective parts on this product, replace immediately to avoid serious damages and injuries.
- Use only the tools listed in this manual to perform activities in connection with this product in order to avoid injuries.
- Do not stand underneath suspended loads when handling this product or parts: there is a potential risk of fall, damage and/or loss of stability. Handling can only be performed by a qualified forklift operator.
- Never remove the safety devices such as guards, covers, chains, labels, etc. from this product to ensure safety unless otherwise indicated in this instruction manual. Refer to section Safety - Protective devices. Read and follow the instructions of the safety labels affixed on this product and make sure the safety labels are legible.
- The devices supplied by the owner to operate this product such as a motor, an engine, a hydraulic unit, etc. must meet the technical requirements indicated in section Technical data.

2.4 Personnel qualifications

The manufacturer intends to determine the difference between trained personnel and qualified personnel.

Trained personnel

The operator was trained by the manufacturer or its legal representative to follow all safety rules, cleaning method, general maintenance as well as the operating methods.

It is the operator's responsibility to inform the farm workers of those rules, maintenance and methods.

Qualified personnel

Qualified personnel refers to those having obtained the academic knowledge of a specific field of work.

This personnel has followed a training and subsequently obtained a certification, diploma or any other official document provided by a recognized academic facility in the country of study.

An equivalence may be required when operating in other countries.

The special qualifications required in the following activities will be specified in each section when applicable:

- Handling and assembly
- Initial commissioning
- Operating
- Troubleshooting
- Maintenance
- Decommissioning


2.5 Protective devices

2.5.1 Protective safety parts

This product is equipped with safety parts protecting the user against dangerous elements.

Those parts must be in perfect working condition and remain in place at all times.

Replace if damaged, worn and/or defective. Refer to the part number.




Protective guard for power take off driveline
(Part No. 2010-7606-910) American



Protective guard for power take off driveline
(Part No. 2018-4701-630) European



Cylinder lock
(Part No. 2010-7620-000)

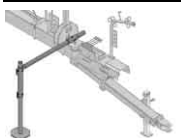

Stabilizing leg
(Part No. 2010-7612-440)

2.5.2 Safety labels

The labels affixed on this product inform the user of the potential dangers, the prohibited manoeuvres, the proper procedures and applications when performing activities in connection with this product.

The labels must remain in place and legible at all times.

Replace when damaged. Refer to the part number for the appropriate label.



Refer to section Appendix - Label position.

3 Description (overview)

3.1 Product applications

The Lagoon Agitator is exclusively designed to:

- Agitate manure stored in a lagoon.

Functional description

The Lagoon Agitator is used to agitate the content of a lagoon efficiently and safely.



Note!

This product and its equipment are designed for agricultural purposes only. Any applications not listed above are considered as improper use and will void the warranty!

The manufacturer is not liable for any resulting damages due to improper use of this product. The user carries the risk. Proper use also includes reading and following the instructions of this instruction manual.

- Original GEA Houle parts and accessories are specially designed for GEA Houle products and equipment.
- The manufacturer expressly points out that only original parts and original accessories supplied by GEA Houle are adapted, tested and authorized to be used with this product or equipment. Do not use other supplier's parts or equipment with GEA Houle product unless otherwise approved in writing by GEA Houle.
- The manufacturer does not accept any liability toward injured people or animals or damaged products and equipment caused by the use of other manufacturers products.

3.2 Changes to the product

Unauthorised changes of the product can have a negative impact on the safety, life span or functionality of the product.

Any changes not described in the product documentation are deemed to be prohibited.


For safety reasons, do not carry out any unauthorized changes!

Planned changes must be approved by the manufacturer in writing.

Any unauthorised changes to the product will invalidate the warranty and may invalidate the provided manufacturer's declaration or installation declaration.

4 Main view


4.1 Lagoon Agitator

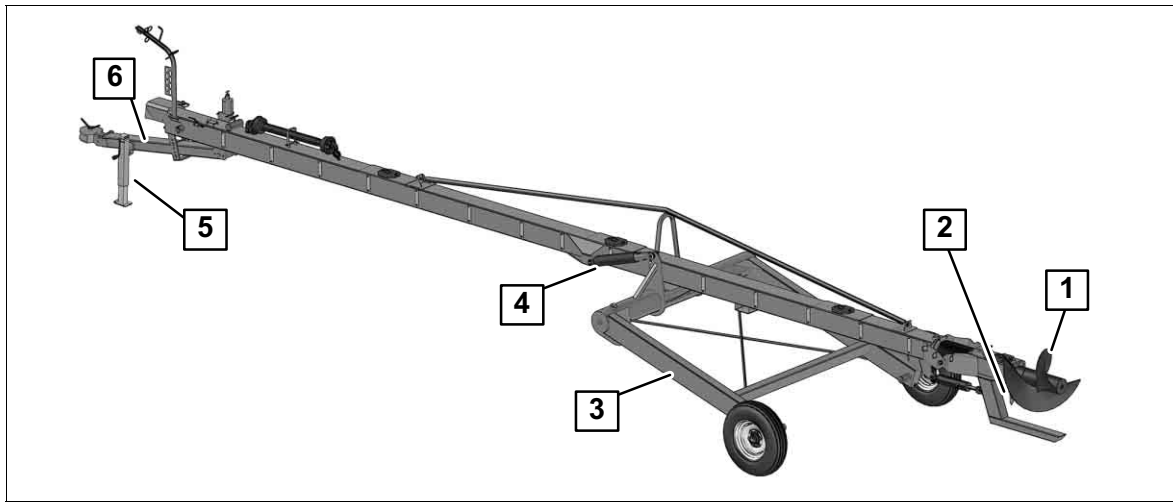

- * Reinforcement truss available in option;
- Draw bar 3 ft longer available in option;
- Double wheels on lagoon agitator undercarriage available in option.

Legend:			
1	Propeller	4	Cylinder lock
2	Knife	5	Jack
3	Undercarriage	6	Draw bar

4.1.1 Options

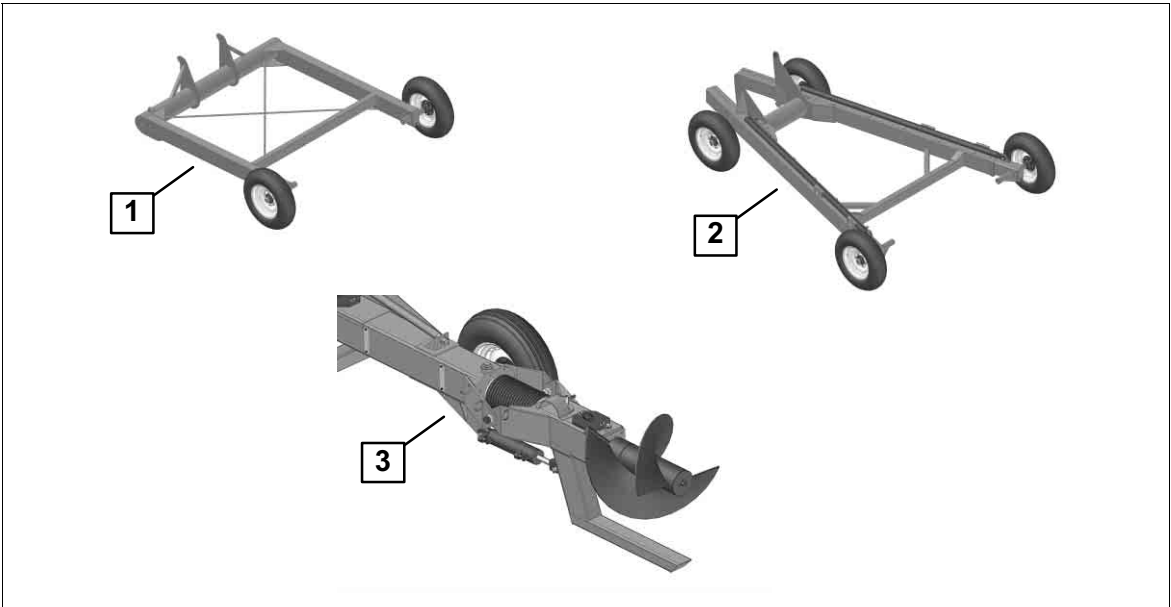

Legend:			
1	Heavy-duty undercarriage	3	Articulated propeller
2	Multipurpose undercarriage		

5 Technical data

5.1 Geometric data


Lagoon Agitator					
Agitator length	32' (9,8 m)	42' (12,8 m)	52' (15,9 m)	62' (18,9 m)	72' (22 m)
Agitator height	71" (1,8 m)				
Agitator width	See undercarriage				
Agitator weight	1765 lbs (800 kg)	2130 lbs (965 kg)	2845 lbs (1290 kg)	3220 lbs (1460 kg)	3860 lbs (1750 kg)
Agitator center of gravity	Lifting point location				
Propeller diameter	24" (610 mm) - [24" (610 mm) pitch] 24" (610 mm) - [32" (813 mm) pitch]				

5.2 Hydraulic hoses

I.D.	1/4"	1/2"	3/4"
O.D.	0.58"	0.86"	1.10"
Quantity of braids	2	2	2
Service pressure	400 bar (5800 psi)	276 bar (4000 psi)	207 bar (3000 psi)


5.3 Undercarriage

Standard undercarriage

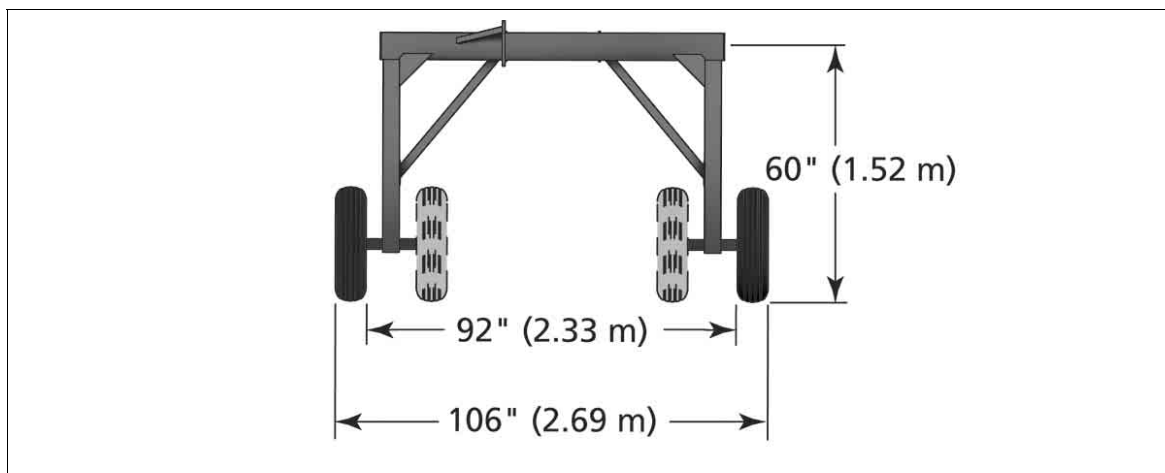


Height	60" (1,52 m)
Width (overall)	106" (2,69 m)
Weight	485 lbs (220 kg)

Heavy-duty undercarriage

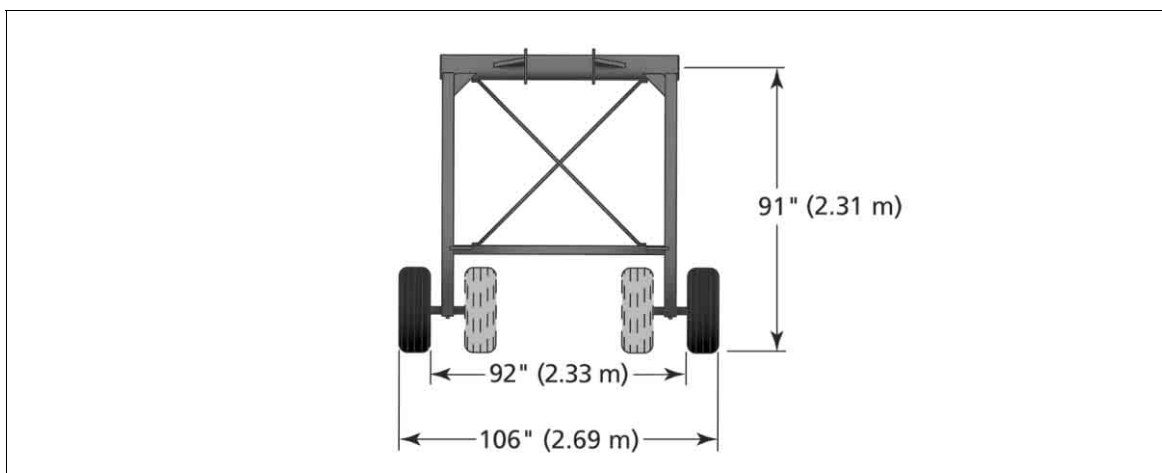


Height	91" (2,31 m)
Width (overall)	106" (2,69 m)
Weight	1080 lbs (490 kg)

Heavy-duty XL undercarriage

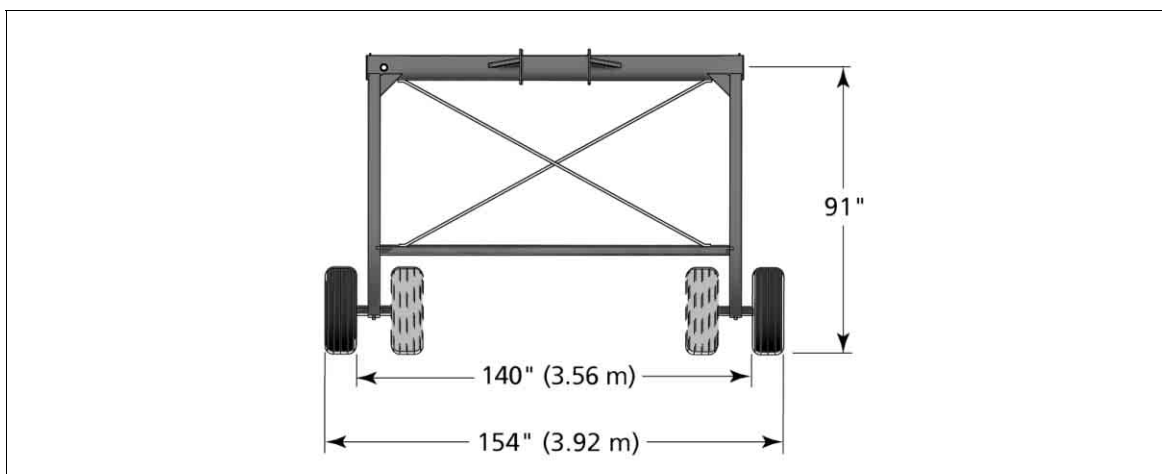

Height	91" (2,31 m)
Width (overall)	154" (3,92 m)
Weight	1265 lbs (575 kg)

Multipurpose undercarriage

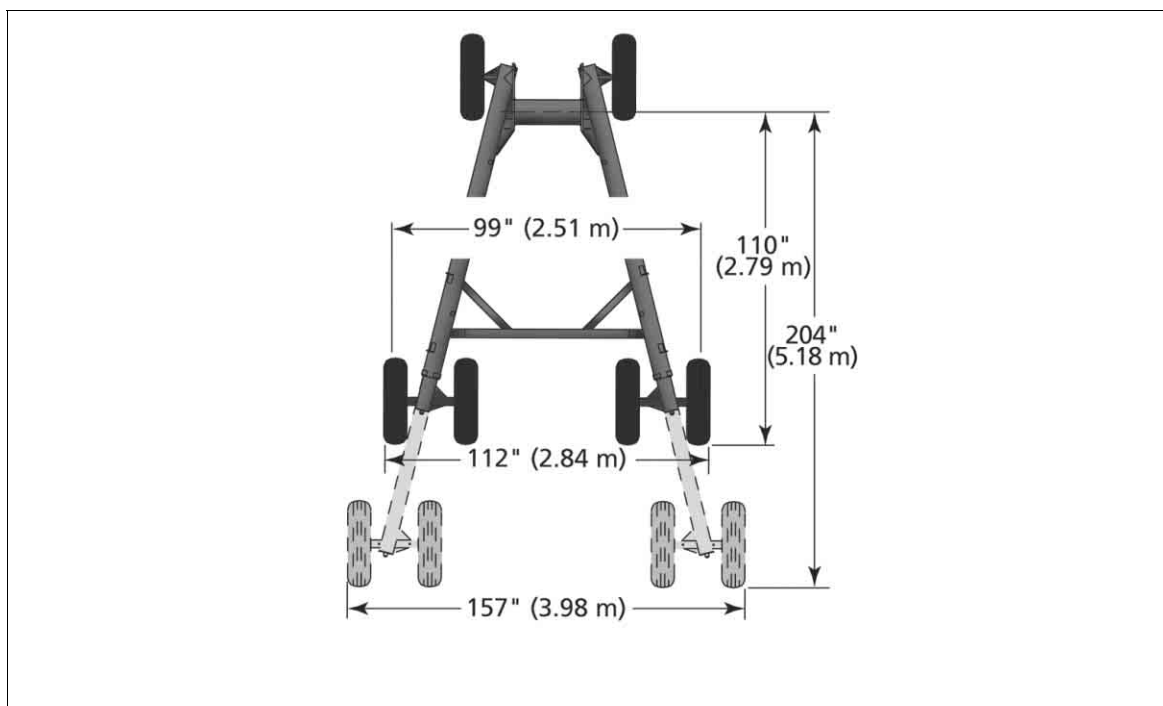

Height	204" (5,18 m)
Width (overall)	157" (3,98 m)
Weight	1850 lbs (840 kg)

5.4 Tire

Tire model	Ply	Pressure	Tire dimensions (inches/mm)	Weight (tire without rim)
16.5L X 16.1	8	26 psi (1.8 bar)	Diameter 30.3/770 Width 10.7/272	31 lbs (14 kg)




5.5 Tractor specifications

Tractor power	99 HP or less - 24" (610 mm) propeller pitch 100 HP or more - 32" (813 mm) propeller pitch
PTO RPM required	540 RPM

5.6 Performance data

	Lagoon Agitator length				
	32' (9,8 m)	42' (12,8 m)	52' (15,9 m)	62' (18,9 m)	72' (22 m)
Maximum effective depth	14' (4,3 m) slope of 2 to 1	18' (5,5 m) slope of 2 to 1	22' (6,7 m) slope of 2 to 1	20' (6,1 m) slope of 3 to 1	22' (6,7 m) slope of 3 to 1
Operating temperature	5°C (41°F) minimum				

5.7 Bolt torque chart

Bolt	Mat.	Bolt diameter									
		1/4"	5/16"	3/8"	7/16"	1/2"	9/16"	5/8"	3/4"	7/8"	1"
SAE 2 	LCS	8Nm (6ft-lb)	16Nm (12ft-lb)	27Nm (20ft-lb)	44Nm (32ft-lb)	64Nm (47ft-lb)	94Nm (69ft-lb)	130Nm (96ft-lb)	210Nm (155ft-lb)	279Nm (206ft-lb)	420Nm (310ft-lb)
SAE 5 	MCS HT	14Nm (10ft-lb)	26Nm (19ft-lb)	45Nm (33ft-lb)	73Nm (54ft-lb)	106Nm (78ft-lb)	155Nm (114ft-lb)	209Nm (154ft-lb)	349Nm (257ft-lb)	518Nm (382ft-lb)	796Nm (587ft-lb)
SAE 8 	MCAS	19Nm (14ft-lb)	39Nm (29ft-lb)	64Nm (47ft-lb)	106Nm (78ft-lb)	161Nm (119ft-lb)	229Nm (169ft-lb)	312Nm (230ft-lb)	515Nm (380ft-lb)	814Nm (600ft-lb)	949Nm (700ft-lb)
Socket Head Cap Screw	AS HT	22Nm (16ft-lb)	45Nm (33ft-lb)	73Nm (54ft-lb)	114Nm (84ft-lb)	170Nm (125ft-lb)	244Nm (180ft-lb)	339Nm (250ft-lb)	542Nm (400ft-lb)	868Nm (640ft-lb)	1315Nm (970ft-lb)

5.8 Lubricant specifications

Lubricant type	Brands / Specifications	Purpose
Biodegradable oil	Use this brand (or equivalent): • PPG Chemil Chemlube Agri-eco 1000	• To spray on the equipment
Synthetic grease for ball bearing intensive use	Use this brand (or equivalent): • TRC #880 Crown and Chassis	• To grease the universal joints of the PTO • To lubricate the ball bearings of the bearing housing • To lubricate the ball bearings of the jack shaft
All-purpose grease	Use this brand (or equivalent): • EP2 mineral grease	• To lubricate the equipment • To seal the bearing housing chambers

6 Handling and assembly

6.1 Special personnel qualification required for handling

Handling must be performed by a qualified forklift operator and/or qualified overhead crane or hoist operator.

Installation work must be performed by trained personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

6.2 Safety instructions for handling and assembly



Warning!

Do not stand under suspended loads. Falling loads can cause fatal injuries!



Caution!

Sharp edges may cause injuries.



Read the section Safety.



6.3 Preparation

6.3.1 Handling tools






Attention!

To lift the equipment, use a lifting device with a minimum capacity of: 4425 lbs (2000 kg).

	Description	Purpose
	Forklift truck	To lift the agitator and the undercarriage
	Safety chains	To lift the undercarriage

6.3.2 Installation tools


	Description	Purpose
	Wrench set	To tighten bolts
	Ratchet tool set	To tighten bolts
	Torque wrench	To tighten bolts at specified torque

6.4 Packing material disposal


Handle the packing material properly and dispose according to your local rules and regulations on waste disposal. Please refer to your local resources for any questions. Recycle if possible.

6.5 Handling the product and accessories

- To lift the agitator, insert a fork of a forklift truck in the axle collar (1) under the beam and insert the other fork of the forklift truck in the channel welded under the beam.

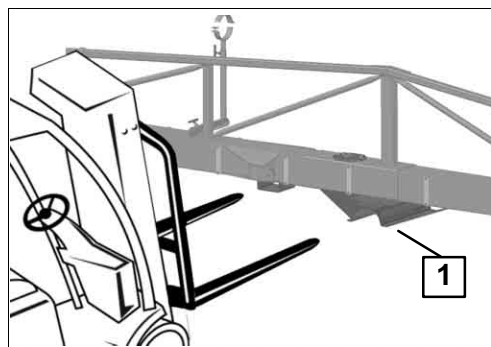


- To lift the agitator, in the case of a split frame, insert the forks of a forklift truck in the channels welded on the beam of each section.
- To lift the undercarriage frame, use a forklift truck.

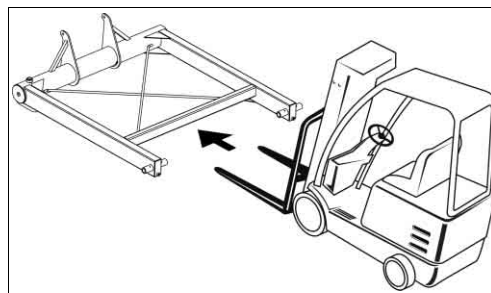


6.6 Lagoon Agitator assembly

Lagoon Agitator split version

- Remove driving shaft protective device (1);

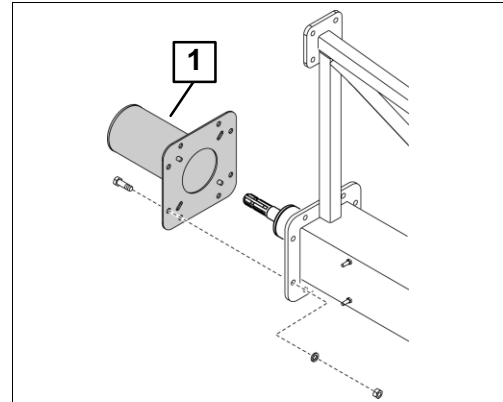


- Place the front agitator section (A) on skids;
- Using a crane, lift the rear agitator section (B) and align it for assembly;
- Remove top covers to get access to the drive shaft, bearing and universal joints (3);
- Before assembling, make sure universal joints (3) are in the same position on both agitator sections. If needed, rotate the shaft (4);

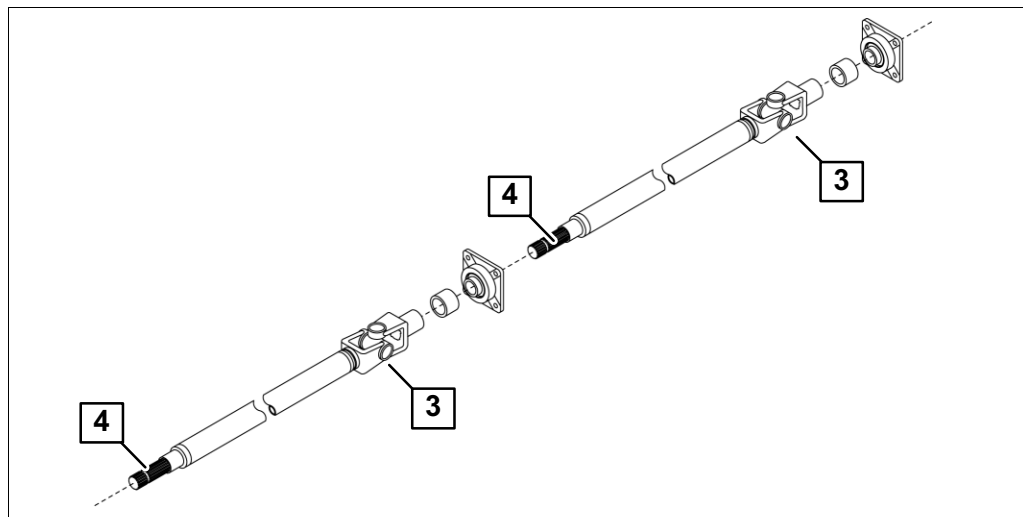


- Apply silicone all over the flange (6);
- Using the crane, carefully move and align the agitator section to insert the driving shaft (4) through the bearing (5);
- Place the sleeve (2) over the drive shaft end (4), between the bearing (5) and the universal joint (3). (Note: the sleeve is attached to the universal joint for shipping purpose);
- Insert the drive shaft end (4) through the universal joint (3). Do not lock yet;
- Bolt sections using provided hardware. Torque;
- Secure the universal joint with an Allen key;

- Connect hydraulic hoses on the frame side.

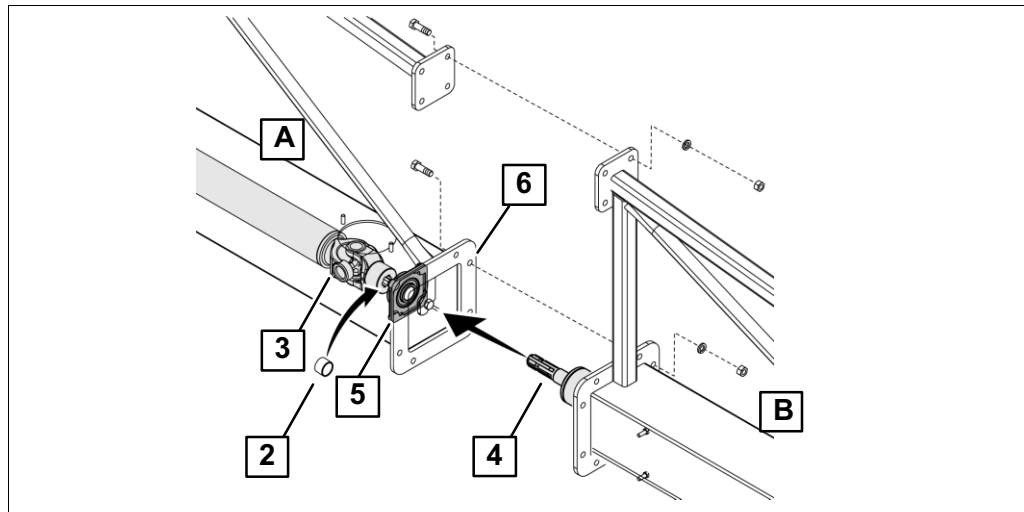


Standard, heavy-duty and heavy-duty XL undercarriages



- Fix the hubs to the undercarriage frame, then install the wheels;

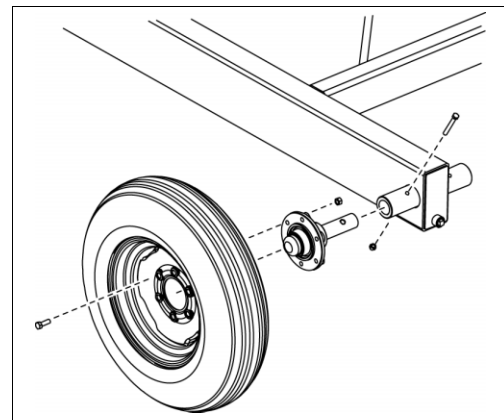

- Once the undercarriage is assembled, lift the agitator over the undercarriage;
- Using a brush, apply all purpose grease over the pivot section (7);
- Lift the agitator to align it with the axle collar, then bolt both collars together using provided hardware. Torque;

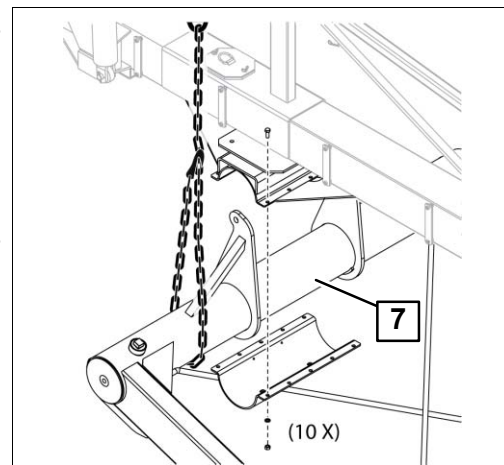


- Install the cylinder(s) and the lock cylinder(s) as illustrated hereafter;

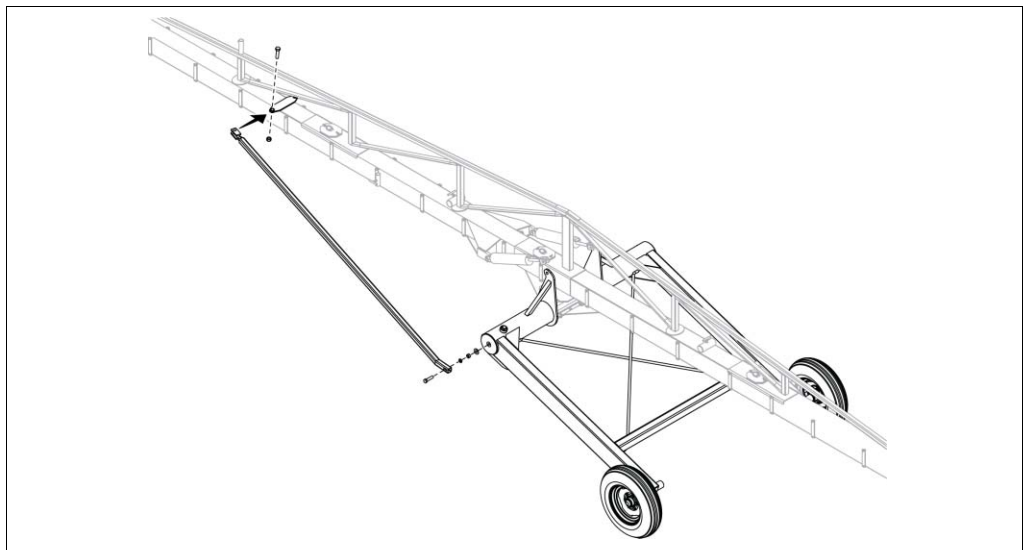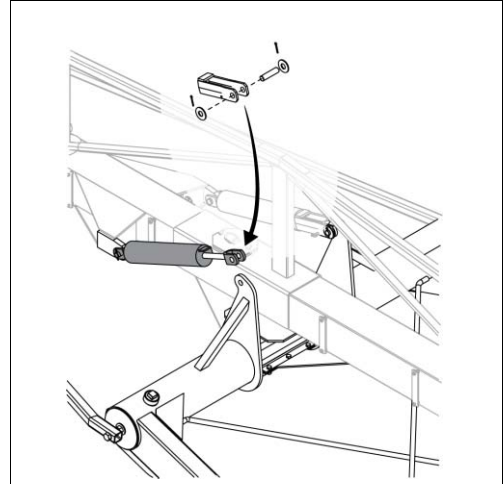


- Install the tension arms on both sides of the agitator (HD and HD XL undercarriages).


Multipurpose undercarriage (optional)

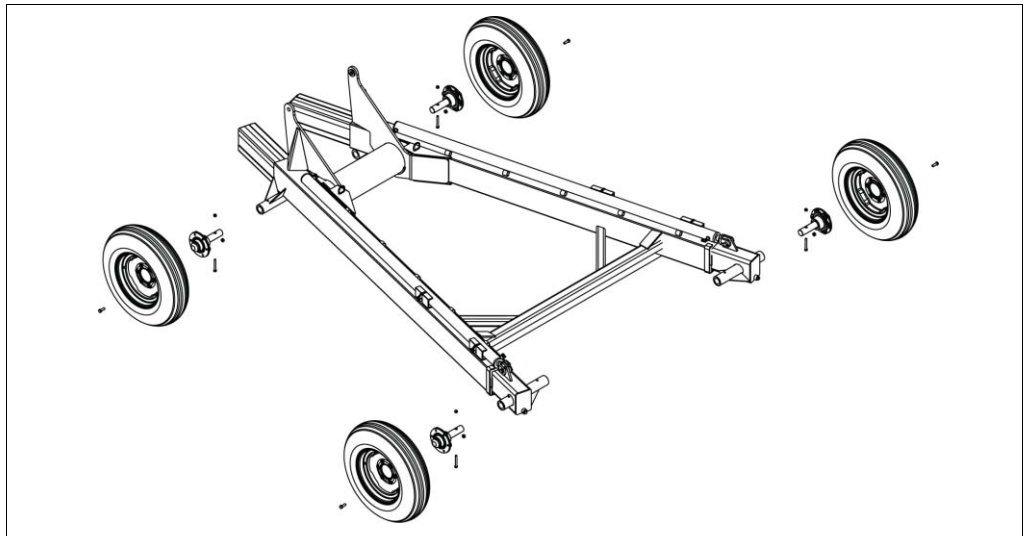

- Fix the hubs to the undercarriage frame, then install the wheels;
- Once the undercarriage is assembled, lift the agitator over the undercarriage;
- Using a brush, apply all purpose grease over the pivot section (7);
- Lift the undercarriage to align it with the axle collar, then bolt both collars together using provided hardware. Torque;

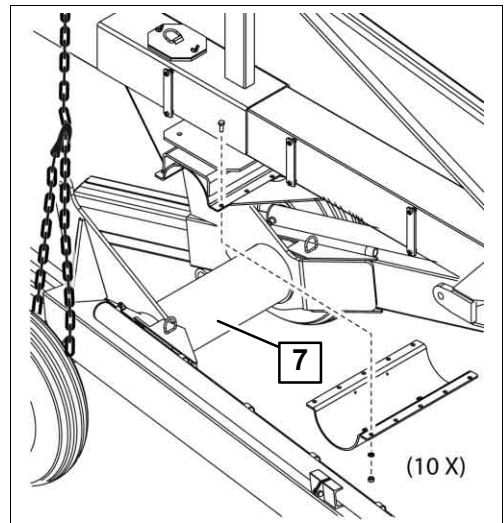


- Install the cylinder(s) and the lock cylinder(s) as illustrated hereafter.

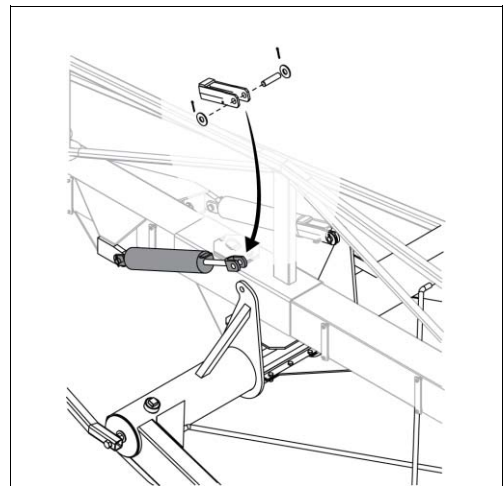


Draw bar

- Install the draw bar on the agitator using provided hardware.

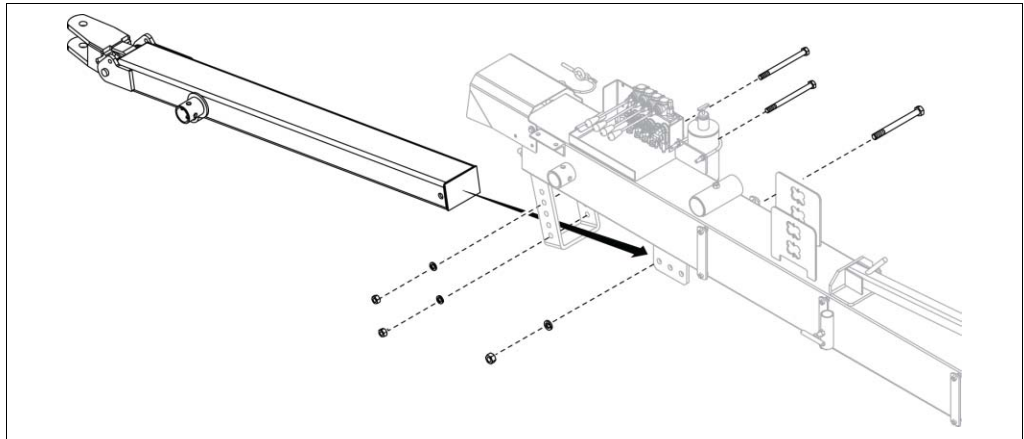


Jack

- Install the jack using provided hardware;
- When the agitator is connected to the tractor, install the jack to the transportation support (8).

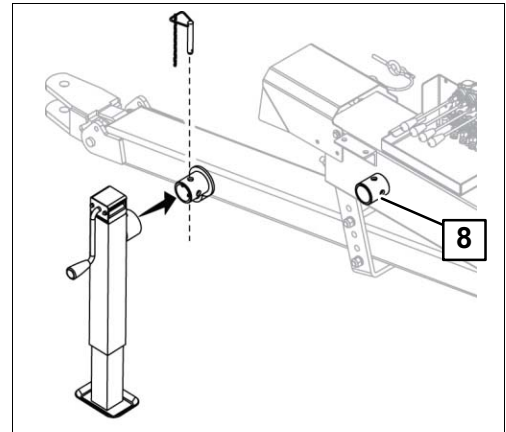

Stabilizing leg (on Lagoon Agitator with standard, heavy-duty and heavy-duty XL undercarriages only)


- Install the stabilizing leg as illustrated hereafter.

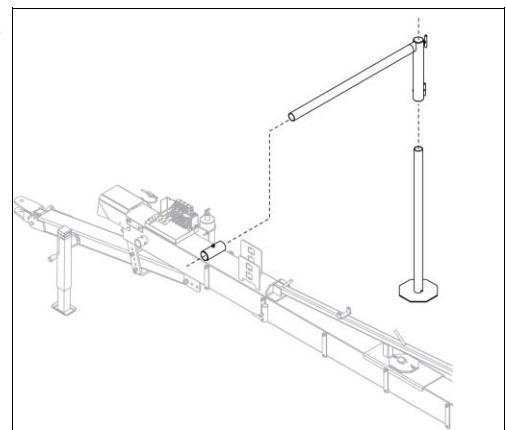

- At this point, the Lagoon Agitator can stand safely on the ground by adjusting the jack and the stabilizing leg adequately.

Hydraulic hoses support

- Install the support;
- Insert the hydraulic hoses in the rings (9);
- Install the hydraulic connectors in the support (10).

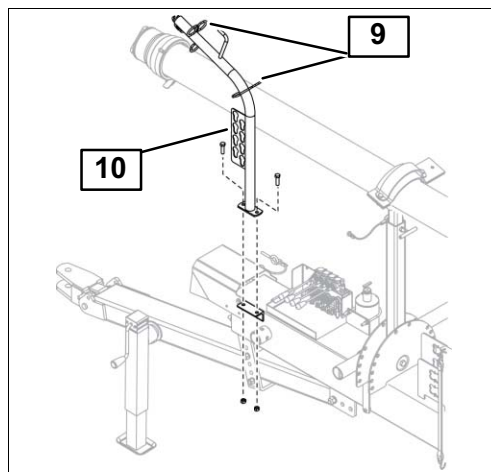

7 Initial commissioning

7.1 Special personnel qualification required for initial commissioning

Initial commissioning must be performed by trained personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

7.2 Safety instructions for initial commissioning

**Warning!**

Do not start this product until the initial commissioning checklist is completed.

**Warning!**

PTO driveline must always be activated when the agitator propeller is immersed in manure. Running the agitator out of manure may result in damage.


**Caution!**

Unexpected movements may happen if tractor hydraulic connections are mixed up.

The first start steps intend to test the product in order to validate its functionality and efficiency before handing it over to the customer. Therefore, the dealer along with the customer must operate the product as well as the operating elements.

7.3 Hydraulic control valve setup

7.3.1 Relief valve

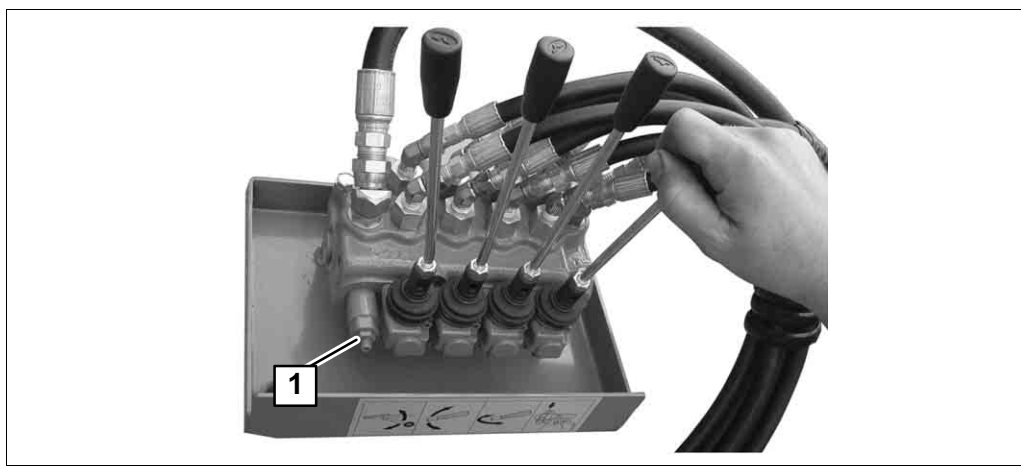

The relief valve (1) on PTO agitators is preset to 1500 PSI by the manufacturer of the valve. If hydraulic pressure is not sufficient to operate one or many agitator functions, adjust the relief valve (1) by screwing the nut gradually until the agitator operates properly.


7.3.2 Power steering control valve

**Attention!**

Since tractors can be equipped with an open or a closed hydraulic system, the control valve must be set with the appropriate plug to avoid overheating/damaging hydraulic components. Contact your tractor dealer.

Use the appropriate plug in order to match the tractor hydraulic system:

- The standard plug (2) is required for tractor equipped with an open hydraulic system.
- The beyond plug (3) is required for tractor equipped with a closed hydraulic system also called load sensing in some cases.

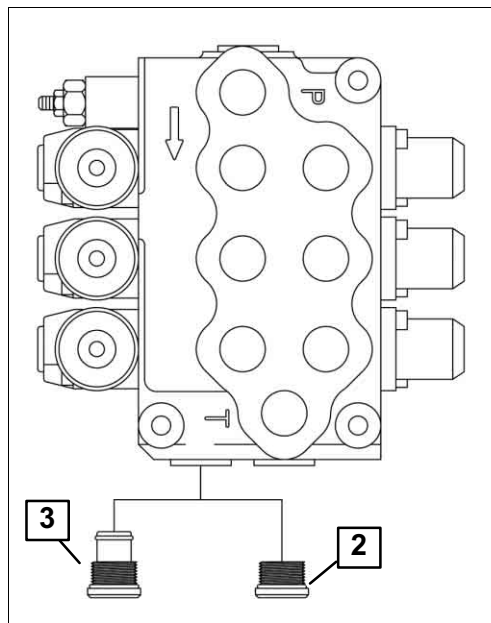**Note!**

A new equipment always comes with two plugs, a standard plug installed on the valve and a beyond plug supplied separately. Make sure to install the appropriate plug.

Plug change

**Attention!**

Oil leak will occur when changing the plug.

**Note!**

Make sure the undercarriage and the tractor wheels are perfectly aligned before adjusting the control valve.

- Apply Teflon tape on the threads of the beyond plug (3). Do not apply Teflon tape on the tip of the plug;
- Unscrew the standard plug (2) and replace immediately by the beyond plug (3).

7.4 Spare safety shear bolts

Remove and save the extra safety shear bolts (4).



Shear bolts replacement

Tractor PTO	Part No.	Dimensions	Gr.	Quantity
1 $\frac{3}{8}$ "-6 splines	2010-7505-710	$\frac{3}{8}$ "-16NC x 1	8	2
1 $\frac{3}{4}$ " - 20 splines	2010-7505-720	$\frac{3}{8}$ "-16NC x 1	2	2

7.5 Initial commissioning checklist

This checklist must be completed by the dealer and the customer to validate that the product is assembled and/or installed according to the manufacturer's instructions and that it is safe for use.



Note!

Additional information necessary to complete the checklist can be found in this instruction manual.

General	DONE	N/A
The owner received the instruction manual from the dealer and commits to read it.		
The owner is instructed by the dealer on how to operate and maintain the product.		
The Lagoon Agitator is connected to the tractor and secured with safety chains.		
The safety labels are installed.		
The lubrication points are lubricated.		
The oil levels are adequate.		
All bolts are torqued.		
The drain is closed.		
All connections are secured.		
A visual inspection is performed to ensure there are no leaks, signs of distortion or defective parts.		
The undercarriage wheel nuts are tightened to correct torque.		
The undercarriage tires are inflated at appropriate pressure.		
The tractor draw bar is adjusted to minimum length while respecting the PTO limitations.		
The PTO shaft is installed.		
The owner is instructed on the PTO driveline instructions.		
The spare safety shear bolts are removed from the PTO guards.		
The equipment/component provided by the owner comply with the specifications contained in section Technical data.		

Options	DONE	N/A
The owner is instructed on how to operate the articulated propeller.		
The owner is instructed on how to operate and adjust the options of the system.		



Note!

The dealer and the owner must fill the warranty registration form when the checklist is completed.

Dealer's signature: _____

Owner's signature: _____

Date: _____

7.6 Checks after initial commissioning

The owner must make sure that:

- there are no damaged, worn, defective parts or signs of distortion;
- the safety devices such as guards, covers, chains, etc. are in perfect working condition and remain in place to ensure safety;
- the lubricants such as grease, oil, etc. are at an appropriate level;
- there are no leaks;
- all bolts are tight. Refer to section Technical data - Bolt torque chart;
- the product works perfectly.

7.7 Handing over to the owner

Hand over warranty registration form

The warranty registration form must be completed and signed by the customer and the dealer. The warranty registration form must be returned to GEA Farm Technologies Canada Inc. / Division GEA Houle to validate the warranty.

8 Operating

8.1 Special personnel qualification required for operation

Operation must be performed by qualified personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

8.2 Safety instructions for operation



Attention!

To operate the equipment safely, the tractor operating the equipment must meet the tractor specifications given. Refer to the Technical data - Tractor specifications section.

- The equipment must always be attached to the tractor draw bar to prevent the PTO from separation.
- Be careful when positioning the agitator in the pit. Move the tractor backward at low speed.
- Never leave the agitator in operation without the supervision of a qualified operator.
- The tractor must be immobilized with parking brakes or wheel chocks to keep it from entering in manure storage.
- During operation, it is strictly forbidden to stand in the working area.








Read the section Safety.

8.3 Checks before operating

- The safety devices such as guards, covers, chains, labels, etc. remain in place to ensure safety;
- Lubricants such as grease, oil, etc. are at appropriate level. To locate the grease points, refer to section Appendix - Label position;
- The product is in perfect condition. There is no visible damage;
- Only authorized personnel are in the working area of the equipment;
- No unnecessary object or material is located in the working area of the equipment.

8.4 Description of controls

8.4.1 Hydraulic control

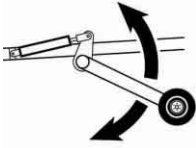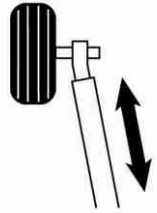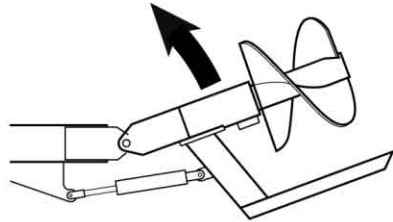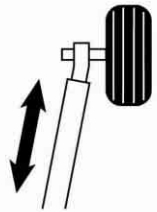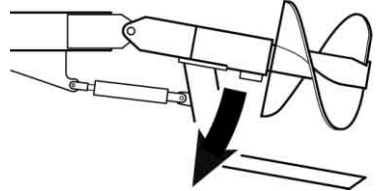1	Articulated undercarriage	4	Telescopic leg (left side)
			
2	Articulated propeller (up)	5	Telescopic leg (right side)
			
3	Articulated propeller (down)		
			

8.5 Connecting the Lagoon Agitator

8.5.1 Draw bar connection

Insert the tractor draw bar in the Lagoon Agitator hitch;
 Insert a 1" hitch pin through the draw bar to lock it in place;
 Order the part No. 2018-3802-420 (1" hitch pin) if needed;
 Secure the pin using a cotter pin.



Refer to tractor operating instructions and make sure the chains are attached according to your current local regulations.

8.5.2 PTO driveline connection



Danger!




There is a risk of being crushed between moving and stationary parts. It is strictly forbidden to stand in the danger zone. Turn off the tractor and apply the hand brake before connecting or disconnecting the PTO driveline.

Safety chains (European model only)

Safety chains must be in place at all times to prevent the driveline guards from rotating. Replace if damaged.

Make sure the safety chains do not restrict the driveline movement when operating or transporting the equipment.

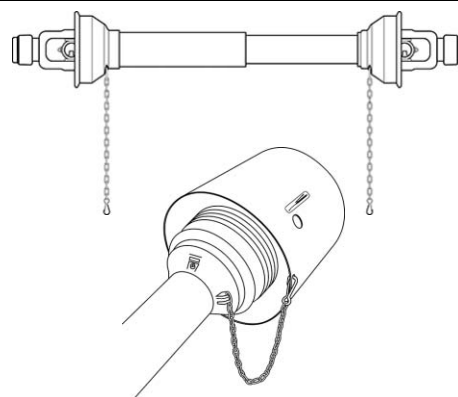


Never use the safety chains to secure the PTO when disconnected from the tractor.

Maximum extension and retraction

While operating the agitator, never exceed the maximum point indicated by the adhesive tapes on the male guard.

The minimum retraction indicator (1) must never disappear underneath the female guard.

The maximum extension indicator (2) must never be completely visible.

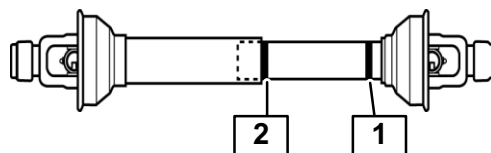

Maximum angle of PTO joints


Constant velocity PTO driveline

One PTO joint must be set at a maximum of 70° angle. The other PTO joint must be set at a maximum of 10° angle.

Standard PTO driveline


Both PTO joints must be set at the same angle (maximum 15°).

Joints must always be directed toward the same side of the driveline.

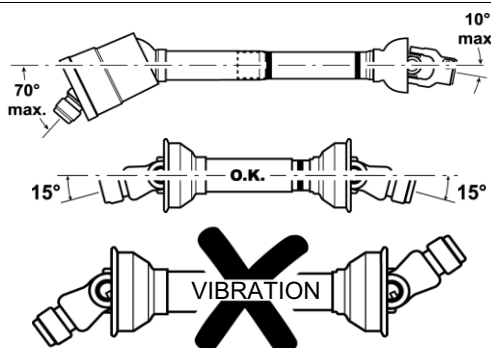

8.5.3 Draw bar adjustment

Before connecting the PTO, make sure to comply with the maximum angle of PTO joints as stated above. The draw bar can be adjusted up and down to observe the maximum angle of PTO joints.

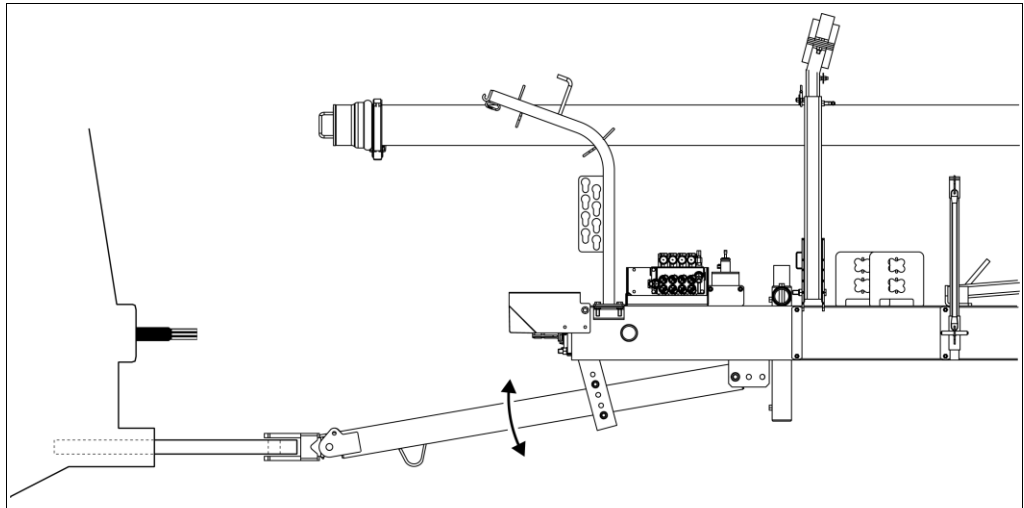

8.5.4 Component connection



Caution!

Connect the hydraulic hoses properly to ensure safe operation. Refer to section Appendix - Hydraulic diagrams.

Connect the Lagoon Agitator hydraulic hoses to the tractor. Double check all connections for safety purpose.

Connect the electrical outlet of the Lagoon Agitator to the tractor, if applicable.

8.6 Moving the Lagoon Agitator



Caution!

The hitch, tires, wheels, hubs and axles of the pump are designed for agricultural use only. They are not approved to be towed at any speed above 25 mph (40 km/h).



Caution!


The equipment has no braking system nor signal lights. It is designed to be towed strictly on the field by a farm tractor.

If the equipment needs to be towed on public road, the owner must adapt the equipment in accordance with local towing safety regulations.

For long distance transportation, use a truck or truck and trailer approved for public roads.


8.6.1 Basic preparation steps before moving the agitator

- Make sure the undercarriage cylinder(s) is/are in locked position (1).
- Disconnect the PTO (2) and install it on the pump frame.
- Retract the stabilizing leg (if applicable).
- Install the jack on transportation support (3).
- Retract the telescopic legs if the multipurpose undercarriage is used.

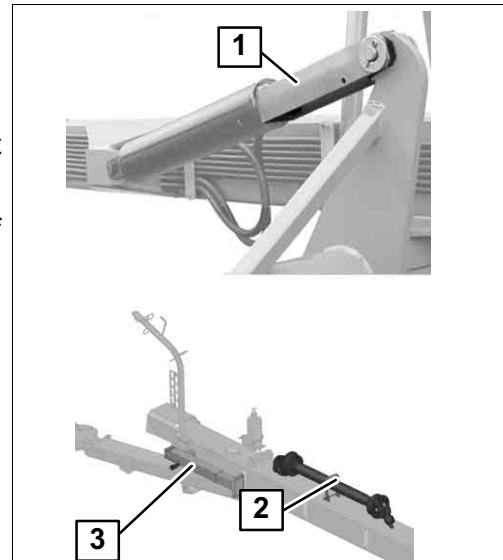

8.6.2 Moving the Lagoon Agitator with multipurpose undercarriage



Before moving, perform steps in section: Basic preparation steps before moving the agitator.

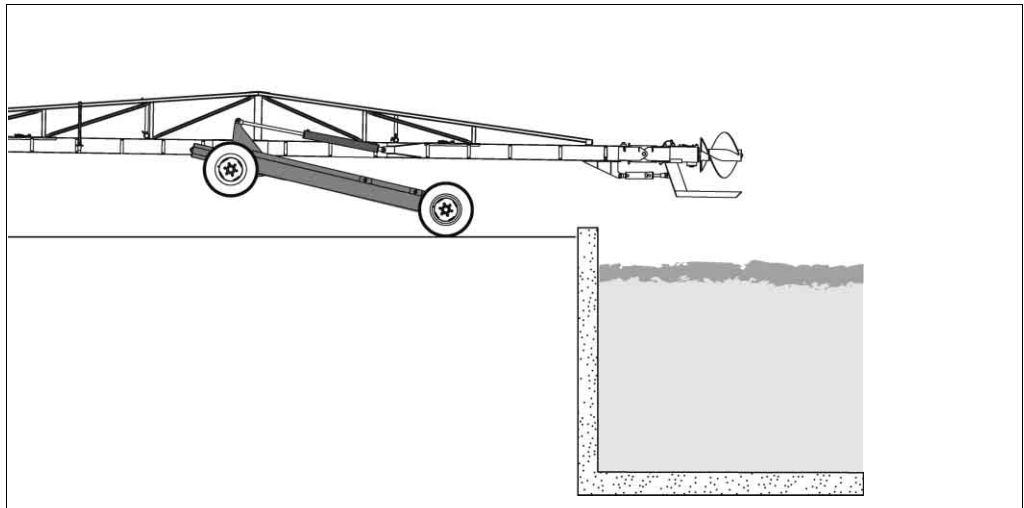

8.7 Positioning the agitator

8.7.1 In a lagoon

- Make sure the undercarriage cylinder(s) is/are in unlocked position;

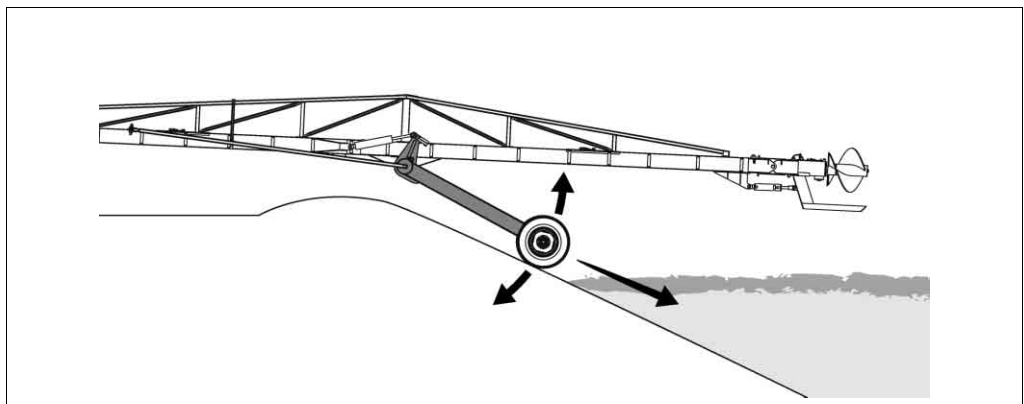
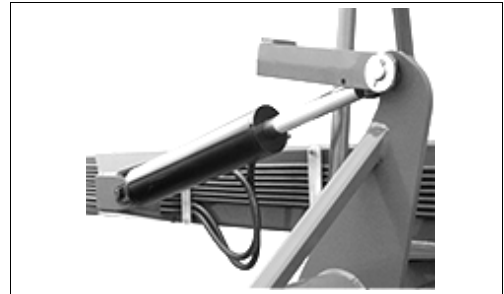


- Connect the PTO;
- Move the agitator backward into the lagoon;
- Immerse the propeller into the manure;
- Once the agitator is positioned, apply tractor safety brakes;


- Secure the agitator with the stabilizing leg (if applicable).

8.7.2 In a concrete reservoir (using the multipurpose undercarriage only)


- Make sure the undercarriage cylinder(s) is/are in unlocked position;

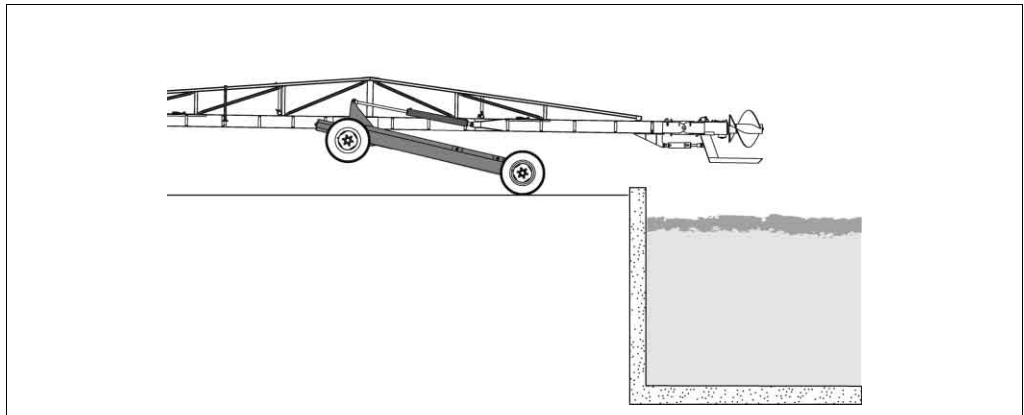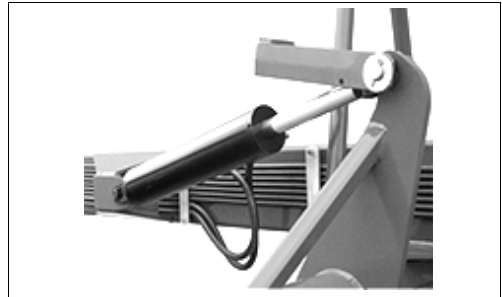


- Connect the PTO;
- Swivel the undercarriage for the front wheels to touch the ground;
- Move the agitator backward until the front wheels touch the wall;

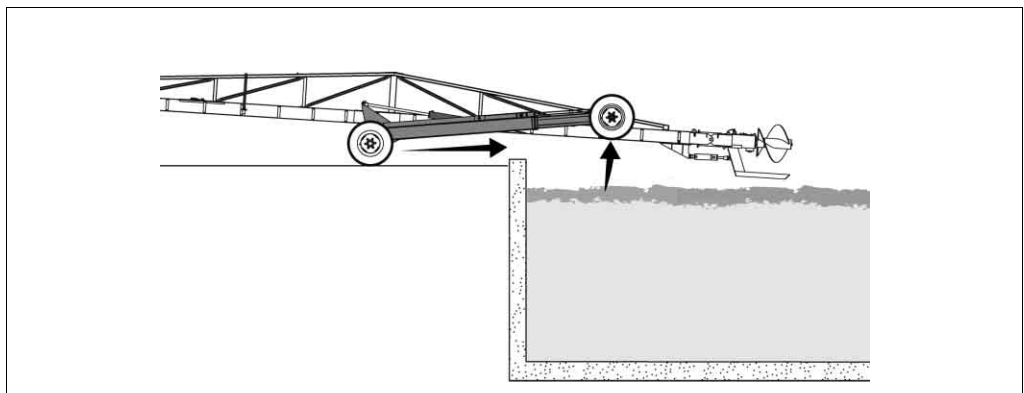

- Swivel the undercarriage in vertical position;

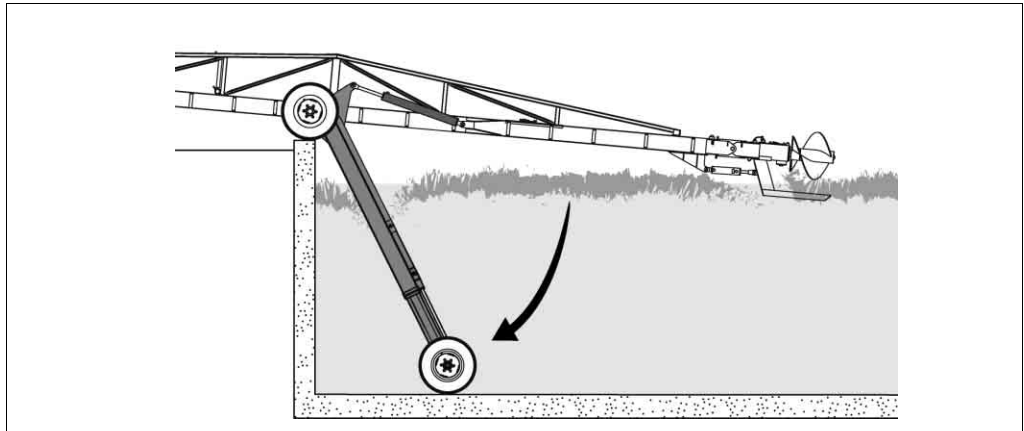

- Extend the telescopic legs until they touch the bottom of the pit;

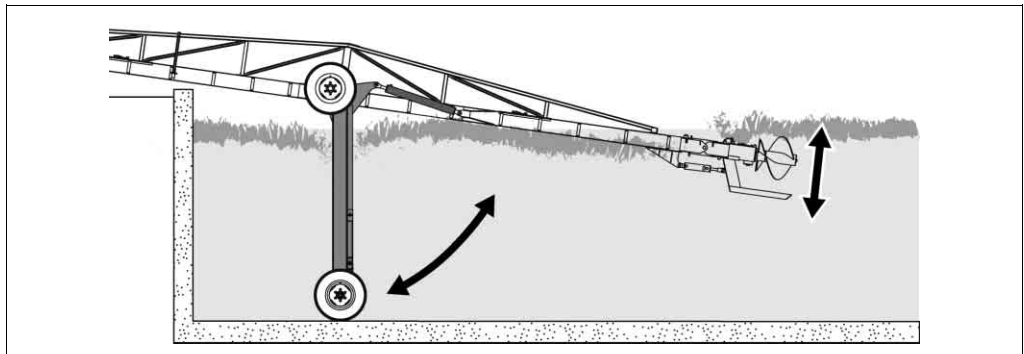

- Move the agitator backward;
- Immerse the propeller into the manure;
- Once the agitator is positioned, apply tractor safety brakes.

8.8 Agitation mode


Engage the PTO at minimum RPM;

Gradually increase the PTO up to 540 RPM;

Once the manure is homogenized, decrease RPM;

Stop the PTO;


The articulated propeller option makes manure homogenization faster. See the operating mode below.

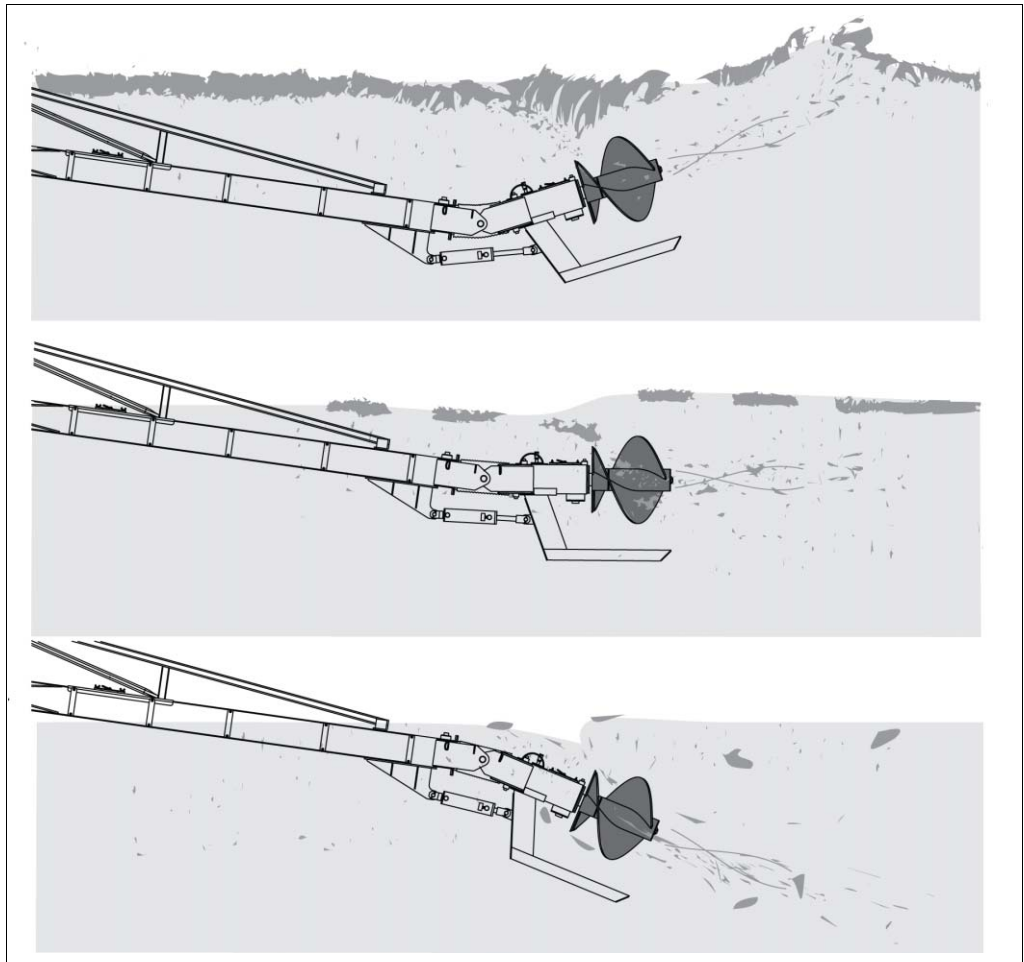


8.9 Removing the agitator

From a lagoon


- Stop the PTO;
- Retract the stabilizing leg (if applicable);
- Raise the propeller out of manure;
- Remove tractor safety brakes;
- Move the agitator forward;

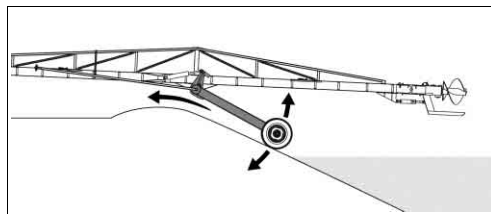

- Make sure the undercarriage cylinder(s) is/are in locked position;

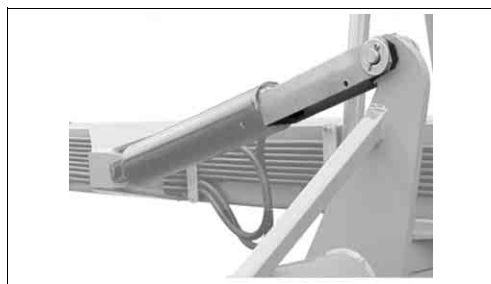


- Install the PTO (1) on transportation support.

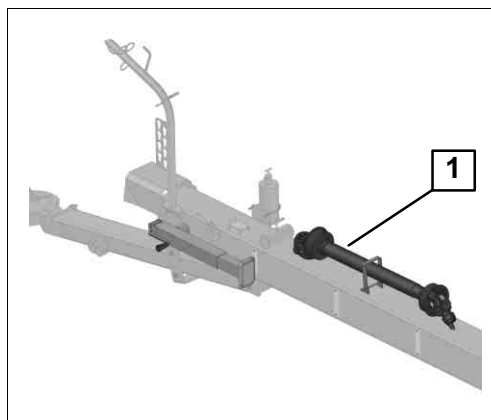


From a concrete reservoir


- Stop the PTO;
- Raise the propeller out of manure;
- Remove tractor safety brakes;

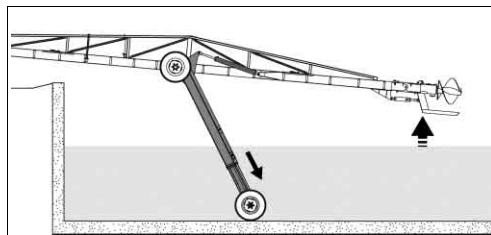


- Move the agitator forward until the front wheels touch the wall;

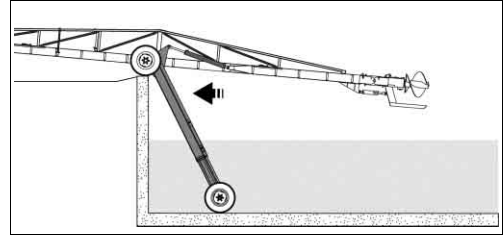


- Retract the telescopic legs;

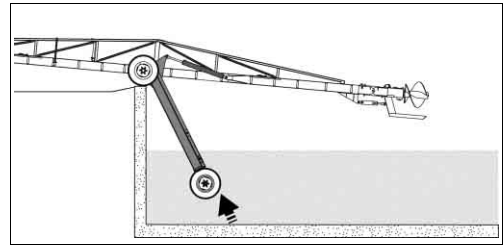


- Swivel the undercarriage legs up;

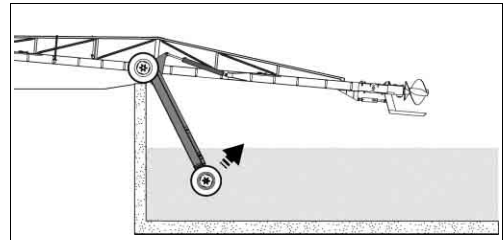


- Move the agitator forward;

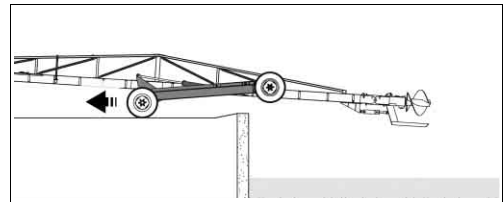


- Swivel the undercarriage for the rear wheels to touch the ground;

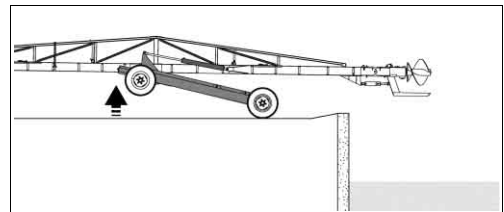

- Make sure the undercarriage cylinder(s) is/are in locked position;

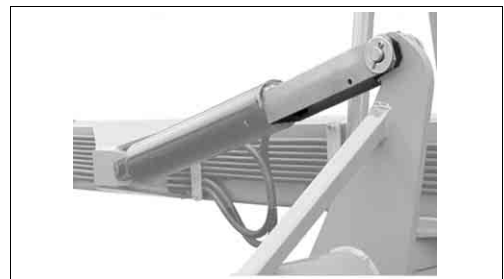

- Install the PTO (1) on transportation support.

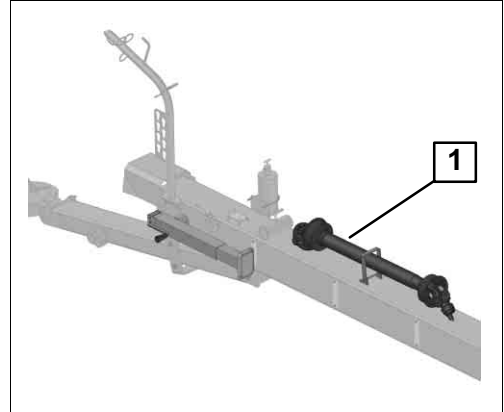

9 Troubleshooting

9.1 Special personnel qualification required for troubleshooting

Troubleshooting must be performed by trained personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

9.2 Safety instructions for troubleshooting



Warning!

HYDRAULIC LINE UNDER PRESSURE!

Do not use your fingers to check for leaks. Fluids can penetrate skin and cause serious or fatal injuries. Hold a piece of cardboard to check for leaks.



Read the section Safety.

9.3 Troubleshooting possible faults

Symptom	Possible cause	Solution
Agitator is not agitating properly or not at all.	Broken PTO shear bolts.	Replace PTO shear bolts.
	Worn out propeller/knife.	Replace part.
	PTO driveline has a defective joint or is disconnected.	Inspect the driveline.
	Broken shaft in driveline.	Replace.
Hydraulic system overheats or erratic operation.	Wrong connection.	Read instruction and consult tractor manual.
Vibration in the driveline.	The PTO joints are out of alignment.	Refer to section Operating - PTO driveline connection.
Vibration.	Foreign material wrapped on propeller.	Remove foreign material.
Long straw not chopped.	Propeller knife not cutting.	Replace propeller knife.
Hydraulic articulations elements do not work.	Tractor hydraulic oil level too low.	Check hydraulic oil level.
	Hydraulic quick connector is defective.	Replace.
Tractor RPM meter unstable or too high to reach performance.	Tractor size too small.	Need a bigger tractor.

10 Maintenance

10.1 Special personnel qualification required for maintenance work

Maintenance work must be performed by trained personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

10.2 Safety instructions for maintenance



Danger!

There is a risk of being crushed between moving and stationary parts. It is strictly forbidden to stand in the danger zone. Turn off the tractor and apply the hand brake before lubricating, cleaning or servicing the equipment.



Warning!

Always remove the equipment from the lagoon/reservoir before servicing.



Warning!

HYDRAULIC LINE UNDER PRESSURE!

Do not use your fingers to check for leaks. Fluids can penetrate skin and cause serious or fatal injuries. Hold a piece of cardboard to check for leaks.



Note!

Have within reach containers to collect all substances potentially harmful such as oils, coolants, cleaning and disinfecting agents, etc.



Read the section Safety.

10.3 Scheduled maintenance responsibilities

10.3.1 GEA Farm Technologies Canada Inc. / Division GEA Houle maintenance schedule

Task	Before each working day	After each working day	Every 5 hours of operation	Every 10 hours of operation	If needed	Action by
Visual inspection	X					Trained personnel
Check oil level in oil bath (optional)	X					
Check oil level in oil tank			X			
Grease the PTO driveline			X			
Grease the swivel hitch		X		X		
Grease driving shaft bearings		X		X		
Grease undercarriage pivot points		X				
Grease bearing housing		X		X		
Clean the equipment		X				
Replace propeller knife					X	



Attention!

When operating this GEA Houle product using other manufacturer's components and/or products such as a PTO, a tractor, a motor, a pump, etc., ALWAYS perform maintenance of the component and/or product as recommended by its manufacturer.

10.4 Visual inspection


Before each working day

Inspect the Lagoon Agitator to find any defective part or sign of abnormal wear (loose bolts, clamps, wear on propeller).

10.5 Check oil level in oil bath

Before each working day


- Position the equipment on a horizontal, flat and firm surface;
- Remove the oil bath filling plug and measure the oil level as shown;
- Add SAE 80W90 gear oil if necessary. Do not overfill;
- Put the plug back on.

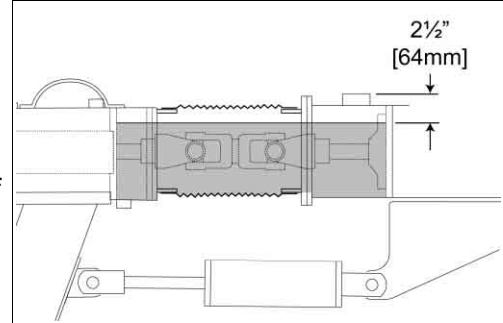

10.6 Check oil level in oil tank

Every 5 hours of operation

- Make sure the oil in the oil tank is at proper level;
- Add SAE 80W90 gear oil if necessary.

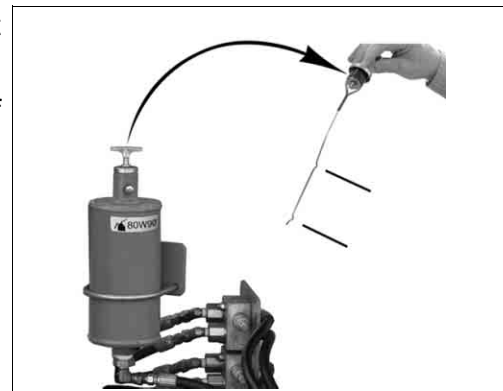

10.7 Grease the PTO driveline




Note!

Use specified grease or equivalent TRC 880 Crown and Chassis® grade 0 (2010-4300-790).

Every 5 hours of operation

- Grease the sliding part and all greasing points of the power take off.

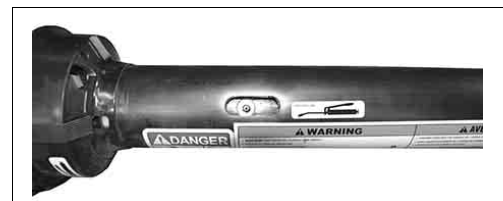

10.8 Grease driving shaft bearings

After each working day and every 10 hours of operation


- Remove the cover;
- Use specified grease or equivalent TRC 880 Crown and Chassis® grade 0 (2010-4300-790);
- Replace the cover;
- Repeat this procedure for each driving shaft cover.



10.9 Grease swivel hitch

After each working day and every 10 hours of operation

- Add grease in the hitch grease fitting (1);
- Use all-purpose grease.

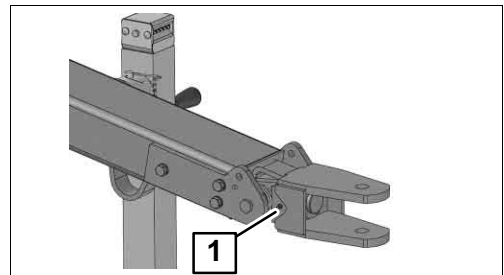

10.10 Grease undercarriage pivot points

After each working day


- Add grease in the undercarriage grease fittings (1);
- Use all-purpose grease.



10.11 Grease bearing housing

After each working day and every 10 hours of operation

- Grease all points where a grease gun label is affixed;
- Use all-purpose grease.

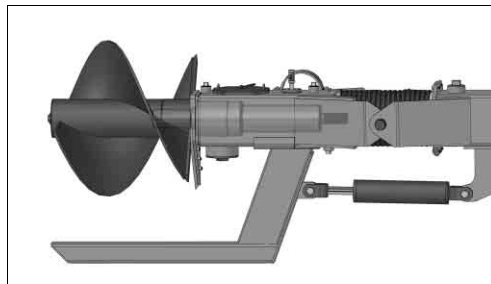

10.12 Clean the equipment

After each working day



Attention!

Use tap water to clean this product. Do not exceed 2000 psi [105 bar] when using a pressure washer and keep the nozzle at a distance of 1 ft [30 cm] from the surface to be cleaned.

- Pressure wash the entire equipment;
- Open the drain on the agitator.



10.13 Replace propeller knife



Warning!


Turn off the tractor, apply parking brake and remove the PTO driveline before replacing the propeller knife.



Caution!

Always wear safety gloves when handling the propeller knife. The sharp edges of the knife may cause injuries.

- Remove holding bolts;
- Replace the knife;
- Reinstall the bolts and tighten.

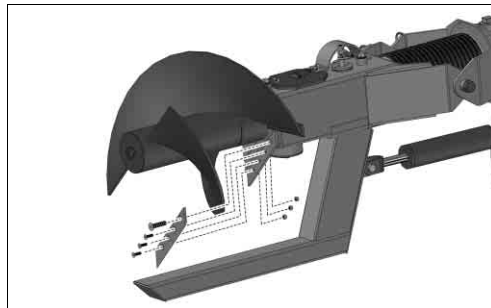

11 Decommissioning

11.1 Special personnel qualification required for decommissioning

Decommissioning may only be performed by qualified personnel in accordance with the safety instructions.



Read the section Safety - Personnel qualifications.

11.2 Safety instructions for decommissioning



Attention!

Keep all hose couplings clear of dirt and sand when disconnected from the tractor. Always hook them on their supports.



Read the section Safety.

11.3 Temporary decommissioning

Storage


- To store the equipment, place it on a horizontal, flat and firm surface.
- Install wheel chocks to prevent the equipment from moving.
- Make sure the maintenance schedule, that can be found in section Maintenance, has been followed.
- Once the equipment is lubricated and cleaned, spray a thin layer of biodegradable oil on the equipment.







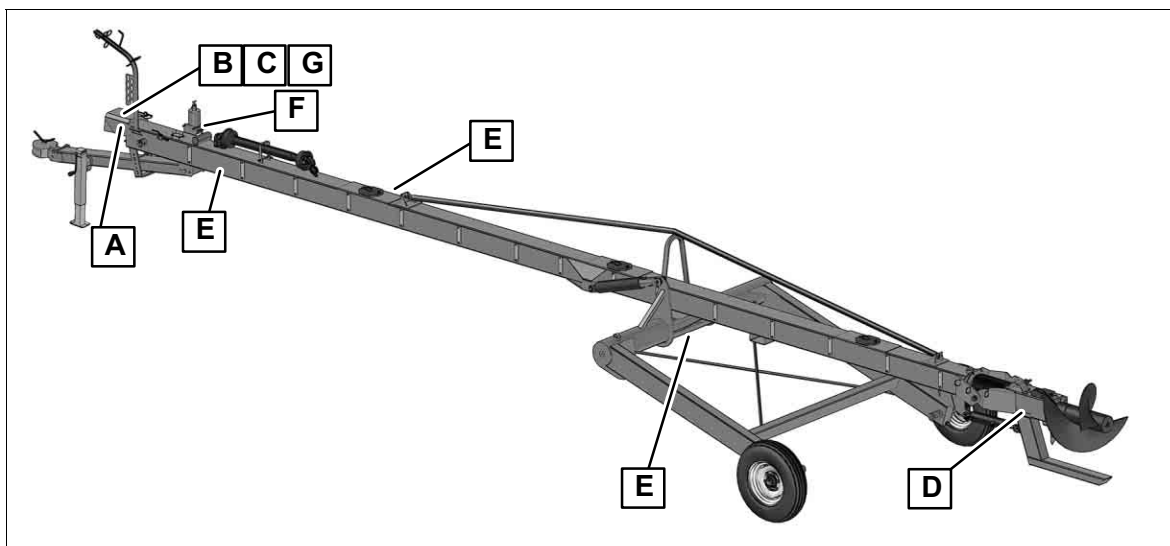

11.4 Final decommissioning/disposal

After final decommissioning, handle all components properly and dispose of them in accordance with your valid local rules and regulations on waste disposal. Recycle if possible.

12 Appendix

12.1 Label position



A	 ⚠ DANGER TOXIC GASES HAZARDOUS PRESSURES MAY BE CREATED FROM GAS FLOWING FROM OR THROUGH COMPONENTS AFTER USE OR DURING REPAIRS GAS TIGHTNESS ALWAYS ENSURE ALL GASES ARE PROPERLY VENTED TO THE OUTSIDE OF THE MACHINE. NEVER USE THE MACHINE IN A CLOSED AREA. 2009-4720-010	B	 ⚠ DANGER ROTATING DRIVELINE. KEEP AWAY! ARRÊTÉ DE COMMANDE ROTATIF. GARDÉZ VOS DISTANCES! 2099-4720-020
C	 US  EU 2099-4721-020 2099-4725-100	D	 US 2010-4701-590
E	 US / EU 2003-4701-240	F	 US / EU 2099-4725-310
G	 US / EU 2010-4703-430		


12.2 Abbreviations

Terms	Explanation	Terms	Explanation
@	at	Ø	diameter
EC	European Community	CW	clockwise
CCW	counterclockwise	fax	facsimile
I.D.	inside diameter	Inc.	Incorporated
NC	national coarse	O.D.	outside diameter
PTO	power take off	PVC	polyvinyl chloride
QC	Quebec	SAE	Society of Automotive Engineers
USA	United States of America	WWW	World Wide Web


Units	Explanation	Units	Explanation
A	ampere	kg	kilogram
AC	alternative current	kPa	kilopascal
cm	centimeter	kW	kilowatt
°	degree	km/h	kilometres per hour
°C	degree Celsius	lpm	liter per minute
°F	degree Fahrenheit	lb	pound
DC	direct current	m	meter
ft	foot	min	minute
ft-lb	foot-pound	mph	miles per hour
gal	gallon	mm	millimeter
gpm	gallons per minute	NM	newton meter
HP	horsepower	psi	pounds per square inch
hr	hour	RPM	revolutions per minute
Hz	hertz	s	second
in.	inch	v	volt

12.3 Hydraulic diagrams


12.3.1 Hydraulic diagram of a Lagoon Agitator with standard undercarriage

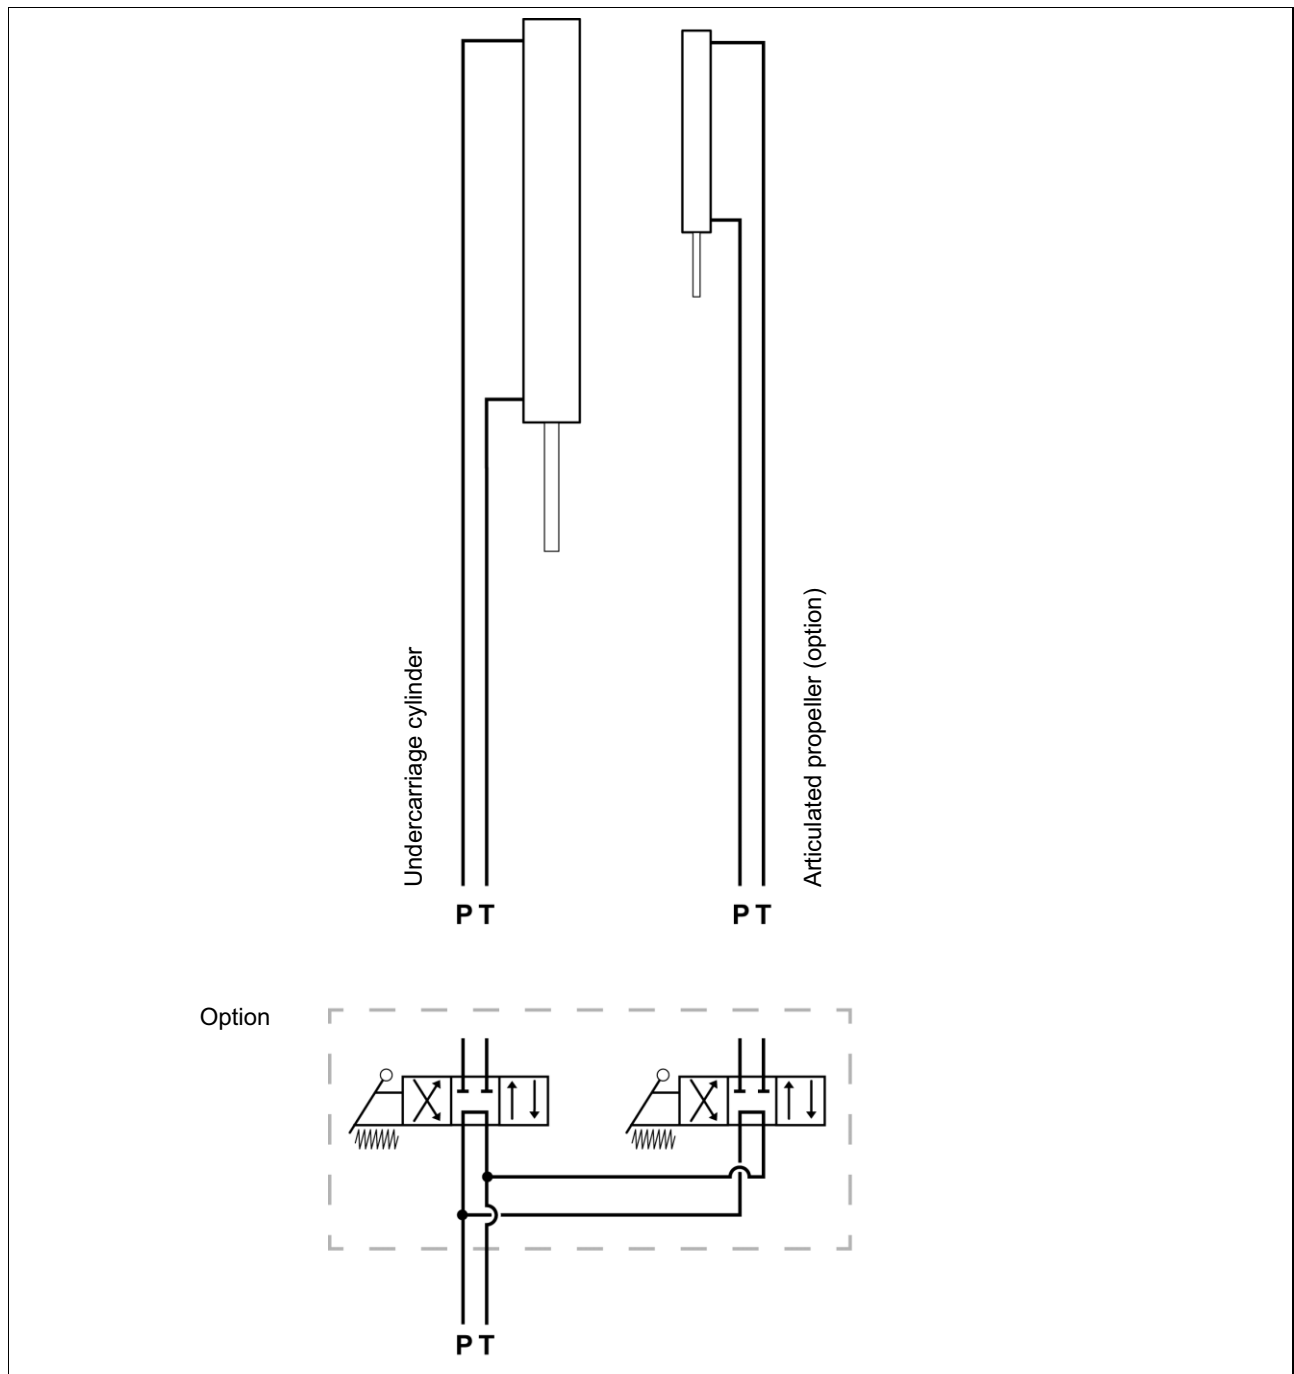

12.3.2 Hydraulic diagram of a Lagoon Agitator with heavy-duty undercarriage

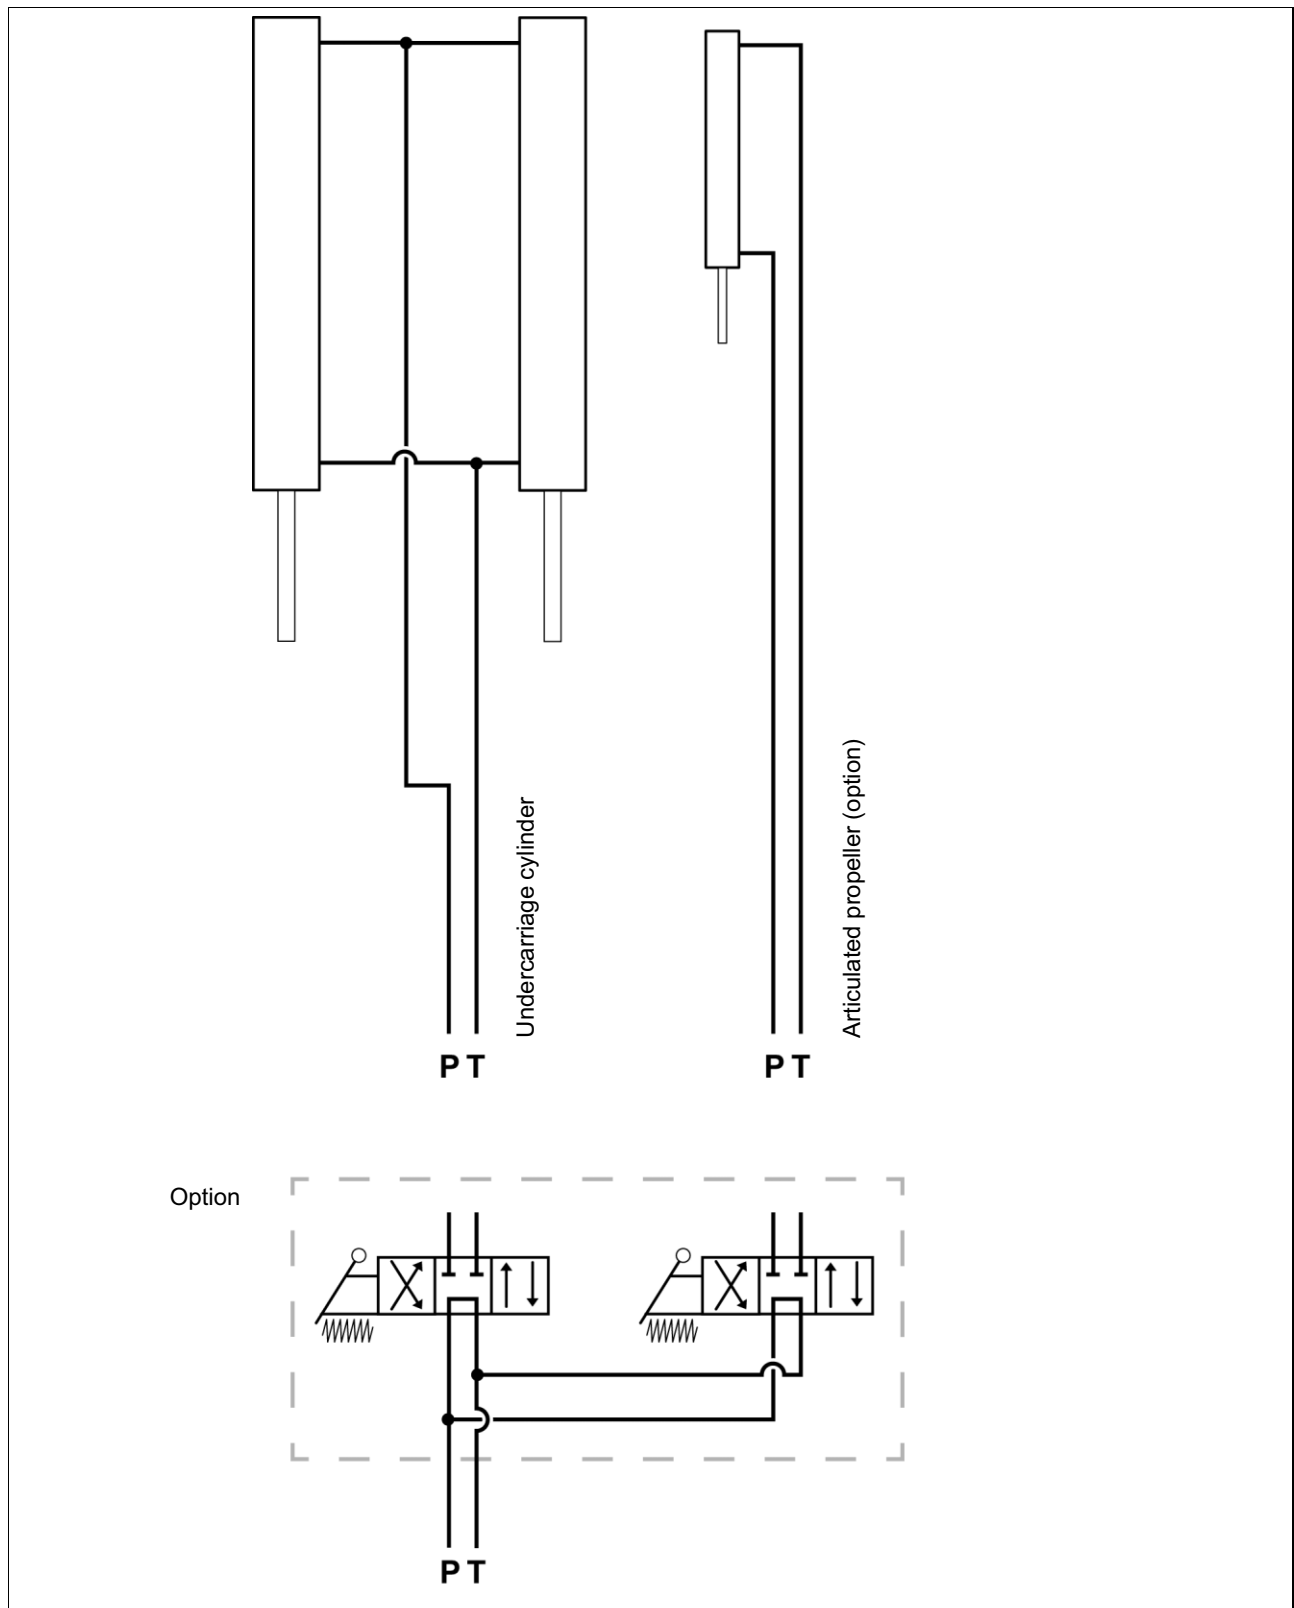

12.3.3 Hydraulic diagram of a Lagoon Agitator with multipurpose undercarriage

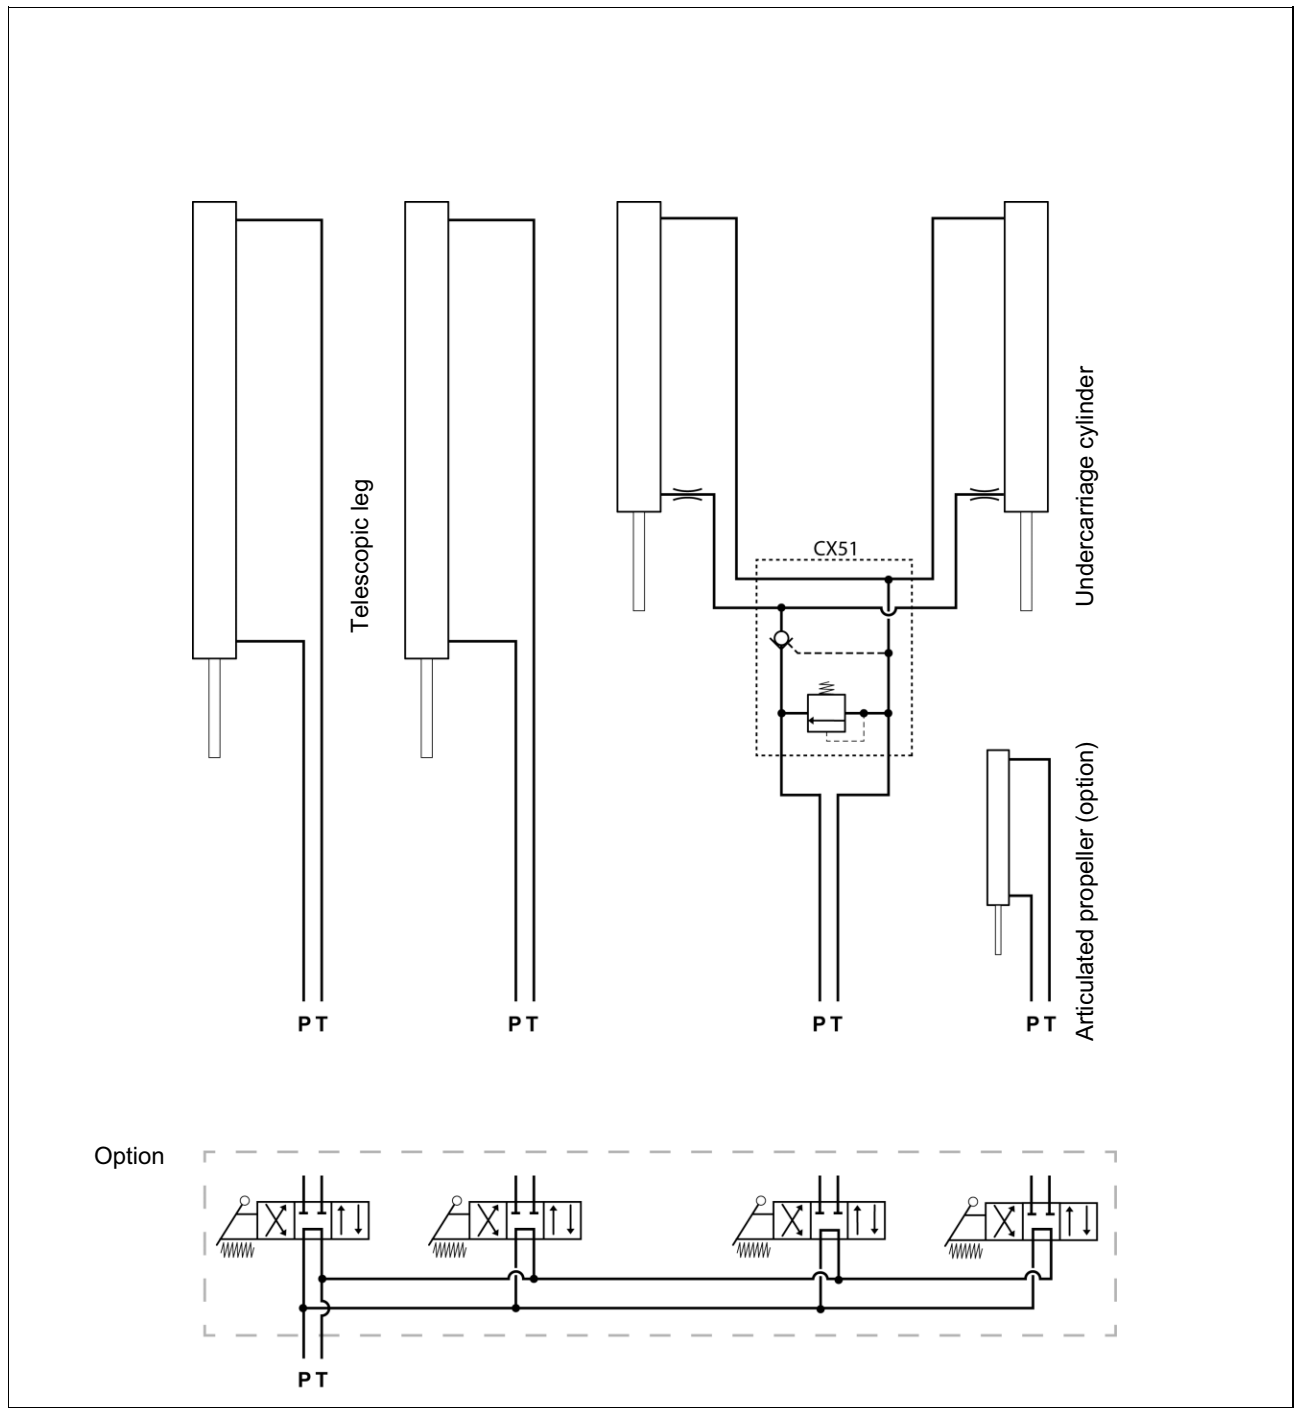



We live our values.

Excellence • Passion • Integrity • Responsibility • GEA-versity

GEA Group is a global engineering company with multi-billion euro sales and operations in more than 50 countries. Founded in 1881, the company is one of the largest providers of innovative equipment and process technology. GEA Group is listed in the STOXX® Europe 600 index.

GEA Farm Technologies Canada Inc. / Division GEA Houle

4591 boul. St-Joseph, Drummondville, Qc, J2A 0C6
☎ +1 819 477 - 7444, 📠 +1 819 477 - 5565
www.gea-farmtechnologies.com

We reserve the right to modify the construction and design in all cases!

2010-9015-017 04-2015