

OPERATING INSTRUCTIONS

Translation from the original language



Hygienic valves

GEAVARIVENT® valve type L with lifting actuator, suitable for pigging operation

GEA Tuchenhausen GmbH
Document number:
Language: EN / Date: 2016-08

Product	Mixproof Valve L with Lifting Actuator, suitable for pigging operation
Document	Operating Instructions Edition 26/08/2016 English
Manufacturer	<p>GEA Tuchenhausen GmbH Am Industriepark 2-10 D-21514 Büchen Phone: +49 4155 49-0 Fax: +49 4155 49-2423 Mail: sales.geatuchenhausen@gea.com Web: http://www.tuchenhausen.com</p> <p>This document is protected by copyright. All rights reserved. The document may not, in whole or in part, be copied, reproduced, translated or reduced to an electronic medium of machine-readable form without the express permission of GEA Tuchenhausen GmbH.</p>
Wordmarks	The designations VARIVENT [®] and T.VIS [®] are protected trademarks of GEA Tuchenhausen GmbH.

Table of Contents

Notes for the Reader	6
Binding Character of These Operating Instructions	6
Notes on the Illustrations	6
Symbols and Highlighting	7
Abbreviations and Terms	8
Safety	10
Safety Note	10
Operator's Duties	10
Qualification of Staff	11
Supplementary Regulations	12
Instructions for the Safe Operation	13
• General Principles	13
• Installation	13
• Commissioning/Setup Mode	14
• Setting into Operation	14
• Operation	14
• Shutting Down	15
• Maintenance and Repair	15
• Disassembly	16
• Environmental Protection	16
• Electrical Equipment	16
Signage	17
Residual Risk	18
• Hazard Areas	18
• Residual Dangers	19
• Declaration of Conformity	20
Transport and Storage	21
Scope of Supply	21
Transport	21
Storage	22
Intended Purpose	23
Designated Use	23
Requirements for the Operation	23
Pressure Equipment Directive	23
ATEX Directive	23
Improper Operating Conditions	24
Conversion Work	24
Design and Function	25
Design	25
Leakage-Proof Shut-Off	26
• Introduction	26
• Cleaning	26
• CIP Solution	26
Installation and Commissioning	27
Notes on Installation	27

Control Module	27
Valve with Detachable Pipe Connection Elements	27
Valve with Welding Ends	28
Pneumatic Connections	29
• Air Requirement	29
• Establishing Hose Connections	29
• Hosing Diagram	30
Electrical Connections	31
Commissioning	31
Cleaning and Passivation	32
Cleaning	32
• Cleaning process examples	32
• Cleaning effect	32
• Cleaning of the leakage outlet system	33
Passivation	33
Malfunctions	34
Maintenance	35
Inspections	35
• Product Contact Seals	35
• Pneumatic Connections	35
• Electrical Connections	35
Maintenance Intervals	36
Prior to dismantling the Valve	36
Disassembling the Valve	37
• Removing the Control Module	37
• Disconnecting the Valve from the Housing	39
• Separating the Valve Insert from the Actuator	40
• Dismantling the Lifting Actuator	41
Maintenance	42
• Cleaning the Valve	42
• Replacing Seals	43
• Lubricating Seals and Threads	46
Assembling the Valve	47
• Assembling the Lifting Actuator	47
• Equipping the Double-Disk	48
• Assembling the Actuators	49
• Fitting the Valve into the Housing	50
• Torques for the Clamps and Clamp joint	51
• Checking the Function	51
Disposal	52
• General Notes	52
• Valve Actuator Disposal	52

Technical Data	53
Type Plate	53
Technical Data	53
Cleaning Connection	55
Resistance of Sealing Materials	56
Pipe Ends	57
Tools	57
Lubricants	58
Weights	58
 Spare Parts Lists	 59
 Dimension Sheets.....	 73

Notes for the Reader

The present Operating Instructions are part of the user information for the valve. The Operating Instructions contain all the information you need to transport, install, commission, operate and carry out maintenance for the valve.

Binding Character of These Operating Instructions

These Operating Instructions contain the manufacturer's instructions to the owner of the valve and to all persons who work on or use the valve regarding the procedures to follow.

Carefully read these Operating Instructions before starting any work on or using the valve. Your personal safety and the safety of the valve can only be ensured if you act as described in the Operating Instructions.

Store the Operating Instructions in such a way that they are accessible to the owner and the operating staff during the entire life cycle of the valve. When the location is changed or the valve is sold make sure you also provide the Operating Instructions.

Notes on the Illustrations

The illustrations in these Operating Instructions show the valve in a simplified form. The actual design of the valve can differ from the illustration. For detailed views and dimensions of the valve please refer to the design documents.

Symbols and Highlighting

In these Operating Instructions, important information is highlighted by symbols or special formatting. The following examples illustrate the most important types of highlighting.



DANGER

Warning: Fatal Injuries.

Failure to observe the warning can cause serious damage to health, or even death.

→ The arrow identifies a precautionary measure you have to take to avoid the hazard.



EXPLOSION HAZARD

Warning: Explosions.

Failure to observe the warning may result in a severe explosion.

→ The arrow identifies a precautionary measure you have to take to avoid the hazard.



WARNING

Warning: Serious Injuries.

Failure to observe the warning note can result in serious damage to health.

→ The arrow identifies a precautionary measure you have to take to avoid the hazard.



CAUTION

Warning: Injuries.

Failure to observe the warning note can result in minor or moderate damage to health.

→ The arrow identifies a precautionary measure you have to take to avoid the hazard.

IMPORTANT NOTE

Warning: Damage to Property.

Non-observance of the warning note can cause serious damage to the valve or the vicinity of the valve.

→ The arrow identifies a precautionary measure you have to take to avoid the hazard.

Carry out the following steps: = Start of a set of instructions.

1. First step in a sequence of operations.
2. Second step in a sequence of operations.
 - Result of the previous operation.

✓ The operation is complete, the goal has been achieved.

NOTE

Further useful information.

Abbreviations and Terms

Abbreviation	Explanation
a/f	Indicates the size of spanners width across flats
approx.	approximately
BS	British Standard
bar	Unit of measurement of pressure [bar] All pressure ratings [bar/psi] stand for over pressure [bar _g /psi _g] if this is not explicitly described differently.
Cv value	flow coefficient [US gallons per minute] 1 Cv = 1,17 x Kv
°C	Unit of measurement of temperature [degree Celsius]
dm ³ _n	Unit of measurement of volume [cubic decimetre] Volume (litre) at standard temperature and pressure
DN	DIN nominal width
DIN	German standard issued by DIN (Deutsches Institut für Normung e.V., German Institute for Standardization)
EN	European Standard
EPDM	Material designation Short designation according to DIN/ISO 1629: Ethylene Propylene Diene Rubber
°F	Unit of measurement of temperature [degree Fahrenheit]
FKM	Material designation, short designation according to DIN/ISO 1629: Fluorine rubber
h	Unit of measurement of time [hour}
HNBR	Material designation Short designation according to DIN/ISO 1629: Hydrogenated Acrylonitrile Butadiene Rubber
IP	Protection class
Inch	Unit of measurement of length [inch]
Inch OD	Pipe dimension acc. to British standard (BS), Outside Diameter
Inch IPS	US pipe dimension Iron Pipe Size
ISO	International standard issued by the International Organization for Standardization
kg	Unit of measurement of weight [kilogram]

Abbreviation	Explanation
kN	Unit of measurement of force [kilonewton]
L	Unit of measurement of volume [litre]
max.	maximum
mm	Unit of measurement of length [millimetre]
µm	Unit of measurement of length [micrometre]
M	metric
Nm	Unit of measurement of work [newton metre] UNIT OF TORQUE 1 Nm = 0.737 lbft Pound-Force (lb) + Feet (ft)
PA	Polyamide
PE-LD	Low-density polyethylene
psi	Anglo-American Unit of measurement of pressure [Pound-force per square inch] All pressure ratings [bar/psi] stand for over pressure [bar _g /psi _g] if this is not explicitly described differently.
SET-UP	Self-learning installation During commissioning and maintenance, the SET-UP procedure carries out all the necessary settings for the generation of messages.
TIG	Welding method Tungsten inert gas welding
T.VIS	Tuchenhagen Valve Information System
V AC	Volt alternating current
V DC	Volt direct current
W	Unit of measurement of power [Watt]

EU Declaration of conformity within the meaning of the EC machine directive 2006/42/EC

Manufacturer: **GEA Tuchenhausen GmbH**
Am Industriepark 2-10
21514 Büchen, Germany

Hereby, we declare that the machine designated in the following

Designation: Valve with acuator

Type: VARIVENT® / ECOVENT®

by virtue of its design and construction and in the versions placed on the market by us, complies with the essential health and safety requirements of the following directive:

Relevant EC directives: 2006/42/EC EC Machinery Directive

Applicable harmonized standards, in particular: EN ISO 12100: 2010


Remarks:

- In the event of a modification to the machine that was not agreed with us, this declaration loses its validity
- Furthermore, we declare that the specific technical documentation for this machine has been drawn up in accordance with Annex VII, Part A, and undertake to forward this documentation by means of data medium upon justified request by the national authorities


Person authorised for compilation and handover of technical documentation:

GEA Tuchenhausen GmbH
Am Industriepark 2-10
21514 Büchen, Germany

Büchen, 18 July 2025



Sören de Boon
Senior Vice President
Business Unit Valves & Pumps



i.V. Stephan Dirks
Senior Director Product Engineering & Development
Business Line Hygienic Valves/ BU Valves & Pumps

UK- Declaration of conformity by Supply of Machinery (Safety) Regulations 2008

Manufacturer: **GEA Tuchenhausen GmbH**
Am Industriepark 2-10
21514 Büchen, Germany

Hereby, we declare that the machine designated in the following

Designation: Valve with actuator

Type: VARIVENT® / ECOVENT®

by virtue of its design and construction and in the versions placed on the market by us, complies with the essential health and safety requirements of the following directive:

Relevant UK legislation: Supply of Machinery (Safety) Regulations 2008

Applicable harmonized standards, in particular: EN ISO 12100: 2010

Remarks:

- In the event of a modification to the machine that was not agreed with us, this declaration loses its validity
- Furthermore, we declare that the specific technical documentation for this machine has been drawn up in accordance with Annex VII, Part A, and undertake to forward this documentation by means of data medium upon justified request by the national authorities


GEA Importer into UK


GEA Mechanical Equipment UK Ltd.
Westfalia House
Old Wolverton Road, Old Wolverton, Milton Keynes
MK12 5PY, United Kingdom

Person authorised for compilation and handover of technical documentation:

Mike Kiely
GEA Mechanical Equipment UK Ltd.
Westfalia House
Old Wolverton Road, Old Wolverton, Milton Keynes
MK12 5PY, United Kingdom

Büchen, 23 July 2025


Sören de Boon
Senior Vice President
Business Unit Valves & Pumps

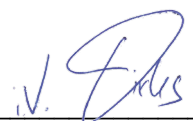
i.V. Stephan Dirks
Senior Director Product Engineering & Development
Business Line Hygienic Valves/ BU Valves & Pumps

Safety

Safety Note

The valve is operationally reliable. It was built according to state-of-the art standards.

Nevertheless, the valve can pose dangers, especially if

- the valve is not used in accordance with its intended use,
- the valve is not used correctly,
- the valve is operated under impermissible operating conditions.

Operator's Duties

In your capacity as operator of the facility you bear a particular responsibility for the proper and safe handling of the valve in your facility. Only use the valve when it is in perfect condition to prevent danger to persons and property.

These Operating Instructions contain the information you and your staff need for the safe and reliable operation during the entire service life of the valve. Be sure to read these Operating Instructions carefully and ensure that the measures described here are observed.

The operator's duty of care includes planning the necessary safety measures and monitoring that these measures are observed. The following principles apply:

- Only allow qualified staff to work on the valve.
- The operator must authorize the staff to carry out the relevant tasks.
- Working areas and the entire environment of the valve must be neat and clean.
- The staff must wear suitable work clothing and personal protective equipment. As the operator of the facility make sure that work clothing and personal protective equipment are used.
- Instruct the staff with regard to any properties of the product which might pose a health risk and the preventative measures to be taken.
- Have a qualified first-aider on call during the operation, who can initiate the necessary first-aid measures in case of an emergency.
- Clearly define processes, lines of authority and responsibilities associated with the valve. Everybody must know what to do in case of an emergency. Instruct the staff in this respect at regular intervals.
- The signs relating to the valve must always be complete and legible. Check, clean and replace the signs as necessary at regular intervals.

NOTE

Carry out regular checks. This way you can ensure that these measures are actually observed.

Qualification of Staff

This section contains information about the qualifications that staff working on the valve must have.

Operating and maintenance staff must

- have the necessary qualification to carry out their tasks,
- be instructed with regard to possible dangers,
- know and observe the safety instructions given in the documentation.

Only allow qualified electricians to carry out work on the electrical equipment or have a qualified electrician supervise the work.

Only allow specially trained staff to carry out any work on explosion-protected equipment. When working on explosion-protected equipment observe the standards DIN EN 60079-14 for gases and DIN EN 50281-1-2 for dusts.

The following minimum qualifications are required:

- Vocational training as a specialist who can work on the valve independently.
- Sufficient instruction to work on the valve under the supervision and direction of a qualified specialist.

Each member of staff must meet the following requirements to be allowed to work on the valve:

- Personal qualification for the relevant task.
- Sufficient professional qualification for the relevant task.
- Instructed with regard to the function of the valve.
- Instructed with regard to the operating sequences of the valve.
- Familiar with the safety devices and their function.
- Familiar with these Operating Instructions, especially with the safety instructions and the information which is relevant for the task on hand.
- Familiar with the basic regulations with regard to occupational health and safety and accident prevention.

For work to be carried out on the valve the following user groups are distinguished:

User groups

Staff	Qualifications
Operating staff	<p>Adequate instruction and sound knowledge in the following areas:</p> <ul style="list-style-type: none"> • Function of the valve • Valve operating sequences • What to do in case of an emergency • Lines of authority and responsibilities with respect to the task.
Maintenance staff	<p>Adequate instruction as well as sound knowledge of the design and function of the valve.</p> <p>Sound knowledge in the following areas:</p> <ul style="list-style-type: none"> • Mechanical equipment • Electrical equipment • Pneumatic system <p>Authorization with regard to safety engineering standards to carry out the following tasks:</p> <ul style="list-style-type: none"> • Setting devices into operation • Earthing of devices • Marking of devices <p>The relevant certificates of qualification must be submitted before work can be carried out on ATEX certified machines.</p>

Supplementary Regulations

In addition to the instructions in this documentation the following also has to be observed:

- pertinent accident prevention regulations,
- generally accepted safety rules,
- national regulations applicable in the country of use,
- work and safety instructions applicable in the facility,
- installation and operating regulations for use in potentially explosive areas.

Instructions for the Safe Operation

Dangerous situations during the operation can be avoided by safety-conscious and proactive behaviour of the staff.

General Principles

To ensure the safe operation of the valve the following principles apply:

- The Operating Instructions must be kept ready to hand at the valve's place of use. It must be complete and in clearly legible form.
- Only use the valve for its intended use.
- The valve must be functional and in good working order. Check the condition of the valve before starting work and at regular intervals.
- Wear tight-fitting work clothing for all work on the valve.
- Ensure that nobody can get hurt on the parts of the valve.
- Immediately report any faults or noticeable changes on the valve to the person responsible.
- Observe the accident prevention regulations and all local regulations.

Installation

For installation, the following principles apply:

- Only properly qualified staff is allowed to install, assemble and set the valve into operation.
- Ensure that adequate working and traffic areas are available at the place of installation.
- Observe the maximum load-bearing capacity of the installation surface.
- Observe the transport instructions and markings on the part(s) to be transported.
- Remove any nails protruding from transport crates immediately after opening the crate.
- Under no circumstances should anyone stand under a suspended load.
- During assembly, the valve safety devices might not be working effectively.
- Reliably secure machine parts which have already been connected against inadvertently being switched on.

Commissioning/Setup Mode

For commissioning, the following principles apply:

- Take protective measures against dangerous contact voltages in accordance with pertinent regulations.
- The valve must be completely assembled and correctly adjusted. All screw connections must be securely tightened. All electrical cables must be installed correctly.
- Reliably secure machine parts which have already been connected against inadvertently being switched on.
- Relubricate all lubricating points.
- Make sure lubricants are used properly.
- After conversion of the valve, residual risks must be reassessed.

Setting into Operation

For setting into operation, the following principles apply:

- Only allow properly qualified staff to set the valve into operation.
- Establish all connections correctly.
- The safety devices for the valve must be complete, fully functional and in perfect condition. Check the function before starting any work.
- When the valve is switched on, the danger zones must be free.
- Remove any liquids that have escaped without leaving residues.

Operation

For operation, the following principles apply.

- Monitor the valve during the operation.
- Safety devices must not be changed, removed or taken out of service. Check all safety devices at regular intervals.
- All guards and hoods must be fitted as intended.
- The place of installation of the valve must be adequately ventilated at all times.
- Structural alterations of the valve are not permitted. Immediately report any changes on the valve to the person responsible.
- Always keep danger zones clear. Do not leave any objects in the danger zone. Only allow persons to enter the danger zone when the machine is de-energized.
- Regularly check that all emergency stop devices are working correctly.

Shutting Down

For shutting down, the following principles apply:

- Switch off the compressed air.
- Switch off the valve via the main switch.
- Padlock the main switch (if fitted) in the off position to prevent it from being switched back on. The key to the padlock must be deposited with the person responsible until the machine is restarted.
- For longer periods of standstill, observe the storage conditions, see Storage (Page 22).

Maintenance and Repair

Before starting any maintenance and repair work on the electrical devices of the valve, carry out the following steps in accordance with the "5 safety rules":

- Isolate from the power supply
- Take appropriate measures to prevent switch on
- Test absence of voltage
- Earthing and short-circuiting
- Cover or safeguard any adjacent live parts.

For maintenance and repair, the following principles apply:

- Observe the intervals specified in the maintenance schedule.
- Only allow qualified staff to carry out maintenance or repair work on the valve.
- Before starting any maintenance or repair work, the valve must be switched off and secured against being switched back on. Work may only be started once any residual energy has been discharged.
- Block access for unauthorized persons. Put up notice signs which draw attention to the maintenance or repair work going on.
- Do not climb on the valve. Use suitable access aids and working platforms.
- Wear suitable protective clothing.
- Only use suitable and undamaged tools to carry out maintenance work.
- When replacing parts only use approved, fully functional load lifting devices and lifting accessories which are suitable for the intended purpose.
- Before setting the valve back into operation refit all safety devices as originally provided in the factory. Then check that all safety devices are working correctly.
- Make sure lubricants are used properly.
- Check pipes are firmly secured, also check for leaks and damage.
- Check that all emergency stop devices are working correctly.

Disassembly

For disassembly, the following principles apply:

- Only allow qualified staff to disassemble the valve.
- Before starting disassembly, the valve must be switched off and secured against being switched back on. Work may only be started once any residual energy has been discharged.
- Disconnect all power and utility lines.
- Markings, e.g. on lines, must not be removed.
- Do not climb on the valve. Use suitable access aids and working platforms.
- Mark the lines (if unmarked) prior to disassembly to ensure they are not confused when re-assembling.
- Protect open line ends with blind plugs against ingress of dirt.
- Pack sensitive parts separately.
- For longer periods of standstill, observe the storage conditions, see "Storage" (Page 22).

Environmental Protection

Harm to the environment can be avoided by safety-conscious and proactive behaviour of the staff.

For environmental protection the following principles apply:

- Substances harmful to the environment must not be discharged into the ground or the sewage system.
- Always observe the pertinent regulations relating to waste avoidance, disposal and utilization.
- Substances harmful to the environment must be collected and stored in suitable containers. Clearly mark the containers.
- Dispose of lubricants as hazardous waste.

Electrical Equipment

For all work on electrical equipment, the following principles apply:




- Access to electrical equipment should only be allowed to qualified electricians. Always keep unattended switch cabinets locked.
- Modifications of the control system can affect the safe and reliable operation. Modifications are only permitted after the express permission of the manufacturer.
- After completion of all work, check that the protective devices are fully functional.

Signage

Dangerous points on the valve are indicated by warning signs, prohibition signs and mandatory signs.


The signs and notes on the valve must always be legible. Any illegible signs must be replaced immediately.

Signs on the valve

Sign	Meaning
	General hazard warning
	Warning Crushing
	Explosive atmosphere hazard warning

Residual Risk

Hazard Areas

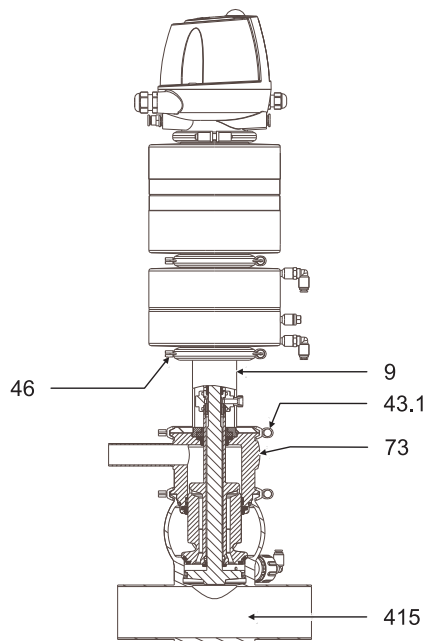

Please observe the following notes:

- In the event of malfunctions, shut down the valve (disconnect from the power and air supply) and secure it against being used.
- Never reach into the lantern (9) or the valve housing (415) when the valve is switching. Fingers can be crushed or cut off.
- On a spring-closing valve there is danger of injury when the clamp joint (46) are opened as the released spring pretension will suddenly lift the actuator. Therefore, release the spring tension before detaching the clamp joint (46) by supplying the actuator (A) with compressed air.
- Before starting any service, maintenance or repair work, disconnect the valve from the power supply and secure it against inadvertently being switched back on again.
- Only allow a qualified electrician to carry out any work on the electrical power supply.
- Check the electrical equipment of the valve at regular intervals. Immediately remedy loose connections and molten cables.
- If work on live parts cannot be avoided, call in a second person, who can operate the main switch in case of an emergency.
- The housing sockets have very sharp edges. When transporting and assembling the valve be sure to wear suitable protective gloves.

Residual Dangers

Dangerous situations can be avoided by safety-conscious and proactive behaviour of the staff and by wearing personal protective equipment.

Residual dangers on the valve and measures

Danger	Cause	Measure
Danger to life	Inadvertent switch-on of the valve	Effectively disconnect all components, effectively prevent switch-on.
	Electric power	Observe the following safety rules: 1 Isolate from the power supply. 2 Take appropriate measures to prevent switch on. 3 Test absence of voltage. 4 Earthing and short-circuiting. 5 Cover or safeguard any adjacent live parts.
	Spring tension in the actuator	Danger to life caused by compression spring in the actuator. Do not open the actuator but return it to GEA Tuchenhausen for proper disposal.
Danger of injury	Danger presented by moving or sharp-edged parts	The operator must exercise caution and prudence. For all work: <ul style="list-style-type: none"> • Wear suitable work clothing. • Never operate the machine if the cover panels are not correctly fitted. • Never open the cover panels during the operation. • Never reach into openings. As a precautionary measure, wear personal protective equipment in the vicinity of the valve: <ul style="list-style-type: none"> • Protective gloves • Safety shoes
Environmental damage	Operating materials with properties which are harmful to the environment	For all work: <ul style="list-style-type: none"> • Collect lubricants in suitable containers. • Dispose of lubricants in accordance with the pertinent regulations.

Declaration of Conformity

Declaration of Conformity

in accordance with the EC Machinery Directive 2006/42/EC

We hereby declare that the machine designated as follows, based on its design and type as well as in the version brought by us to market, complies with the basic safety and health protection requirements of the EU- machine directive.

This declaration will become invalid if any alterations are made to the machine which have not been agreed with us.

Designation of the machine:	Valve with drive
Machine type:	VARIVENT®
Relevant EU directives	2006/42/EC
Applicable harmonized standards:	DIN EN ISO 12100

Authorised representative for compilation of the technical documentation	Authorised representative – CE documentation GEA Tuchenhausen GmbH Am Industriepark 2-10 21514 Büchen
---	---

Büchen, 16/02/2015

Franz Bürmann Managing Director	i.V. Matthias Südel Team Leader Product Development
------------------------------------	--


Transport and Storage

Scope of Supply

On receipt of the valve check whether

- the details on the type plate correspond to the data in the order and delivery documents,
- the equipment is complete and all components are in good order.

Transport

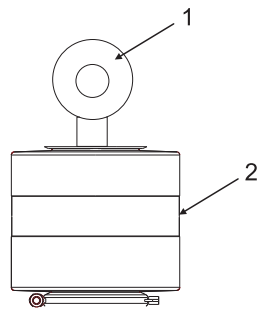

For transport, the following principles apply:

- For transportation and installation of the valve, it is imperative to remove the control top and the valve stem and to use the screwed-in eye bolt (4), part no. 221-104.98 for lifting the valve.
- Only use suitable lifting gear and slings for transporting the package units/valves.
- Observe the pictograms on the package.
- Handle valves with care to avoid damaged caused by impact or careless onloading and unloading. The outside synthetic materials are susceptible to breaking.
- The control modules must be protected from animal and vegetable fats.
- Only allow qualified staff to transport the valve.
- Movable parts must be properly secured.
- Only use approved, fully functional load lifting devices and lifting accessories which are suitable for the intended purpose. Observe the maximum load-bearing capacities.
- Secure the valve against slipping. Take the weight of the valve into account and the position of the point of gravity.
- Under no circumstances should anyone stand under a suspended load.
- Take care when transporting the valve. Do not grip sensitive parts of the valve to lift or push the valve or support yourself. Avoid putting the valve down with a jerk.

Storage

Valves, valve inserts or spare parts should be stored in a dry place, free of vibrations and dust. To avoid damage, leave the components in their original packaging if possible.

If, during transport or storage, the valve is going to be exposed to temperatures $\leq 0^{\circ}\text{C}$, it must be dried and suitable measures be taken to protect it from damage.

NOTE

We recommend that the valve should be stored at a temperature of $\geq 5^{\circ}\text{C}$ for a period of 24 hours prior to any handling (disassembling the housings / activation of actuators) so that any ice crystals formed by condensation water can melt.

Intended Purpose

Designated Use

The Mixproof Valves Type L_H and L_S are used for the mixproof separation of different media at intersection points in pipe systems with one housing suitable for pigging (L_H = upper housing; L_S = lower housing).

NOTE

The manufacturer will not accept any liability for damage resulting from any use of the valve which is not in accordance with the designated use of the valve. The risk of such misuse lies entirely with the operator of the facility.

Requirements for the Operation

The prerequisite for the reliable and safe operation of the valve is proper transportation and storage as well as professional installation and assembly. Operating the valve within the limits of its designated use also involves adhering to the operating, inspection and maintenance instructions.

Pressure Equipment Directive

The valves type L_H and L_S are pressure equipment (without safety function) in the sense of the pressure equipment directive: Directive 97/23/EC. They are classified according to Annex II, article 3, section 3. In the event of any deviations, GEA Tuchen-hagen GmbH will supply a special Declaration of Conformity.

ATEX Directive

If valves type L_H and L_S are used in areas with a potentially explosive atmosphere, you must absolutely comply with directive 94/9/EC with respect to all ignition hazards. The supplementary "EX" operating instructions for ECOVENT valves must be observed.

For details regarding the marking of valves for potentially explosive areas refer to the additional "Ex" operating instructions for VARIVENT valves.

Improper Operating Conditions

The operational reliability of the valve cannot be ensured under improper operating conditions. Therefore avoid improper operating conditions.

Operating the valves is not permitted if

- Persons or objects are in the danger zone.
- Safety devices are not working or were removed.
- Malfunctions have been detected on the valve.
- Damage has been detected on the valve.
- Maintenance intervals have been exceeded.


Conversion Work

You should never make any technical modifications to the valve. Otherwise you will have to undergo a new conformity process in accordance with the EC Machinery Directive on your own.

In general, only original spare parts supplied by GEA Tuchenhausen GmbH should be fitted. This ensures the reliable and economical operation of the valve.

Design and Function

Design

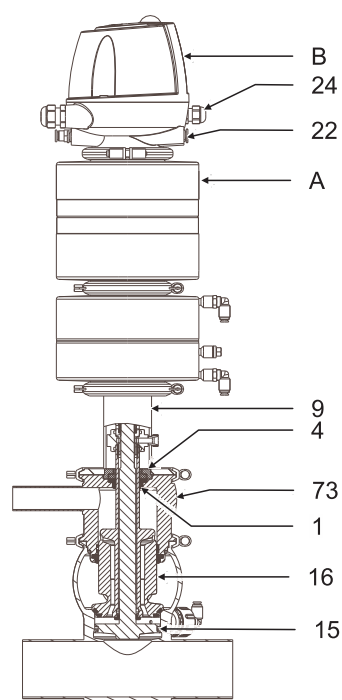

No.	Designation
A	Actuator
B	T.VIS control module
1	Sealing ring
4	Bearing disk
9	Lantern
15	Valve disk
16	Double-disk
22	Air connection
24	Electrical connection
73	Leakage housing

Leakage-Proof Shut-Off

Introduction

On valve LH and LS, the tank and the valve housing are each closed off by a valve seat. The chamber between the two valve disks is connected to the open environment by the double-disk (16) and the leakage housing (73). In the event of seal damage, the leaking fluid can safely flow into the open. Defective seals can thus easily be detected. Any penetration of fluids from the tank into the pipe or vice-versa is excluded under normal operating conditions.

Cleaning

CIP solution is introduced into the leakage outlet system through a separate CIP connection (11) integrated in the lantern.

The CIP solution is then sprayed through a cleaning nozzle into the chamber between the two valve disks. The used solution drains into the open by gravity via the double-disk and the outlet pipe of the leakage housing. Cleaning of the leakage outlet system can take place independently of the opening or closing position of the valve.

CIP Solution

Supplied from a CIP supply station

Key data of the CIP solution

- Operating pressure: min. 2 bar (29 psi) , max. 5 bar (72,5 psi)
- Operating temperature: max. 135 °C

Installation and Commissioning

Notes on Installation

Valve types L_HC/L_HL are installed in suspended position, valve types L_SC/LSL in standing position. Care must be taken to ensure that the valve housing, the pipe system and the leakage cavity can drain properly.

To prevent damage, make sure that

- the valve is installed in the pipe system free of tension and
- no foreign materials (e.g. tools, bolts, lubricants) are left in the system.

Control Module

If external valves are connected to a control module with several solenoid valves, make sure that the air supply pressure in the main actuator does not fall below the operating point.

Valve with Detachable Pipe Connection Elements

This section describes the procedure to fit the valve.



CAUTION

Liquids in pipes

Danger of injury due to liquid spraying out

- ➔ Therefore, before releasing any pipe connections or clamp joint: drain the pipe and, if necessary, clean or rinse it.
- ➔ Separate the pipe section in which the valve is to be fitted from the rest of the piping system to prevent product entering again.

Carry out the following steps:

- ➔ Fit valves with detachable pipe connection elements – using suitable connection fittings – directly into the pipe system.

✓ Done

Valve with Welding Ends

This section describes the welding procedure for the valve.



WARNING

Spring tension in the valve

Danger of injury when opening the clamp joint at the actuator or at the housing as the released spring pretension will suddenly lift the actuator.

- Therefore, release the spring tension before detaching the clamp joint by pressurizing the actuator with compressed air at max. 10 bar.

IMPORTANT NOTE

Seals are wearing parts

Old seals will cause malfunction of the valve

- When fitting the valve be sure to fit new housing O-rings.

Carry out the following steps:

1. Release the spring tension.
2. Remove the valve insert, see chapter "Disassembling the Valve" (Page 37).
3. Fit the housing without sealing rings.
4. Fit the housing into place and tack it.
5. Always close the housing before welding.
6. Flush the housing with forming gas from the inside to push the oxygen out of the system.
7. Weld the housing into the pipe system; use welding filler if necessary. Use the TIG welding with pulse method.
8. Passivate the seam after welding.
9. Fit the seals.
10. Assemble the valve and depressurize the actuator.
 - The valve disk is lowered.

✓ Done

Pneumatic Connections

Air Requirement

For valve types L_HL / L_HC / L_SC / L_SL

Actuator type	Size	Air requirement (dm ³ _n /stroke) dm ³ _n at 1.01325 bar at 0°C as per DIN 1343
BD/BL	DN 25, 40, 50	0.66
CF/CL	DN 65	1.05
DGL/DLL	DN 80/DN 100	1.7

Establishing Hose Connections

To ensure reliable operation, the compressed air hoses must be cut exactly square.

Tools required:


- A hose cutter.

Carry out the following steps:

1. Shut off the compressed air supply.
2. Use the hose cutter to cut the pneumatic hoses square.
3. Push the air hose into the air connector on the control module.
4. Re-open the compressed air supply.

✓ Done

Hosing Diagram

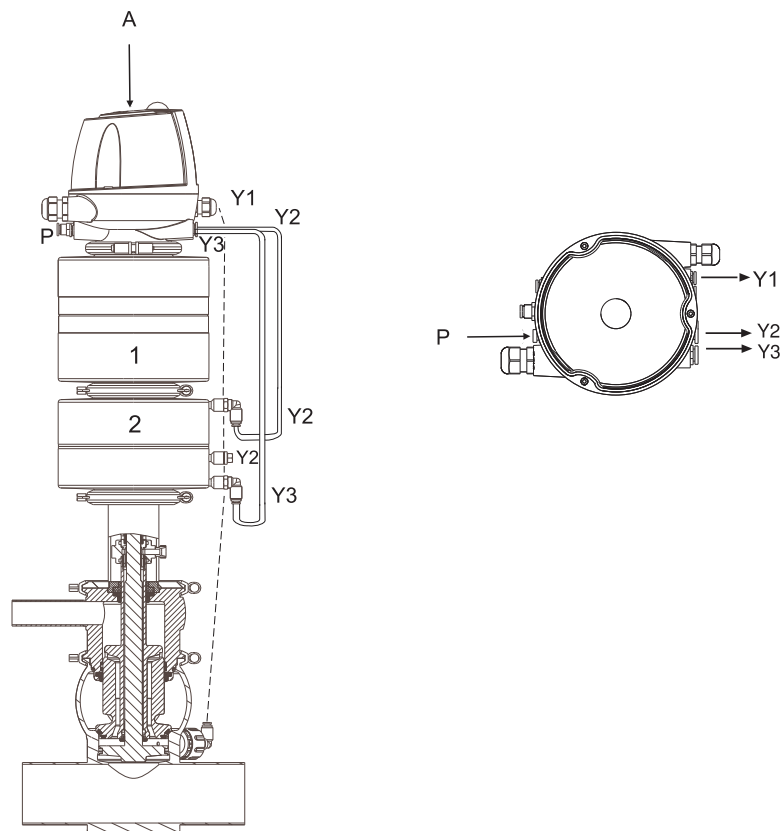

1	Actuator
2	Lifting actuator
Y1	Only for standing variant L_S
Y2	Lifting of valve disk
Y3	Lifting of double-disk
P	Central air supply

Electrical Connections



DANGER

Live parts

Electrical shock can result in serious personal injury or death.

- Only allow properly qualified staff to carry out work on the electrical equipment.
- Prior to establishing electrical connections check the maximum permissible operating voltage.



EXPLOSION HAZARD

Explosive gases or dusts

An explosion can result in serious personal injury or death.

- Observe the installation and operating regulations for use in potentially explosive areas.

Carry out the following steps:

- Connect in accordance with the connection diagram and the instructions in the corresponding operating instructions for the control module.

✓ Done

NOTE

The proximity switches are factory set. During transport and installation it can happen that the settings are changed, so that readjustment may be required (see Operating Instructions for the control module).

Commissioning

Before starting commissioning observe the following:

- Make sure that there are no foreign materials in the system.
- Actuate the valve once by applying compressed air.
- Clean the pipe system prior to the first product run.
- During commissioning, regularly check all sealing points for leaks. Replace defective seals.

Cleaning and Passivation

Cleaning

All parts in contact with product must be cleaned at regular intervals. Always observe the safety data sheets issued by the cleaning agent manufacturers. Only use cleaning agents which do not cause damage to the seals and inner valve parts. During pipe cleaning, the cleaning fluid also flows through the valve housings and cleans them. With respect to the cleaning method and parameters like detergents, temperatures, times and intervals, the component manufacturer can merely make recommendations but cannot provide any generally applicable details. Method and parameters should be determined and defined by the plant operator in accordance with the relevant process. The cleaning effect must be checked regularly by the plant operator!

Cleaning process examples

Typical cleaning parameters in dairy operations

Example of a two-phase cleaning process:

- Sodium hydroxide and combination products based on sodium hydroxide in concentrations from 0.5% to 2.5% at 75 °C to 80 °C.
- Phosphoric acid or nitric acid and combination products based on these acids in concentrations from 0.3 to 1.5% at approx. 65 °C.

Example of a cleaning operation in one cleaning step:

- Formic acid and combination products based on formic acid at up to 85 °C.

Typical cleaning parameters in breweries

- Sodium hydroxide and combination products based on sodium hydroxide in concentrations from 1% to 4% at approx. 85 °C.
- Phosphoric acid or nitric acid and combination products based on these acids in concentrations from 0.3 to 1.5% at 20 °C.

Cleaning effect

The cleaning effect depends on the following factors:

- Temperature
- Time
- Mechanics
- Chemicals
- Degree of soiling

These factors can be combined in such a way as to make an optimal cleaning result probable.

Cleaning of the leakage outlet system

The leakage chamber is cleaned via a spray nozzle in the double disk, which is connected to a valve seat cleaning pipe. Here, only general recommendations can be made about the number and duration of spray cleaning. Because depending on the prevailing conditions such as type of product, temperatures, cleaning agents, cleaning intervals, etc., longer or more frequent cleanings may be required.

It is recommended to set the cleaning conditions in the system in a test phase to save cleaning medium. To optimize the seat cleaning is thereby determined by occasional checks valves after cleaning, if the valve seats are clean. All attached systems for cleaning the valves should be used regularly in order to ensure optimum results and to prevent any damage to the valve.

The spray cleaning purifies the leakage chamber, while product can flow in the two lines, by means of a spray nozzle, which distributes the liquid in the CIP total leakage area. Here, however, not the sealing surfaces of the valve plate seals are purified. This type of leakage chamber cleaning is widely used in liquid, easily flushable media which do not remain on the sealing surfaces are liable or may crystallize.

Passivation

Before commissioning a plant, passivation is commonly carried out for long pipes and tanks. Valve blocks are usually excluded from this.

Passivation is typically performed using nitric acid (HNO_3) at approx. 80°C (176 °F) at a concentration in the 3% range and a contact time of 6 to 8 hours.

Malfunctions

In the event of malfunctions immediately deactivate the valve and secure it against inadvertent reactivation. Malfunctions may only be remedied by qualified staff, who must observe the safety instructions.

Malfunction	Cause	Remedy
Valve does not work	Fault in the control system	Check the system configuration
	No compressed air or compressed air too low	Check the compressed air supply Check air hoses for free passage and air tightness
	Fault in the electrical system	Check actuation / external controller and routing of electrical lines
	Solenoid valve defective	Replace the solenoid valve
	Valve works against a hydraulically closed pipe	Open the pipe
Double-disk oscillates during lifting or does not open	Air pressure too low	Increase air pressure
	Product pressure too high	Reduce product pressure
Valve does not close	Dirt/foreign material between valve seat and valve disk	Clean valve housing and valve seat
Valve closes too slowly	O-rings in actuator and control module are dry (friction losses)	Grease O-rings
Leakage in the area of the valve body	Housing O-rings defective	Disassemble the valve, change the housing O-rings
Leakage in the lantern	Sealing ring defective	Replace the sealing ring
Leakage in the leakage cavity	V-rings defective	Replace V-rings

Maintenance

Inspections

Between the maintenance periods, the valves must be checked for leakage and proper function.

Product Contact Seals

Carry out the following steps:

- ➔ Regularly check:
 - Stem seal between upper housing and lantern
 - V-ring in the valve disks
 - O-rings between the valve housings

✓ Done

Pneumatic Connections

Carry out the following steps:

1. Check the operating pressure at the pressure reducing and filter station.
2. Regularly clean the air filter in the filter station.
3. Check that the air hoses sit firmly in the air connections.
4. Check the lines for kinks and leaks.
5. Check the solenoid valves for proper function.

✓ Done

Electrical Connections

Carry out the following steps:

1. Check that the cap nut on the cable gland is tight.
2. Check that the cable connections are firmly secured.
3. Check the solenoid valves for proper function.

✓ Done

Maintenance Intervals

To ensure the highest operational reliability of the valves, all wearing parts should be replaced at longer intervals.

The actual maintenance intervals can only be determined by the user since they depend on the operating conditions, for instance:

- dairy period of use,
- switching frequent,
- type and temperature of the product,
- type and temperature of the cleaning solution,
- ambient conditions.

Maintenance Intervals

Application	Maintenance Intervals (Guideline values)
Media at temperatures of 60 °C to 130 °C 140 °F to 266 °F	approx. every 3 Monoliths
Media at temperatures of < 60 °C (< 140 °F)	approx. every 12 Monoliths

Prior to dismantling the Valve

Requirement

- Make sure that during maintenance and repair work no process is in operation in the area concerned.

Carry out the following steps:

1. Drain all pipe system elements that lead to the valve and, if necessary, clean or rinse them.
2. Shut off the control air supply.
3. Disconnect the power supply.
4. Take the valve, with all housings and housing connections if possible, out of the pipe section.

✓ Done

Disassembling the Valve

Removing the Control Module

Requirement

- No solenoid valve must be actuated electrically or manually.
- The pneumatic and electrical connections on the plant side can remain on the control module.

IMPORTANT NOTE

The permanent magnet on the switch bar is fragile.

Damage to the permanent magnet.

→ Protect the permanent magnet against impact stress.



WARNING


Spring tension in the valve

Danger of injury when opening the clamp joint at the actuator (46) or at the housing (43) as the released spring pretension will suddenly lift the actuator.

→ Therefore, release the spring tension before detaching the clamp joint by pressurizing the actuator with compressed air at max. 8 bar.

Carry out the following steps:


1. Remove the cleaning connection (30).

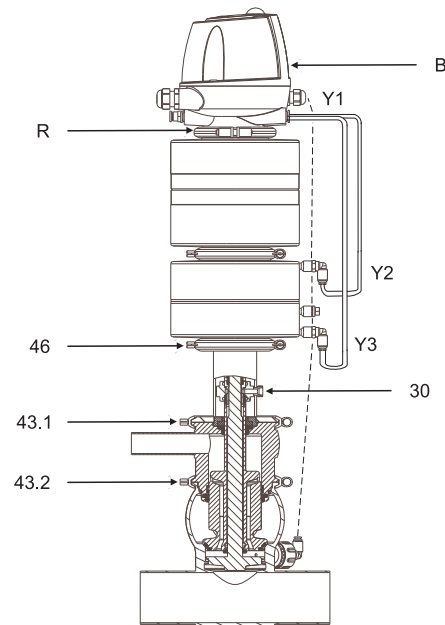

2. Pressurize the valve at connection (Y3):
3. Detach the hinged clamp (43.2).

4. Depressurize the actuator.
 5. Remove the semi-annular clamps from the control module (R).
 6. Detach the pneumatic connections (Y2, Y3) on the lifting actuator.
 - ➔ Only for variant L_S: Detach the pneumatic connection (Y1).
 7. Pull off the control module (B) upwards.
- ✓ Done

Disconnecting the Valve from the Housing

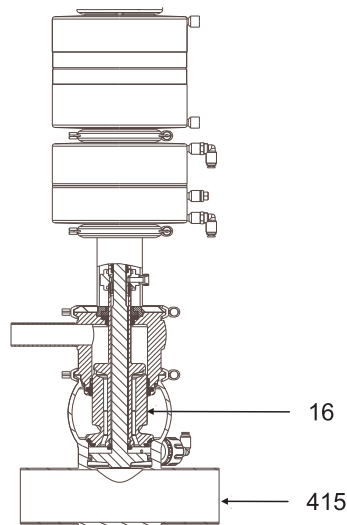

IMPORTANT NOTE

The surfaces of the balancer (16) are sealing surfaces.

Damage will result in valve malfunctions.

- When removing the valve from the pipe take care not to hit the balancer against the housing.
- Carefully draw out the valve.

IMPORTANT NOTE

Seat ring and valve disk are precision parts.

Damage will result in valve malfunctions.


- For valves installed horizontally take particular care that the weight of the valve is supported when dismantling the valve.

Carry out the following steps:

- Draw the valve insert out of the housing (415).

✓ Done

Separating the Valve Insert from the Actuator

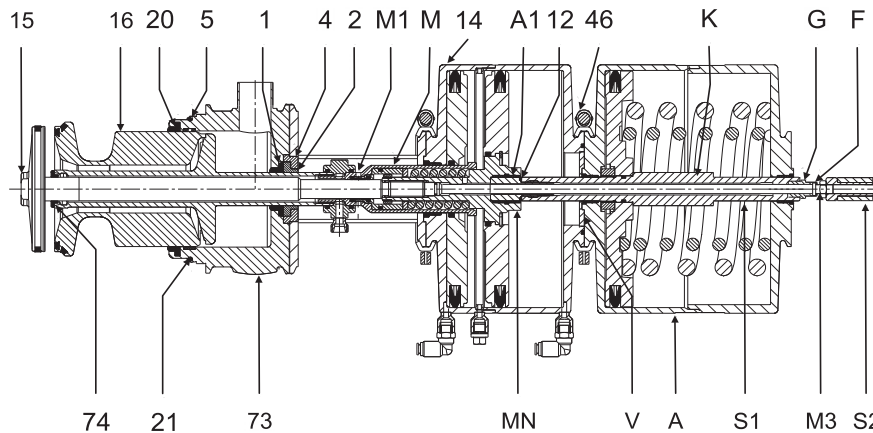

Removing the valve
insert

IMPORTANT NOTE

The contact surfaces of the double-disk (16) are sealing surfaces.

Damage will result in valve malfunctions.

→ Carefully disassemble the valve.

Carry out the following steps:

1. Unscrew switching rod (S1), switching rod (S2) and nut (M3), which are screwed together, from the piston rod (K) using a 4 mm mandrel.
2. Detach the hinged clamp (46).
3. Pull the actuator (A) together with slider (G), rod guide ring (F), adapter (A1) with O-ring (12) and locking flange (V) out of the lifting actuator (14).
4. Unscrew the adapter (A1) from the piston rod (K) using a face spanner.
→ Do not grease the thread on the adapter and on the piston rod!
5. Hold the driver (MN) using a tubular hex. box spanner size 36 and unscrew the valve disk (15).
6. Hold the driver sleeve (M) at (M1) using a hook spanner and unscrew the double-disk (16) using a tubular hex. box spanner.
7. Draw off the leakage housing (73), O-ring (5), sealing rings (1), bearing disk (4) and bearing (2).
8. Remove the guide ring (21).

For version L_HL

Carry out the following steps:

- Remove the spraying nozzle (74).

For versions L_HC
and L_HL



Carry out the following steps:


- ➔ For version L_HC, remove the snap seal (74) with O-ring.

✓ Done

NOTE

The spraying nozzle and snap seal are wearing parts.

Dismantling the Lifting Actuator

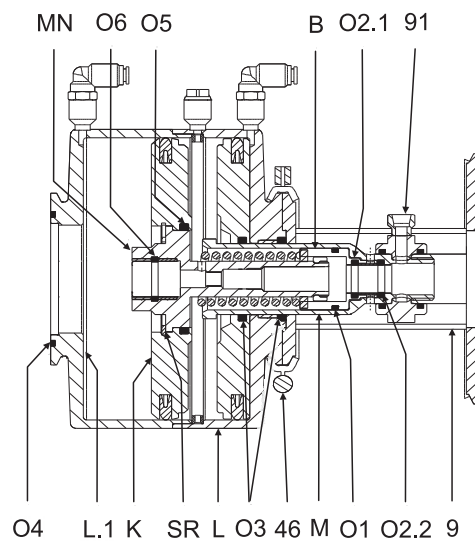

Requirement

- Lay the lifting actuator (L) down for further disassembly.

Carry out the following steps:

1. Draw off the cleaning connection from the driver sleeve (M).
2. Push the piston (K) with fitted driver (MN) and driver sleeve (M) upwards against the lifting actuator flange (L.1) and remove the snap ring (SR) from the piston (K) using nippers.
3. Push the driver (MN) together with the driver sleeve (M) out of the lifting actuator (L).
4. Pull the bushing (B) out of the driver sleeve (M).
➔ The O-rings (O1, O2) are now accessible.
5. Push the driver (MN) together with the driver sleeve (M) out of the lifting actuator (L).
6. Remove the hinged clamp (46), draw off the lantern (9) from the lifting actuator (L).
➔ The O-rings (O3, O4, O5) are now accessible.

✓ Done

Maintenance

Cleaning the Valve

IMPORTANT NOTE

The stem of the valve disk, the housing seat, the valve seat and the V-ring groove are precision parts.

Damage to these parts can result in malfunctions.

→ Handle the valve with care!

IMPORTANT NOTE

Damage to the valve

Damage to the valve can result in a malfunction.

→ Observe the safety information sheets issued by the detergent manufacturers!


→ Only use detergents which are non-abrasive and not aggressive towards stainless steel.

Carry out the following steps:

1. Disassemble the valve, see "Disassembling the Valve" (Page 37).
2. Carefully clean the individual parts.

✓ Done

Replacing Seals

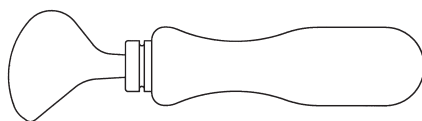

Insertion tool

Requirement

- Insert the V-rings/VR-rings without grease. To facilitate fitting, use water with a drop of washing-up liquid to remove the surface tension. In order that no rust is transferred, the washing-up liquid solution must be made up in a ceramic, plastic, or stainless steel container.

Tools required:

- Use the insertion tool to fit the V-ring.

Replacing the V-ring



CAUTION


The scriber can slip off when the V-ring is removed.

Danger of injury!


- ➔ Grip the valve disk in a vice with protected jaws.
- ➔ Unscrew the curved side of the scriber.

Carry out the following steps:


1. Put a scriber into the V-ring and take it out.

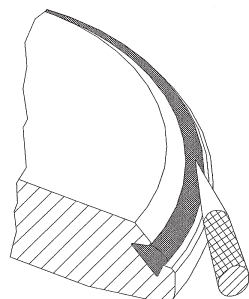

2. Before fitting, wet the V-ring on the side not in contact with product (rear side). Pay attention that water does not drip into the V-ring groove on the valve disk.
3. Put in the V-ring. Make sure the installation position of the V-ring is correct (see illustration).

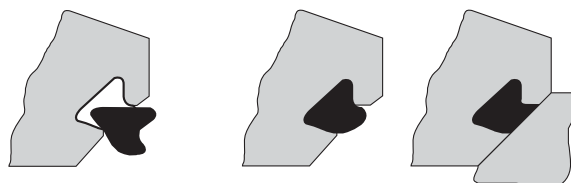

4. Use the insertion tool to press in the V-ring – evenly press in at several opposite points along the circumference.

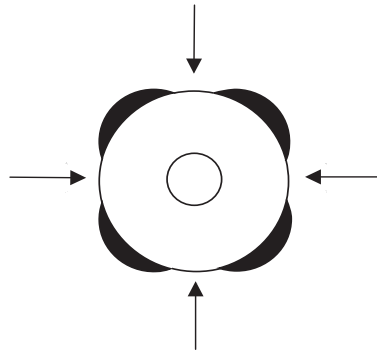

5. Insert the V-ring evenly.
6. Replace all the other seals identified in the spare parts lists.

Replacing the V-ring RA



CAUTION


The scriber can slip off when the V-ring is removed.

Danger of injury!

- Grip the valve disk in a vice with protected jaws.
- Unscrew the curved side of the scriber.

Carry out the following steps:


1. Put a scriber into the V-ring RA and take it out.

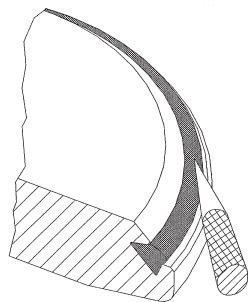

2. Before fitting, wet the V-ring RA on the side not in contact with product (rear side). Pay attention that water does not drip into the VR-ring groove on the valve disk.
3. Put in the V-ring RA. Make sure the installation position of the V-ring RA is correct (see illustration).



4. Use the insertion tool to press in the V-ring RA – evenly press in at several opposite points along the circumference.

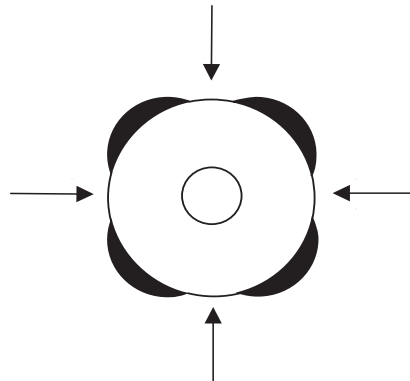

5. Insert the V-ring RA evenly.
6. Prior to installation in the housing V-rings RA outside lightly grease. Remove visible fat residues.
7. Replace all the other seals identified in the spare parts lists.

✓ Done

NOTE

Used seals must not be used again, since the proper function of the seal can no longer be ensured.

Lubricating Seals and Threads



CAUTION


Damage to seals and threads

Damage to seals and threads can result in a malfunction.

- Ensure that an adequate film of lubricant is applied. No grease residues must be visible after fitting the complete valve.
- For product contact seals only use suitable greases and oils.
- Observe the safety information sheets issued by the lubricant manufacturer!

Carry out the following steps:

1. Lightly grease the valve disk thread.
2. Very lightly grease all seals – including the O-rings at the top and bottom of the piston rod of the actuator.
! Do not grease the V-ring
3. Grease the thread on the housing of the rinsing valve at the indicated positions (1, 2).

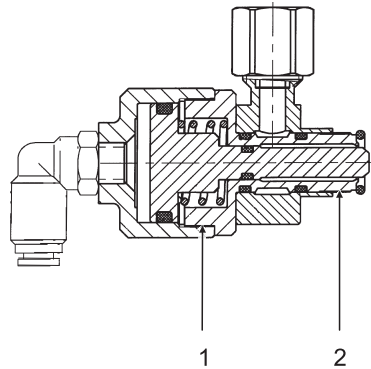

4. Grease the balancer.

✓ Done


NOTE

GEA Tuchenhausen recommends Rivolta F.L.G. MD-2 and PARALIQ GTE 703. These lubricants are approved for foodstuff and are resistant to beer froth. They have the NSF-H1 (USDA H1) registration. PARALIQ GTE 703 can be ordered from GEA Tuchenhausen under part no. 413-064, and Rivolta F.L.G. MD-2 can be ordered under part no. 413-071. If other types of grease are used this can result in malfunctions or in premature seal failure. The warranty will become null and void.

A Manufacturer's Declaration for these products can be obtained from GEA Tuchenhausen if required. A thin film of grease is required on the seals to ensure the proper function of the fittings. It reduces friction and extends the service life of the seals. This is absolutely harmless from a health and hygienic point of view. Run dry must be prevented!

Assembling the Valve

Assembling the Lifting Actuator

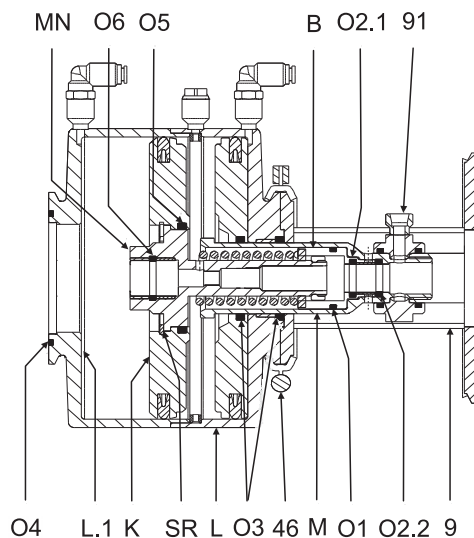


Carry out the following steps:

1. Fit O-rings (O3, O4, O5) to the LFT-R lifting actuator (L) and fix it to the lantern (9) using the hinged clamp (46).
2. Provide the bushing (B) with O-rings (O1, O2.1) and fit it on the mandrel, part no. 221-105.93, 221-105.94. Place the O-ring (O2.2) on the top and push the assembled parts into the driver sleeve (M).
3. Push the driver (MN) with the O-ring (O6) into the driver sleeve (M) and pre-tension using the mandrel (part no. 221-105.76) and a tubular hex. box spanner size 36.
4. Insert the pre-stressed parts into the lifting actuator (L), fix to the piston (K) with the snap ring (S) and relieve the tension.
5. Push the cleaning connection (V9), fitted with O-rings (O1, O2), onto the driver sleeve (M).

✓ Done

Equipping the Double-Disk

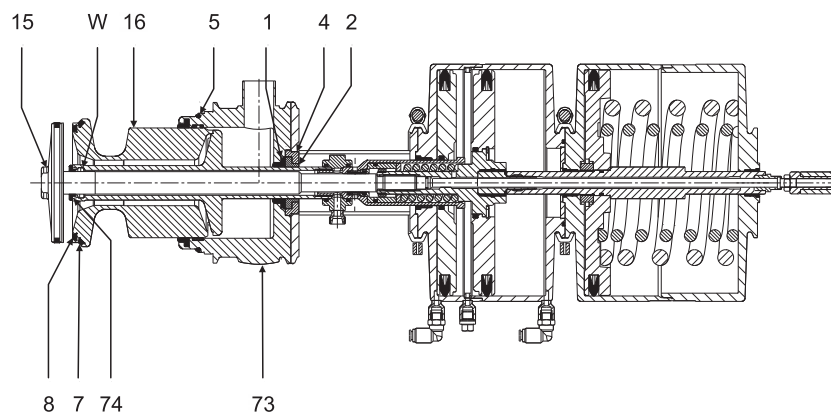

Valve with
cleaning nozzle



Carry out the following steps:

- ➔ Equip the double-disk (16) with V-rings (7, 8), cleaning nozzle (74), leakage housing (73), O-ring (5), sealing ring (1), bearing (2) and bearing disk (4).

Valve with
snap seal




Carry out the following steps:

- ➔ Equip the double-disk (16) with V-rings (8, 9), snap seal with O-ring (5), leakage housing (73), O-ring (5), sealing ring (1), bearing (2) and bearing disk (4).

✓ Done

Assembling the Actuators

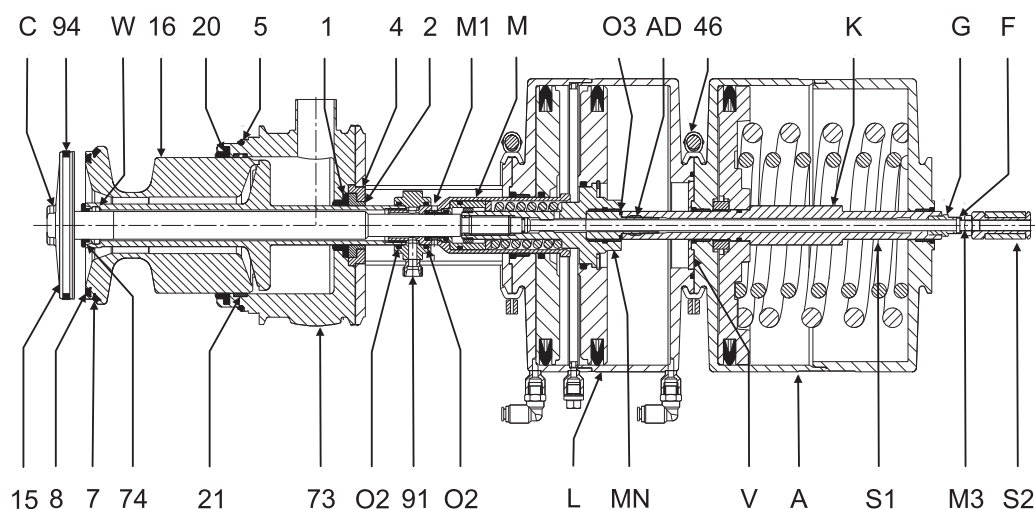

IMPORTANT NOTE

The permanent magnet on the switch bar is fragile.

Damage to the permanent magnet.


→ Protect the permanent magnet against impact stress.

Carry out the following steps:

1. Hold the driver sleeve with hook spanner at (M1) and tighten the double-disk by inserting a tubular hex. box spanner at (W).
2. Hold the driver (26) with a tubular hex. box spanner size 36 and tighten the valve disk (15) together with the installed V-ring (94) at (C).
3. Insert the locking flange (V) into the lifting actuator (L).
4. Do not grease the thread on the adapter (AD) and on the piston rod (K)! Screw the adapter (AD) with O-ring (O3) at the piston side firmly into the piston rod (K) of the actuator (A) using a face spanner.
5. Fix the slider (G), complete with rod guide ring (F), to the piston rod (K) of the actuator (A) using a mandrel (4 mm).
6. Insert the actuator (A) into the lifting actuator (L) and secure with a hinged clamp (46).
7. Put the switch bar (S1) through the piston rod (K) and tighten it against the valve disk (15).

✓ Done

Fitting the Valve into the Housing

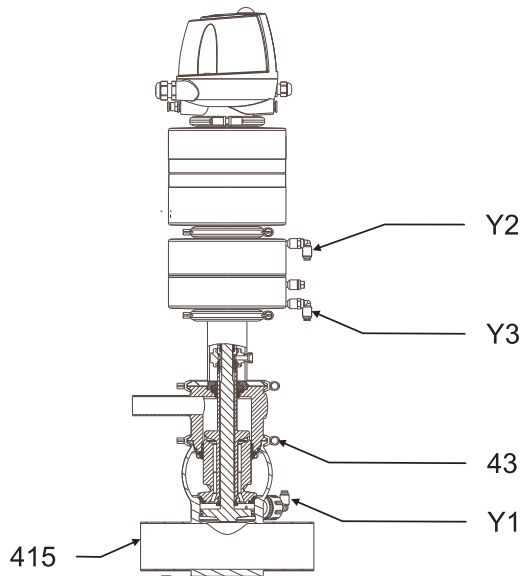

Requirement

- For horizontally installed valves the port of the lantern must point downwards (free draining).

IMPORTANT NOTE

The valve disk and the seat ring are precision parts.

Damage to these parts can result in malfunctions.

→ Support the weight of the valve during assembly.

Carry out the following steps:

1. Actuate the lift stroke of the double-disk at (Y3) and carefully introduce the valve insert into the housing, secure with the hinged clamp (43).
2. Connect the air connections (Y1, Y2, Y3).



Torques for the Clamps and Clamp joint

Tighten the clamp joint and clamps on the valve to the torques specified in the table.

Torques to be set

Torques		Nm	lbft
Clamps on the control module		1	0.7
Clamp joint Cast clamps	M6	9	6.6
Clamp joint Cast clamps	M8	22	16.2
Cast clamps	M10	45	33

Checking the Function

Adjusting stroke

Carry out the following steps:

1. Check the function of the proximity switches.
2. Readjust the proximity switches if necessary, see "Table Valve stroke" (Page 51).

✓ Done

Valve stroke

Table Valve stroke

Valve size	Total valve stroke (mm)	Lifting stroke of double-disk (mm)	Lifting stroke of valve disk (mm)
metric			
25	25	1...2.5	6
40	22	1...2.5	6
50	30	1...2.5	6
65	30	1...2.5	6
80	30	1...2.5	6
100	30	1...2.5	6
Inch OD			
1"	22	1...2.5	6
1.5"	21	1...2.5	6
2"	31	1...2.5	6
2.5"	35	1...2.5	6
3"	45	1...2.5	6
4"	45	1...2.5	6

Disposal

General Notes

Dispose of the machine at the end of its life cycle in an environmentally friendly manner. Observe the statutory waste disposal regulations applicable at the place of installation.

The valve is made of the following materials:

- Metals
- Synthetic materials
- Electronic parts
- Lubricants containing oil and grease

Separate the different materials and dispose of them correctly sorted. Also observe the instructions regarding disposal in the operating instructions for the individual components.

Valve Actuator Disposal



DANGER

The spring forces in the actuator can be as much as 24 kN.

The pre-stressed spring can cause serious personal injury or death.

- Never open the actuator.
- GEA Tuchenhausen accepts unopened actuators and arranges for proper disposal free of charge.

Carry out the following steps:


1. Remove the actuator.
2. Safely pack the actuator and send it to GEA Tuchenhausen GmbH.

✓ Done

Technical Data

Type Plate

The type plate clearly identifies the valve.

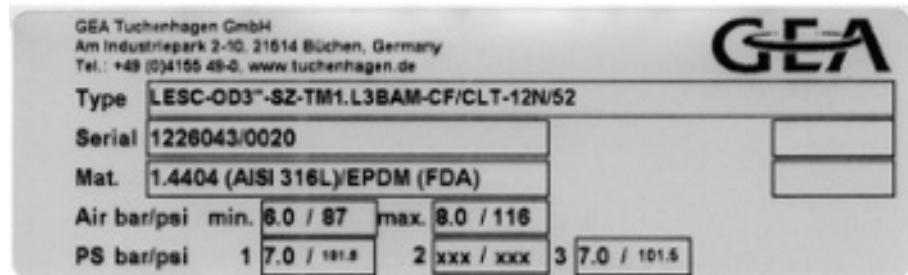

Type plate of the valve

The type plate provides the following key data:

Key data of the valve

Type	LESC-OD3"-SZ-TM1
Serial	Serial number
Material	1.4404 (AISI316L)/EPDM (FDA)
Control air pressure bar/psi	min. 6.0 (87); max. 8.0 (116)
Product pressure bar/psi	7.0 (101.5)

Technical Data

Refer to the following tables for the key technical data of the valve:

Technical data: Valve

Designation	Description
Size	DN 40 to DN 100 1.5 to 4" OD
Material of product contact parts	Stainless steel 1.4404
Installation position Valve types L_HC and L_HL Valve types L_SC and L_SL	Suspended Vertical

Technical data: Ambient temperatures

Designation	Description
- Valve	0 to 45°C, standard < 0 °C: use control air with a low dew point. Protect valve stems against freezing.
- Proximity switch	-20 to +80 °C
- Control module type T.VIS M-1, A-7	-20 to +50 °C
Product temperature and operating temperature	Depending on the sealing material

Technical data: Compressed air supply

Designation	Description
Air hose	
- Metric	Material PE-LD Outside dia. 6 mm Inside dia. 4 mm
- Inch	Material PA Outside dia. 6.35 mm Inside dia. 4.3 mm
Product pressure	6 bar (87 psi) standard max. 10 bar (145 psi)
Control air pressure	4 to 8 bar (58 to 116 psi) max. 8 bar (116 psi)
Control air	acc. to ISO 8573-1
- Solid particle content:	Quality class 6 Particle size max. 5µm Particle density max. 5 mg/m ³
- Water content:	Quality class 4 max. dew point +3 °C If the unit is used at higher altitudes or at low ambient temperatures, the dew point must be adapted accordingly.
- Oil content:	Quality class 3, preferably oil free max. 1 mg oil in 1m ³ air

Cleaning Connection

Connection for hose

DN 40...100	Ø8/6 mm
1.5" ...4" OD	Ø8/6 mm

Operating pressure for optimum cleaning

- min. 2 bar (29 psi)
- max. 5 bar (72.5 psi)

The resistance of the material of the CIP connection (olive, support sleeve, PTFE hose) depends on the type, pressure and temperature of the medium conveyed.

Resistance of the CIP connection

Medium	Pressure max. (bar)	. (psi)	Temperature (°C)	max. (°F)
Water	6	87	95	203
Nitric acid at 5%	6	87	60	140
Sulphuric acid at 3%	6	87	60	140
Sodium hydroxide at 5%	6	87	85	185
Steam	3	42	130	266

Resistance of Sealing Materials

The resistance of sealing materials depends on the type and temperature of the medium conveyed. The exposure time can adversely affect the service life of the seals. The sealing materials comply with the regulations of FDA 21 CFR 177.2600 or FDA 21 CFR 177.1550.

Resistance:

- + = good resistance
- o = reduced service life
- – = not resistant

Table Resistance of Sealing Materials

Medium	Temperature	Sealing material (general operation temperature*)		
		EPDM -40...+135°C -40...+275°F	FKM -10...+200 °C +14...+392°F	HNBR -25...+140 °C -13...+284°F
Caustics up to 3%	up to 80 °C (< 176°F)	+	o	+
Caustics up to 5%	up to 40 °C (< 104°F)	+	o	o
Caustics up to 5%	up to 80 °C (< 176°F)	+	–	–
Caustics at more than 5%		o	–	–
Inorganic acids up to 3%	up to 80 °C (< 176°F)	+	+	+
Inorganic acids up to 5%	up to 80 °C (< 176°F)	o	+	o
Inorganic acids up to 5%	up to 100 °C (< 212°F)	–	+	–
Water	up to 80 °C (< 176°F)	+	+	+
Steam	up to 135 °C (< 275°F)	+	o	o
Steam approx. 30 min	up to 150 °C (< 302°F)	+	o	–
Fuels/hydrocarbons		–	+	+
Product with a fat content of max. 35%		+	+	+
Product with a fat content of more than 35%		–	+	+
Oils		–	+	+
* depending on the installation position				

Pipe Ends

Dimensions for Pipes in DN

Metric DN	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to DIN 11850
40	41	1.5	38	x
50	53	1.5	50	x
65	70	2.0	66	x
80	85	2.0	81	x
100	104	2.0	100	x

Dimensions for Pipes in Inch OD

Inch OD	Outside diameter	Wall thickness	Inside diameter	Outside diameter acc. to BS 4825 Part 1
1.5"	38.1	1.65	60.3	x
2"	50.8	1.65	47.6	x
2.5"	63.5	1.65	60.2	x
3"	76.2	1.65	72.9	x
4"	101.6	2.11	97.38	x

Tools

Tool	Part no.
Hose cutter	407-065
Belt wrench	408-142
V-ring insertion tool	229-109.88
Open end spanner, ends ground, a/f 17-19	229-119.01
Open end spanner, ends ground, a/f 21-23	229-119.05
Open end spanner, ends ground, a/f 22-24	229-119.03
Open end spanner, a/f 30-32	408-041
Hook spanner for holding the driver sleeve Ø25/Ø3 for DN25	408-203
Hook spanner for holding the driver sleeve Ø30/Ø4 for DN50-100	408-202
Hook spanner for holding the driver sleeve Ø34/Ø4 for DN125, 6" IPS	408-204
Mandrel, 6 mm	

Tool	Part no.
Mounting mandrel	221-105.76 221-105.77
Mandrel used for fitting the bushing into the driver sleeve	221-105.94 (DN 25 to DN 100) 221-105.95 (DN 125/6" IPS)
Wrench insert, machined faced, a/f 27 (34.5)	229-119.06
Hook spanner for tightening the driver sleeve Ø50/Ø5, Ø60/Ø5	408-205
Snap ring pliers for holes up to DN 100 Ø 60; DN 125/6"IPS Ø 72	
Mounting device up to DN 50 up to DN 100 up to DN 162	229-109.89 229-109.90 229-109.91

Lubricants


Lubricants	Part no.
Rivolta F.L.G. MD-2	413-071
PARALIQ GTE 703	413-064


Weights

Size	Weight (kg)
DN 40, 1.5"	12
DN 50, 2"	13
DN 65, 2.5"	18
DN 80, 3"	20
DN 100, 4"	28

Spare Parts Lists

Mixproof Valve L_SL

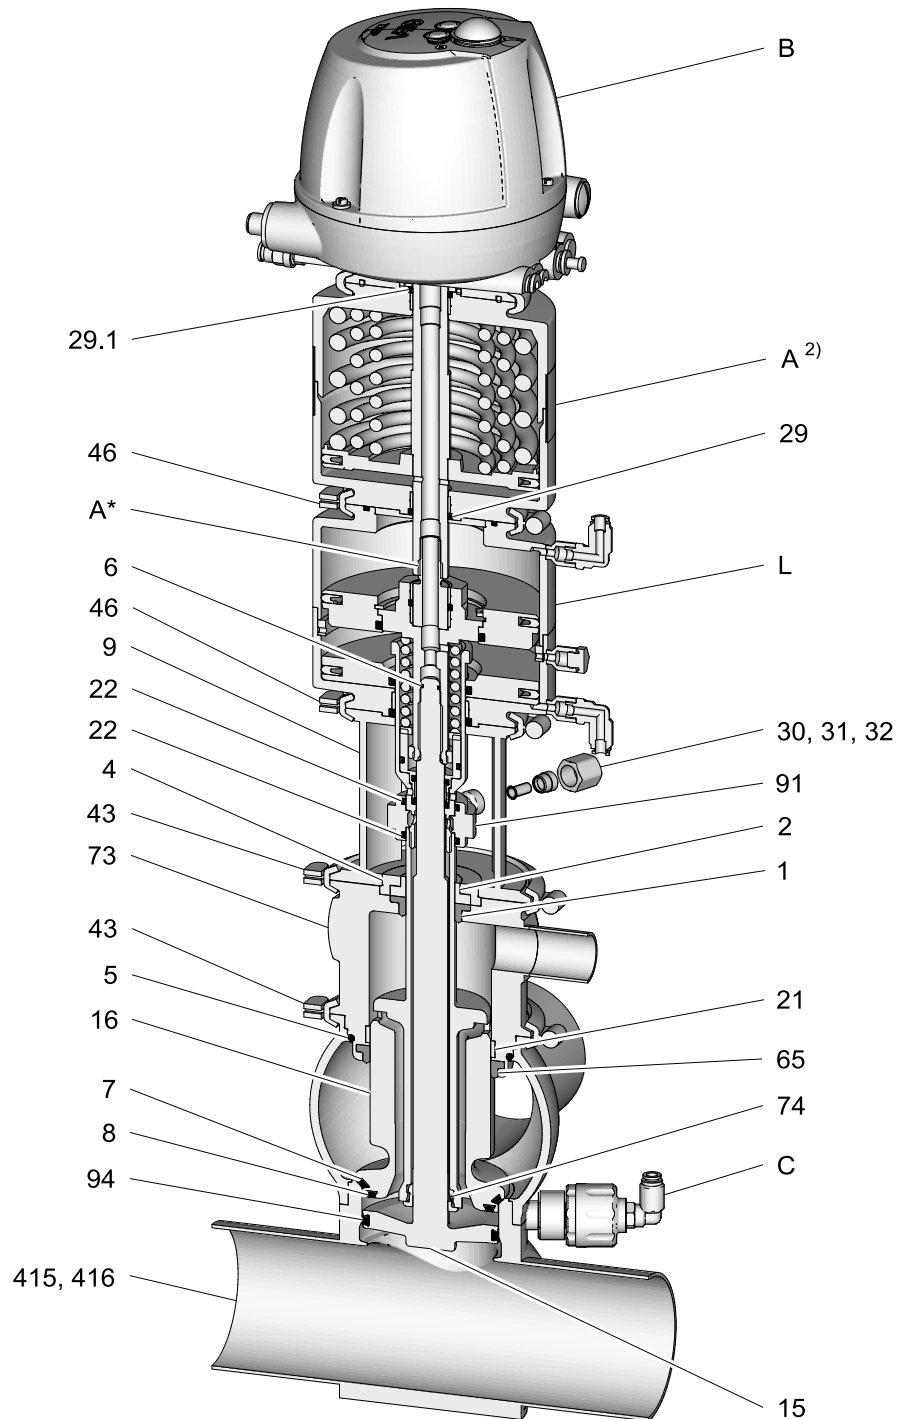

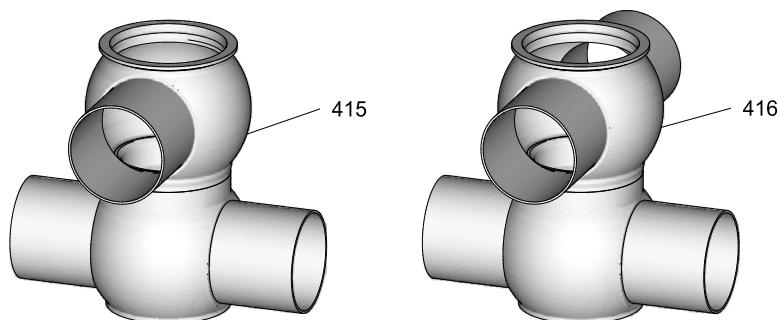

Housing combinations

Spare Parts List – Metric Sizes

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
Sealing set, complete		EPDM FKM	221-001184 221-001185	221-001184 221-001185	221-001186 221-001187	221-001186 221-001187	221-001188 221-001189
1	Sealing ring	EPDM FKM	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
5	O-ring	EPDM FKM	930-144 930-171	930-144 930-171	930-150 930-176	930-150 930-176	930-156 930-178
6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
**7	V-ring	EPDM FKM	932-021 932-033	932-021 932-033	932-024 932-035	932-024 932-035	932-028 932-039
**8	V-ring	EPDM FKM	932-019 932-032	932-019 932-032	932-023 932-034	932-023 932-034	932-027 932-038
9	Lantern	1.4301	221-236.16	221-236.16	221-236.02	221-236.02	221-236.03
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double-disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114
22	O-ring	EPDM FKM	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244
30	Cap nut	1.4571	933-456	933-456	933-456	933-456	933-456
31	Olive	1.4571	933-455	933-455	933-455	933-455	933-455
32	Support sleeve	1.4571	933-382	933-382	933-382	933-382	933-382
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.06	221-507.06	221-507.06	221-507.06	221-507.06
65	Sealing ring	EPDM FKM	924-305 924-307	924-305 924-307	924-296 924-308	924-296 924-308	924-254 924-309
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643
74	Cleaning nozzle	PVDF	221-334.01	221-334.01	221-334.02	221-334.02	221-334.02



Spare Parts List – Metric Sizes (Cont.)

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
91	Cleaning connection	1.4301	221-237.08	221-237.08	221-237.08	221-237.08	221-237.08
**94	V-ring RA	EPDM FKM	221-365.07 221-365.10	221-365.07 221-365.10	221-365.08 221-365.11	221-365.08 221-365.11	221-365.09 221-365.12
415	Housing LCS-90	1.4404	221-633.04	221-633.06	221-633.08	221-633.10	221-633.21
416	Housing LES-90	1.4404	221-633.23	221-633.25	221-633.27	221-633.28	221-633.20
A	Actuator VARIVENT®		See spare parts list for actuator type VARIVENT®				
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S		See spare parts list for control top type T.VIS See spare parts list for control top type S				
C	Rinsing valve SPV-C		See spare parts list for rinsing valve type SPV-C				
L	Lifting actuator T		See spare parts list for lifting actuator type T				
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set.					413-136		

** Do not grease item 7, 8 and 94

A²⁾ When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.

Spare Parts List – Inch Sizes

Item	Designation	Material	1,5" OD	2" OD	2,5" OD	3" OD	4" OD
Sealing set, complete		EPDM FKM	221-001184 221-001185	221-001184 221-001185	221-001186 221-001187	221-001186 221-001187	221-001188 221-001189
1	Sealing ring	EPDM FKM	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
5	O-ring	EPDM FKM	930-144 930-171	930-144 930-171	930-150 930-176	930-150 930-176	930-156 930-178
6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
**7	V-ring	EPDM FKM	932-021 932-033	932-021 932-033	932-024 932-035	932-024 932-035	932-028 932-039
**8	V-ring	EPDM FKM	932-019 932-032	932-019 932-032	932-023 932-034	932-023 932-034	932-027 932-038
9	Lantern	1.4301	221-236.18	221-236.08	221-236.09	221-236.10	221-236.11
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double-disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114




Spare Parts List – Inch Sizes (Cont.)



Item	Designation	Material	1,5" OD	2" OD	2,5" OD	3" OD	4" OD
22	O-ring	EPDM FKM	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244
30	Cap nut	1.4571	933-456	933-456	933-456	933-456	933-456
31	Olive	1.4571	933-455	933-455	933-455	933-455	933-455
32	Support sleeve	1.4571	933-382	933-382	933-382	933-382	933-382
34	Seat ring D	1.4404	221-402.01	221-402.01	221-402.03	221-402.03	221-402.02
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
65	Sealing ring	EPDM FKM	924-305 924-307	924-305 924-307	924-296 924-308	924-296 924-308	924-254 924-309
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643
74	Cleaning nozzle	PVDF	221-334.01	221-334.01	221-334.02	221-334.02	221-334.02
91	Cleaning connection	1.4301	221-237.08	221-237.08	221-237.08	221-237.08	221-237.08
**94	V-ring RA	EPDM FKM	221-365.07 221-365.10	221-365.07 221-365.10	221-365.08 221-365.11	221-365.08 221-365.11	221-365.09 221-365.12
415	Housing LCS-90	1.4404	221-633.03	221-633.05	221-633.06	221-633.09	221-633.19
416	Housing LES-90	1.4404	221-633.22	221-633.24	221-633.26	221-633.17	221-633.18
A	Actuator VARIVENT®		See spare parts list for actuator type VARIVENT®				
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S		See spare parts list for control top type T.VIS See spare parts list for control top type S				
C	Rinsing valve SPV-C		See spare parts list for rinsing valve type SPV-C				
L	Lifting actuator T		See spare parts list for lifting actuator type T				
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set.					413-136		

** Do not grease item 7, 8 and 94

A²⁾ When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.

Mixproof Valve L_SC

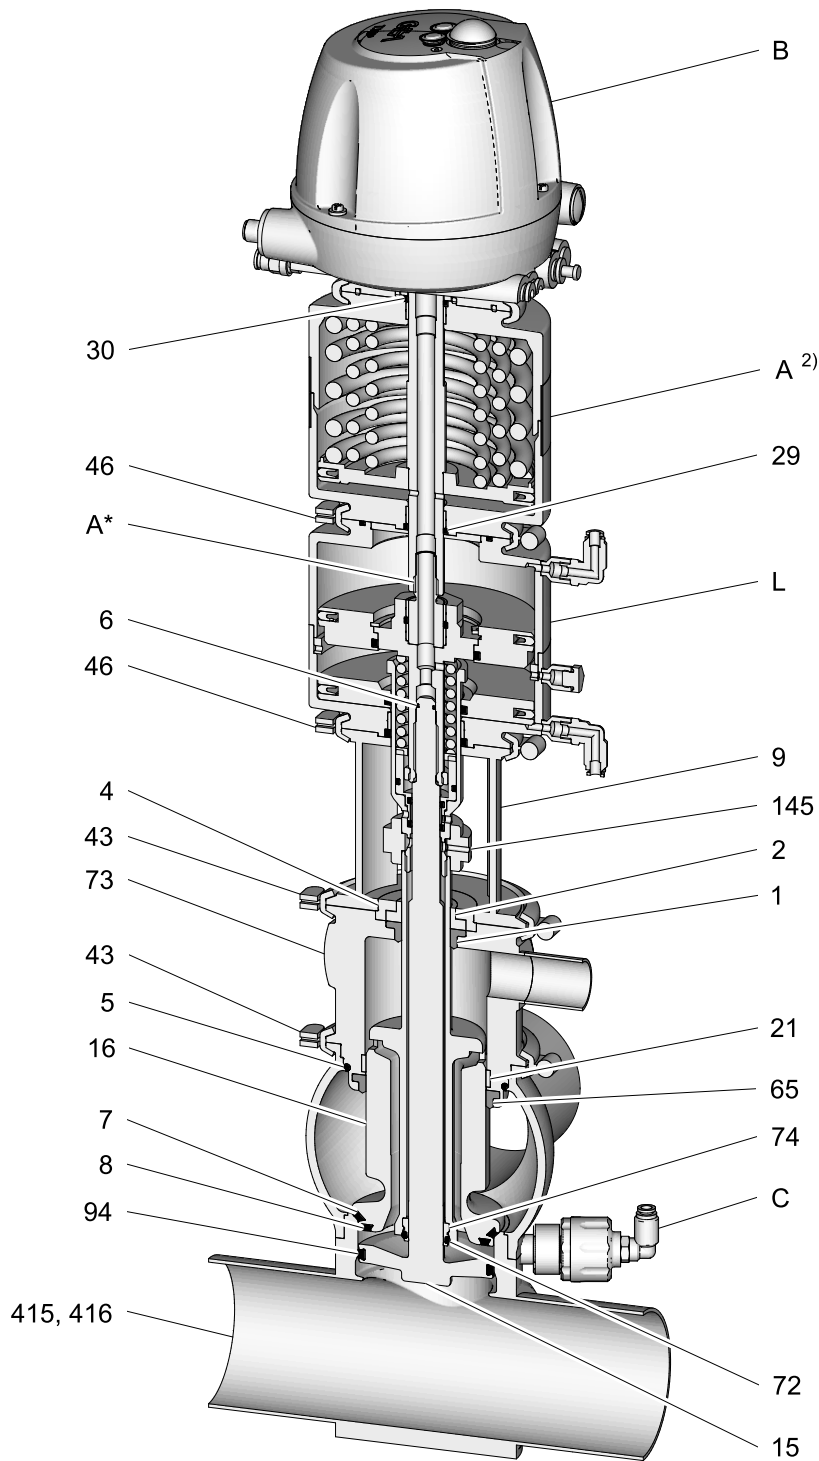

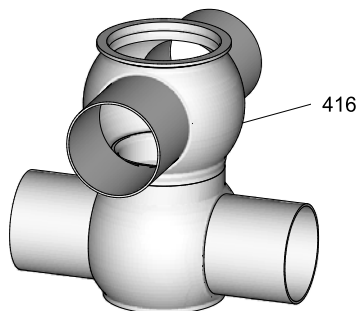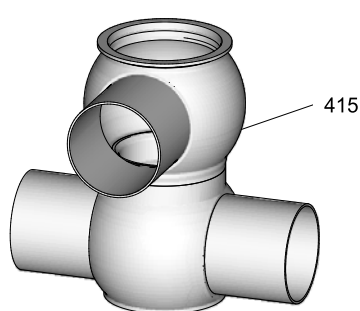

Housing combinations

Spare Parts List – Metric Sizes

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
Sealing set, complete		EPDM FKM HNBR	221-001176 221-001177 --	221-001176 221-001177 --	221-001178 221-001179 221-003449	221-001178 221-001179 221-003449	221-001180 221-001181 --
1	Sealing ring	EPDM FKM HNBR	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
5	O-ring	EPDM FKM HNBR	930-144 930-171 930-633	930-144 930-171 930-633	930-150 930-176 930-634	930-150 930-176 930-634	930-156 930-178 930-863
6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
**7	V-ring	EPDM FKM HNBR	932-021 932-033 932-088	932-021 932-033 932-088	932-024 932-035 932-090	932-024 932-035 932-090	932-028 932-039 932-100
**8	V-ring	EPDM FKM HNBR	932-019 932-032 932-084	932-019 932-032 932-084	932-023 932-034 932-089	932-023 932-034 932-089	932-027 932-038 932-099
9	Lantern	1.4301	221-236.16	221-236.16	221-236.02	221-236.02	221-236.03
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double-disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.06	221-507.06	221-507.06	221-507.06	221-507.06
65	Sealing ring	EPDM FKM HNBR	924-305 924-307 924-333	924-305 924-307 924-333	924-296 924-308 924-331	924-296 924-308 924-331	924-254 924-309 924-332
72	O-ring	EPDM FKM HNBR	930-610 930-662 930-646	930-610 930-662 930-646	930-611 930-663 930-647	930-611 930-663 930-647	930-611 930-663 930-647
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643



Spare Parts List – Metric Sizes (Cont.)

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
74	Snap seal	PVDF	221-000522	221-000522	221-000523	221-000523	221-000523
**94	V-ring RA	EPDM FKM HNBR	221-365.07 221-365.10 221-365.18	221-365.07 221-365.10 221-365.18	221-365.08 221-365.11 221-365.20	221-365.08 221-365.11 221-365.20	221-365.09 221-365.12 221-365.19
145	Leakage indicator	1.4301	221-237.43	221-237.43	221-237.43	221-237.43	221-237.43
415	Housing LCS-90	1.4404	221-633.04	221-633.06	221-633.08	221-633.10	221-633.21
416	Housing LES-90	1.4404	221-633.23	221-633.25	221-633.27	221-633.28	221-633.20
A	Actuator VARIVENT®		See spare parts list for actuator type VARIVENT®				
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S		See spare parts list for control top type T.VIS See spare parts list for control top type S				
C	Rinsing valve SPV-C		See spare parts list for rinsing valve type SPV-C				
L	Lifting actuator T		See spare parts list for lifting actuator type T				
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set.					413-136		
** Do not grease item 7, 8 and 94							
A ²⁾ When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.							

Spare Parts List – Inch Sizes

Item	Designation	Material	1,5" OD	2" OD	2,5 "OD	3" OD	4" OD
Sealing set, complete		EPDM FKM HNBR	221-001176 221-001177 --	221-001176 221-001177 --	221-001178 221-001179 221-003449	221-001178 221-001179 221-003449	221-001180 221-001181 --
1	Sealing ring	EPDM FKM HNBR	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313	924-085 924-083 924-313
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
5	O-ring	EPDM FKM HNBR	930-144 930-171 930-633	930-144 930-171 930-633	930-150 930-176 930-634	930-150 930-176 930-634	930-156 930-178 930-863
6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
**7	V-ring	EPDM FKM HNBR	932-021 932-033 932-088	932-021 932-033 932-088	932-024 932-035 932-090	932-024 932-035 932-090	932-028 932-039 932-100
**8	V-ring	EPDM FKM HNBR	932-019 932-032 932-084	932-019 932-032 932-084	932-023 932-034 932-089	932-023 932-034 932-089	932-027 932-038 932-099




Spare Parts List – Inch Sizes (Cont.)


Item	Designation	Material	1,5" OD	2" OD	2,5 "OD	3" OD	4" OD
9	Lantern	1.4301	221-236.18	221-236.08	221-236.09	221-236.10	221-236.11
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.06	221-507.06	221-507.06	221-507.06	221-507.06
65	Sealing ring	EPDM FKM HNBR	924-305 924-307 924-333	924-305 924-307 924-333	924-296 924-308 924-331	924-296 924-308 924-331	924-254 924-309 924-332
72	O-ring	EPDM FKM HNBR	930-610 930-662 930-646	930-610 930-662 930-646	930-611 930-663 930-647	930-611 930-663 930-647	930-611 930-663 930-647
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643
74	Snap seal	PVDF	221-000522	221-000522	221-000523	221-000523	221-000523
91	Cleaning connection	1.4301	221-237.08	221-237.08	221-237.08	221-237.08	221-237.08
**94	V-ring RA	EPDM FKM HNBR	221-365.07 221-365.10 221-365.18	221-365.07 221-365.10 221-365.18	221-365.08 221-365.11 221-365.20	221-365.08 221-365.11 221-365.20	221-365.09 221-365.12 221-365.19
145	Leakage indicator	1.4301	221-237.43	221-237.43	221-237.43	221-237.43	221-237.43
415	Housing LCS-90	1.4404	221-633.03	221-633.05	221-633.07	221-633.09	221-633.19
416	Housing LES-90	1.4404	221-633.22	221-633.24	221-633.26	221-633.17	221-633.18
A	Actuator VARIVENT®		See spare parts list for actuator type VARIVENT®				
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S		See spare parts list for control top type T.VIS See spare parts list for control top type S				
C	Rinsing valve SPV-C		See spare parts list for rinsing valve type SPV-C				
L	Lifting actuator T		See spare parts list for lifting actuator type T				
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set.					413-136		

** Do not grease item 7, 8 and 94

A²) When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.

Mixproof Valve L_HL

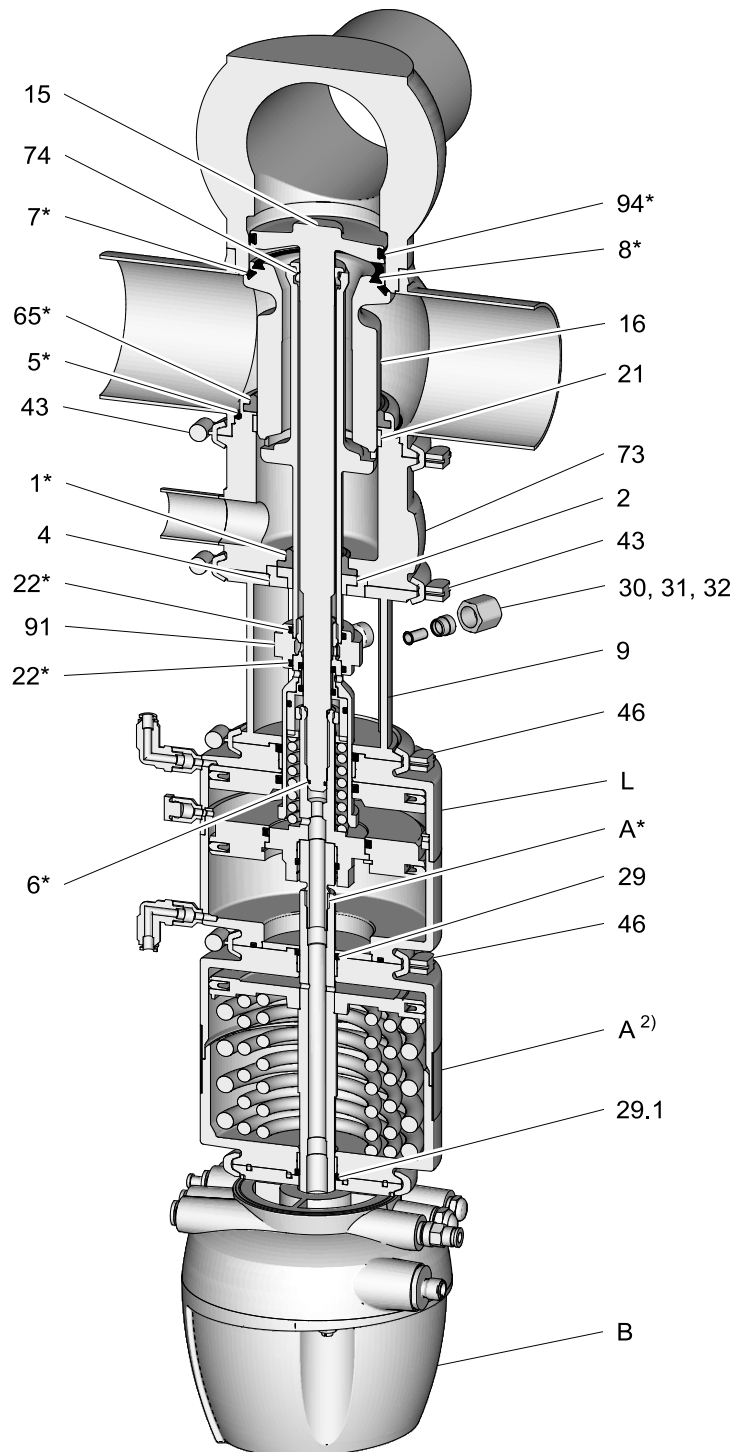

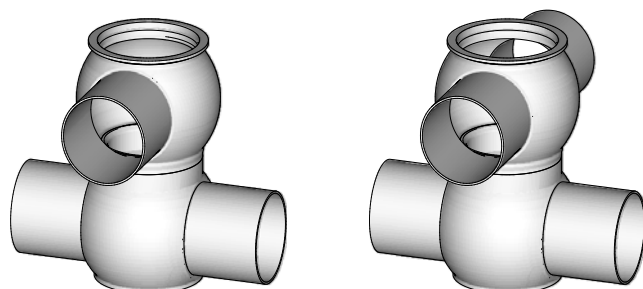

Housing combinations

Spare Parts List – Metric Sizes

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
* Sealing set, complete		EPDM FKM	221-001184 221-001185	221-001184 221-001185	221-001186 221-001187	221-001186 221-001187	221-001188 221-001189
*1	Sealing ring	EPDM FKM	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
*5	O-ring	EPDM FKM	930-144 930-171	930-144 930-171	930-150 930-176	930-150 930-176	930-156 930-178
*6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
*7**	V-ring	EPDM FKM	932-021 932-033	932-021 932-033	932-024 932-035	932-024 932-035	932-028 932-039
*8**	V-ring	EPDM FKM	932-019 932-032	932-019 932-032	932-023 932-034	932-023 932-034	932-027 932-038
9	Lantern DL	1.4301	221-236.16	221-236.16	221-236.02	221-236.02	221-236.03
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double-disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114
*22	O-ring	EPDM FKM	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244
30	Cap nut	1.4571	933-456	933-456	933-456	933-456	933-456
31	Olive	1.4571	933-455	933-455	933-455	933-455	933-455
32	Support sleeve	1.4571	933-382	933-382	933-382	933-382	933-382
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.06	221-507.06	221-507.06	221-507.06	221-507.06
*65	Sealing ring	EPDM FKM	924-305 924-307	924-305 924-307	924-296 924-308	924-296 924-308	924-254 924-309
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643
74	Cleaning nozzle	PVDF	221-334.01	221-334.01	221-334.02	221-334.02	221-334.02
91	Cleaning connection	1.4301	221-237.08	221-237.08	221-237.08	221-237.08	221-237.08



Spare Parts List – Metric Sizes (Cont.)

Item	Designation	Material	DN 40	DN 50	DN 65	DN 80	DN 100
*94**	V-ring	EPDM FKM	221-365.07 221-365.10	221-365.07 221-365.10	221-365.08 221-365.11	221-365.08 221-365.11	221-365.09 221-365.12
A	Actuator	See spare parts list for actuator type VARIVENT®					
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S	See spare parts list for control top type T.VIS See spare parts list for control top type S					
L	Lifting actuator T	See spare parts list for lifting actuator type T					
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set					413-136		

The items marked with an * are included in the sealing set. ** Do not grease item 7, 8 and 94

A²⁾ When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.

Spare Parts List – Inch Sizes

Item	Designation	Material	1,5" OD	2" OD	2,5" OD	3" OD	4" OD
* Sealing set, complete		EPDM FKM	221-001184 221-001185	221-001184 221-001185	221-001186 221-001187	221-001186 221-001187	221-001188 221-001189
*1	Sealing ring	EPDM FKM	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083	924-085 924-083
2	Bearing Bearing, 3A	PTFE/carbon SUSTA- PVDF	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099	935-002 935-099
4	Bearing disk	1.4301	221-142.03	221-142.03	221-142.03	221-142.03	221-142.03
*5	O-ring	EPDM FKM	930-144 930-171	930-144 930-171	930-150 930-176	930-150 930-176	930-156 930-178
*6	O-ring	NBR	930-004	930-004	930-004	930-004	930-004
*7**	V-ring	EPDM FKM	932-021 932-033	932-021 932-033	932-024 932-035	932-024 932-035	932-028 932-039
*8**	V-ring	EPDM FKM	932-019 932-032	932-019 932-032	932-023 932-034	932-023 932-034	932-027 932-038
9	Lantern	1.4301	221-236.18	221-236.08	221-236.09	221-236.10	221-236.11
15	Valve disk T_R	1.4404	221-000673	221-000666	221-000650	221-000680	221-000644
16	Double-disk T_R	1.4404	221-000676	221-000669	221-000663	221-000679	221-000647
21	Guide ring	Turcite	935-056	935-056	935-042	935-042	935-043
21	Guide ring 3A	MF6	935-117	935-117	935-113	935-113	935-114
*22	O-ring	EPDM FKM	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244	930-243 930-244
30	Cap nut	1.4571	933-456	933-456	933-456	933-456	933-456
31	Olive	1.4571	933-455	933-455	933-455	933-455	933-455
32	Support sleeve	1.4571	933-382	933-382	933-382	933-382	933-382




Spare Parts List – Inch Sizes (Cont.)

Item	Designation	Material	1,5" OD	2" OD	2,5" OD	3" OD	4" OD
34	Seat ring D	1.4404	221-402.01	221-402.01	221-402.03	221-402.03	221-402.02
43	Clamp joint KL	1.4401	221-507.04	221-507.04	221-507.09	221-507.09	221-507.11
46	Clamp joint KL	1.4401	221-507.06	221-507.06	221-507.06	221-507.06	221-507.06
*65	Sealing ring	EPDM FKM	924-305 924-307	924-305 924-307	924-296 924-308	924-296 924-308	924-254 924-309
73	Leakage housing	1.4404	221-000665	221-000665	221-000641	221-000641	221-000643
74	Cleaning nozzle	PVDF	221-334.01	221-334.01	221-334.02	221-334.02	221-334.02
91	Cleaning connection	1.4301	221-237.08	221-237.08	221-237.08	221-237.08	221-237.08
*94**	V-ring	EPDM FKM	221-365.07 221-365.10	221-365.07 221-365.10	221-365.08 221-365.11	221-365.08 221-365.11	221-365.09 221-365.12
A	Actuator	See spare parts list for actuator type VARIVENT®					
A*	Adapter LFT-R	EN AW-6082 T6	221-614.01	221-614.01	221-614.01	221-614.01	221-614.01
B	T.VIS control top Control top type S	See spare parts list for control top type T.VIS See spare parts list for control top type S					
L	Lifting actuator T	See spare parts list for lifting actuator type T					
Grease RIVOLTA F.L.G. MD-2 100g tube not included in the sealing set					413-136		


The items marked with an * are included in the sealing set. ** Do not grease item 7, 8 and 94

A²⁾ When ordering an actuator as a spare part, the adapter (A*) must be ordered and fitted addition.

Flushing Valve SPV

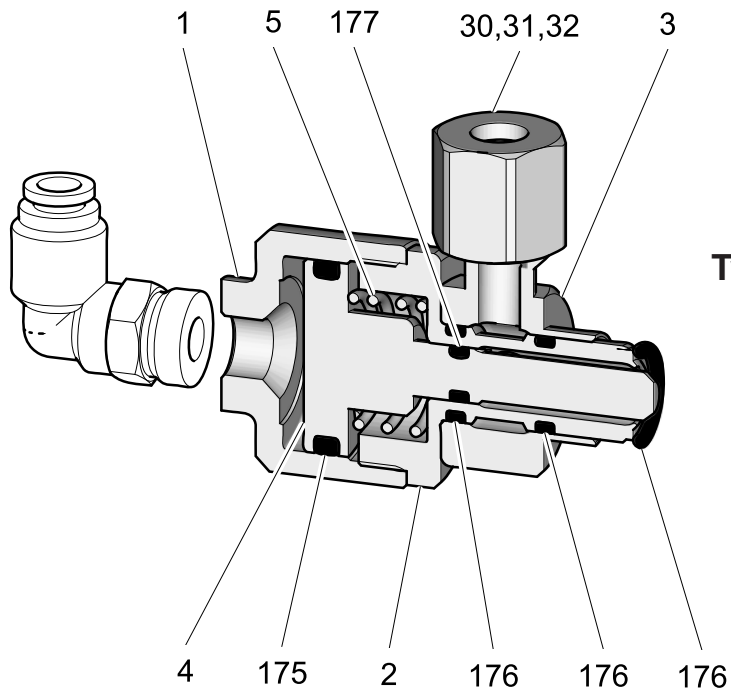

Type C and C-S

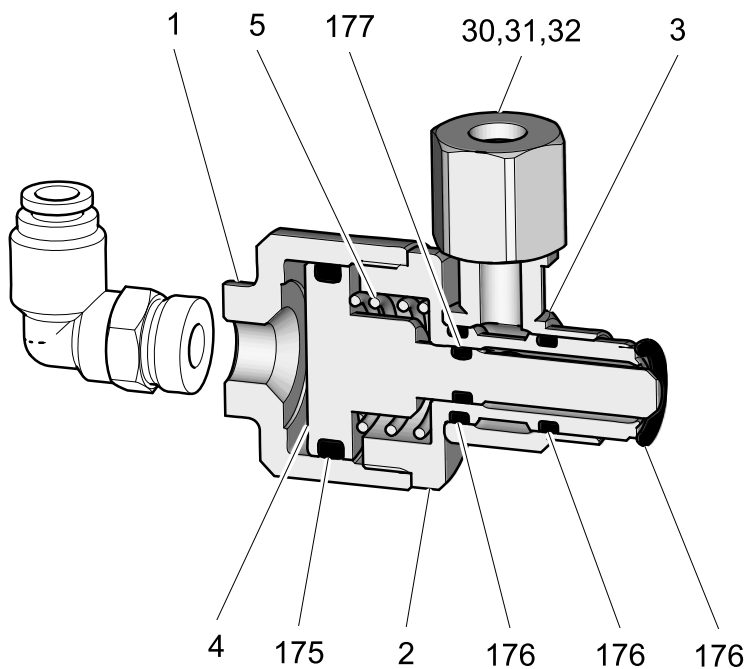

Type M



Item.	Designation	Material	Type C*	Type M*	Type C-S*
	Flushing Valve cpl.	EPDM FKM	221-464.01 221-464.06	221-464.13 221-464.18	221-464.21 221-464.22
1	Cylinder SPV	PVDF 1.4305	221-464.03 --	221-464.03 --	-- 221-464.10
2	Housing SPV	1.4305	221-464.08	221-464.08	221-464.08
3	Outlet SPV	1.4301	221-464.05	221-464.09	221-464.05
4	Piston SPV	PVDF	221-464.04	221-464.04	221-464.04
5	Pressure spring	1.4310	931-225	931-225	931-225
30	Cap nut	1.4571	933-456	933-456	933-456
31	Cutting ring	1.4571	933-455	933-455	933-455
32	Supporting sleeve	1.4571	933-382	933-382	933-382
175	O-ring	NBR	930-029	930-029	930-029
176	O-ring	EPDM FKM	930-677 930-684	930-677 930-684	930-677 930-684
177	O-ring	EPDM FKM	930-678 930-683	930-678 930-683	930-678 930-683


* Type C: Standard for C valves

* Type M: ECO-MATRIX

* Type C-S: for C valves at elevated temperatures (metal cylinder)

Dimension Sheets

Mixproof Valve Types L_SC, L_SL, L_HC, L_HL

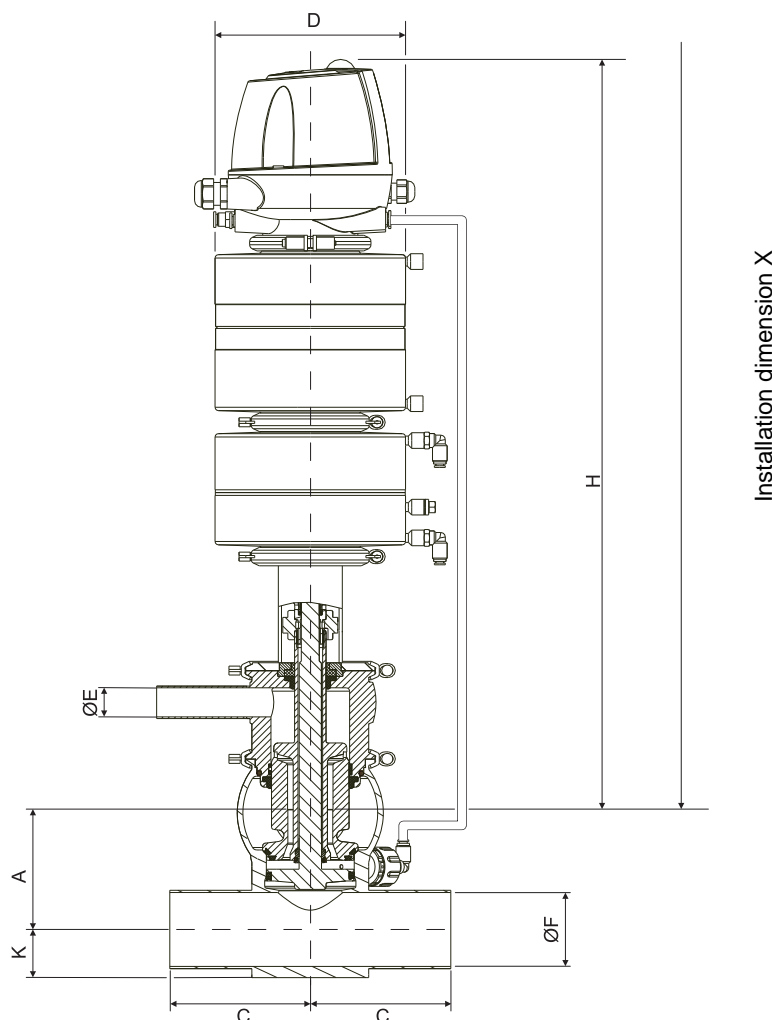

Dimension sheet

Dimension	DN 40	DN 50	DN 65	DN 80	DN 100	1,5" OD	2" OD	2,5" OD	3" OD	4" OD
A	74	86	104	119	138	71	83.5	98	111	135.5
C	90	90	125	125	125	90	90	125	125	125
D	110	110	135	170	210	110	110	135	170	210
H	635	633	643	680	680	636	634	646	684	681
K	29	35	43	50.5	60	27.5	33.8	40	46.5	58.8
ØE	20	20	26	26	26	20	20	26	26	26
ØF	38	50	66	81	100	34.9	47.6	60.3	73	97.6
X	723	733	759	811	830	721	732	756	807	828
Stroke	31	35	35	35	35	22	35	35	35	35

GEA Tuchenhausen GmbH
Am Industriepark 2-10
21514 Büchen, Germany

Telephone +49 4155 49-0