



Table of contents.....01

Hardware identification table.....02

Single & double hitch.....03-04

Ball hitch.....05

Draw bar.....06

Axle and frame.....07

Brake, axle and hub - since September 2014.....08

Brake, axle and hub - from June 1995 to September 2014.....09

Brake, axle and hub - from 1993 to June 1995.....10

Disc brake hub.....11-12

Disc brake system - master cylinder.....13

Disc brake system.....14

Rim and wheel.....15

Wheel nut wrench, impeller, housing, intake and front drain.....16

Bearing housing, impeller and housing cover plate.....17

Bearing housing, plug and housing cover plate (old model).....18

Nursing kit system 6".....19

6" discharge pipe.....20-21

In-tank recirculation kit for 6" discharge pipe.....22

Rotative valve for actuator and cross-shaped adapter with flow restrictor for 6" discharge pipe.....23

Spreading nozzle and directional valve for 6" discharge pipe.....24

Spreading nozzle pipe chart for 6" discharge pipe.....25

8" discharge pipe.....26-27

In-tank recirculation kit for 8" discharge pipe.....28

Rotative valve for actuator and cross-shaped adapter with flow restrictor for 8" discharge pipe.....29

Spreading nozzle and directional valve for 8" discharge pipe.....30

Spreading nozzle pipe chart for 8" discharge pipe.....31

Rear drain and fill indicator.....32

Fill opening.....33

Signal lights.....34

Electronique fill indicator.....35


Tank repair plate.....36

Ladder.....37

Hydraulic jack on the transport support.....38

Jack.....39

Hardware Identification	
Type	Designation
Hexagonal bolt	-
Carriage bolt	CB
Square head bolt	SB
Socket head cap screw	SCS
Socket head set screw	SSS
Flat head cap screw	FCS
Hexagon nut	-
Hexagon nylon lock nut	N
Hexagon oval lock nut	OVL
Hexagon tri-lock nut	TRI
Castle nut	CSL
Flange nut	FLN
Wing nut	WNG
Flat washer	-
Lock washer	L
SAE washer	SAE
Large ext. dia. washer	LD
Small ext. dia. washer	SD
Stainless steel bolts parts	SS

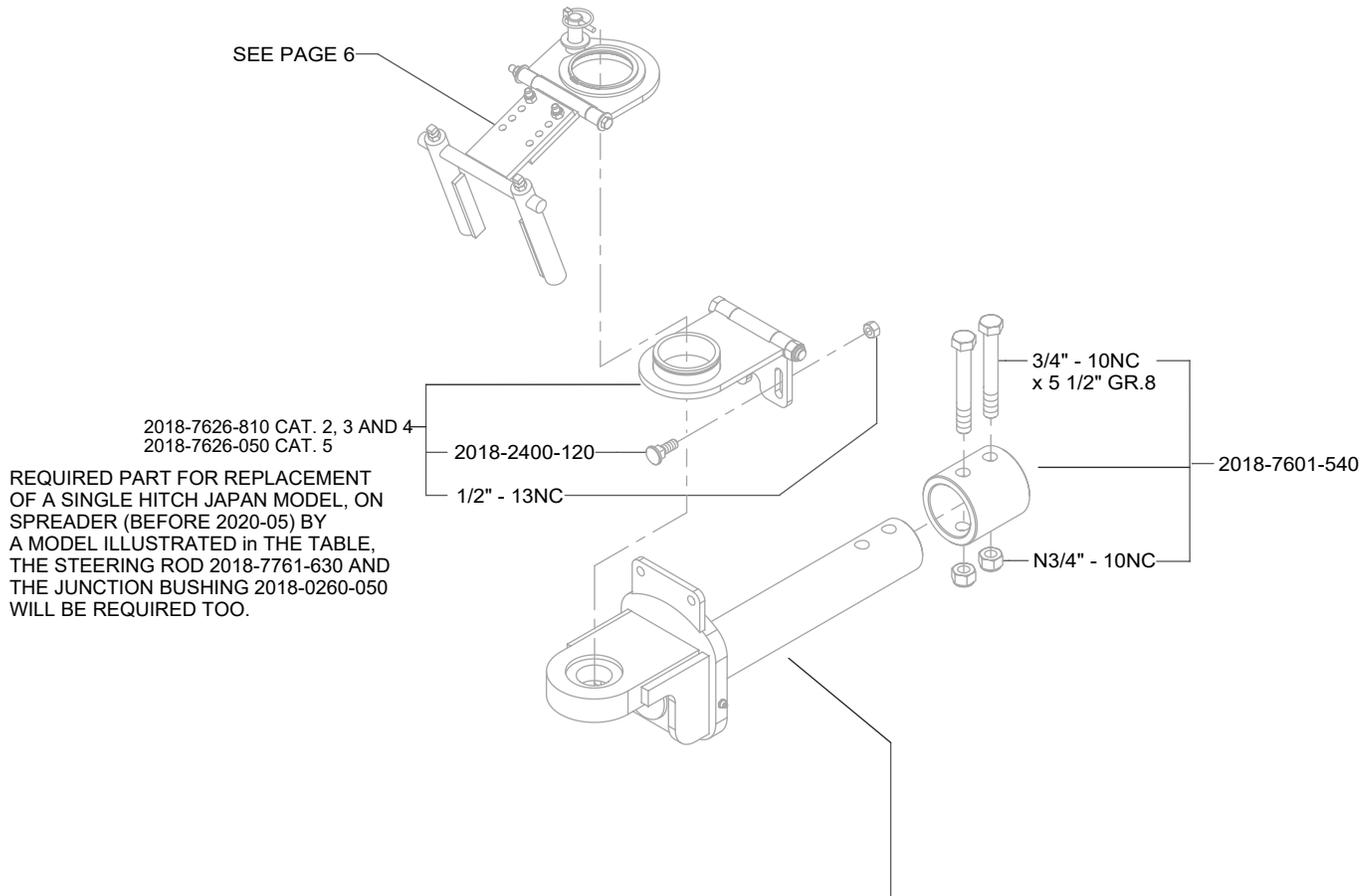



Ø HOLE OR TRACTOR DRAW BAR	CATEGORY	# PIECE
BETWEEN 1 1/4" AND 1 7/16"	2	2018-7761-350
BETWEEN 1 1/2" AND 1 3/4"	3	2018-7761-380
BETWEEN 2" AND 2 1/4"	4	2018-7761-390
BETWEEN 2 3/4" AND 3"	5	2018-7761-410

FOR REPLACEMENT OF A SINGLE HITCH (MODEL BEFORE 2020-05) BY A MODEL ILLUSTRATED IN THE TABLE, THE STEERING ROD 2018-7761-630 AND THE JUNCTION BUSHING 2018-0260-050 WILL BE REQUIRED.


REPLACEMENT OF A DOUBLE HITCH ON SPREADER MODEL LESS THAN 5600 gal UK (BEFORE 2020-05), THE STEERING ROD 2018-7761-610 AND THE JUNCTION BUSHING 2018-0260-050 WILL BE REQUIRED.

Ø TRACTOR	CATEGORY	PARTS #	WEAR PLATE	SPACER PLATE	SPACER PLATE DOUBLE	BALL PIN
1 1/8" TO 1 7/16"	2	2018-7761-230	2018-1595-140	N/A	N/A	2018-3802-420
1 1/2" TO 1 3/4"	3	2018-7761-100	2018-1540-550	N/A	N/A	2018-7508-310
1 1/2" TO 1 3/4"	3	2018-7761-090	2018-1540-550	2018-1540-680	N/A	2018-7508-310
2" TO 2 1/4"	4	2018-7761-420	2018-1540-610	2018-1540-690	N/A	2018-7508-330
2" TO 2 1/4"	4	2018-7761-130	2018-1540-610	2018-1540-690	2018-1540-630	2018-7508-330
2 3/4" TO 3"	5	2018-7761-140	2018-1540-620	N/A	N/A	2018-7508-350
2 3/4" TO 3"	5	2018-7761-120	2018-1540-620	2018-1540-640	N/A	2018-7508-350
2 3/4" TO 3"	5	2018-7761-470	2018-1540-620	2018-1540-640	2018-1541-620	2018-7508-350

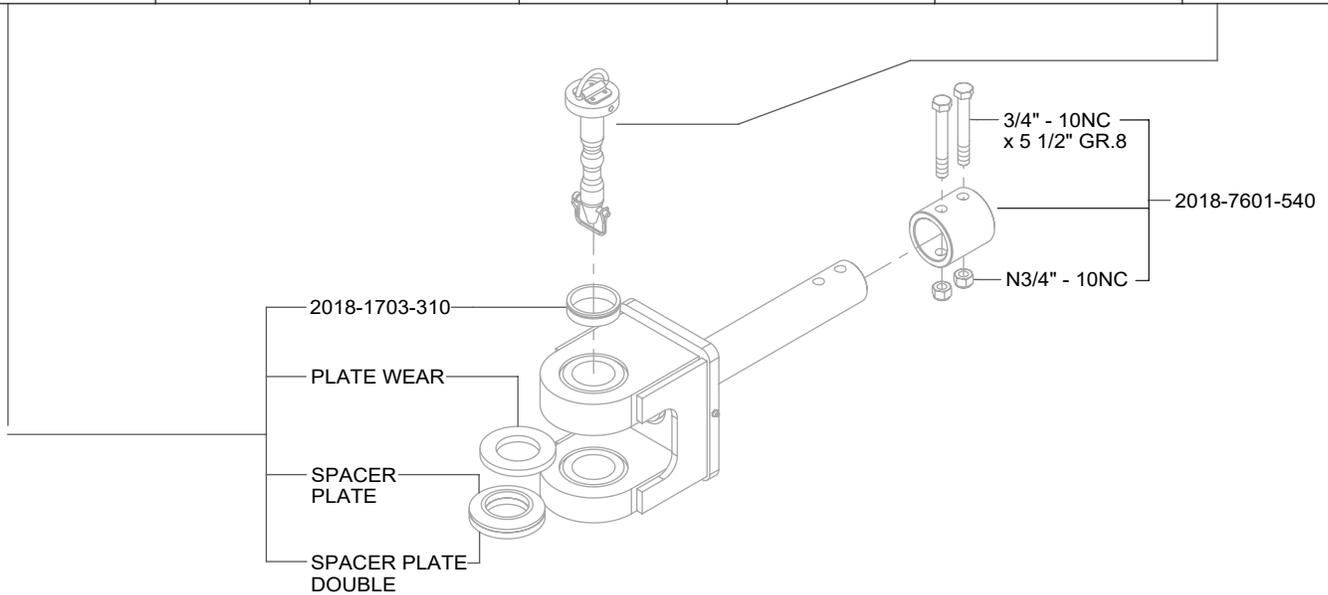


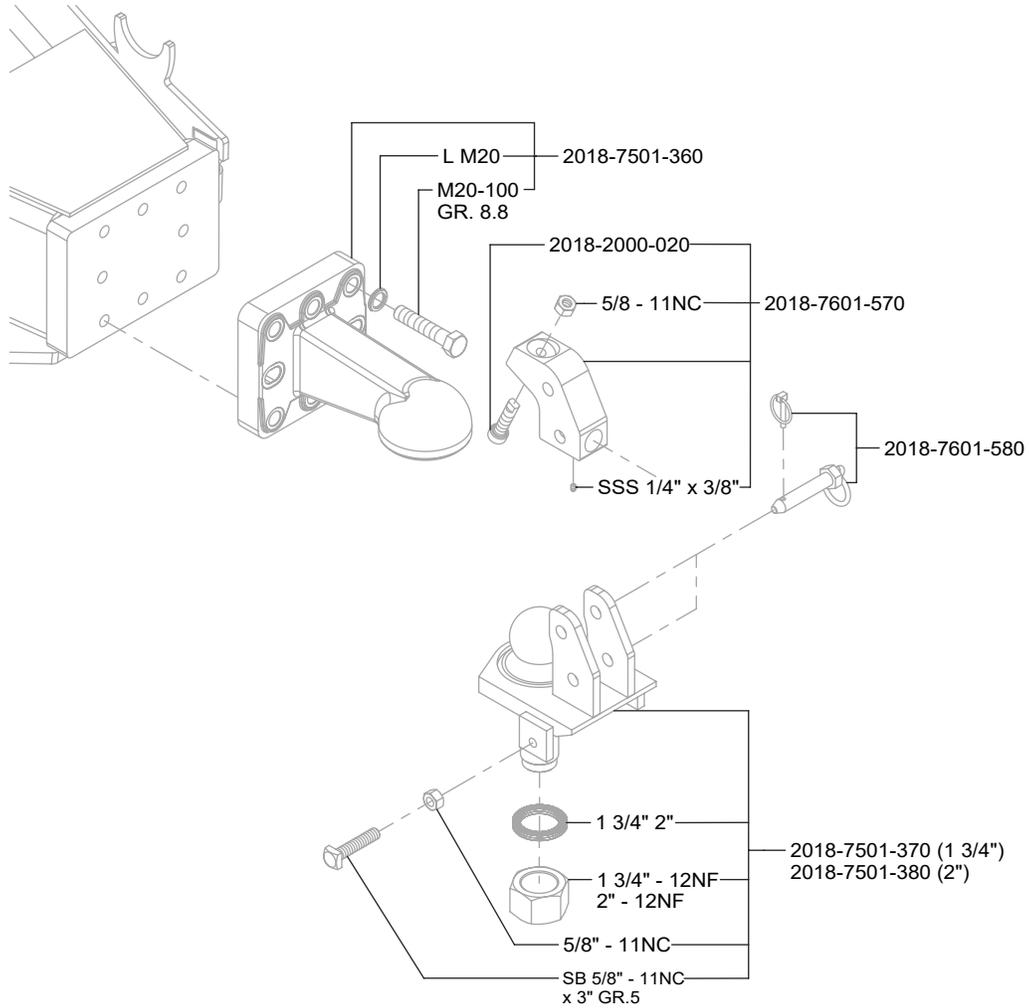


Tension rod		
Spreader length	part no	Rod length
12'	2018-0226-540	87"
14'	2018-0226-550	105"
16'	2018-0226-560	115"
18'	2018-0226-570	134"
20'	2018-0225-810	144"

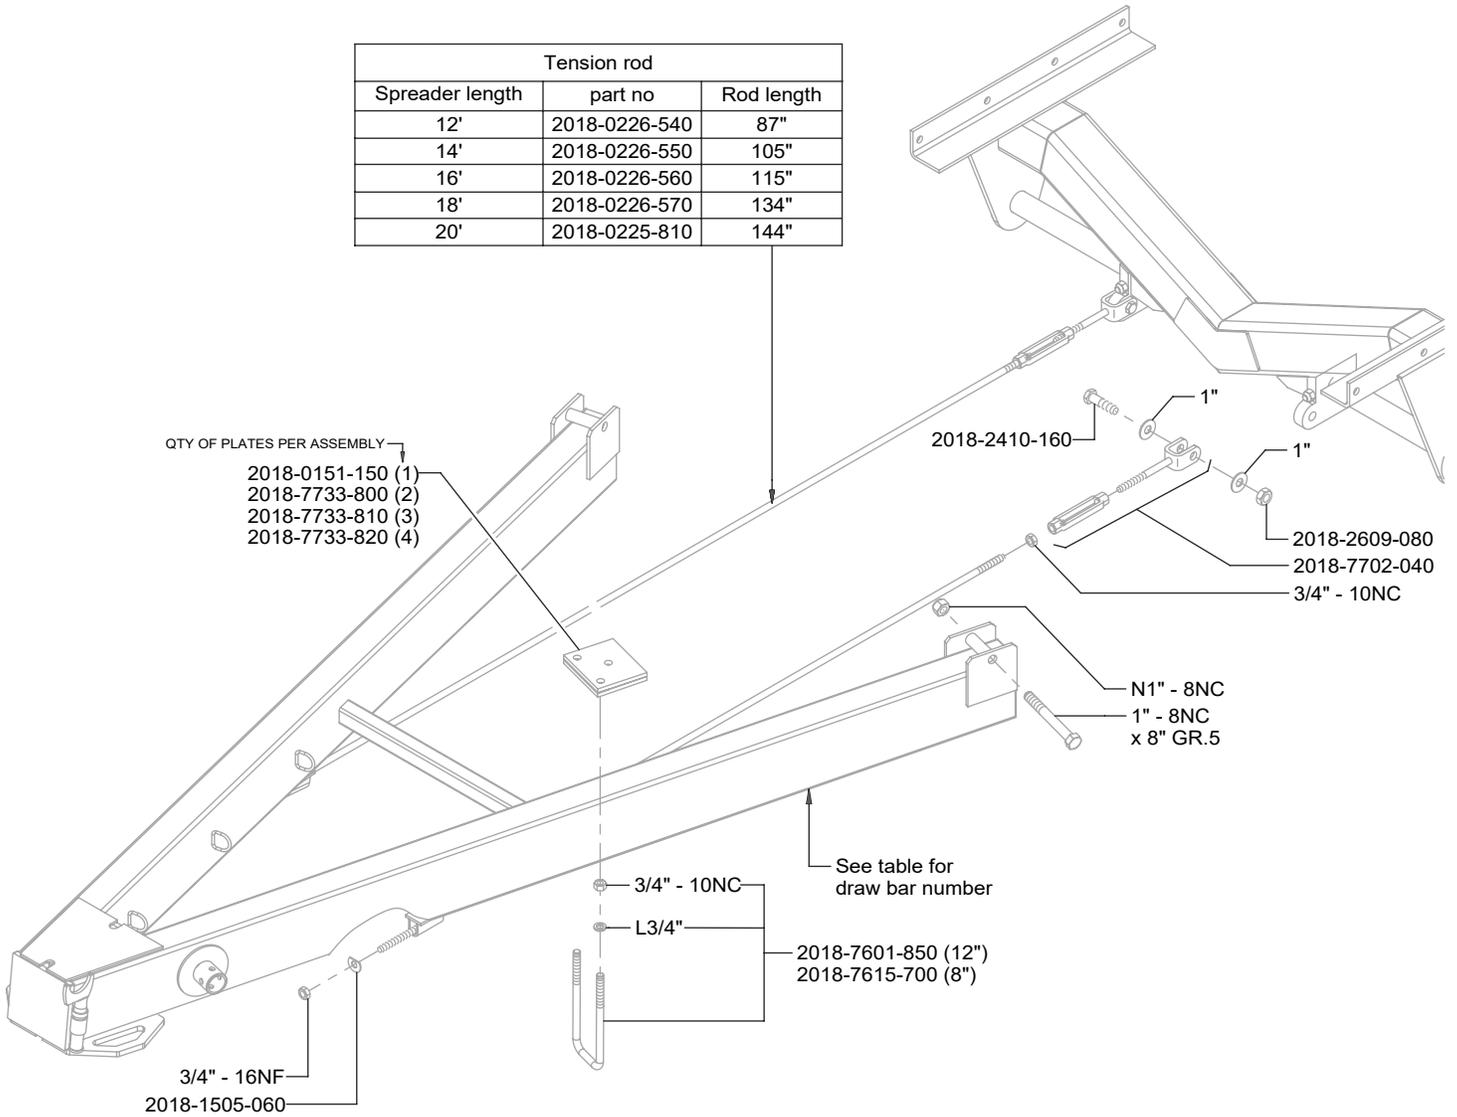

<p>2018-1700-830 (2 1/2")</p> <p>2010-3800-560</p> <p>Swivel hitch draw bar</p>	
<p>1950 - 2250 gal (UK)</p> <p>2350 - 2700 gal (US)</p> <p>8800 - 10250 l.</p>	2018-7627-580
<p>2650 - 3750 gal (UK)</p> <p>3150 - 4500 gal (US)</p> <p>12000 - 17100 l.</p>	2018-7627-590


<p>Ball hitch draw bar</p> <p>2018-7601-500</p>
--

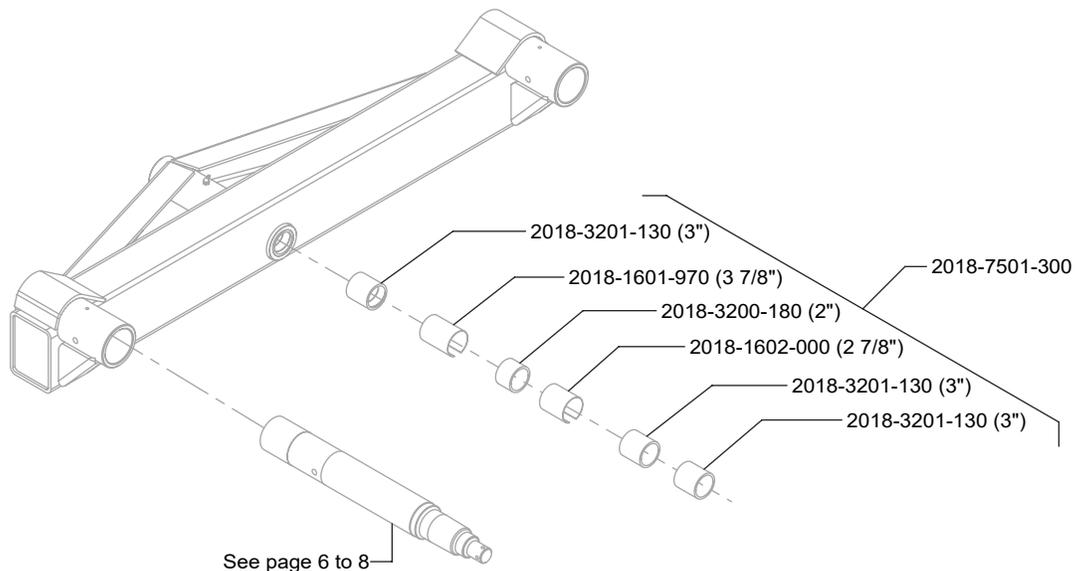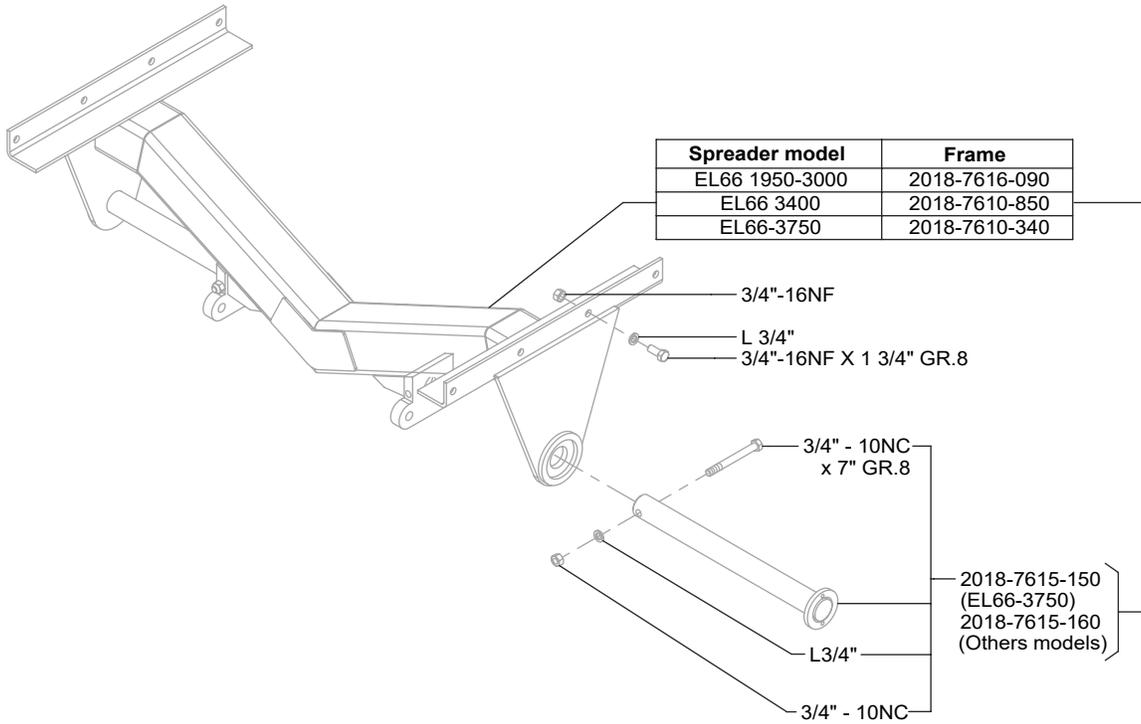


BRAKE, AXLE AND HUB SINCE SEPTEMBER, 2014

Serial no reference: Since CAI1-1408940


For models 1950 and 2250

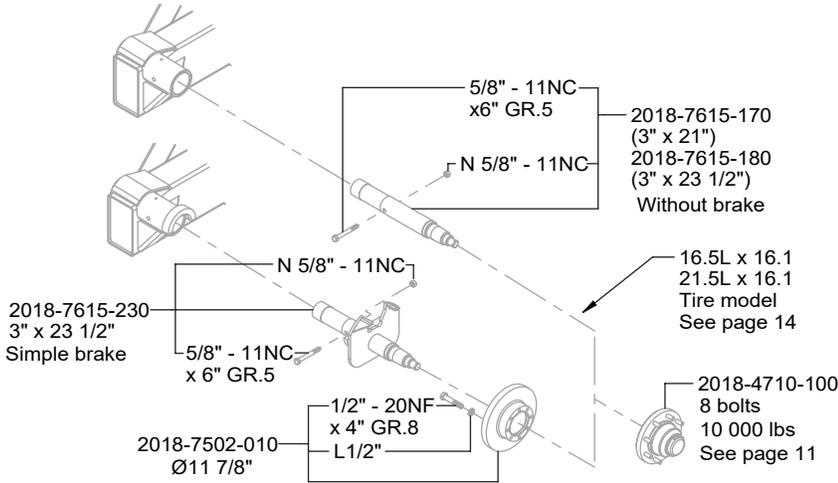




For models 1950 and 2250

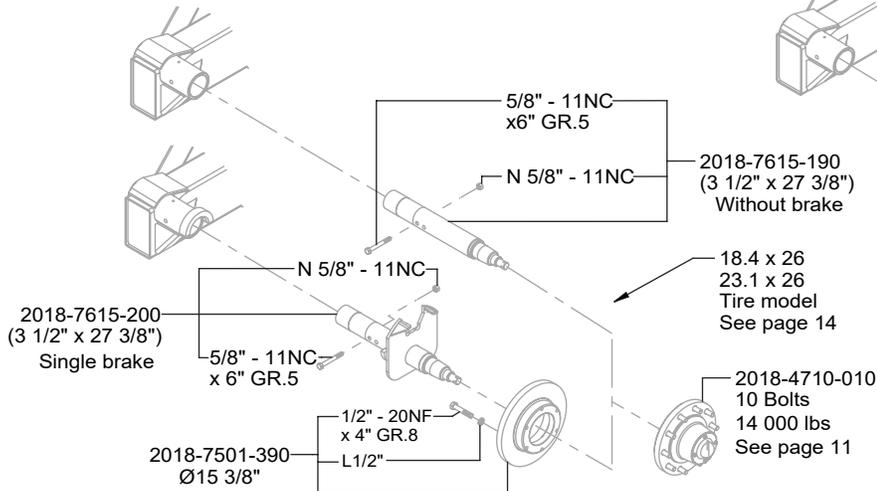

For models 2650 and 3000

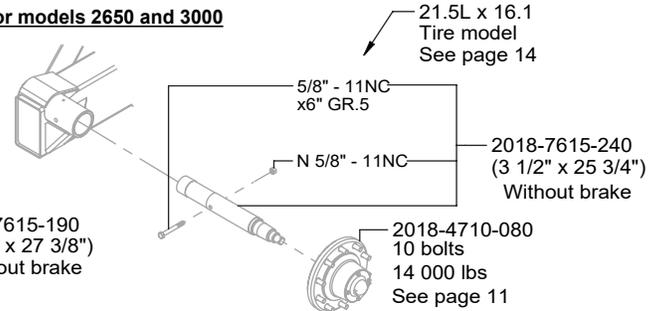

For models 2250 and more

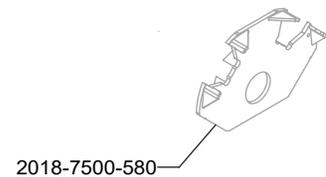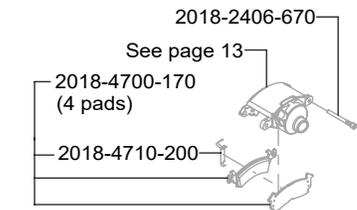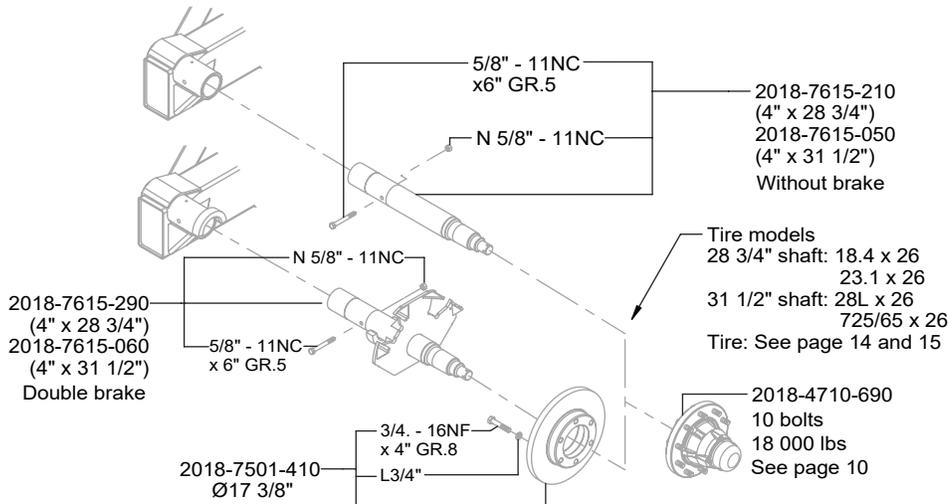


BRAKE, AXLE AND HUB FROM JUNE 1995 TO SEPTEMBER 2014


Note: The 4" axle single caliper model is discontinued.
Use the double caliper model.

Serial no reference: 95-783 @ CA11-1408940



For models 1950 and 2250

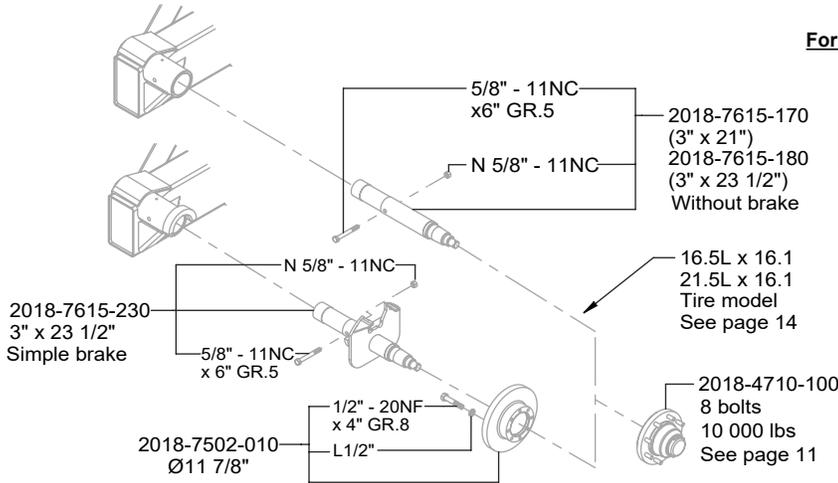



For models 2650 and 3000

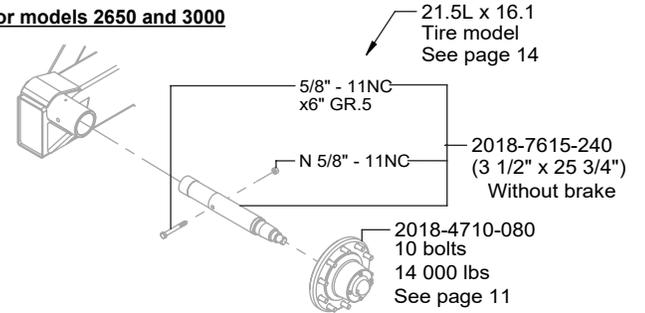

For models 1950 and 2250

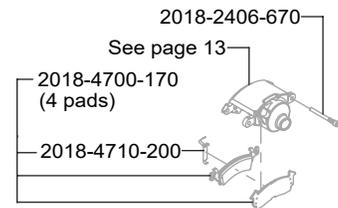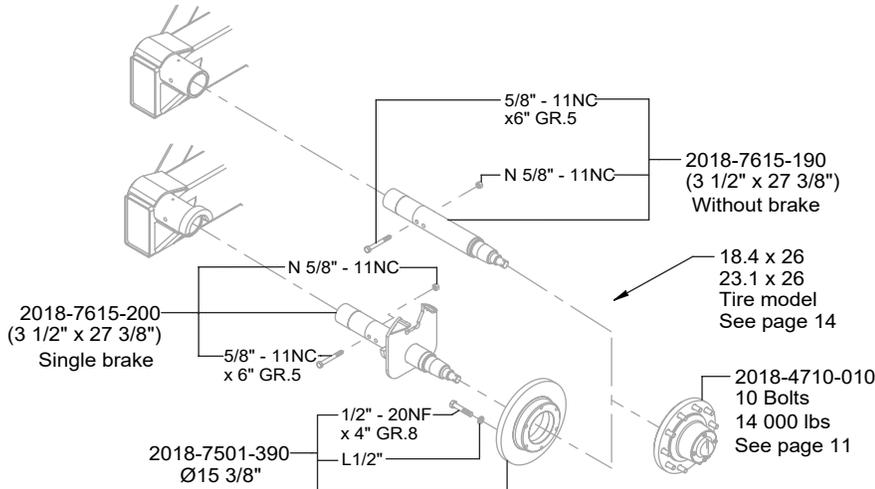

For models 2250 and more

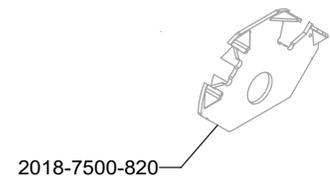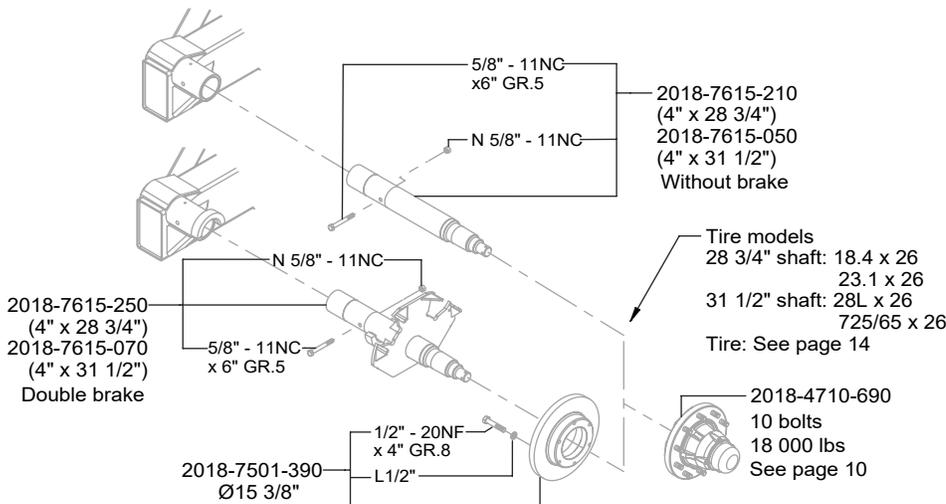


Note: The 4" axle single caliper model is discontinued.
Use the double caliper model.


BRAKE, AXLE AND HUB FROM 1993 TO JUNE 1995

Serial no reference: Before 95-783



For model 2250

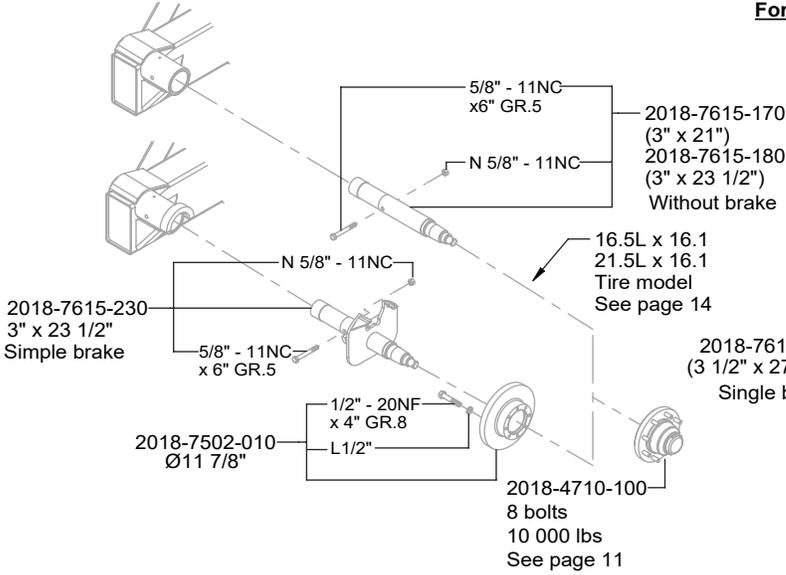


For model 2250

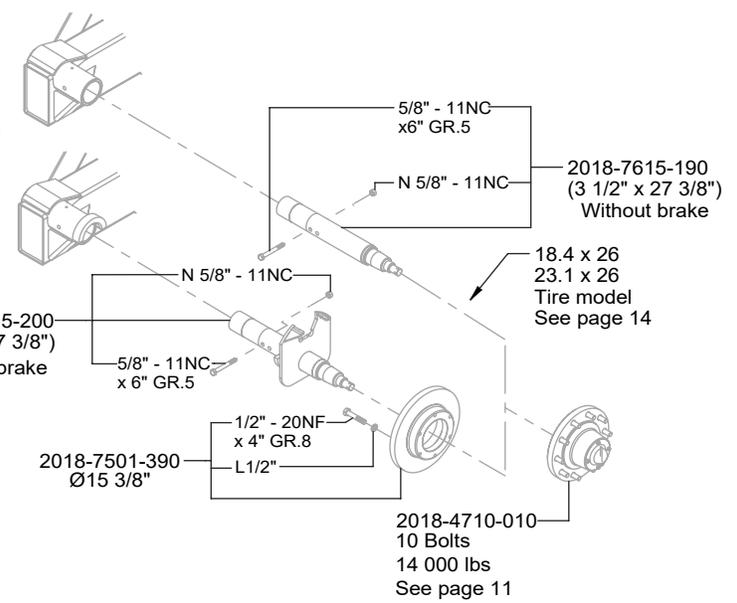


For models 2650 and 3000

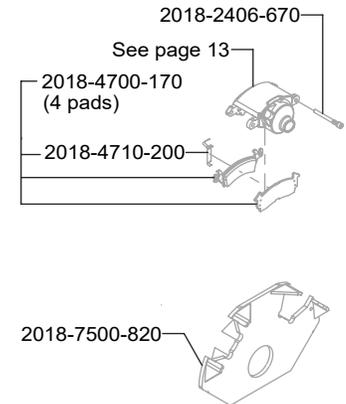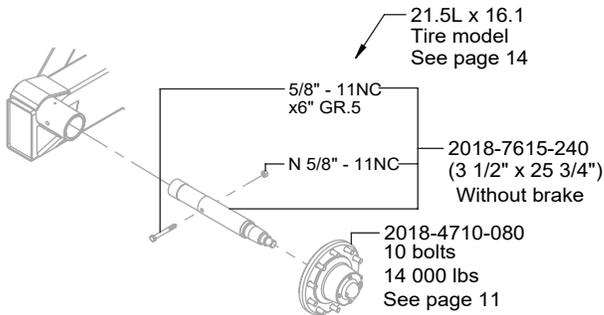

For models 2250 and more

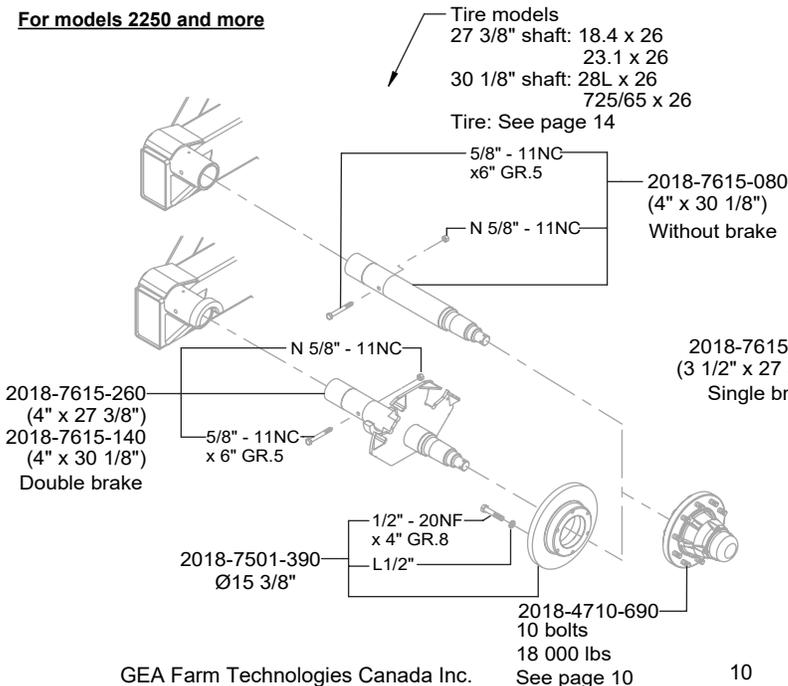


For model 3000

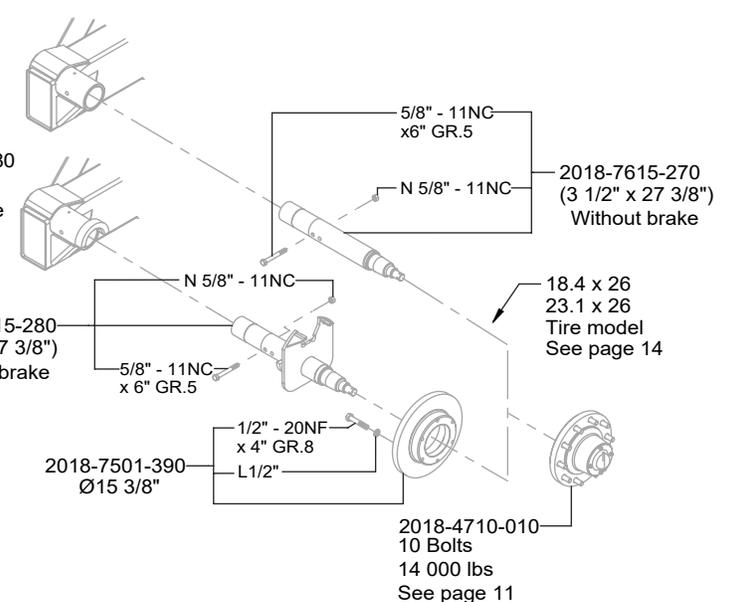


2018-4710-690

10 bolts
18 000 lbs
for Ø17 3/8"
brake disc

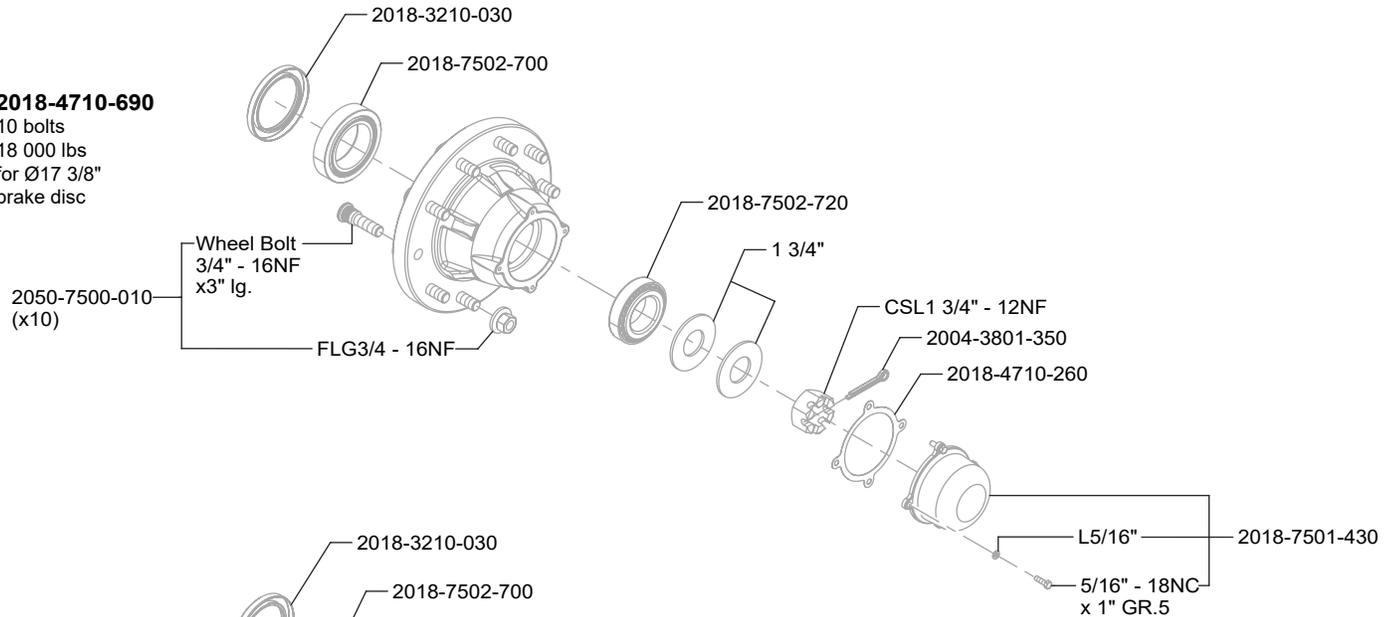


2018-4710-250

10 bolts
18 000 lbs
for Ø15 3/8"
brake disc

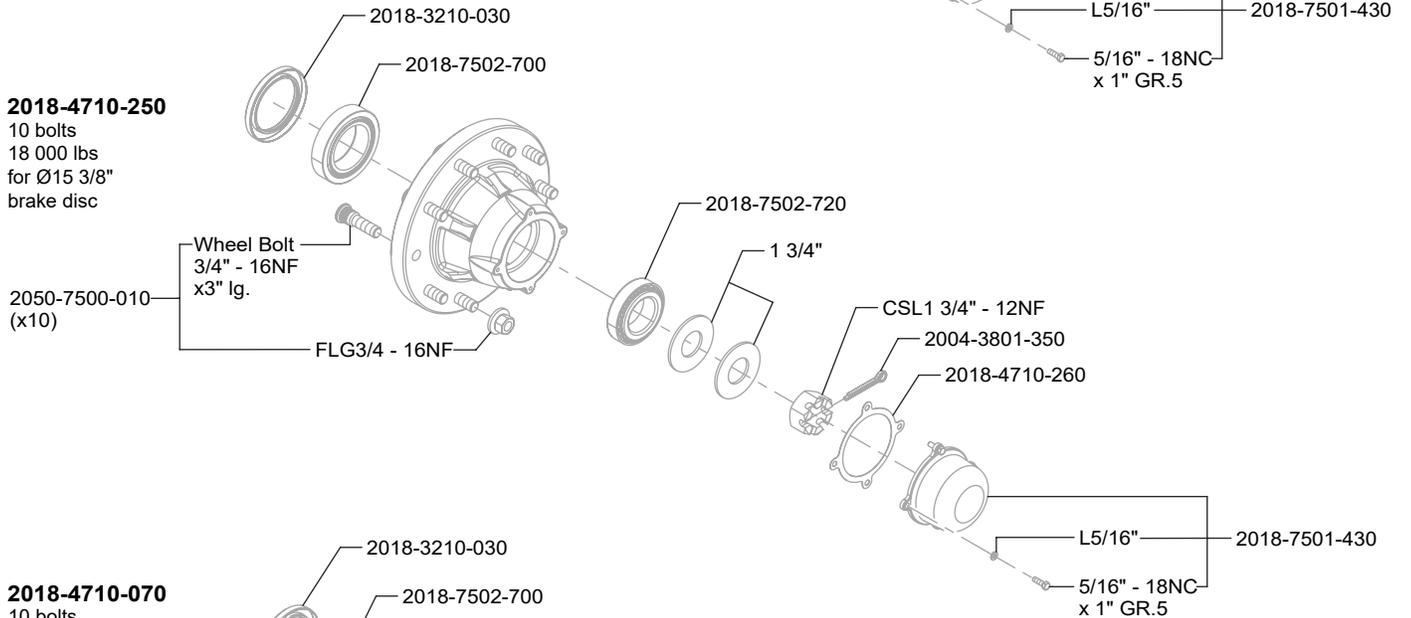


2018-4710-070


10 bolts
16 000 lbs
for Ø15 3/8"
brake disc

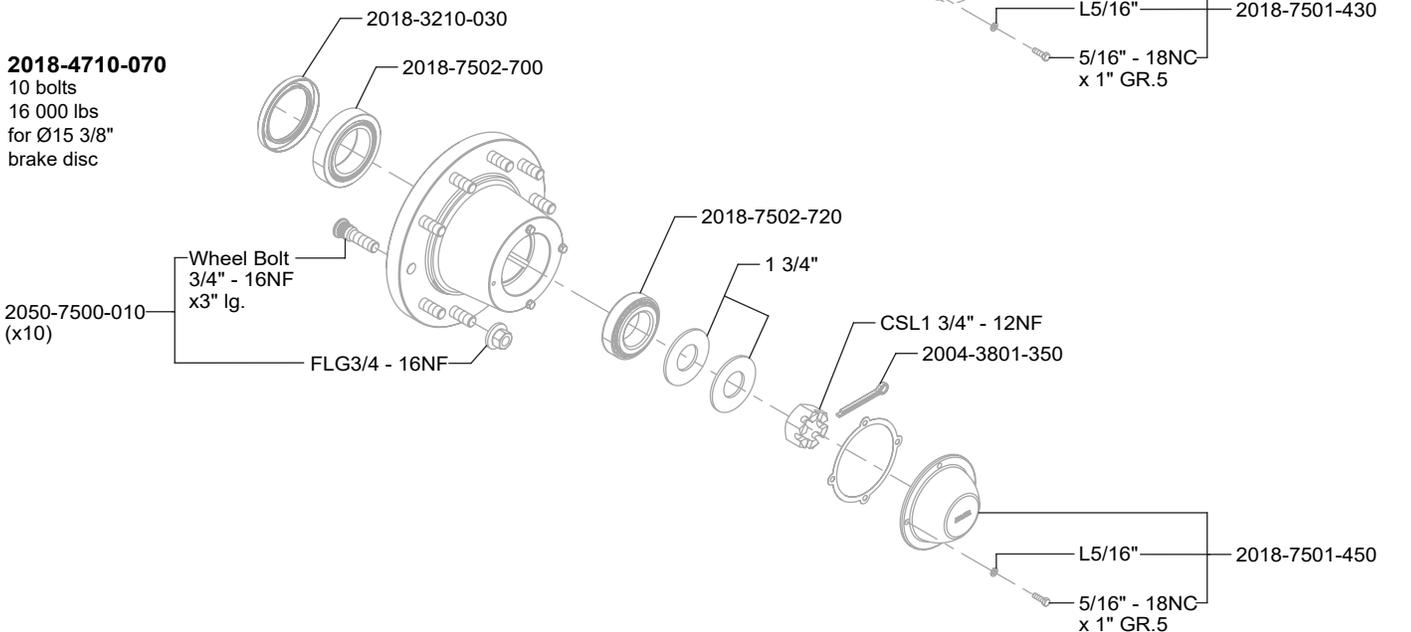


2018-4710-100
 8 bolts
 10 000 lbs
 For Ø3" axle
 and Ø11 3/8" brake disc



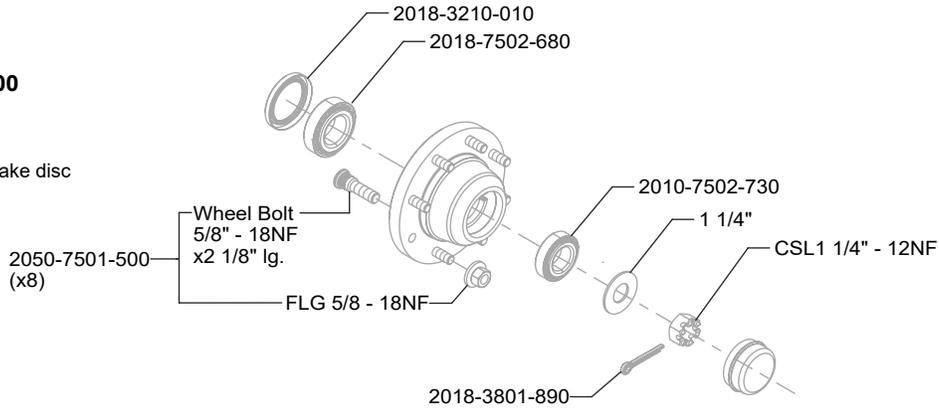


2018-4710-080
 10 bolts
 14 000 lbs
 For Ø3 1/2" axle


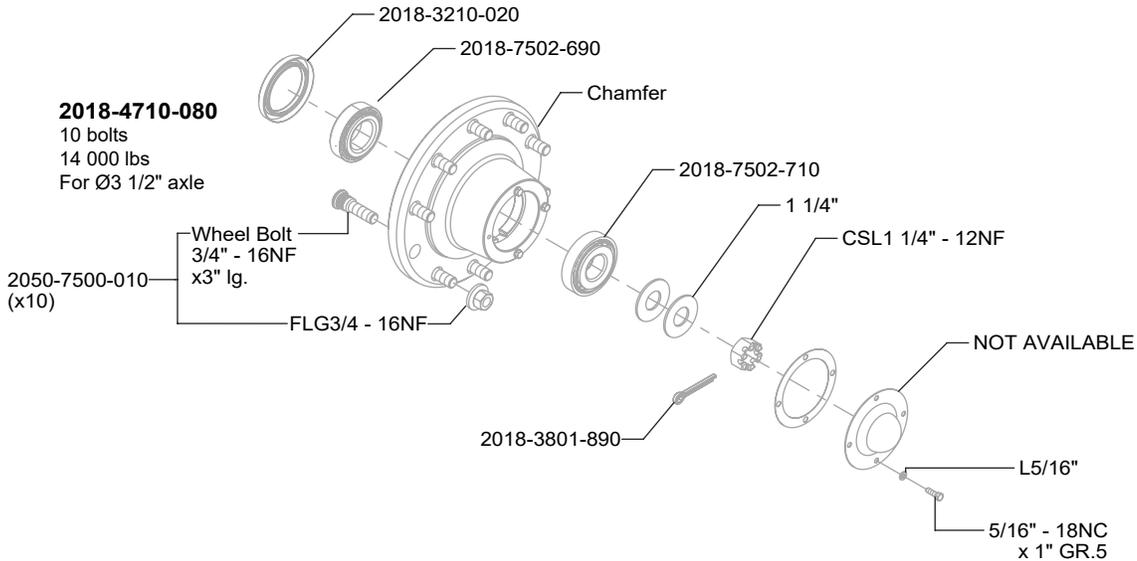








2018-4710-010
 10 bolts
 14 000 lbs
 For Ø3 1/2" axle
 and Ø15 3/8" brake disc

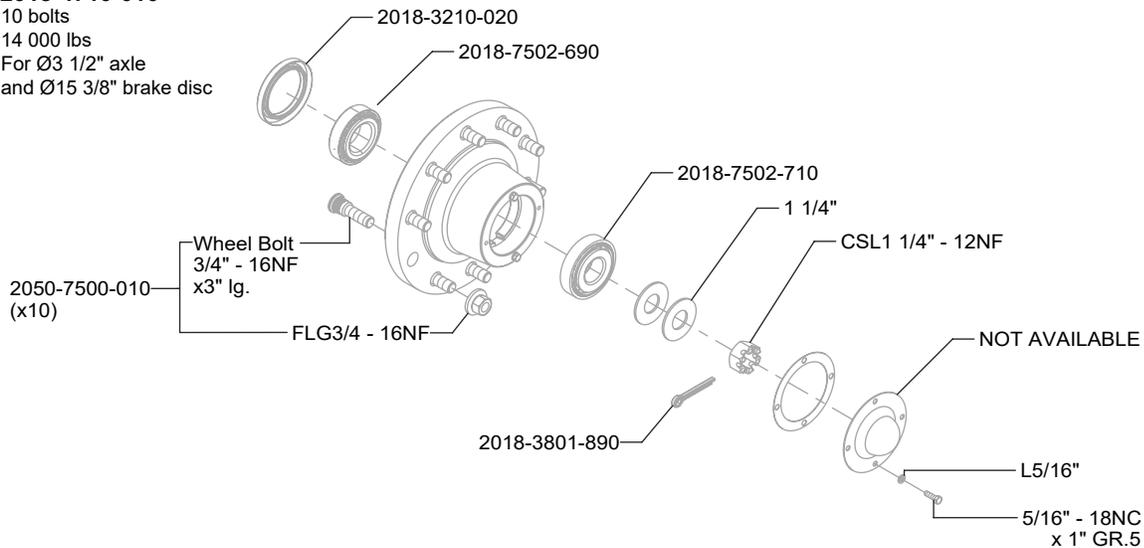

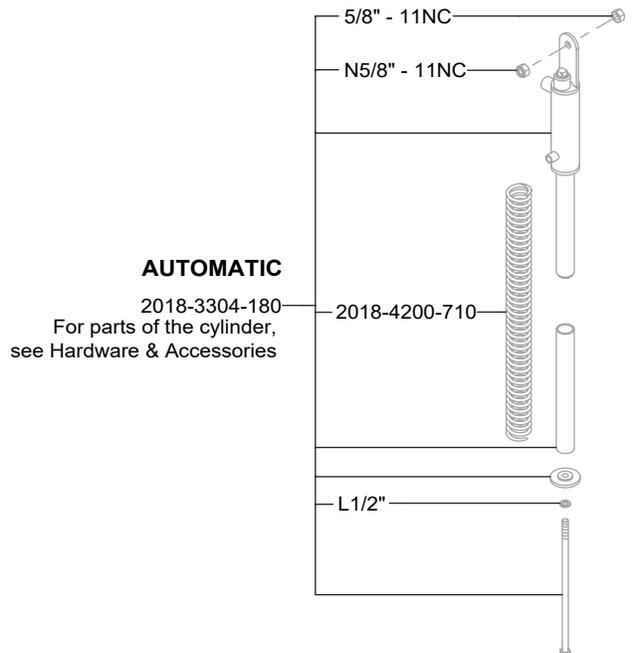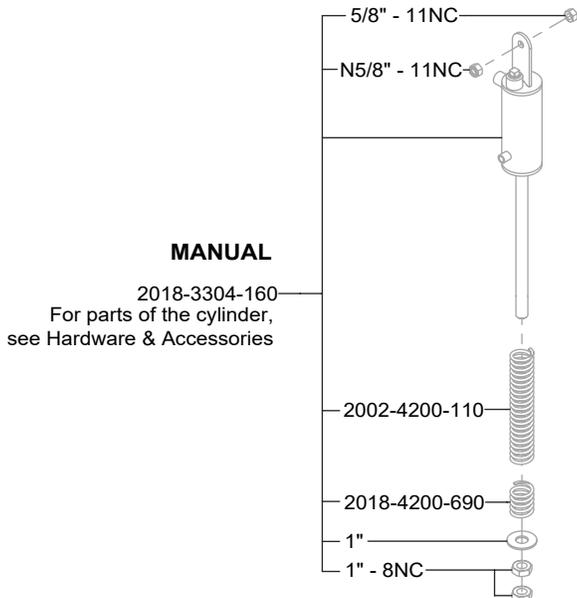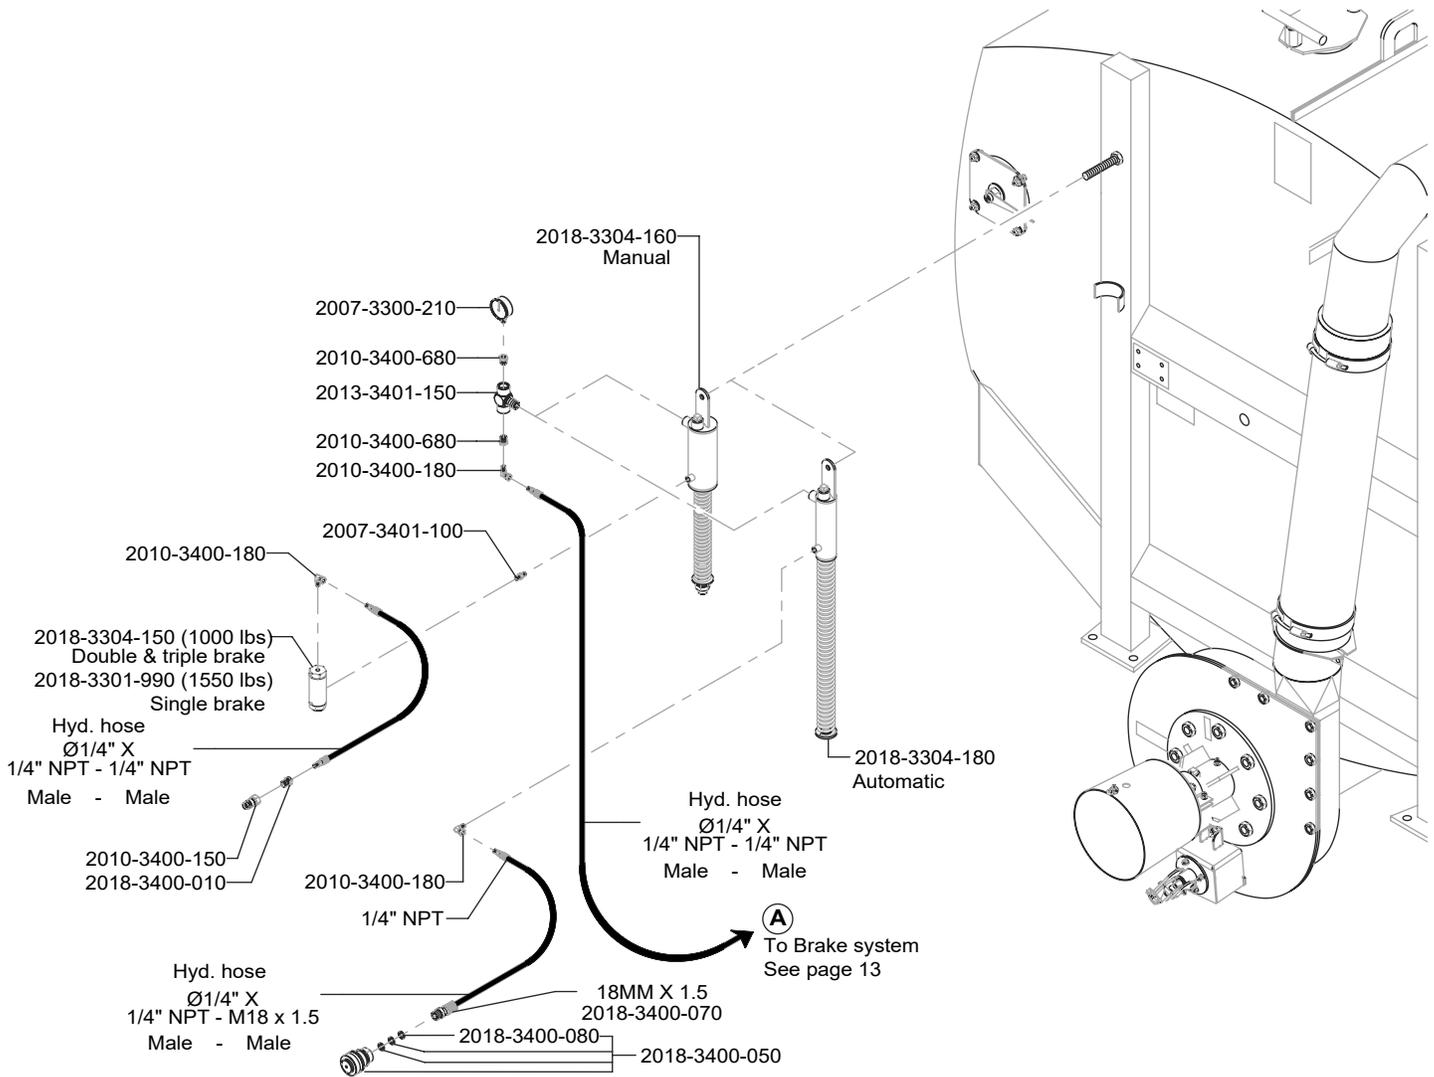


Hydraulic hose:
 Ø1/4"
 1/4" NPT - 1/4" NPT
 Male - Male

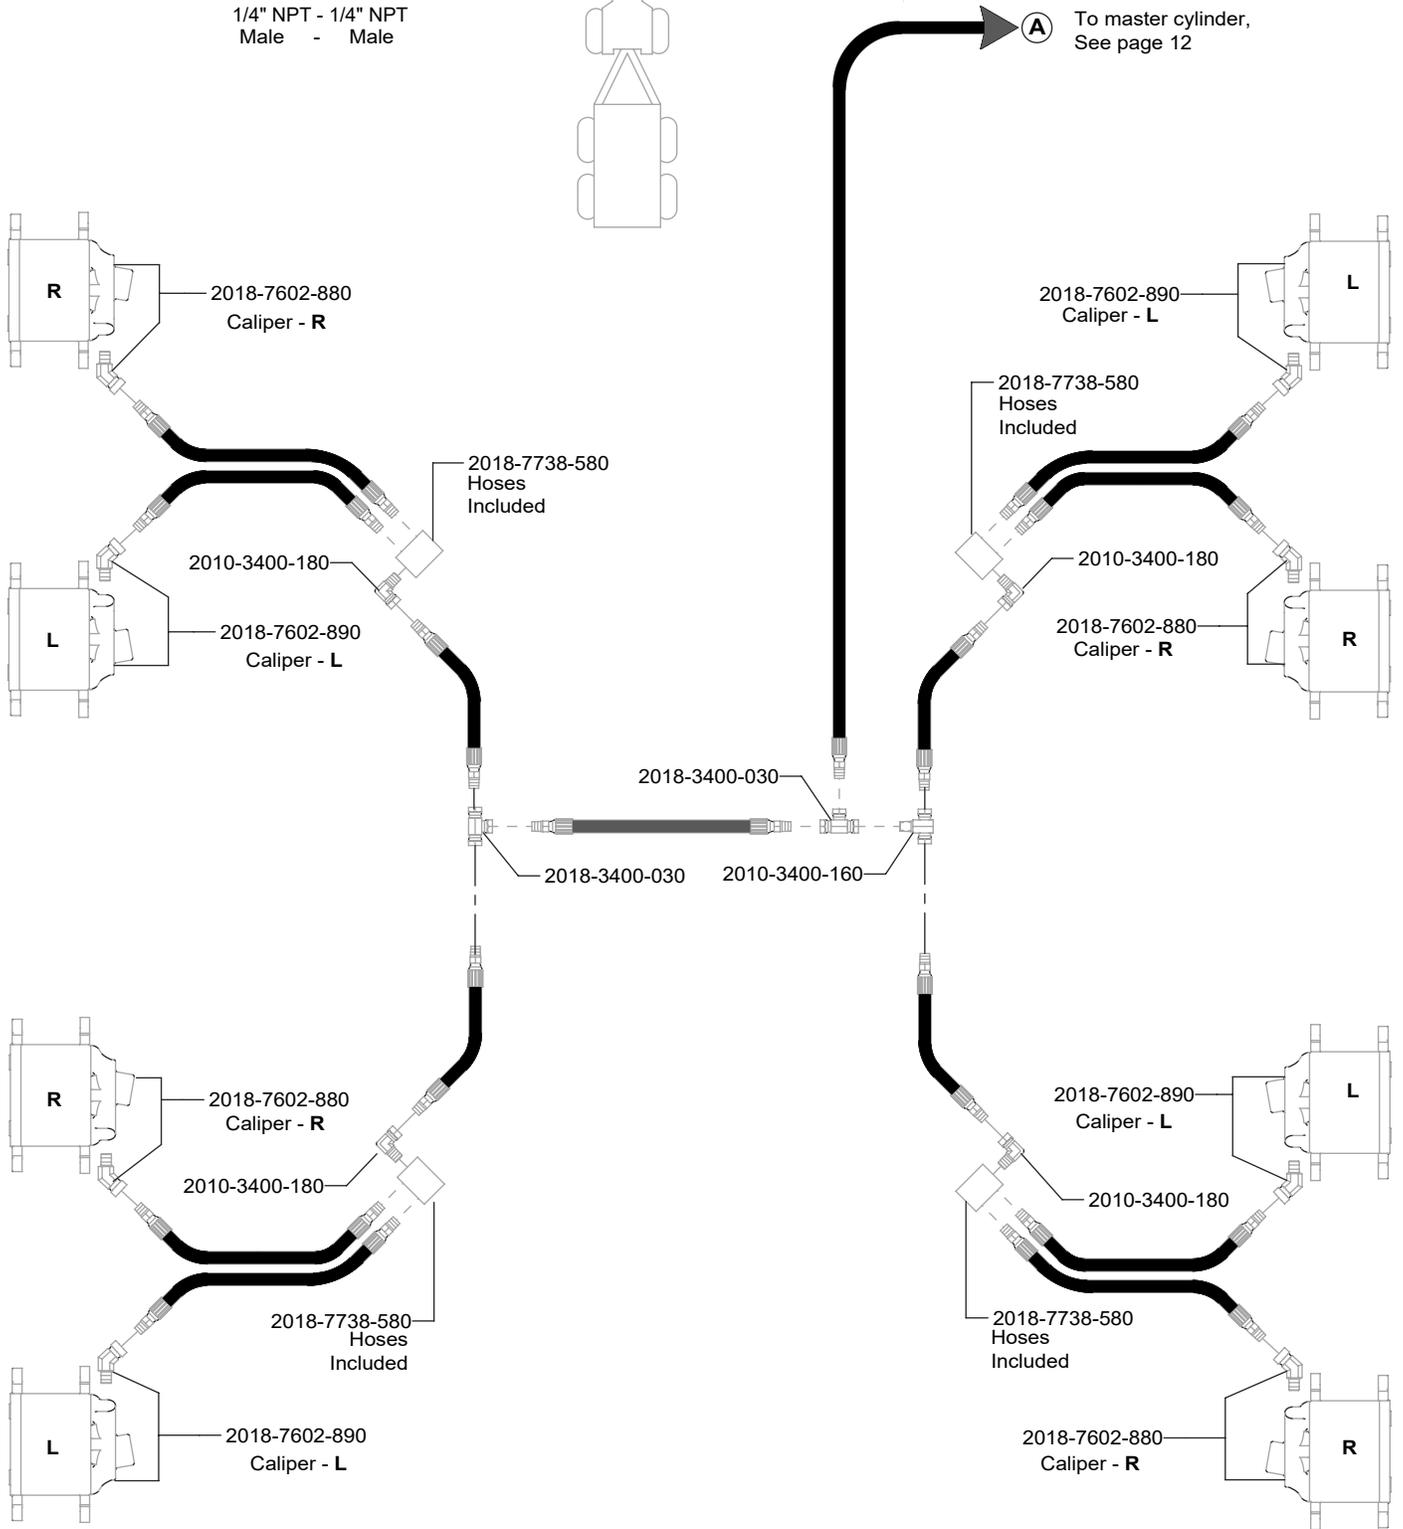


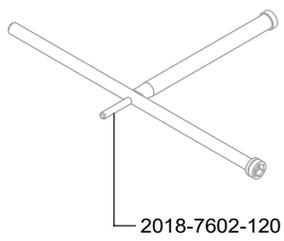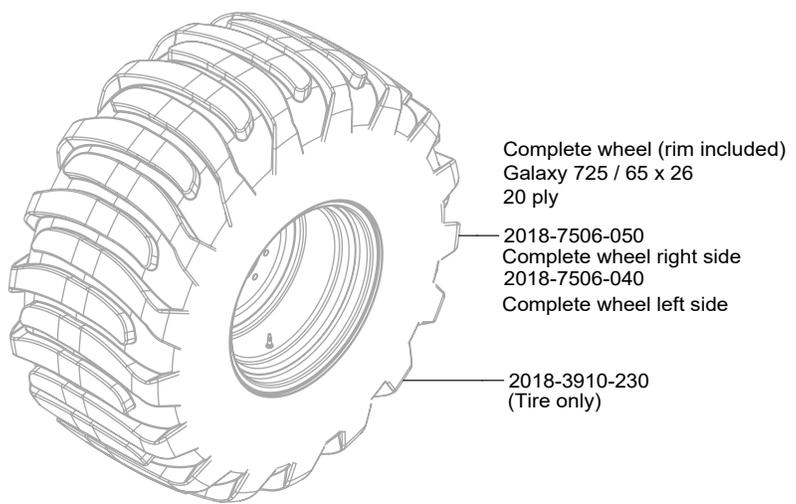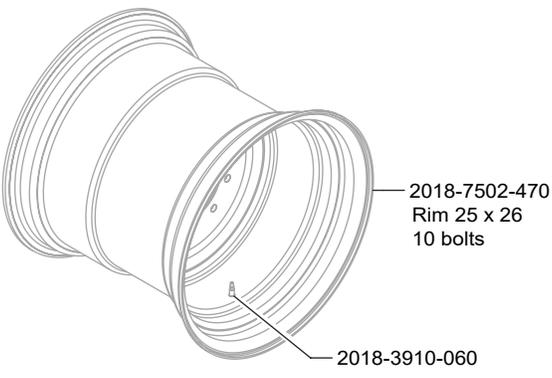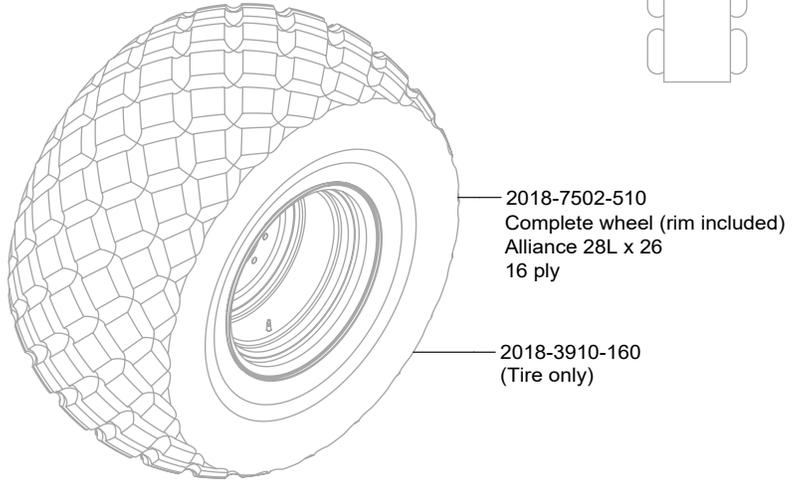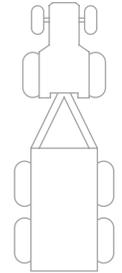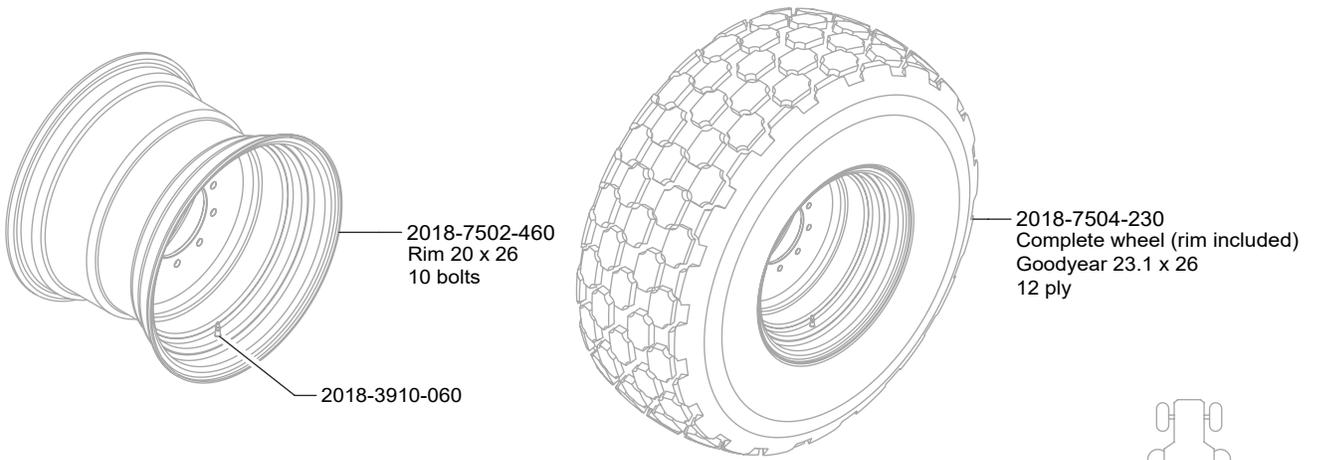

IMPELLER HOUSING, INTAKE AND FRONT DRAIN STANDARD

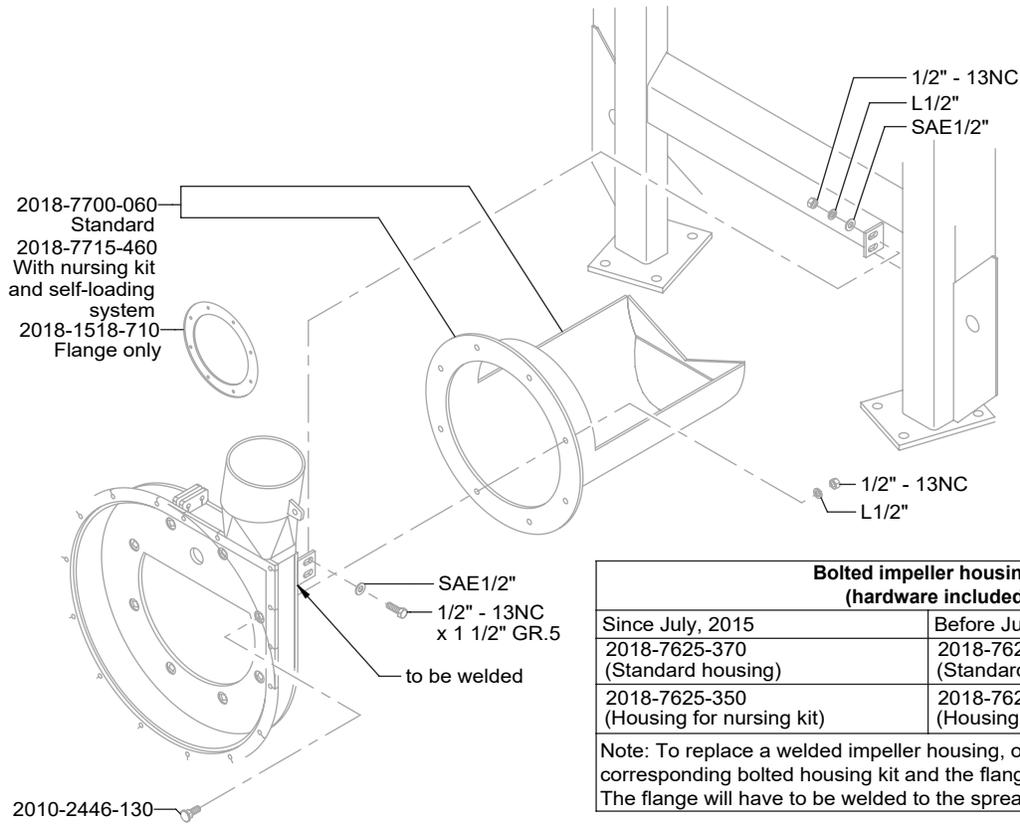


Bolted impeller housing kit (hardware included)	
Since July, 2015	Before July, 2015
2018-7625-370 (Standard housing)	2018-7625-360 (Standard housing)
2018-7625-350 (Housing for nursing kit)	2018-7625-340 (Housing for nursing kit)
Note: To replace a welded impeller housing, order the corresponding bolted housing kit and the flange 2018-1518-710. The flange will have to be welded to the spreader.	

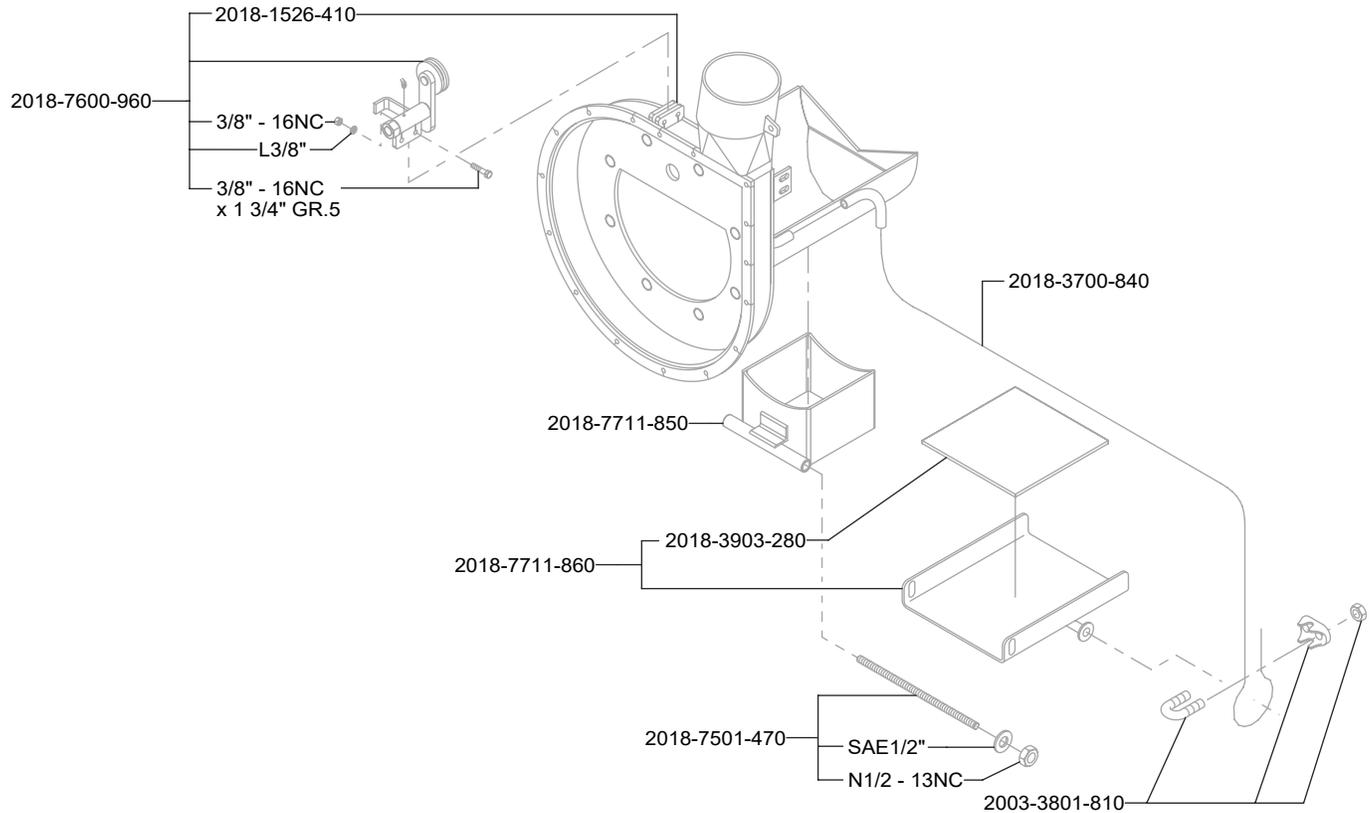


LIQUID MANURE SPREADER - EL66



BEARING HOUSING, IMPELLER, AND HOUSING COVER PLATE

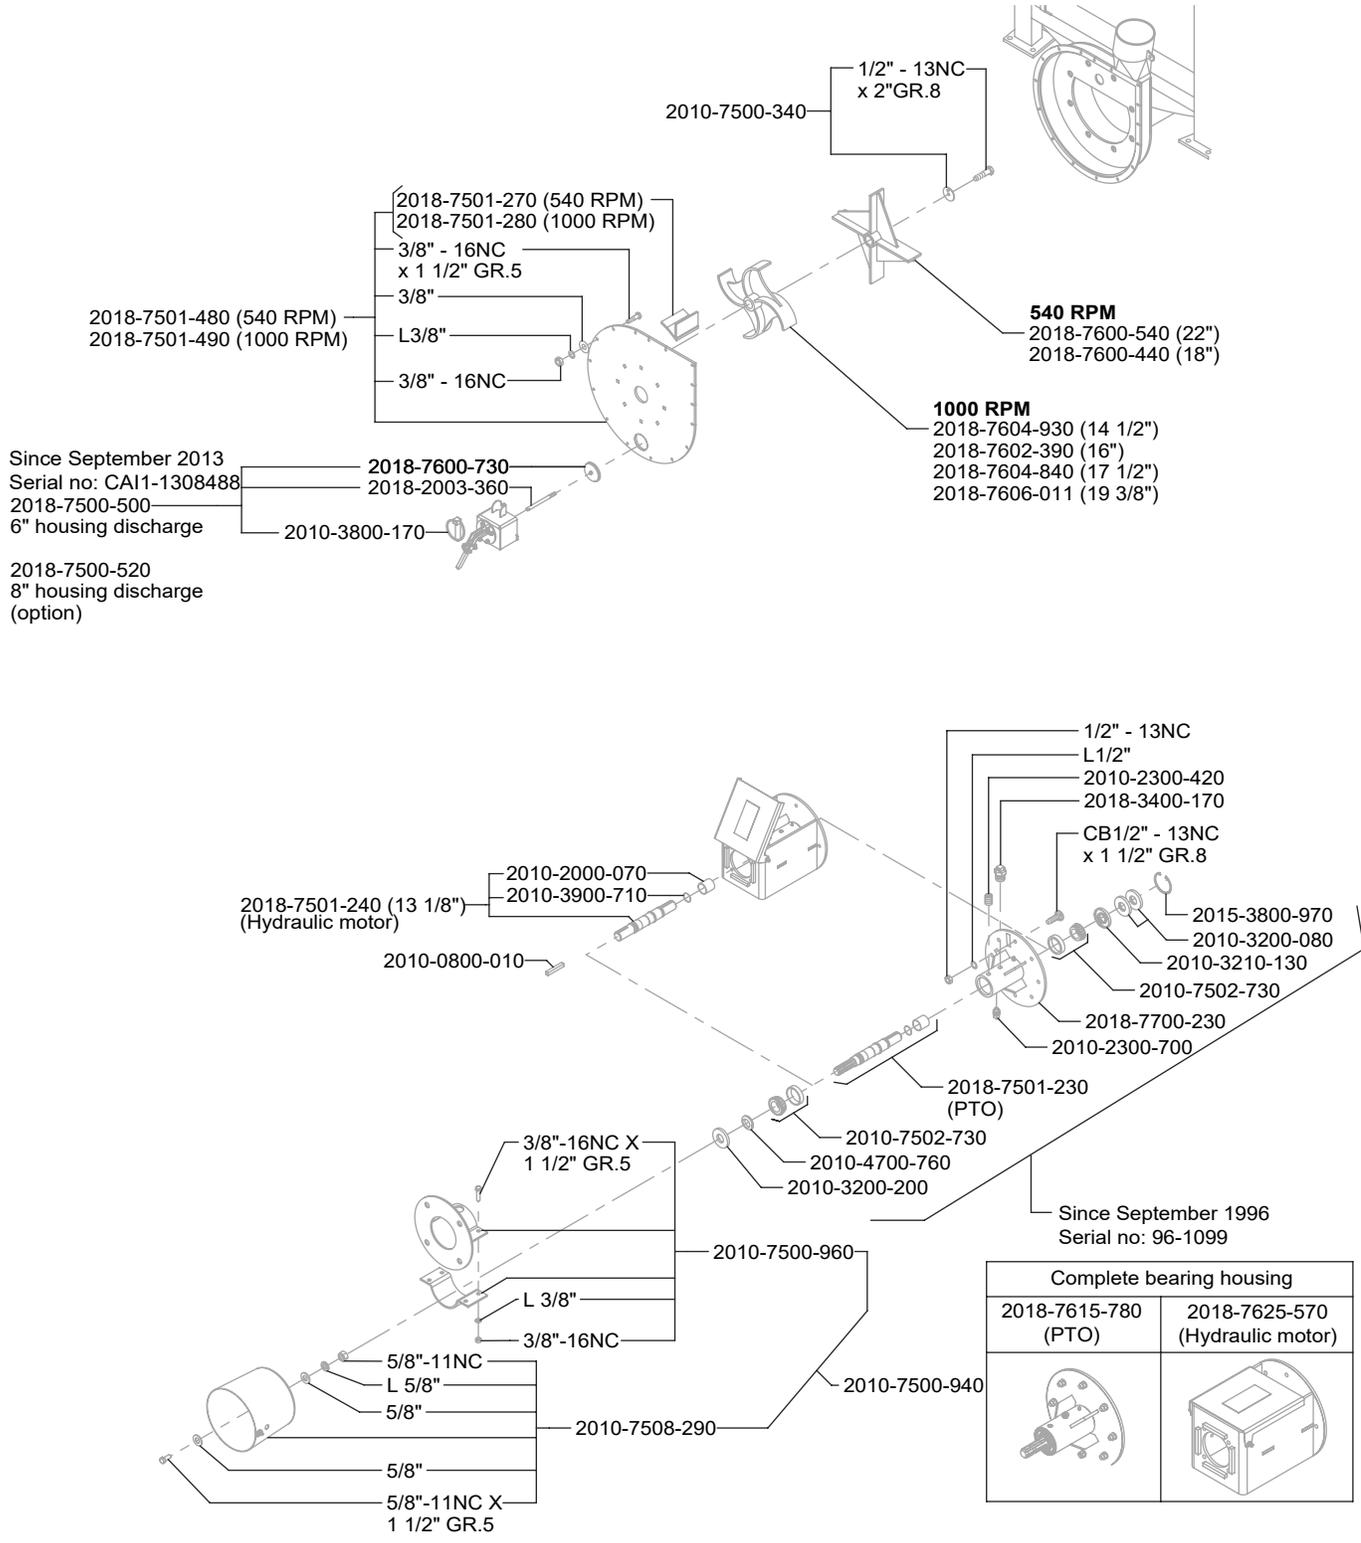


**BEARING HOUSING, PLUG AND COVER PLATE
OLD MODEL**

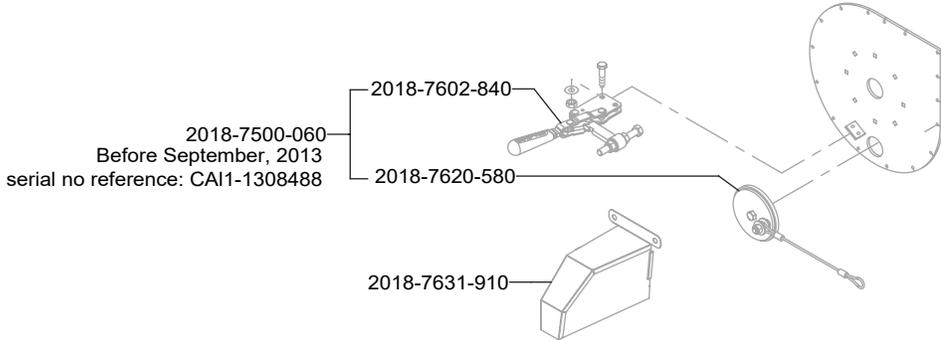


**BOLTABLE HOUSING
ABRASION RESISTANT STEEL**

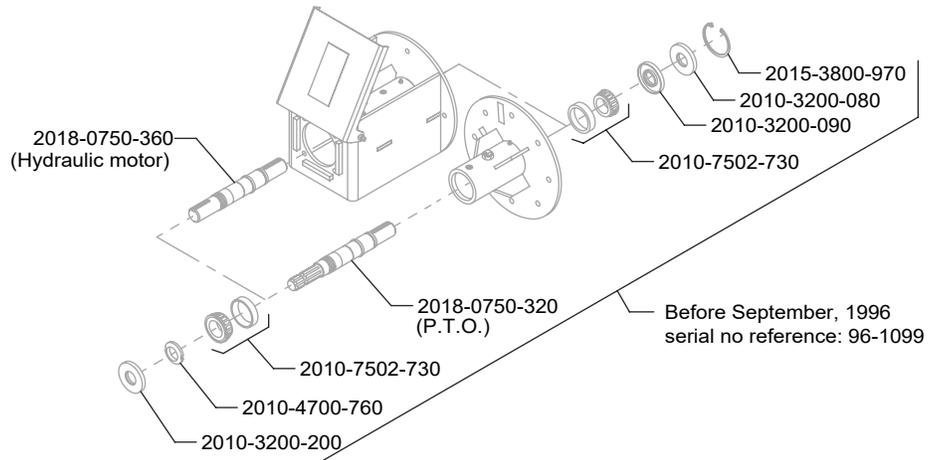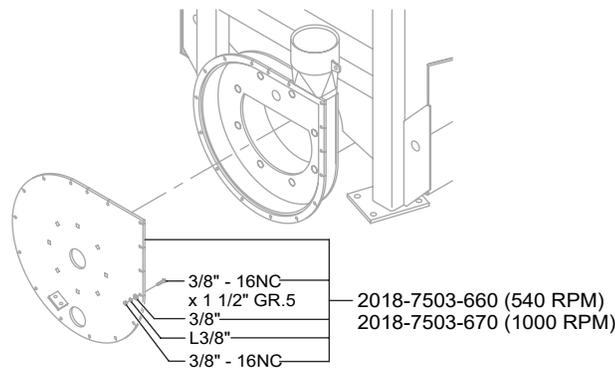


6" DISCHARGE PIPE

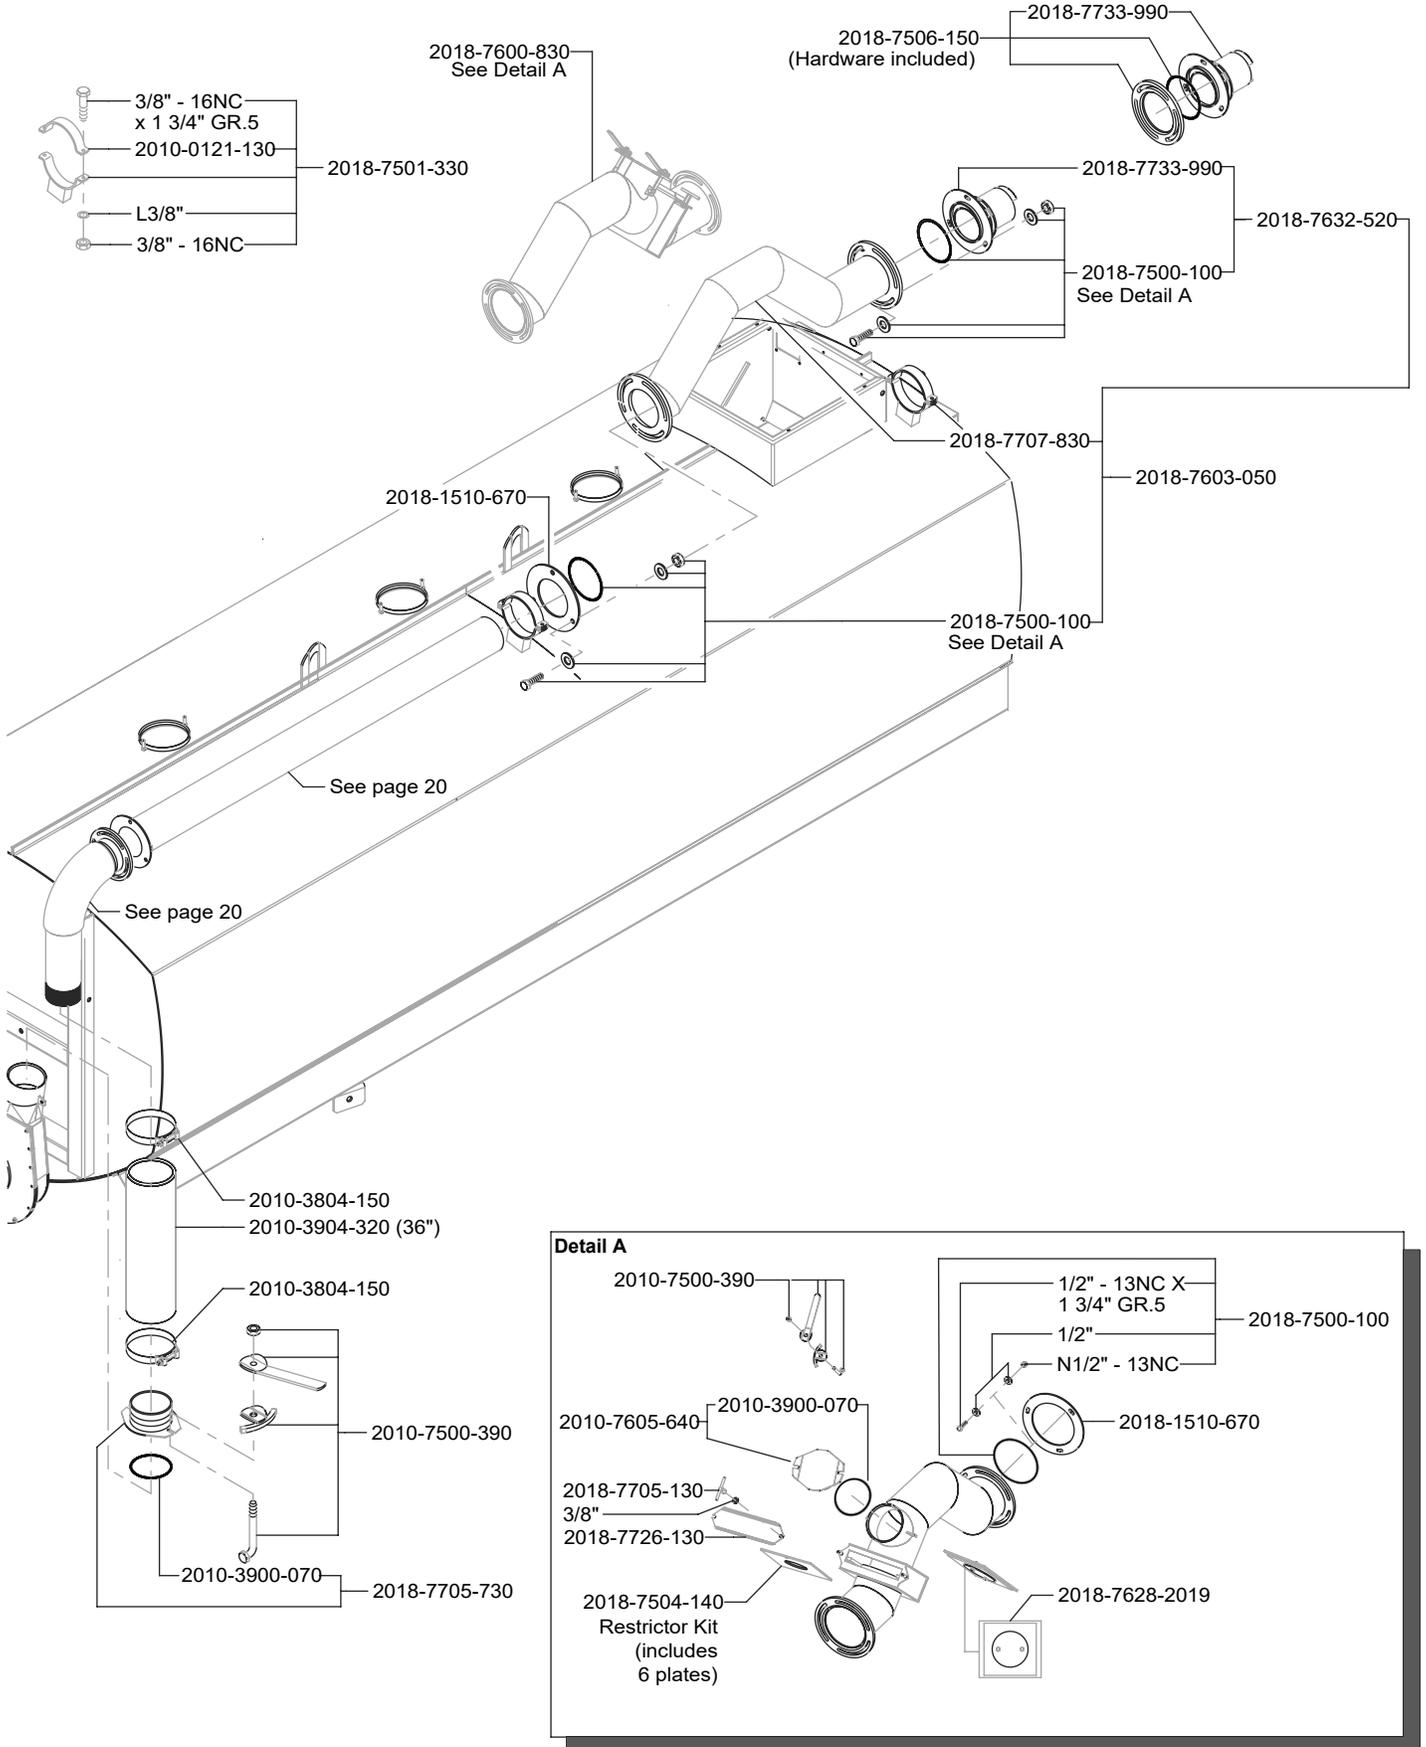

Note: For hydraulic cylinder or motor seal kit replacement, refer to Hardware & Accessories.

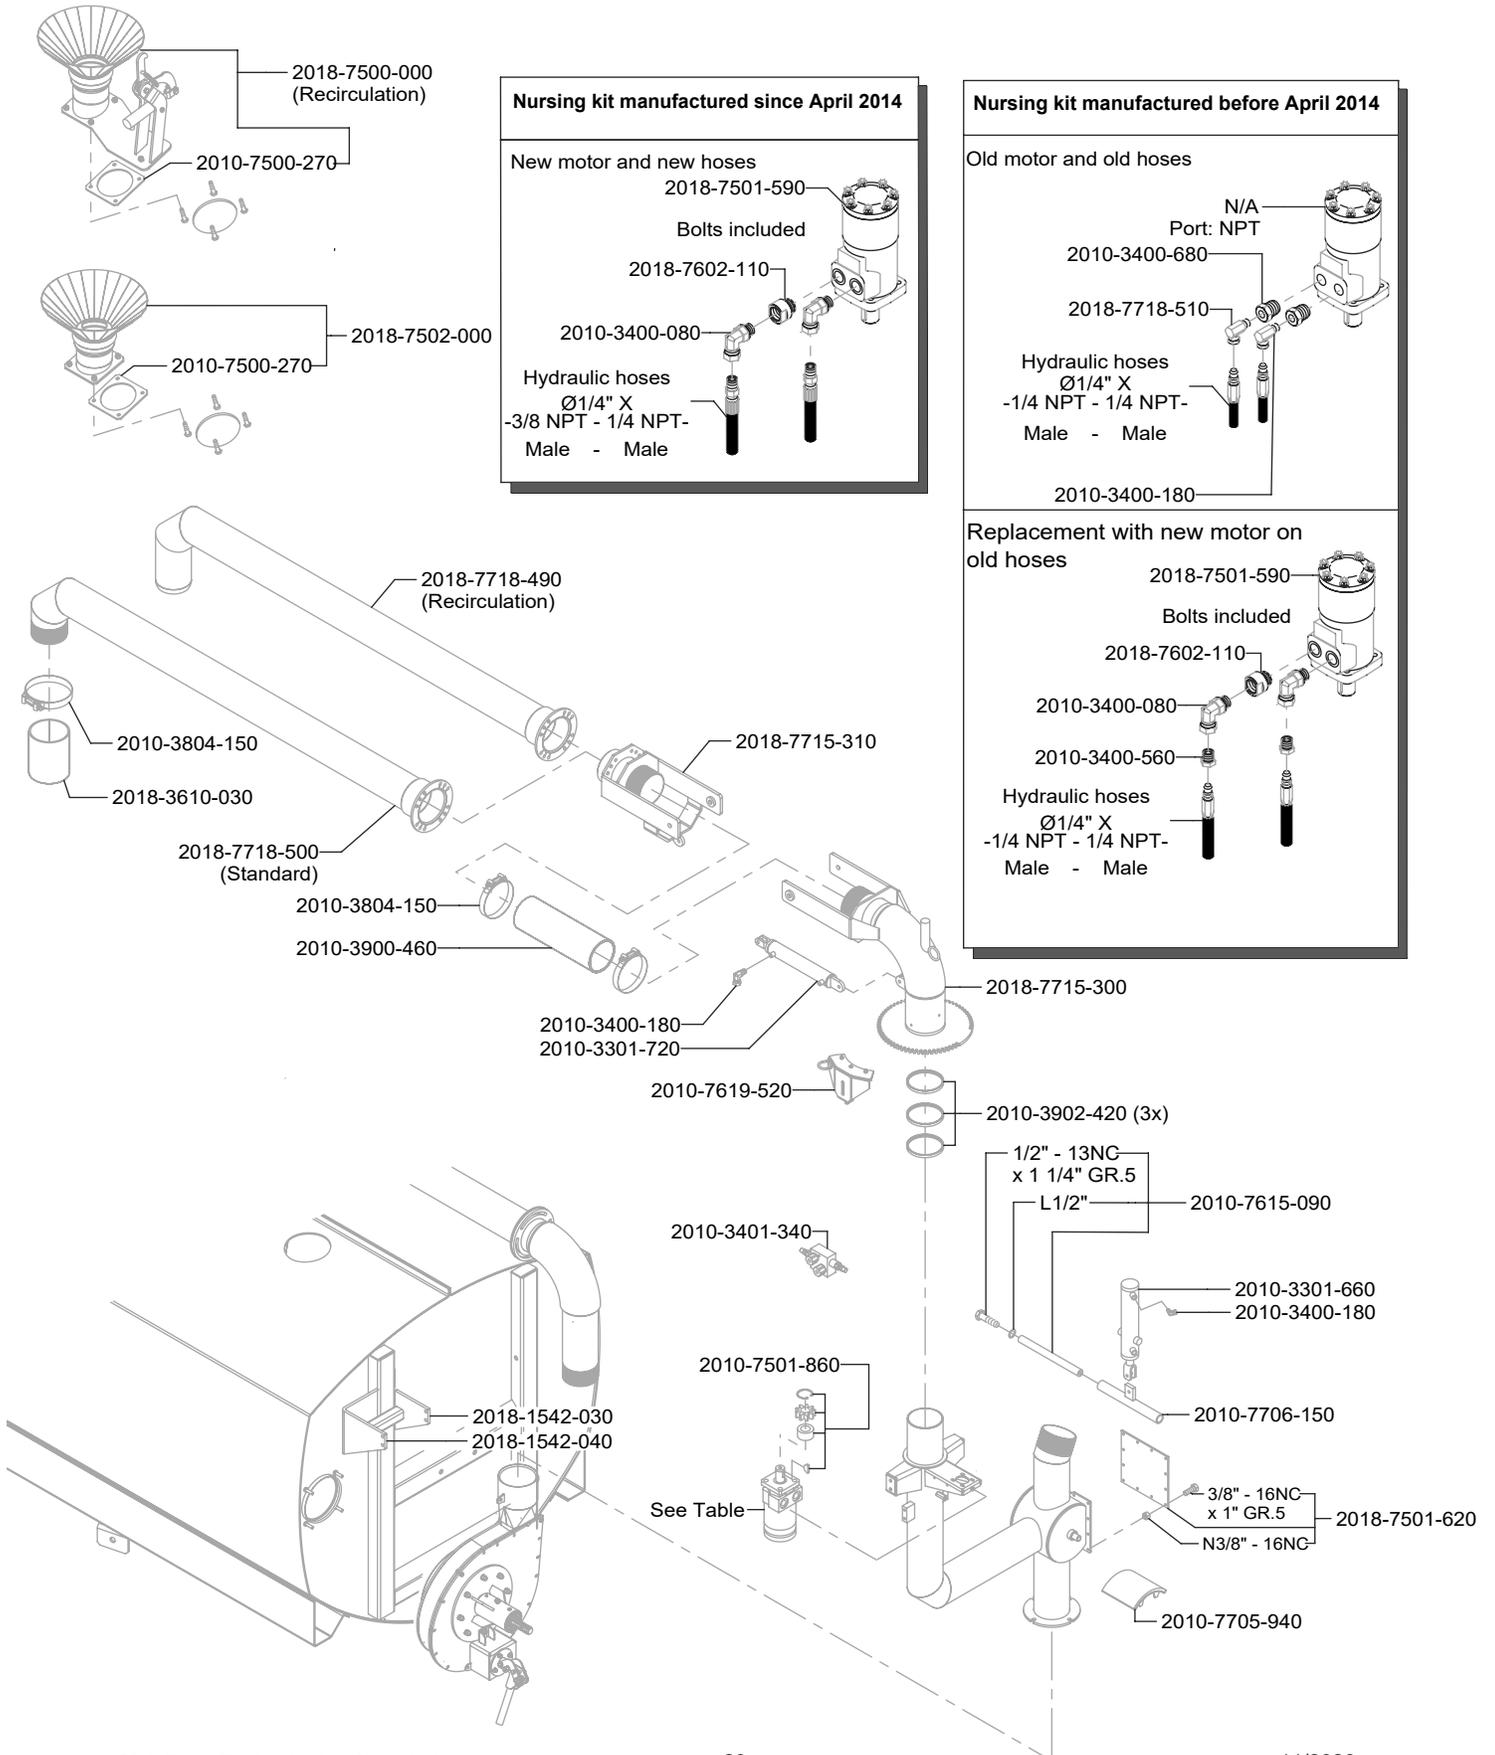


Elbow discharge pipe models				
Spreader model	Length	 6" elbow	 6" self-loading	 Discharge pipe models
EL66-1950	12'	2018-7501-910	na.	2018-7713-660
EL66-2250	14'	2018-7501-910	2018-7501-940	2018-7713-670
EL66-2650	16'	2018-7501-910	2018-7501-940	2018-7713-690
EL66-3000	16'	2018-7501-910	2018-7501-940	2018-7713-690
EL66-3400	18'	2018-7501-910	2018-7501-940	2018-7713-700
EL66-3750	20'	2018-7501-910	2018-7501-940	2018-7713-710



2018-1510-670
Note: flange to weld on existing pipe.


LIQUID MANURE SPREADER - EL66

IN-TANK RECIRCULATION KIT FOR 6" DISCHARGE PIPE

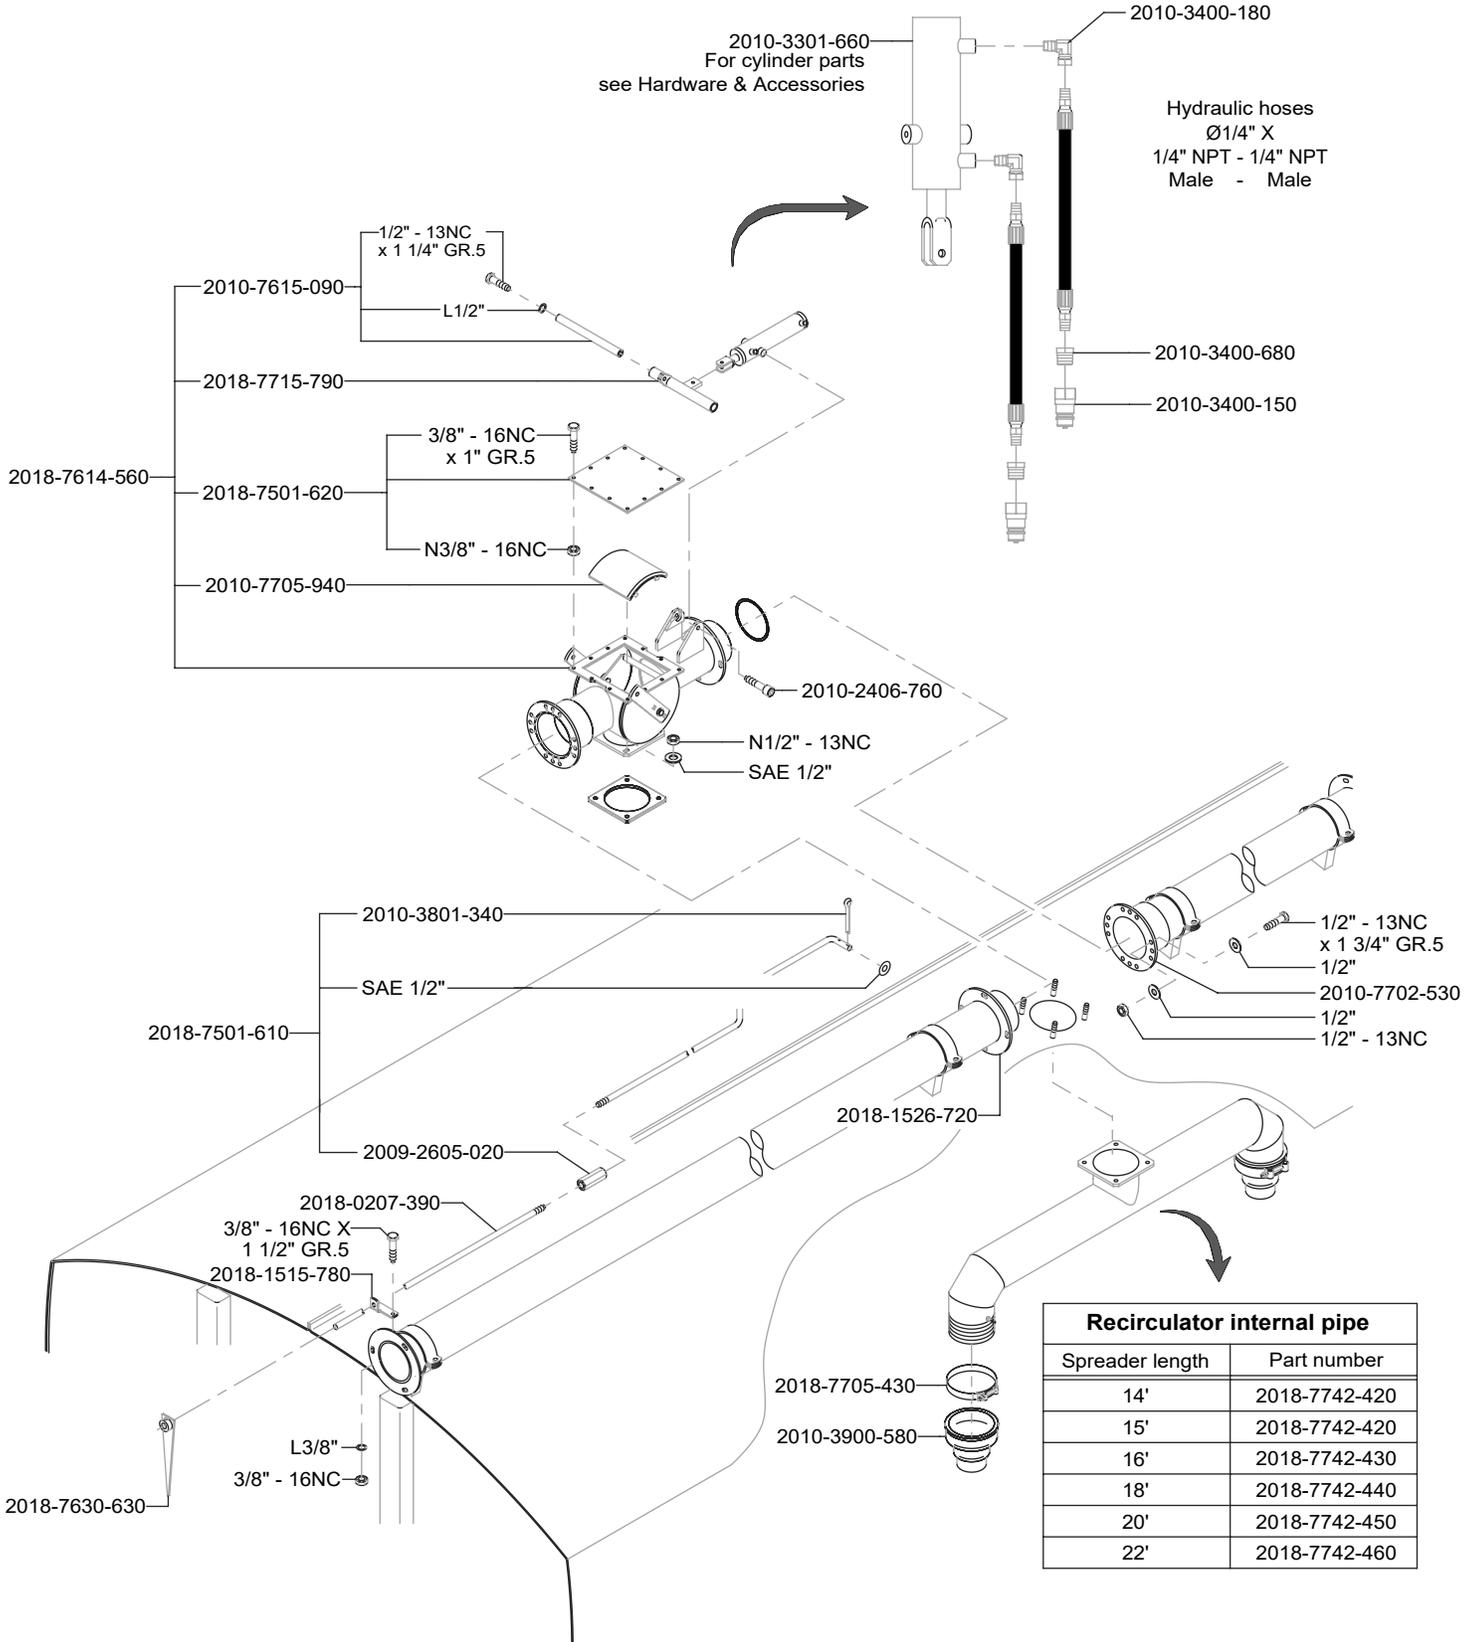


**ROTATIVE VALVE FOR ACTUATOR AND
CROSS-SHAPED ADAPTER WITH FLOW RESTRICTOR
FOR 6" DISCHARGE PIPE**


Rotative valve - Actuator


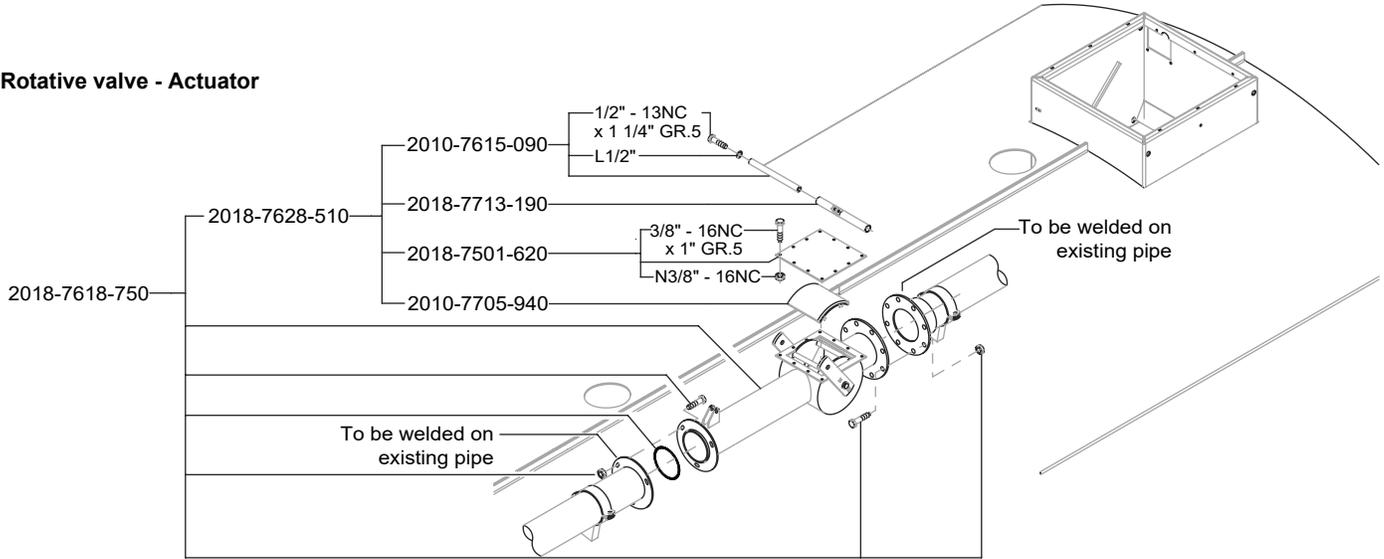



**Cross-shaped adapter
with flow restrictor**

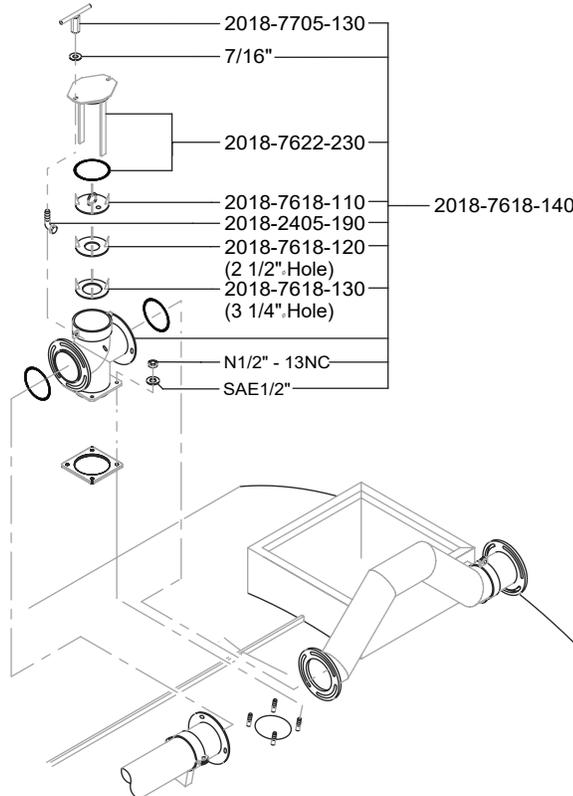


SPREADING NOZZLE AND DIRECTIONAL VALVE FOR 6" DISCHARGE PIPE

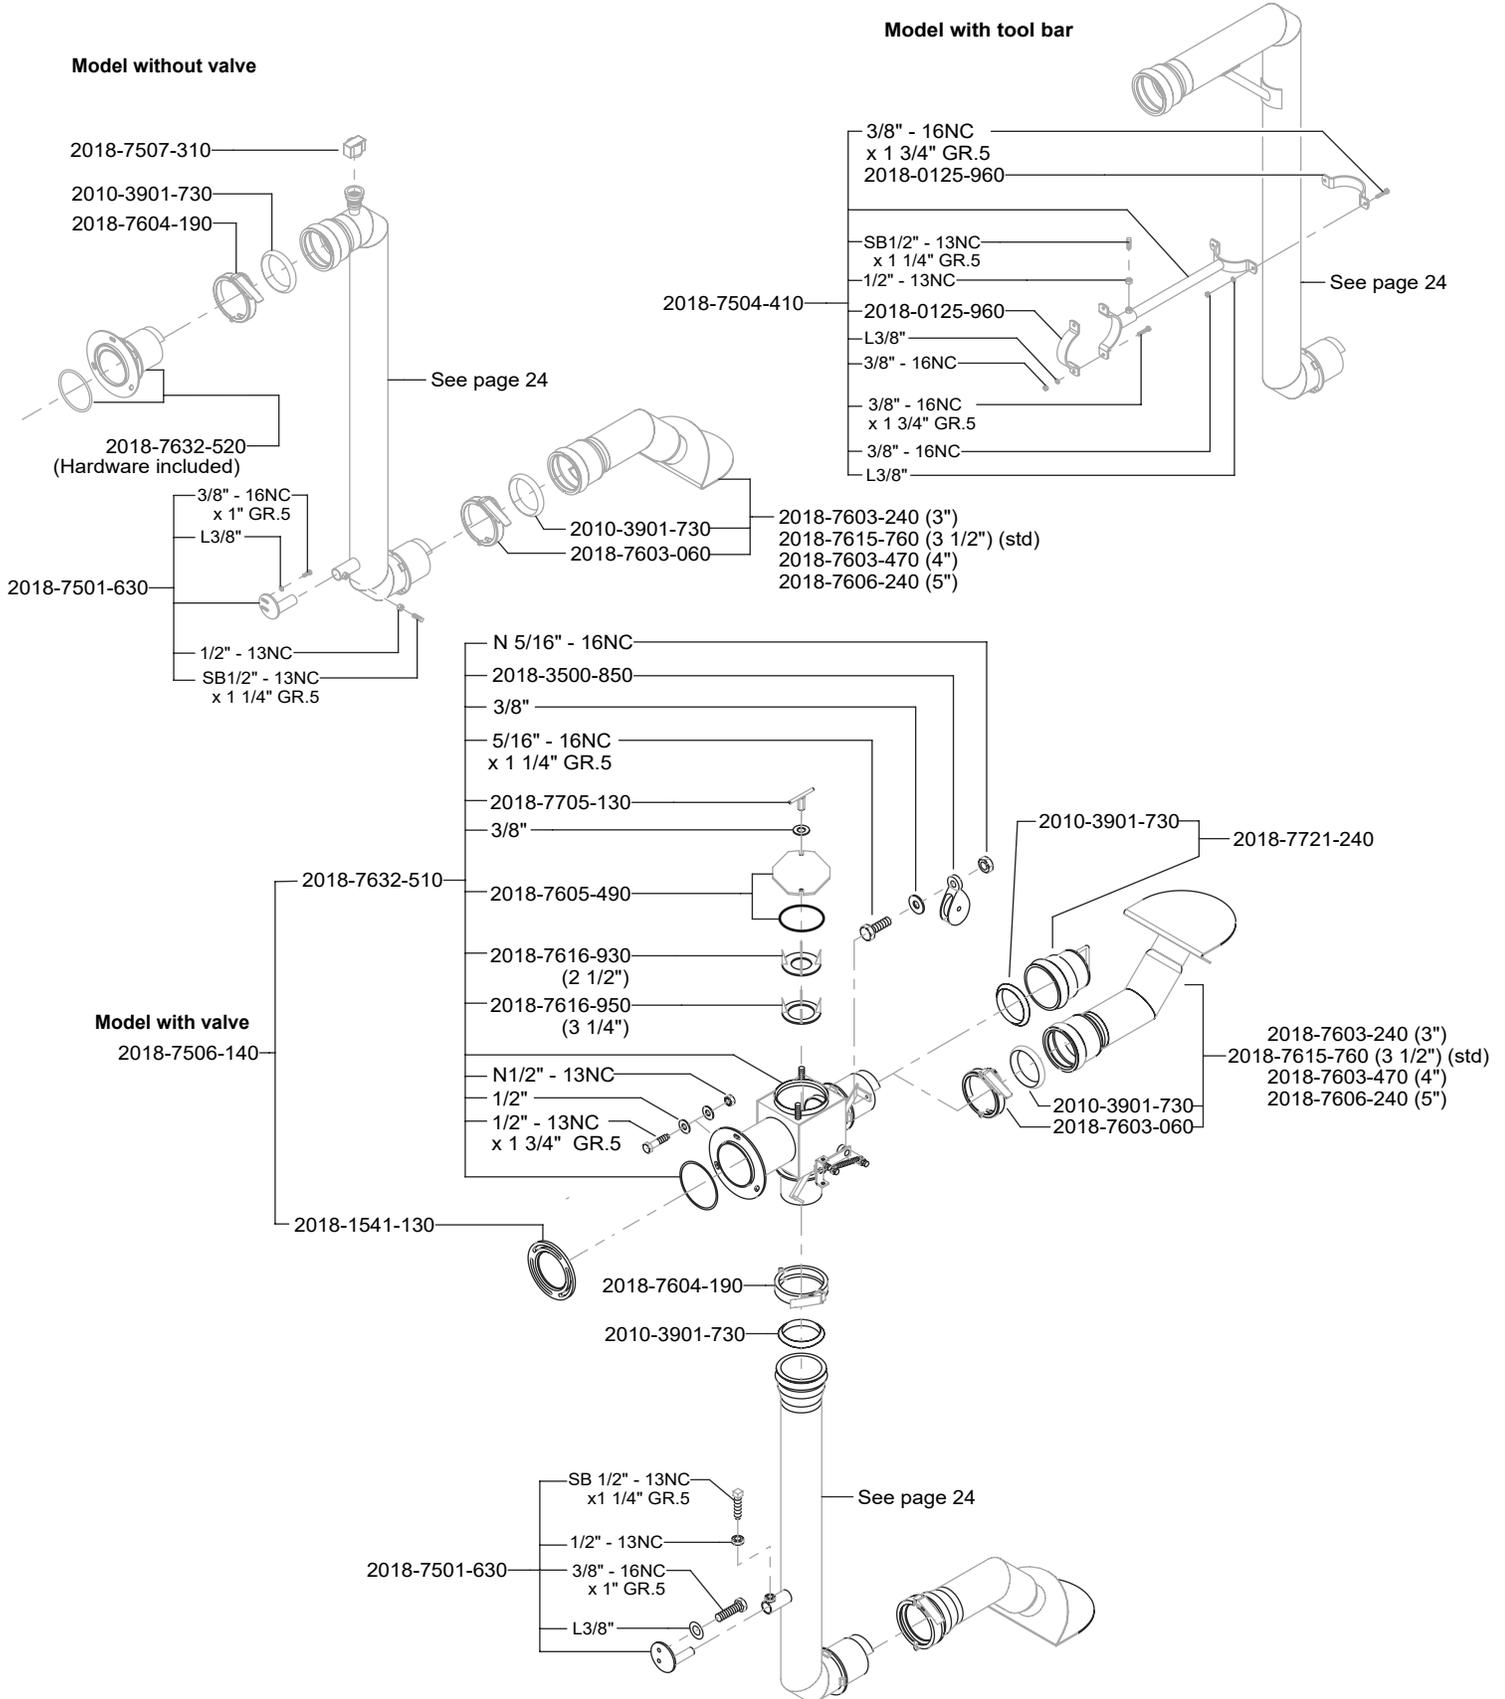

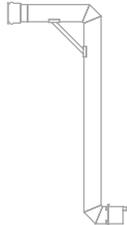Spreader model	Gallon (UK)	Gallon (US)	Liters	With valve	Without valve	With tool bar	Incorporated anti-syphon
EL66-1950	1950	2350	8800				
EL66-2250	2250	2700	10250	2018-7601-030	2018-7601-070	2018-7601-120	2018-7601-310
EL66-2650	2650	3150	12000				
EL66-3000	3000	3600	13650				
EL66-3400	3400	4050	15400	2018-7601-050	2018-7601-090	2018-7601-140	2018-7601-320
EL66-3750	3750	4500	17100				

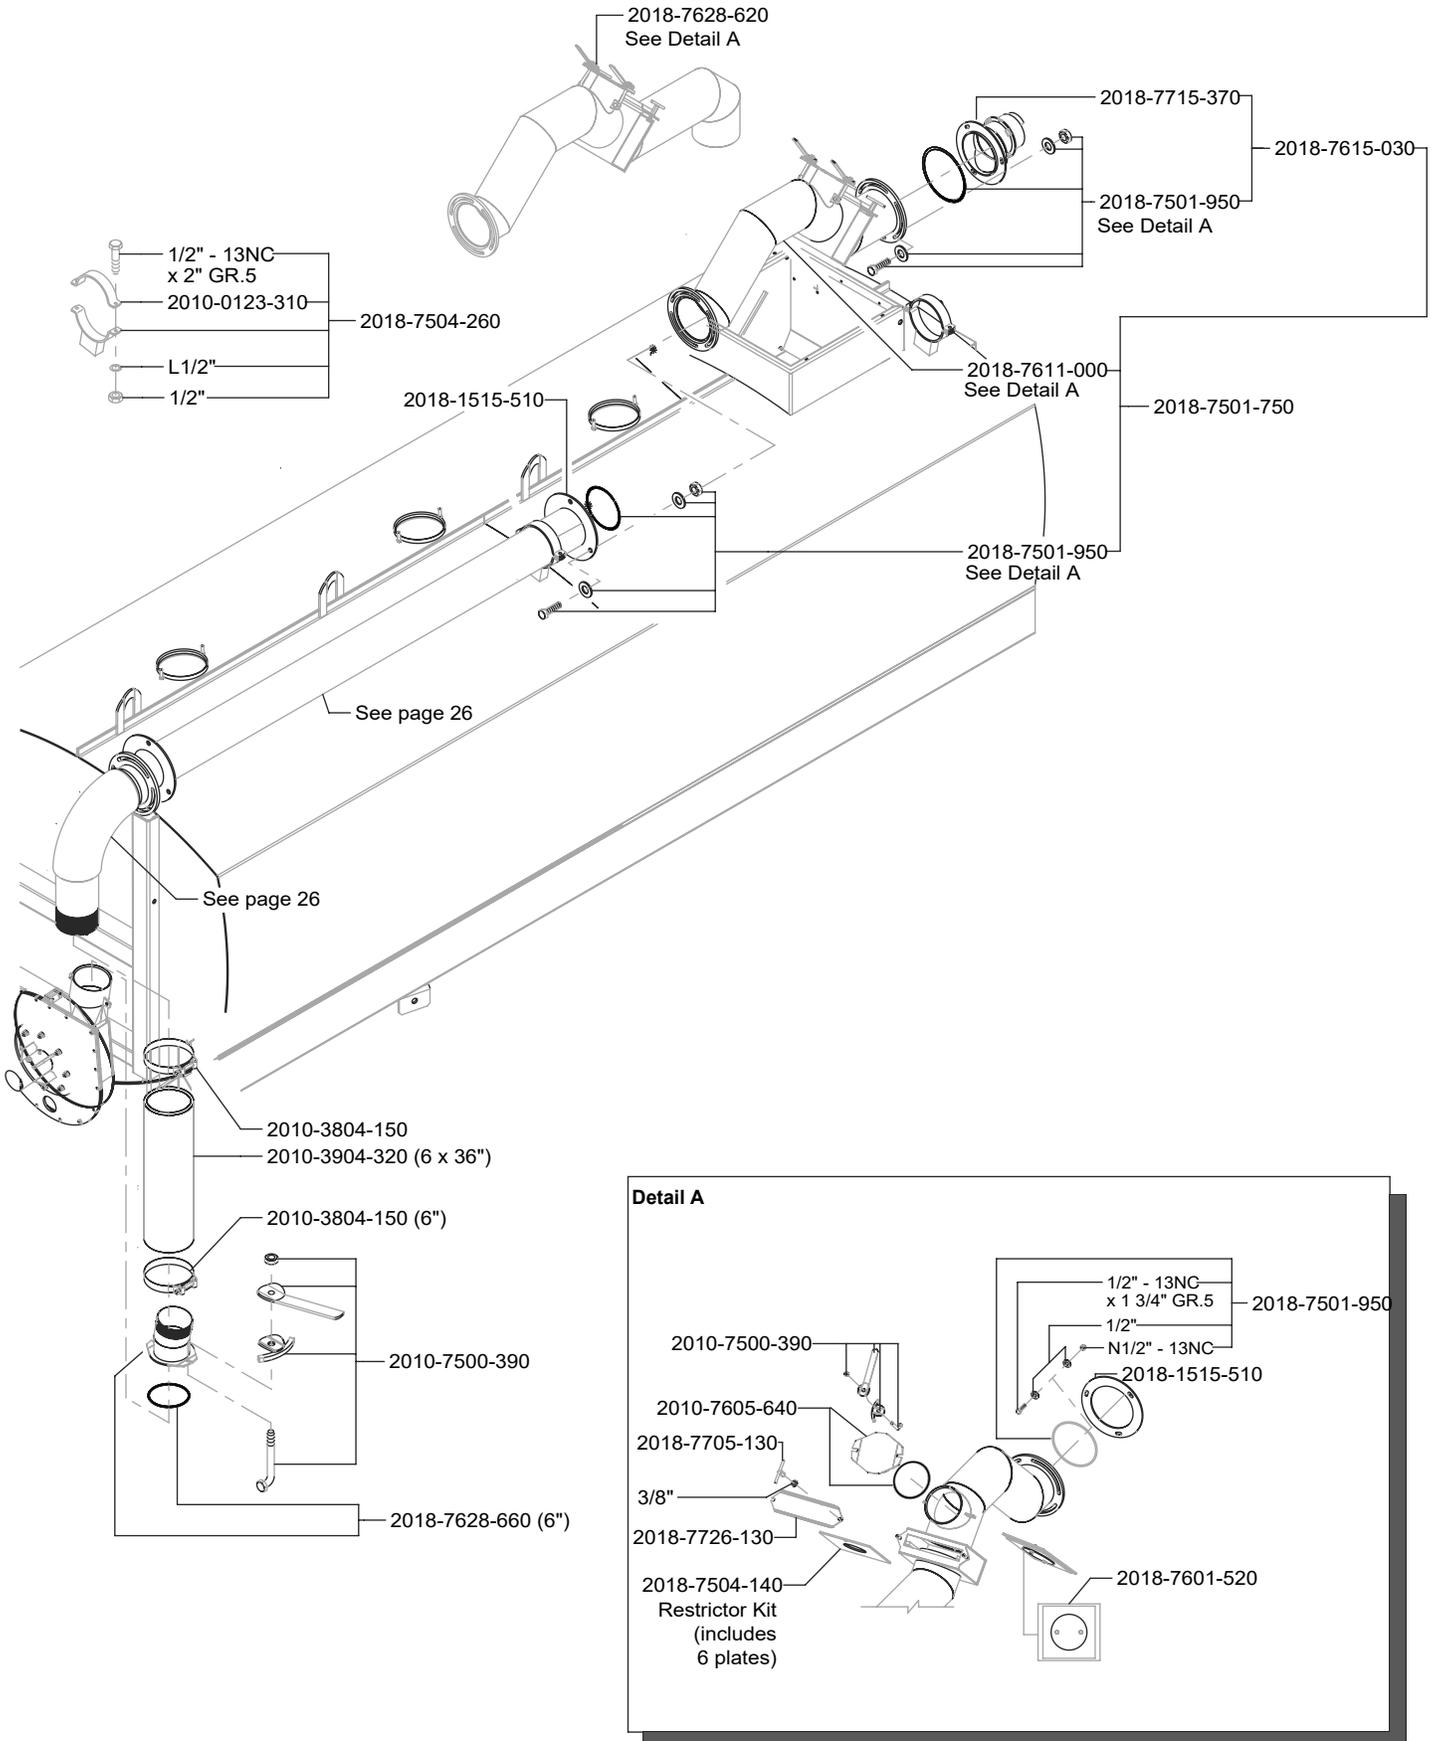

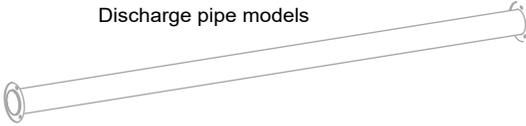
Elbow discharge pipe models			
Spreader model	Length	 8" option or 38' tow-bar	 Discharge pipe models
EL66-3000	16' - 18'	2018-7501-960	2018-7713-400
EL66-3400	20'	2018-7501-960	2018-7713-410
EL66-3750	20'	2018-7501-980	2018-7713-420




2018-1515-510
 Note: flange to weld
 on existing pipe.

LIQUID MANURE SPREADER - EL66

IN-TANK RECIRCULATION KIT FOR 8" DISCHARGE PIPE

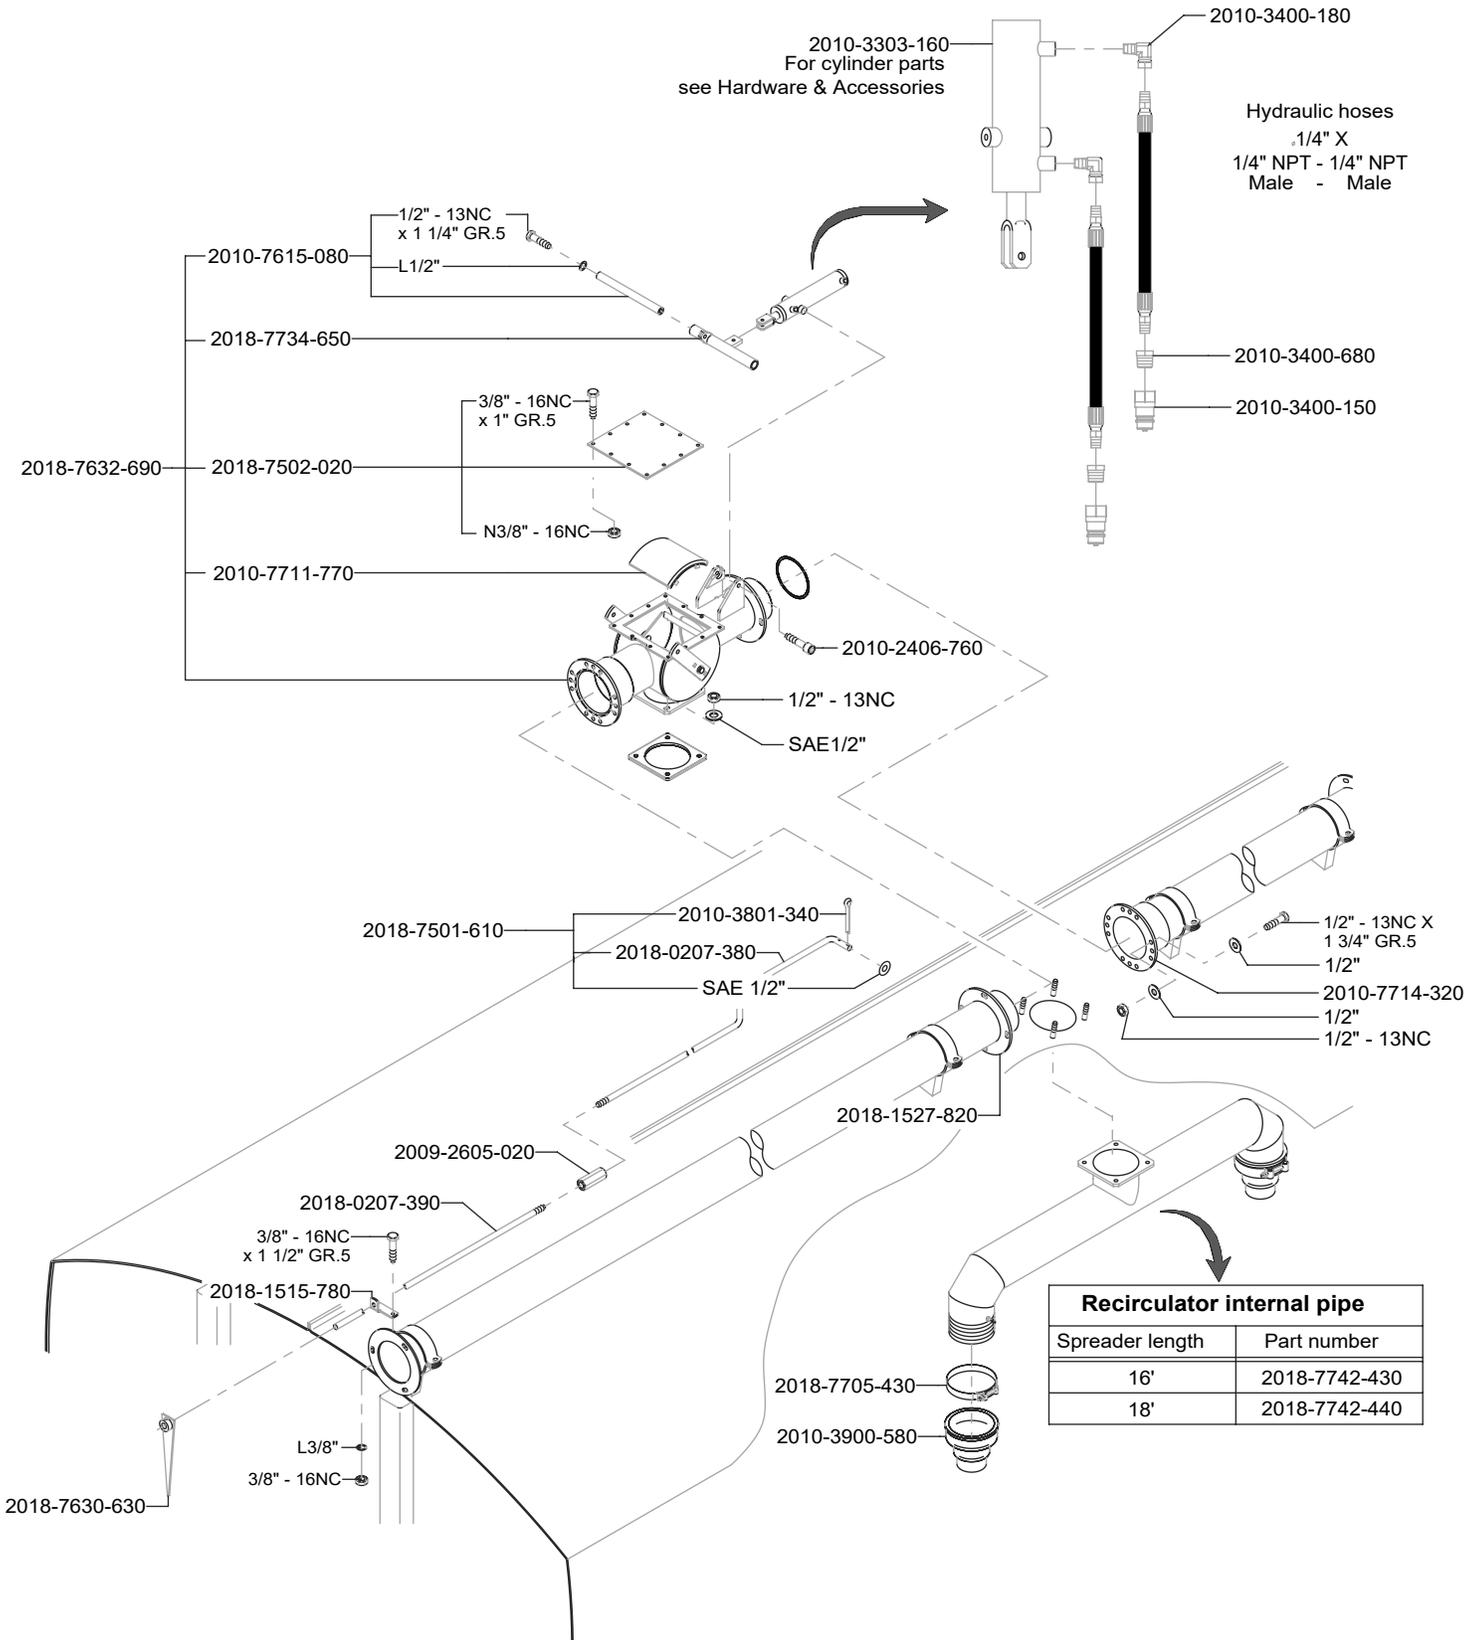


**ROTATIVE VALVE FOR ACTUATOR
FOR 8" DISCHARGE PIPE**

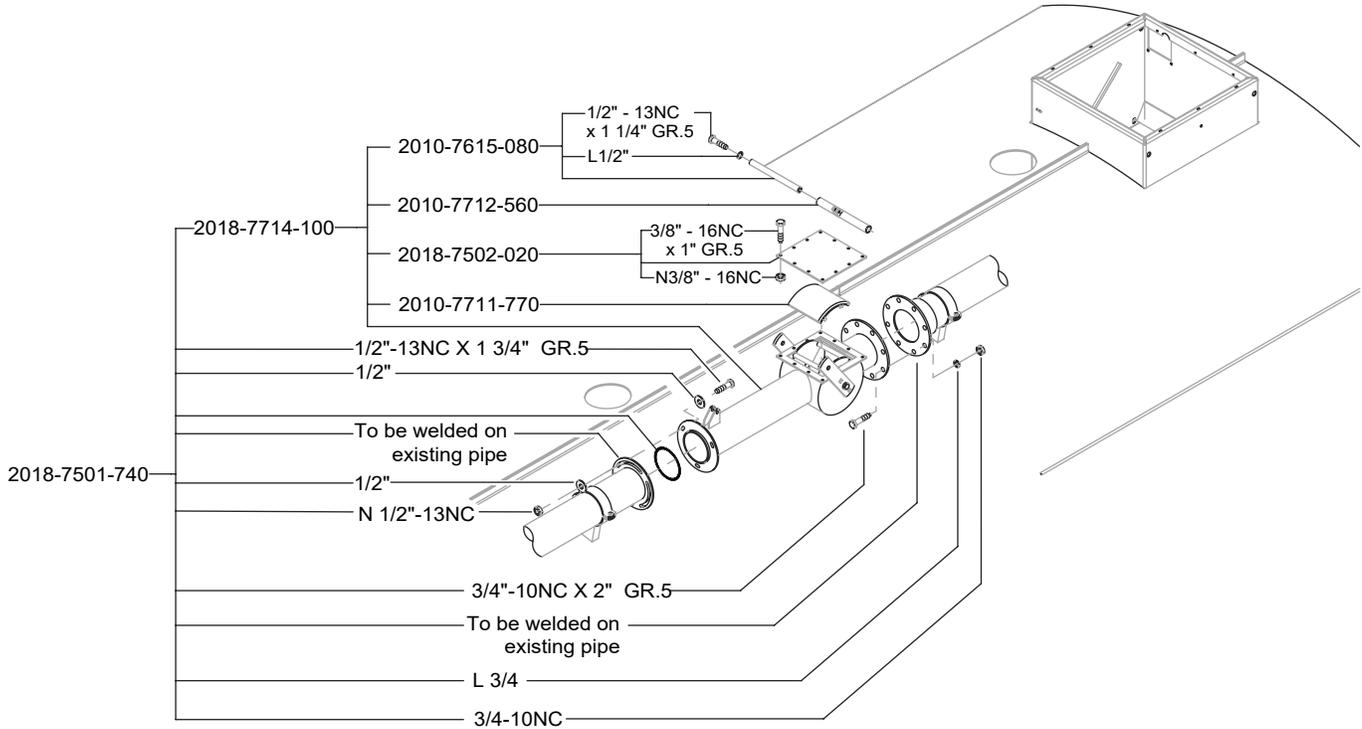


SPREADING NOZZLE AND DIRECTIONAL VALVE FOR 8" DISCHARGE PIPE

Model without valve

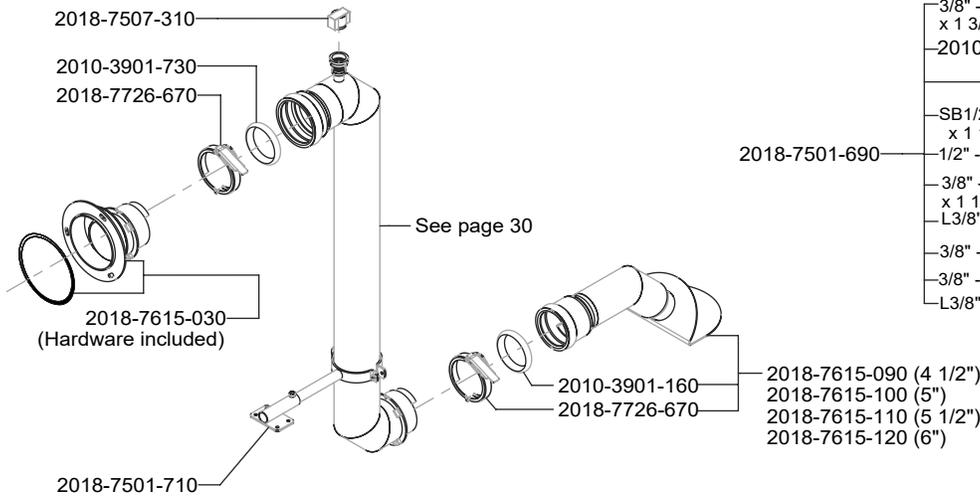



Model with tool bar

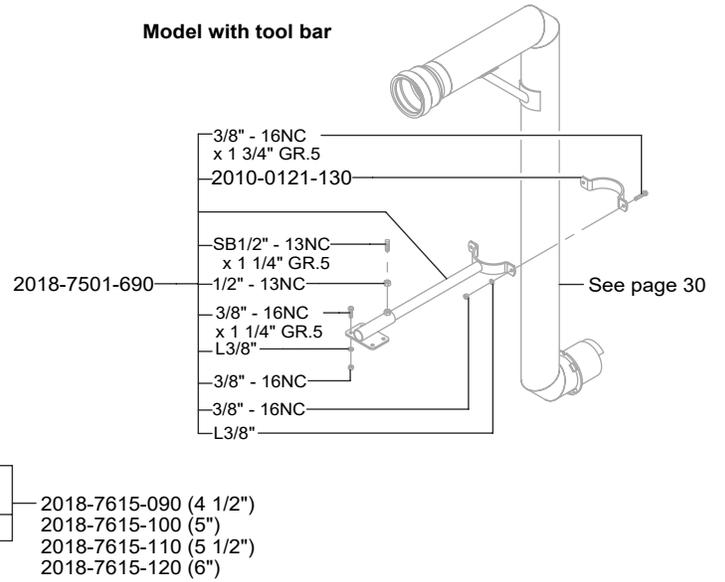





Model with valve



2018-7615-000

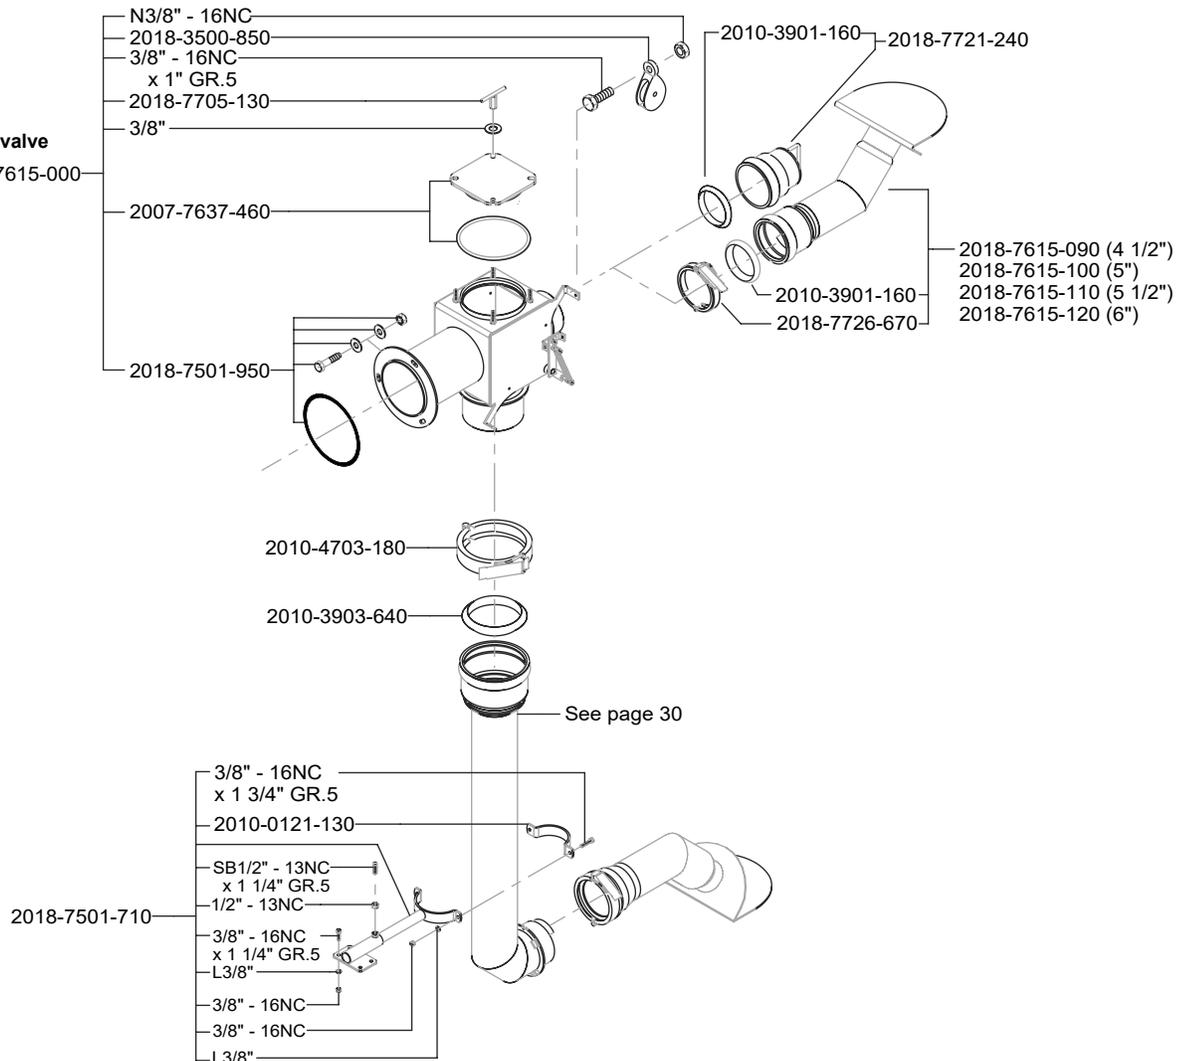

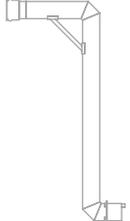NARROW SPREADER						
Spreader model	Gallon (UK)	Gallon (US)	Liter	With valve 	Without valve 	With tool bar 
EL66-3000	3000	3600	13600	2018-7615-310	2018-7615-330	2018-7615-350

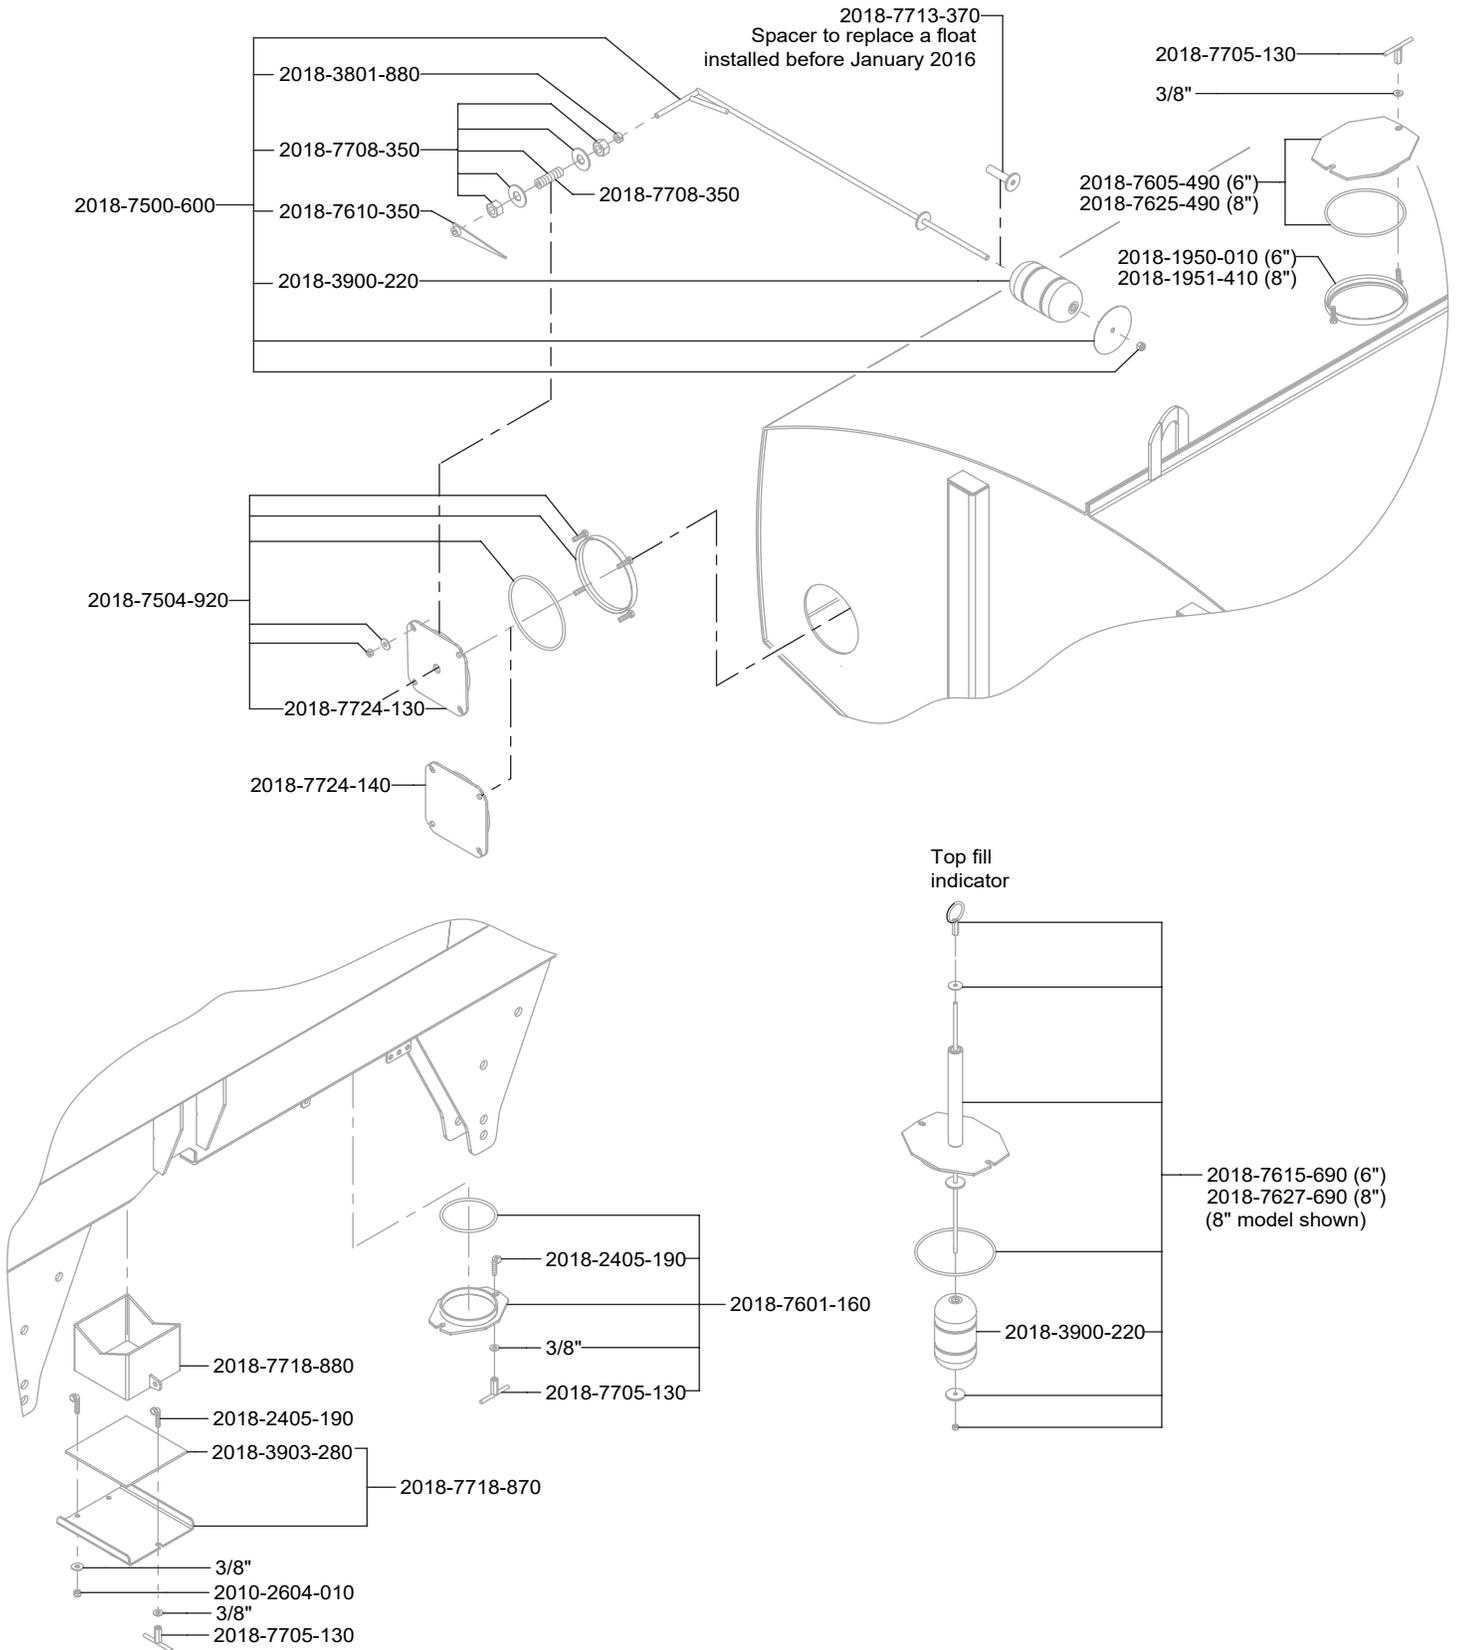


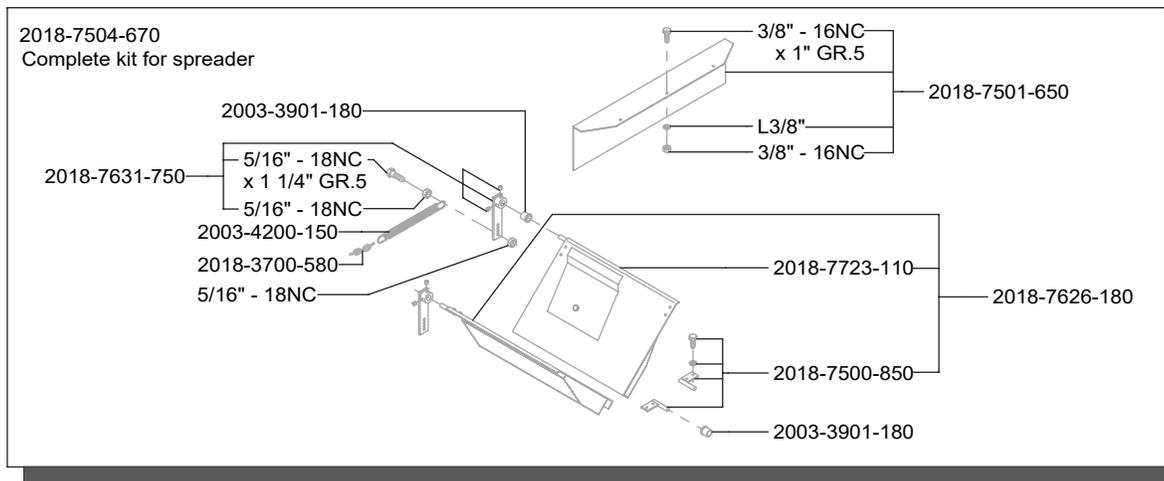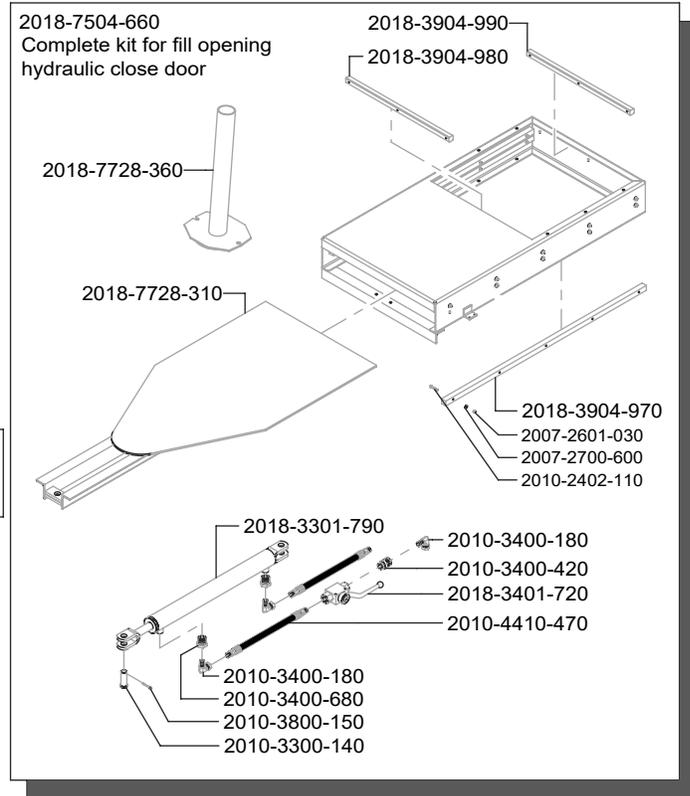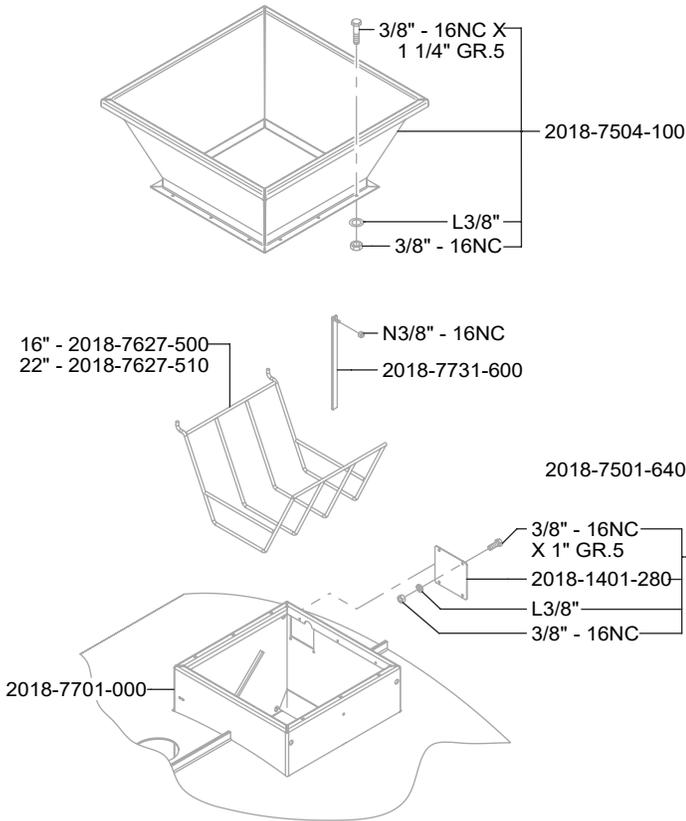


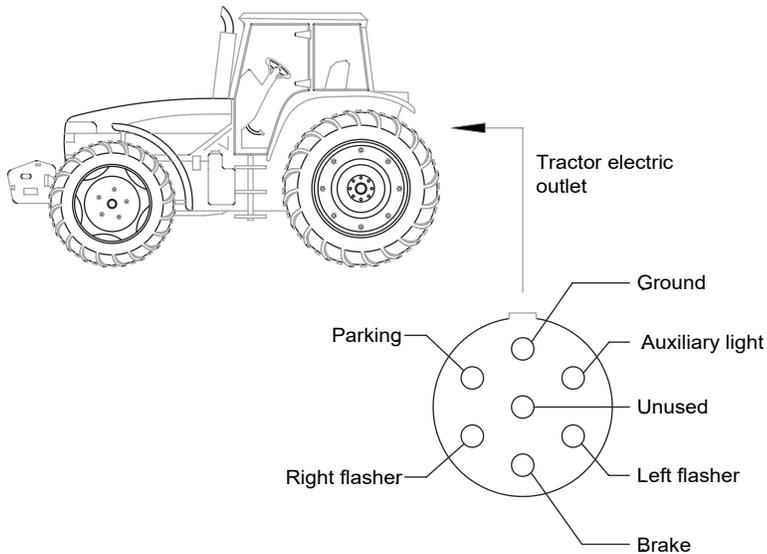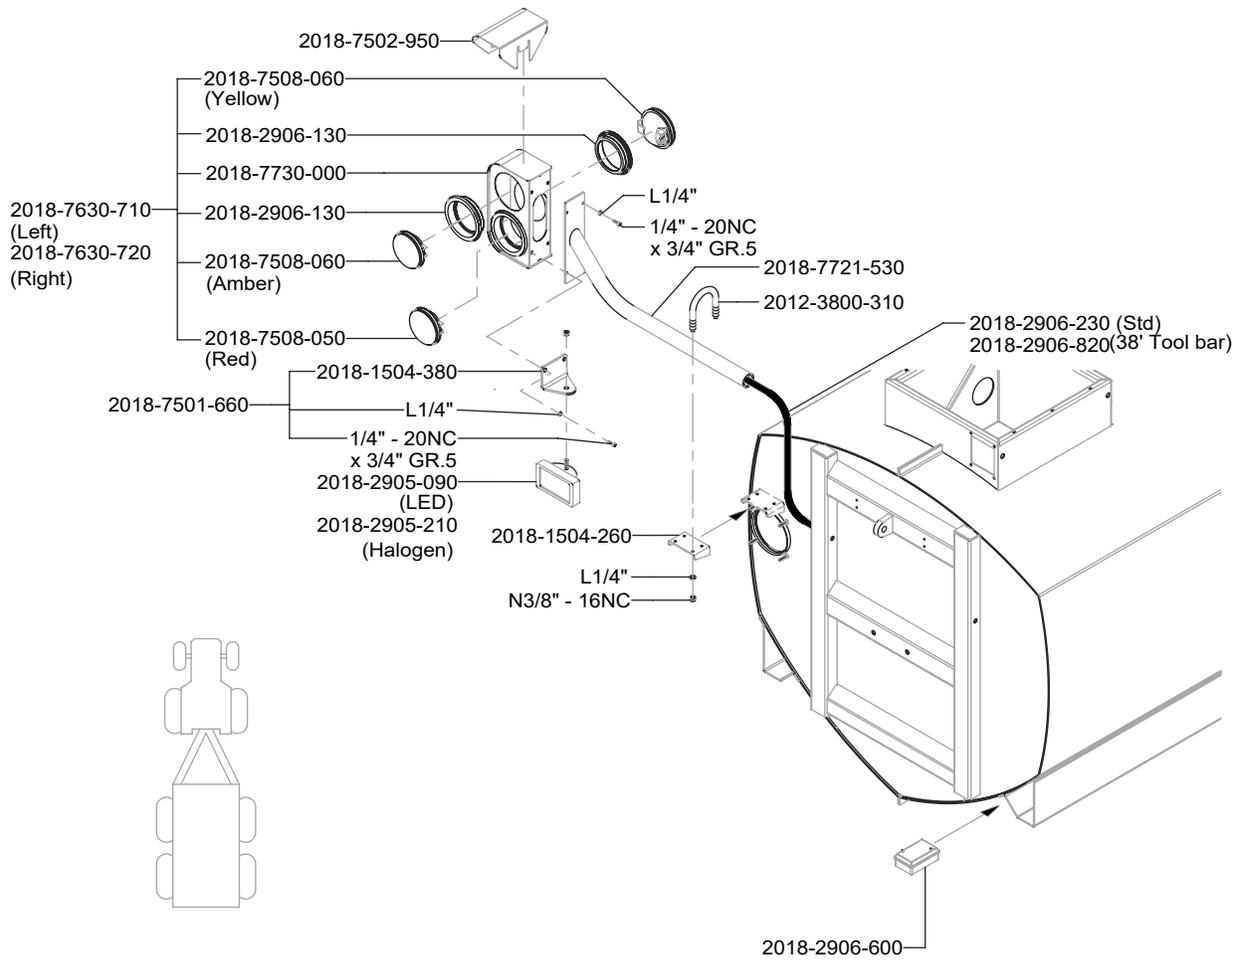

Signal light cable (plug not included)	
Spreader length	Part number
14' - 16'	2018-2906-170
18' - 20'	2018-2906-180

#	LID	PIPE
2018-7502-880	8"	8"
2018-7502-980	8"	6"
2018-7502-190	6"	8"
2018-7502-200	6"	6"

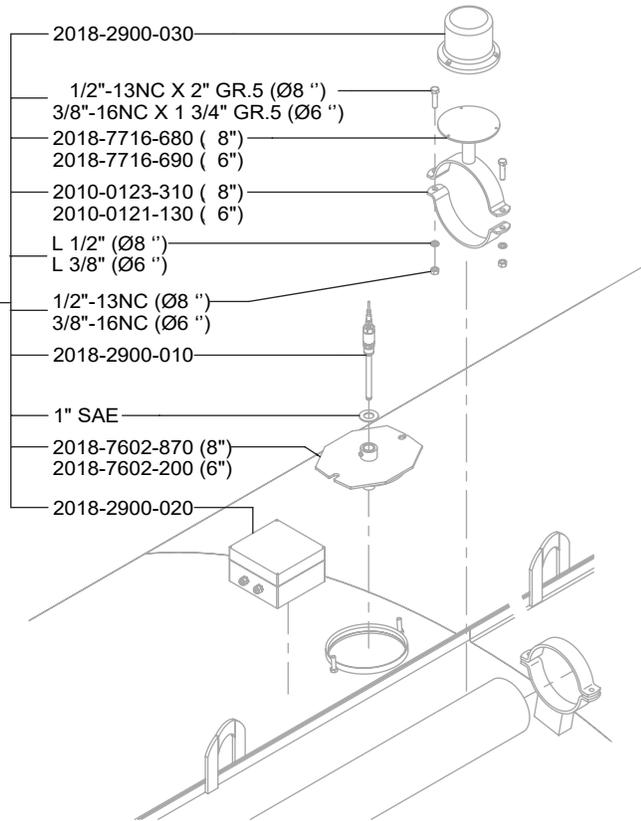

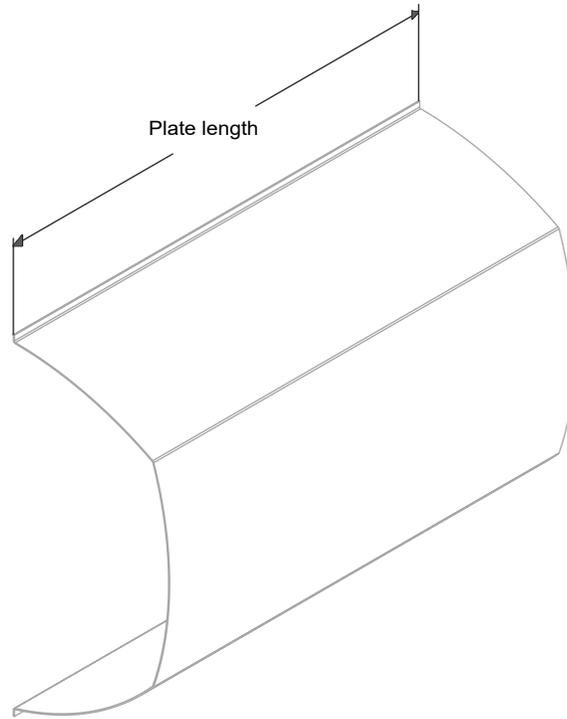

Spreader Model	Capacity			Plate length	
	Gallon (UK)	Gallon (US)	Liters	steel 1/4" 6 ft	stainless steel. 5 ft
EL66-3000	3000	3600	13650	2018-1561-170	2018-2001-070

