

PRODUCT INFORMATION

Original document



GEA BluAir

Chiller



COPYRIGHT

All Rights reserved.

No part of this documentation may be copied or published by means of printing, photocopying, microfilm or otherwise without prior written consent of

- GEA Refrigeration Germany GmbH

herein after referred to as the **manufacturer**. This restriction also applies to the drawings and diagrams contained in the documentation.

LEGAL NOTICE

This product information is to be used for product presentations and customer consultation. It contains important information and technical data regarding the product.

The product information makes the technical, product related and commercial information available to the customer in detail before the sale of the product.

This product information serves as a support and technical advisory service for our partners and customers as well as for the marketing team. Apart from serving as the medium for transfer of product know-how, it also forms the basis for product demonstrations, the organisation and conduction of technical seminars as well as the technical support at trade fairs.

This product information should be supplemented with the information about the industrial safety and health related regulations at the site of installation of the product. The regulations vary from place to place as a result of the statutory regulations applicable at the site of installation of the product and are therefore have not been considered in this product information.

In addition to this product information and the accident prevention regulations applicable for the respective country and area where the product is used, the accepted technical regulations for safe and professional work must also be observed.

GEA Refrigeration Germany GmbH reserves the right to make technical changes during the course of further development of the equipment covered by this product information.

Illustrations and drawings in this product information are simplified representations. As a result of the improvements and changes, it is possible that the illustrations do not exactly match the current development status. The technical data and dimensions are subject to change. No claims can be made on the basis of them.

SYMBOLS USED



Danger

Stands for an immediate danger leading to severe physical injuries or death.

▶ Description for avoiding the danger.



Warning

Stands for a potentially dangerous situation leading to severe physical injuries or death.

▶ Description for avoiding the dangerous situation.



Caution

Stands for a potentially dangerous situation which could lead to minor physical injuries or damage to property.

▶ Description for avoiding the dangerous situation.

Notice

Stands for important information that must be observed for the intended use and function of the product.

▶ Description of the required action for the intended function of the product.

PREFACE

In addition to other products, the portfolio of GEA Refrigeration Germany GmbH includes complete chillers and heat pumps.

In light of the fact that the working principle is identical, GEA documentation differentiates between the terms chillers and heat pumps as follows:

A chiller is a system where the application focus lies on generating refrigeration (cooling a liquid secondary circuit), regardless of possible heat recovery options via a liquid-cooled condenser and/or oil cooler. The GEA chillers include the standard GEA Blu series BluAstrum, BluGenium, BluAir (duo), BluX (duo) as well as the modular GEA Grasso FX series and the MX as a special series.

A heat pump is a system where the application focus lies on generating heat (heating a liquid heated medium). Here, the heat exchanger concept on the high pressure side is optimised with respect to this application. GEA heat pumps include the standard GEA Red series RedAstrum, RedGenium and the special series GEA Grasso HX.

The GEA Blu-Red Fusion product can be seen as a two-stage heat pump or also as a combined chiller-heat pump. Since the product is always (also) designed for a specific heating application, it is formally part of the GEA Red Standard series.

Many components and modes are used in the same way in different GEA chiller and heat pump product series. The descriptions of some components and operating principles are thus expressed in general terms in this document.

The figure on the front page shows the product in a project-specific version (project-related modifications possible).

LAYOUT INFORMATION

Bullet points and numbered list characters

Bullet points are used to separate logical contents within a section:

- Bullet point 1
 - Types of bullet point 1.
- Bullet point 2
 - Types of bullet point 2.

Numbered list characters are used to separate enumerations within a descriptive text:

Descriptive text with consecutive numbering:

- Numbered list point 1
- Numbered list point 2

Handling instructions

Handling instructions prompt you to do something. Several steps in sequence time form a handling sequence that should be completed in the prescribed order. The handling sequence can be divided into individual steps.

Handling sequence

1. Handling sequence step 1
 - step 1,
 - step 2,
 - step 3.

2. Handling sequence step 2

The subsequent handling sequence is the expected result:

→ Result of the handling sequence.

Individual handling steps

Individual handling steps are marked thus:

- Individual work steps

TABLE OF CONTENTS

1	Description	11
1.1	General information	11
1.2	Scope of delivery	11
1.3	Product designation chillers with screw compressors	14
2	Components	16
2.1	Chillers in remote design	17
3	Description of Design and Function	18
3.1	Design, applications	18
3.1.1	General operating sequence of chillers and heat pumps	20
3.2	Main components	21
3.2.1	Compressor	21
3.2.2	Motor	22
3.2.3	Coupling	23
3.2.4	Evaporator	23
3.2.5	Condenser	24
3.2.6	Oil separator	25
3.2.7	Oil cooler	26
3.2.8	Oil filter system with OMC-block (oil management centre) screw compressor	26
3.2.9	Suction filter combination SFC (only on GEA BluAir 1000 and GEA BluAir 1500)	27
3.2.10	Control cabinet with control	27
3.2.11	Weatherproof housing	29
3.2.12	Gas detection	30
3.2.13	Fittings	31
3.2.14	Safety devices	32
3.2.15	Safety devices for pressure limitation	32
3.2.16	Components installed by the client	33
4	GEA Omni control	34
4.1	Product highlights	34
4.2	View	35
4.3	Standard function	35
4.4	Components of GEA Omni	36
4.5	Input and Output Signals	38
5	Technical data	41
5.1	Dimensions, weights, fill quantities and connections	41
5.2	Application limits	42
5.3	Water quality requirements, parameters	44
5.4	Performance characteristics	45
5.5	Sound pressure level	46
5.6	Sound power	48
6	Application form	51
6.1	Manufacturer address	51

TABLE OF FIGURES

Fig. 1	GEA BluAir, front view	11
Fig. 2	Arrangement of the compressor	21
Fig. 3	Position and arrangement of the motor:	22
Fig. 4	Arrangement of the coupling	23
Fig. 5	Arrangement of the evaporator	23
Fig. 6	Position of the condenser	24
Fig. 7	Arrangement of the oil separator	25
Fig. 8	Arrangement of the oil cooler	26
Fig. 9	Position of the control cabinet	27
Fig. 10	Weatherproof housing	29
Fig. 11	Arrangement of the gas detection system	30
Fig. 12	GEA Omni exterior view without indicator lights	35
Fig. 13	GEA Omni exterior view with indicator lights	35
Fig. 14	GEA Omni™ control cabinet interior view (frequency converter installed in control cabinet)	37
Fig. 15	Arrangement of the frequency converter in the GEA BluAir and GEA BluAir duo chillers	37
Fig. 16	GEA BluAir 400 ... GEA BluAir 1500	41
Fig. 17	Corrosion resistance in presence of chlorides	45

1 Description

1.1 General information



Fig.1: GEA BluAir, front view

Parameter	Remark
Output range	470 - 1270 kW 12 / 6 °C (secondary refrigerant temperature) 35 °C (air inlet temperature)
Screw compressor	GEA Grasso M Series, types D, G, H, L, M, N $V_{th} = 470 \dots 1290 \text{ m}^3/\text{h}$
Screw compressor package	GEA Grasso M
Chiller	GEA BluAir
Evaporator type	Fully welded plate heat exchanger with integrated separator
Working principle	flooded evaporation
Liquid separator	integrated
Condenser type	Air cooled condenser (other series as an option)
Condenser design type	Air-cooled condenser V-type register EC vents
Transport	1 part (to max. permissible transport duration) alternatively divided in transportable modules

1.2 Scope of delivery

Notice

The product is manufactured and delivered according to technical specifications.

► Optional design variants based on the standard equipment can be considered.

Standard equipment	
Designation	Design
Maximum permissible pressure:	Max. 28 bar
Intended environment:	Outdoor installation

Description

Scope of delivery

Standard equipment	
Designation	Design
Ambient temperatures:	-15 °C to +40 °C
Installation altitude:	≤ 1000 m above sea level
Secondary refrigerant outlet temperature ¹	-15 °C/ 6 °C/ 18 °C
Electric motor:	Standard scope of delivery
Refrigerant:	R717
Type of oil:	<p>According to order specification. Compare also the technical information on the lubricating oils for GEA packages, chillers and heat pumps.</p> <div style="background-color: yellow; padding: 5px;"> <p> Caution</p> <p>Deviating types of oil must be agreed with the manufacturer. ► Contact the Design or Technical Customer Service of GEA Refrigeration Germany GmbH.</p> </div>
Oil cooling:	Refrigerant injection Refrigerant cooled (internal piping)
Oil heater:	Standard scope of delivery
Oil filter:	Single stage filter
Spare oil filter:	none
Oil level switch:	none
Pressure sensors:	directly in the pipe
separate push-button switch:	none
Overflow valve:	scope of delivery
Safety valve HP / LP:	Double safety valve with change-over valve
Flow monitor:	electronic
Control:	GEA Omni
Communication	Modbus TCP
Power current and frequency inverter:	Standard scope of supply including the power module for the air cooled condenser, cable entry below
Colour:	RAL 5014 (pigeon blue) / RAL 7035 (light grey)
Weatherproof housing:	<p>dismantled weatherproof housing for outdoor installation, completely assembled and equipped with ventilation and vents via ventilators, heating, illumination and ammonia detection system.</p> <p>Colour: RAL 7035 (light grey)</p> <p>The weatherproof housing contains all components but not the condenser.</p> <p>The weatherproof housing is not a machine room.</p>
Vibration isolators:	none
Approval of pressure equipment:	CE-PED, Module H (piping)
Documentation:	2x paper form + 1 USB stick
Optional equipment	
Designation	Design
Spare oil filter:	available
Communication:	Profibus DP ProfiNet
Electric motor:	customer specific design possible on request

1 Temperature difference secondary refrigerant maximum 10 K / standard 5 K


Optional equipment	
Designation	Design
Flow monitor:	mechanically (paddle)
Vibration isolators:	available
Approval of pressure equipment:	CE-PED, Module H1 (complete chiller)

Description

Product designation chillers with screw compressors

1.3 Product designation chillers with screw compressors

GEA BluAir series

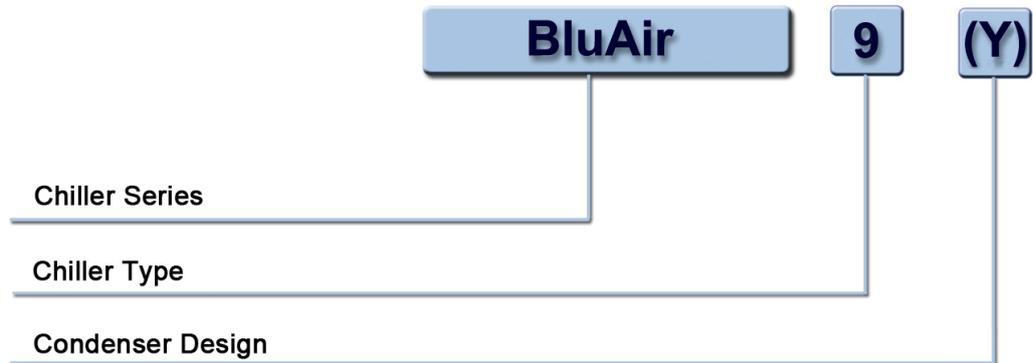

Product code description

Code	Description
BluAir	Chiller series
9	Capacity of the chiller in kW related to cold-water operation 12 °C / 6 °C
Y	Condenser version

BluAir = Chiller series

9 Capacity of the chiller at 4500 min⁻¹ in kW related to cold water operation 12 °C / 6 °C

Compressor frame size	Chiller frame size
D	400
G	500
H	800
L	900
M	1000
N	1500

(Y) Condenser version

Code	Description
(A)	Air cooled condenser, chiller for outdoor installation
(W)	Water cooled condenser Chiller for outdoor installation
(R)	Evaporating or air-cooled condenser ² Chiller for outdoor installation

² Not in the scope of delivery for GEA Refrigeration Germany.

Example of designation

Example	Description
BluAir 1000 (A)	Chiller with screw compressor, flooded evaporator with integrated separator, air cooled condenser (BluAir) Capacity of the chiller 1000 kW (1000) Evaporator designed as a completely welded plate heat exchanger, air cooled condenser, chiller for outdoor installation (A)

2 Components

The chillers comprise the following components:

- 1 x GEA screw compressor (GEA BluAir),
2 x GEA screw compressor (GEA BluAir duo),
- Evaporator with integrated separator
- Condenser,
(design type (R): not included in scope of delivery),
- 1 x electric motor with coupling and flange (GEA BluAir),
2 x electric motor with coupling and flange (GEA BluAir duo),
- Oil supply system with oil separator,
- Oil cooler (standard: refrigerant injection)
- Oil filter,
- Suction filter,
- Check valves on the suction and discharge sides,
- Speed-dependent capacity control,
- monitoring and safety devices,
- 1 x frequency converter (GEA BluAir),
2 x frequency converter (GEA BluAir duo),
- Low-voltage installation with control equipment,
- HP-receiver (for condenser design type (R) only).

All components are fully mounted. Low-voltage installation with frequency converter and control device are wired.

The oil separator is arranged horizontally and mounted on the steel bearings bolted to the base frame.

The oil is cooled in a water or refrigerant cooled oil cooler or in the heat recovery unit (for condenser design type (R)).

By default, a rigid installation on the foundation is intended. An installation with vibration isolators is available optionally.

All connections are closed tight.

Service fluids

The chillers are delivered without refrigerant and oil. They are filled with dry nitrogen (0.2 bar ... 0.5 bar overpressure).

When commissioning a start-up or a factory acceptance test (FAT) the refrigerating machine oil is included in the scope of delivery.

Insulation

Standard insulation with weatherproof housing for suction line and evaporator in 19 mm Armaflex.

The insulation is basically designed for an ambient temperature of 20 °C and a humidity of 70 %.

Painting

Coating system S 2.15 acc. to EN ISO 12944-5 for environmental conditions C2 acc. to EN ISO 12944-2.

Designed for room temperatures of 5 °C up to 40 °C.

Colour scheme chiller: RAL 5014 pigeon blue

Colour scheme control cabinet: RAL 7035

Colour scheme weatherproof housing (optional): RAL 7035 light grey

Approval

The chillers are awarded a CE label in accordance with the Pressure Equipment Directive 2014/68/EC after approval.

Documentation

Every chiller includes user documentation. The user documentation contains:

- Drawings and part lists,
- Safety Instructions,
- Operating manual
(with the description of the refrigerant and oil circuits, the instructions for installation, start-up and maintenance),
- Documentation of the main components (electrical motor, control),
- Maintenance manual,
- Acceptance certificate for components requiring acceptance

This transport instructions are also available from GEA Refrigeration Germany as a separate document if necessary.

2.1 Chillers in remote design

In addition to the chillers completely equipped ex works with a condenser, so called remote chillers are often also operated.

This means that the chiller delivered ex works does not contain a condenser but has only been designed for the requested condensation temperature.

The customer himself then selects a suitable condenser and connects this with the supplied remote chiller. The external (remote) condenser is either an air cooled condenser or an evaporative condenser.

3 Description of Design and Function

3.1 Design, applications

The **GEA BluAir** Chiller Programme provides proven components as complete refrigeration systems for medium and large refrigeration and/or air conditioning requirements.

Main fields of application:

- cold water for air conditioning
- cold brine for air conditioning with combined ice storage operation
- cold water for industrial processes
- cold brine for industrial processes
- (cold) and warm water for heat pump operation

In principle, these refrigeration systems use ammonia as refrigerant which is characterized by a high refrigerating capacity, low energy consumption and a favourable price and are completely neutral towards the environment.

Based on the GEA Grasso screw compressor series, the portfolio of **GEA BluAir** chillers covers a refrigerating capacity range of approx. 400 kW to 1500 kW.

The output ranges are defined by 6 frame sizes of the screw compressor series.

The **GEA BluAir** chillers work with flooded evaporator systems in gravitational mode. The chillers are equipped with completely piped and fully mounted air cooled condensers.

The chillers have a modular design and comprise the following main modules:

- Standard screw compressor package
- Evaporator sub-assembly with integrated liquid separator and de-oiling system
- Low-voltage installation with frequency inverter and control equipment
- Air-cooled condenser with speed-controlled EC vents

The modular construction of the chillers is modelled on the construction of the screw compressor packages. The oil separator and the integrated liquid separator are arranged horizontally. The arrangement of the components ensures the extremely compact design of the chillers.

All components and electrical components, except the air-cooled condenser, are housed in a weatherproof housing.

The **GEA BluAir** chillers are supplied, as a standard, ready for connection, fully piped and wired.

The **GEA BluAir (R)** chillers are supplied in such a complete state that on site only the air cooled condenser or the evaporative condenser has to be integrated.

The heat exchangers are designed according to the parameters of a project, taking into account a maximum energy efficiency on the evaporator and the condenser side.

Notice

The use of several GEA BluAir with only one common condenser is not permitted.

► When operating with an external condenser (type GEA BluAir (R)), a separate condenser must be available for each GEA BluAir!

The standard version of the chillers is equipped with a freely programmable control.

All operating and fault signals as well as the process variables can be read from a display.

The control device is operated via a Touch Panel.

The chillers are delivered without refrigerant and refrigerating machine oil. They are filled with dry nitrogen (approx. 0.2 bar ... 0.5 bar overpressure).

When commissioning a start-up or a factory acceptance test (FAT) the refrigerating machine oil is included in the scope of delivery.

Each chiller is supplied with user documentation containing a description of the refrigeration cycle, commissioning instructions, an operating manual and the maintenance manual.

The separate installation and maintenance manual are provided for detailed information about the screw compressors.

3.1.1 General operating sequence of chillers and heat pumps

Chillers and heat pumps are automatic plants used in circuit processes in which a refrigerant absorbs low-temperature heat (source) and discharges it at a high temperature (sink).

The screw compressor draws refrigerant gas from the liquid separator and compresses it to condensation pressure.

The refrigerant liquefies as it is cooled and discharges its heat to a cooling medium or heat carrier. Before or after condensation, the overheating or undercooling heat can be removed from the refrigerant in an external desuperheater or subcooler. Then the liquid refrigerant is relaxed in the liquid separator.

In the liquid separator, the refrigerant vapour and liquid are separated.

The liquid is led through the evaporator by gravity circulation (thermosiphon principle). As result of liquid refrigerant absorbing heat (flooded evaporation) the refrigerant evaporates and the cooling agent is cooled down. In a cascade variant, an evaporator can be used, which can also be charged with compressed refrigerant from the low-pressure stage instead of a refrigerant. The refrigerant from the process stage process is liquefied in the process.

During the operation of the screw compressor, oil is injected into the working chamber and then separated again from the refrigerant in the discharge side oil separator.

The oil that has heated up in the compressor is cooled in an oil cooler to the inlet temperature.

Despite the oil separation system, oil will reach the low pressure side of the circuit.

A special automatic and maintenance-free oil returning system developed by GEA Refrigeration Germany GmbH returns the oil from the evaporator / liquid separator back to the screw compressor.

This is a basic precondition for fault-free operation of the evaporator system.

The capacity control of the screw compressor is continuously adjusted via the compressor's control slide (optional for the GEA BluAstrum and GEA BluAir product series) and through the frequency converter control of the compressor drive motor (standard equipment in the "Blu" and "Red" product families). In this way, the cooling capacity can be adapted to the effectively required cooling capacity in the maximum range 0% to 100% (the minimum level is > 0 % depending on the application area).

The adjustment of the internal compression ratio to the current operating conditions is done steplessly by the compressor's Vi-slider. The Vi capacity slide is hydraulically adjusted and activated using 2 solenoid valves. The position of the Vi control slide is displayed on the compressor control.

In partial-load mode, the cold water / saltwater and heating agent flows may be reduced by max. 50% to guarantee efficient transfer of the heat to the heat exchanger systems.

3.2 Main components

3.2.1 Compressor

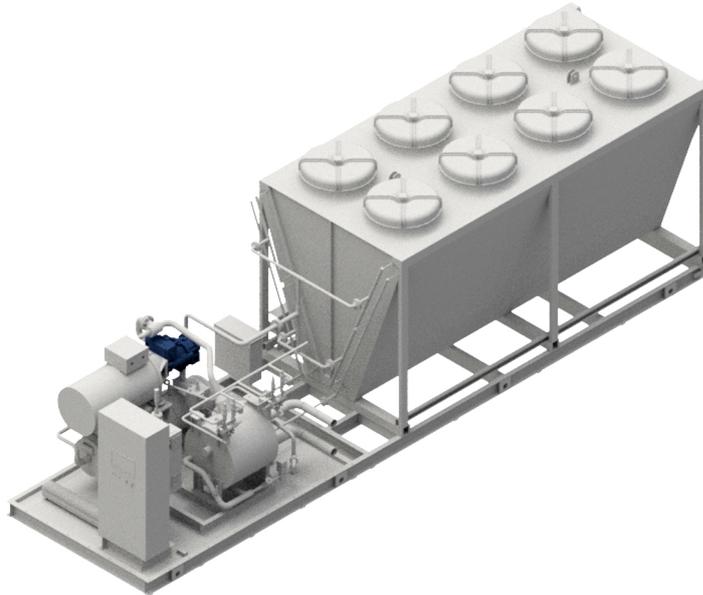


Fig.2: Arrangement of the compressor

The screw compressor is characterised by a compact design, high reliability, high-quality components and ease of maintenance.

Screw compressors are dual rotor positive displacement machines that work according to the displacement principle and are operated by oil injection.

The screw compressor is operated with ammonia (NH₃) as the refrigerant.

Specific machine oils are recommended depending on application. These can be found in the specifications or can be determined using a limited selection in the product configurator.

Caution

Different types of oil that are not indicated in the specification must be agreed with the manufacturer.

► Contact the design or service department of GEA Refrigeration Germany GmbH.

Various series and frame sizes of screw compressors are available for different fields of application.

The screw compressor is driven directly by the motor via a coupling.

The documentation for the screw compressor (installation instructions, part lists, drawings) is an integral part of the product documentation.

3.2.2 Motor

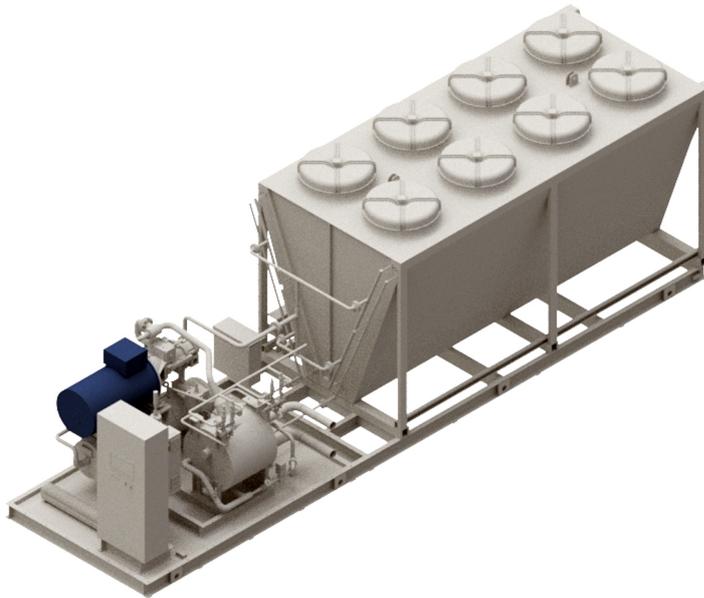


Fig.3: Position and arrangement of the motor:

Standard: The compressor is driven by an air-cooled 2-pole electric motor IP23 with an operating voltage of 400 V; 50 Hz using a coupling.

The motor speed is controlled using a frequency converter (optional equipment with chillers of the FX P and FX P duo series).

The maximum speed range is at 1000 rpm ... 4500 rpm, but is limited in both directions depending on the product and application.

The technical specifications provide information about the permissible speed range. Depending on the application, foot motors as per design IM B3, flange motors as per design IM B5, or a combination (design IM B35) are used.

Option: Other manufacturers, operating voltages, frequencies, protection and efficiency classes, additional monitoring sensors and anti-condensation heaters, products without motor are available (to be supplied by the customer). Others on request.

The documentation for the electric motor (operating manual) is an integral part of the product documentation.

Notice

The use of an anti-condensation heater should be considered if there is a risk of condensation forming on the motor/product at the installation site, especially if high humidity levels above 60% and/or large temperature fluctuations are expected (especially motors that are at a standstill in humid environments).

► Whether this technical design is necessary must be decided by the customer/operator based on the actual system.

3.2.3 Coupling

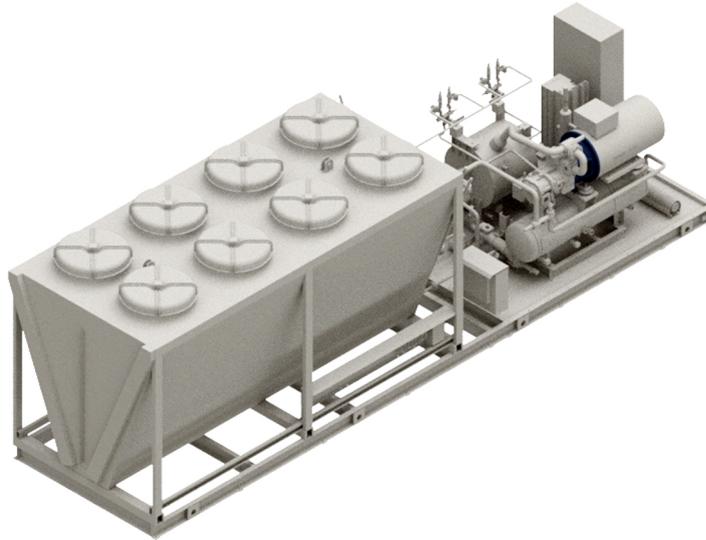


Fig.4: Arrangement of the coupling

The coupling helps in transmission of torque between motor and compressor. The non-clutch design of the coupling brings about the neutralisation of the otherwise disturbing influences such as axial or radial forces, vibrations or offset. Speed fluctuations and speed shocks are damped and cushioned, while torsional vibrations are reduced.

The documentation of the coupling (operating manual) is a part of the product documentation.

3.2.4 Evaporator

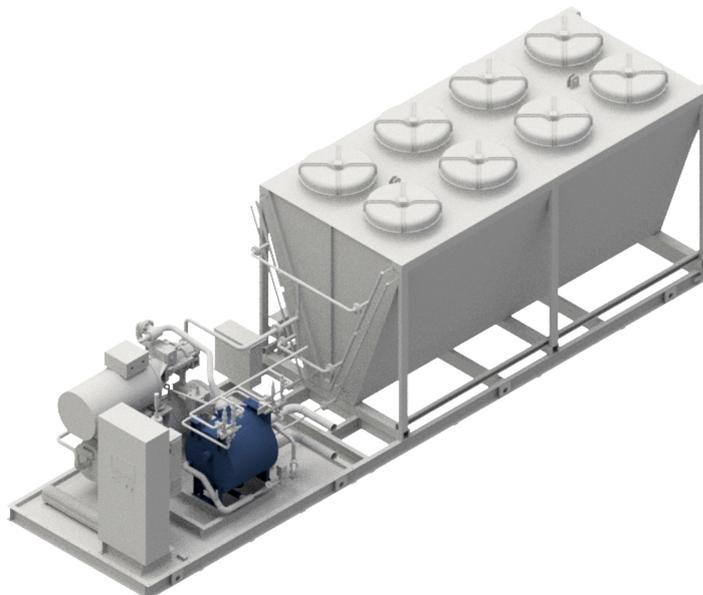


Fig.5: Arrangement of the evaporator

In the evaporator heat is absorbed from the secondary refrigerant (which is thereby cooled) by way of evaporation of the refrigerant. The evaporator works by the principle of overflowed evaporation.

Liquid drops are effectively separated in the liquid separator integrated into the evaporator.

A maximum level indicator is installed in the liquid separator to protect against overflowing. The suction pressure and secondary refrigerant outlet temperature are monitored to provide reliable protection against freezing.

Design, manufacture and acceptance of the evaporator with integrated liquid separator comply with the requirements of the Pressure Equipment Directive.

The documentation of the evaporator (operating and maintenance instructions, acceptance certificate) is a part of the product documentation.

3.2.5 Condenser

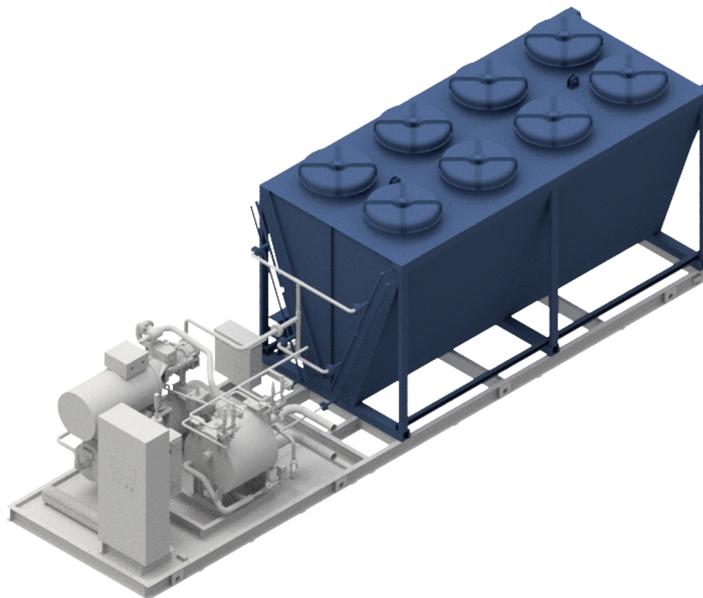


Fig.6: Position of the condenser

In the condenser the compressed refrigerant vapour is cooled down and liquefied by dissipating the heat absorbed in the evaporator and compressor to the cooling medium (air) in the air cooled condenser.

Design, manufacture and acceptance of the condenser comply with the requirements of the Pressure Equipment Directive.

1. The condenser in the air cooled condenser design with EC motors is included in the scope of delivery.

The documentation of the condenser (operating and maintenance instructions, acceptance certificate) is a part of the product documentation.

2. Condenser version (R)

- The air-cooled condenser on the installation side is not included in the scope of delivery
- The evaporative condenser on the installation side is not included in the scope of delivery

3.2.6 Oil separator

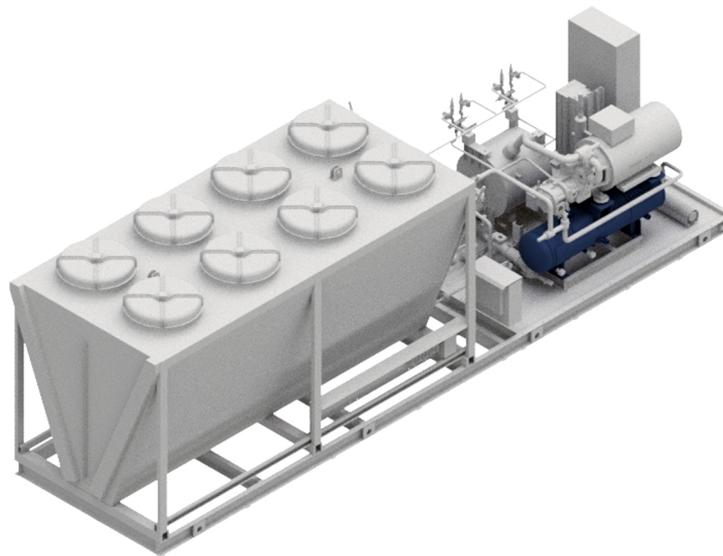


Fig.7: Arrangement of the oil separator

The design of the oil separator is standardised and it is characterised by low oil carry-over.

The oil separator is installed horizontally.

The documentation for the oil separator (operating and maintenance manuals, acceptance certificate) is an integral part of the product documentation.

Oil heater

Electric oil heaters are built into the oil separator to heat the oil-refrigerant mixture in the oil separator when the product is at a standstill. The oil heater prevents condensation of the refrigerant into the oil and, thus, any foaming of the oil during start-up.

To prevent overheating, the radiator is fitted with a correctly dimensioned overheating protection and a temperature control (in case of a fault, e.g. boil-dry protection, permanently set to 170 °C).

Notice

The oil heater may only be switched on when installed and used for heating the oil in the oil sump of the oil separator.

- For more information about handling the oil heater, please refer to the function description, commissioning, operation and control chapters.

The documentation for the oil heater (operating and maintenance manuals, acceptance certificate) is an integral part of the product documentation.

3.2.7 Oil cooler

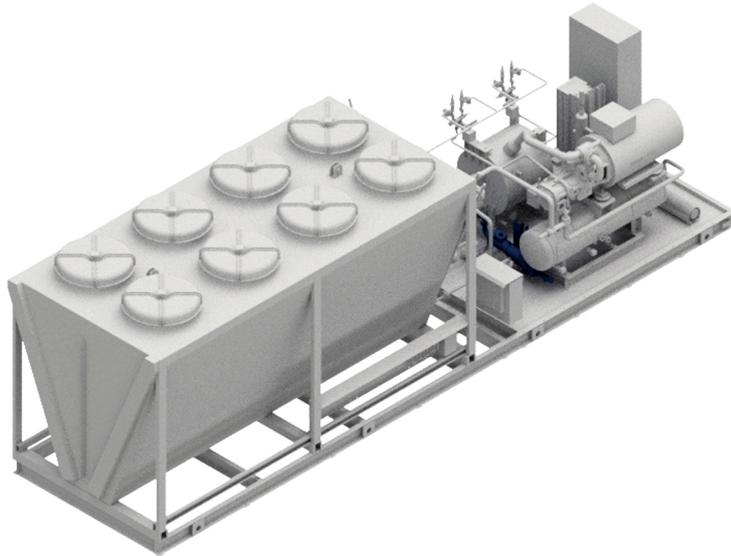


Fig.8: Arrangement of the oil cooler

The oil cooler is used for cooling the oil heated in the compressor in order to ensure sufficient oil viscosity for supplying to the compressor.

As standard, minimum oil temperature is maintained by oil temperature control using a 3-way valve. Unless otherwise specified, the oil cooler has all the pipelines on the coolant side.

Depending on the product/application, the oil cooler is an optional component and is replaced with the injection of refrigerant into the compressor to cool the compression process.

For heat pumps and applications with heat recovery, a type of liquid cooling is used in which the oil cooler releases the oil's heat to a liquid medium (cooling medium/heat carrier).

The documentation for the oil cooler (operating manual, acceptance certificate) is an integral part of the product documentation.

3.2.8 Oil filter system with OMC-block (oil management centre) screw compressor

After cooling, the oil passes into the oil filter which holds back solid particles from the full oil flow.

Due to its large surface, the oil filter has a high absorbing capacity and thus a long operating lifetime. Depending on the application, the relative filter fineness is between 10 and 25 μm .

An additional coarse filter with a relative filter fineness between 40 and 80 μm may be installed upstream depending on the application.

The OMC block includes the oil distribution system of the oil circuit. Necessary control and shut-off fittings are integrated in the OMC block. Connections for temperature and pressure sensors as well as service ports are available. The OMC

block is combined with a standardised filter system and oil pump units (if present) and forms the central control and regulation unit within the oil circuit.

Optionally, the OMC block can be equipped with a 3-way valve element (to ensure a minimum oil temperature when starting the compressor, not available as standard for all applications/products).

The documentation for the OMC block (operating manual, acceptance certificate) is an integral part of the product documentation

Notice

The OMC cannot be used under certain conditions (such as applications with high oil volume flows of more than 340 l/min and all products with a maximum permissible pressure higher than 40 bar).

► In this case, all of the parts that are usually integrated in the OMC are installed separately in the oil circuit.

3.2.9 Suction filter combination SFC (only on GEA BluAir 1000 and GEA BluAir 1500)

The suction filter combination contributes substantially to the high working reliability of the components and the overall product.

The suction filter combination prevents dirt particles carried by the suction flow from entering the screw compressor. The flow through the suction filter element is from the inside to the outside. It is designed such that monitoring is not required. The filter element can be cleaned.

The documentation of the suction filter combination (operating manual, acceptance certificate) is an integral part of the product documentation.

Compressor frame sizes C to N are equipped with a suction filter check valve integrated in the compressor as standard.

3.2.10 Control cabinet with control

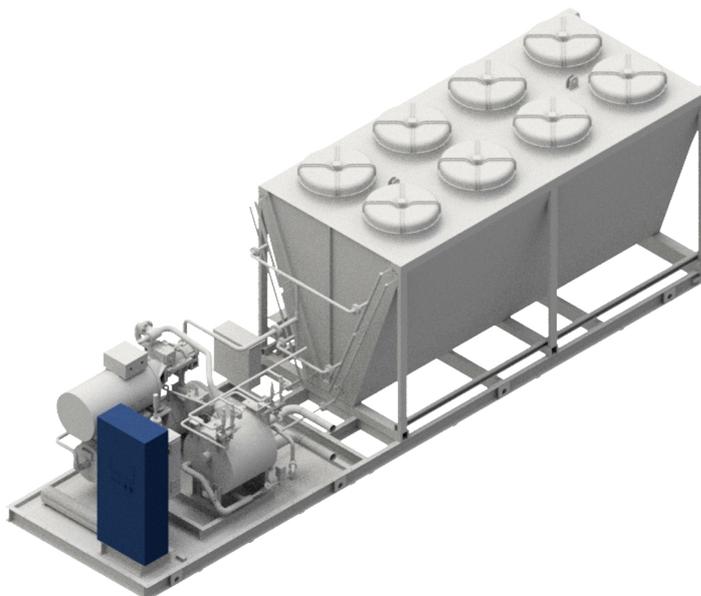


Fig.9: Position of the control cabinet

The product is equipped with a GEA Omni control as standard.

The switching cabinet and control device consists of the control with operating and display unit, indicator lights for “Operation”, “Warning” and “Fault”, EMERGENCY STOP button, coupling elements as well as the casing.

For motors with an output power of up to 450 kW, the control cabinet with the control is directly mounted on the product.

For certain product series, the control cabinet can be optionally removed from the scope of delivery. In this case, only the GEA Omni control is mounted in a control cabinet on the product.

If the product operates with variable speed (standard for the GEA Blu chiller and GEA Red heat pump series), the frequency converter is integrated in the control cabinet.

Notice

Depending on the motor size, the frequency converter (FC) must be installed in a separate cabinet. Depending on the application, the complete control cabinet is mounted in a different configuration than the one shown, or the FC cabinet is supplied separately.

► Details can be found in the project-specific specifications or the order drawings.

More details on the functional scope of the control can be found in the separate chapter concerning the GEA Omni.

The documentation for the control (operating manual, circuit diagram, parameter list, communication guideline) is an integral part of the product documentation.

Notice

The communication guideline offers detailed information about communication of the controller.

► The communication guideline can be made available before a planned installation.

Notice

In addition to the main power supply of the control cabinet, a second independent electrical connection (20 A / 400 V - see also electrical circuit diagram) must also be provided **on site**.

► This serves the supply of the gas detection system, the horn, the warning lamp and the explosion-protected fans.

3.2.11 Weatherproof housing

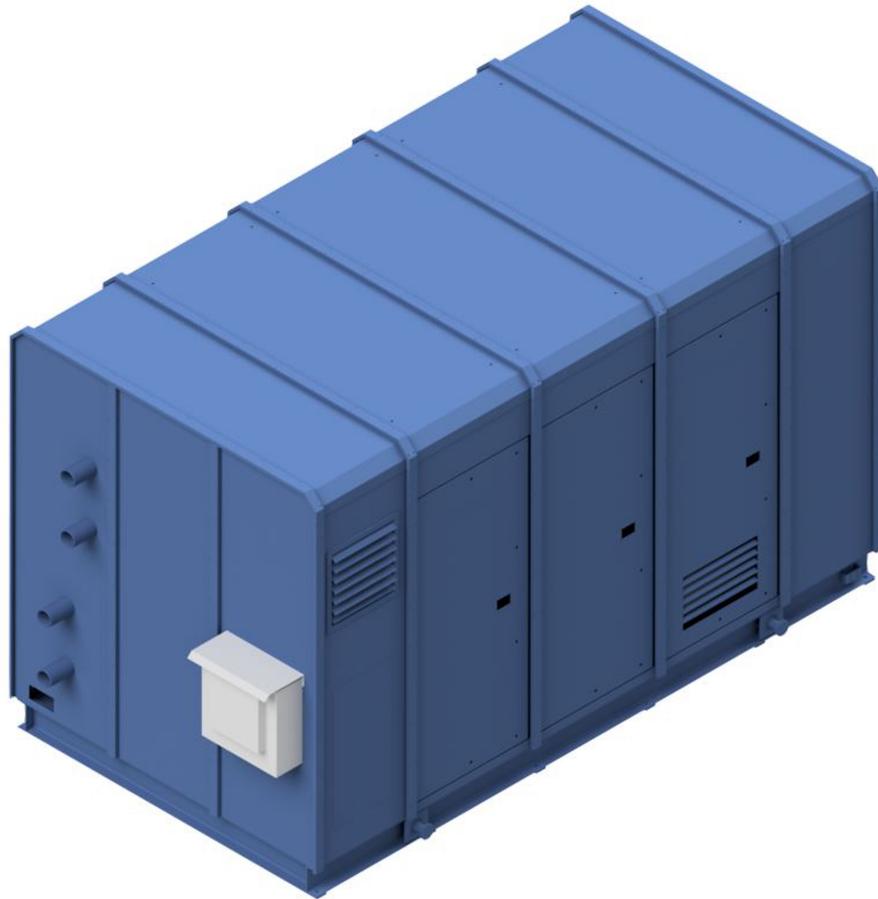


Fig.10: Weatherproof housing

It must be installed on level surfaces with adequate load-bearing capacity.

The product is provided with a weatherproof housing, which holds all components other than the condenser.

The air-cooled condenser is not surrounded by the weatherproof housing.

The double-walled, down closed housing construction with insulation material reliably protects all components in the temperature range from -15 to 40 °C against weather conditions and reduces the external measured sound pressure level.

Therefore, a significant noise reduction is achieved. The weatherproof housing enables installation of the product outdoors without additional protective measures.

A ventilation system keeps the temperatures in the interior within the limits and simultaneously prevents heat losses on the system.

Next to the access door in the area of the switching cabinet, there are two doors on each side to facilitate easy access for maintenance work.

Alternatively the roof or entire weatherproof housing can also be removed completely by loosening a few screws in the base frame. With the later measure, it is essential to take care that the lines and cabling / ventilators leading through the weatherproof housing are interrupted accordingly in advance.

The weatherproof housing is not a machine room as defined in DIN EN 378.

The weatherproof housing is equipped with:

- ventilation and venting (rain-proof)
- Heater
- Illumination
- Gas detection

The gas detection system comprises:

- two sensors (gas detectors with the trigger points "Alarm" and "Accident EMERGENCY STOP"),
- an evaluation device for the evaluation of the signals of both sensors (gas detectors),
- a signal lamp,
- a signal hooter.

The documentation for parts of the weatherproof housing fitted, especially for the gas detector system and the heater, is part of the product documentation.

3.2.12 Gas detection



Fig.11: Arrangement of the gas detection system

The gas detection system comprises:

- the ammonia sensors (Default setting: 1–500 ppm / 2–30000 ppm),

- the evaluation device,
- the control of the housing ventilator.

When the appropriate ammonia concentration is reached near the sensor (standard 450 ppm), the system is first brought to a standstill and the housing ventilator is put in continuous operation.

The externally mounted horn emits a continuous signal.

As a third safety step, the corresponding sensor is set at an alarm threshold of 30000 ppm NH₃.

Notice

If this threshold is reached, the entire chiller is de-energised.

- ▶ This can, e.g., be done by an external load switch with remote triggering.
- ▶ The de-energisation must be carried out on site – it is not carried out by GEA.
- ▶ The housing ventilator stops, but it can be started up via separate feed (terminal box outside).

Notice

In addition to the main supply of the switching cabinet, **on-site** a second independent electrical connection (20 A / 400 V – see also the circuit diagram) must be provided.

- ▶ This serves the supply of the gas detection system, the horn, the warning lamp and the explosion-protected fans.

Caution

Follow the owner's obligations at the site of installation.

- ▶ The documentation of the gas detection system (operating and maintenance instructions) is a part of the product documentation.

3.2.13 Fittings

The term 'fittings' generally designates a control element of the product. Among other things, the term 'fittings' is also used for valves if they are used for the control and regulation of fluid flows in the pipes.

Furthermore, all kinds of installations in pipes, such as sight glasses, measurement apertures, filters and similar, are also designated as fittings. Therefore, fittings also include all kinds of valves, such as

- Stop valves
- Check valves
- Safety valves
- Throttle valves

Each fitting has its own field of use, according to the pressure or temperature in the pipe, the size of the pipe, the sealing requirements for the fitting, the reduction and direction of the flow of liquid, as well as the medium itself.

The safety fittings are used to limit the pressure in systems which are under pressure.

Each fitting is designed for the specific application. The fittings can be operated manually or by motor, e.g. by gear motors, or pneumatic or hydraulic cylinders. In reset fittings, the flow of fluid in the pipe causes automatic closing of the valve.

Depending on the model, different closing elements (e.g. valve discs, flaps, washers) close the pipe connected to the fitting.

The documentation of the fittings (acceptance certificate) forms part of the product documentation.

3.2.14 Safety devices

The product is equipped with a comprehensive software safety chain preventing excessive pressures, temperatures and the hazard of freezing.

A suction as well as condenser pressure control and a rated current limitation control will adjust the speed if the set limit values are exceeded.

Due to the applicable laws and regulations, various certifying bodies require a vast range of auxiliary equipment with independent safety devices.

The following safety equipment is included, if the chiller is delivered with CE label according to EN 378:

- Overflow valve (on the compressor) from discharge to suction side,
- Dual safety valve with blow-out connection, installed on the low pressure side of the product,

Notice

Correct installation of the blow-out connection.

- ▶ The contractors must guarantee that the pressure relief connection is safely operated to the outside.

-
- Safety pressure limiter via 2 switching positions with manual internal and external reset (one switching level may be enough for some applications)
 - Pressure relief device for each closable container which can contain liquid refrigerant.

This applies to all vessels in accordance with the requirements of the Pressure Equipment Directive.

The scope of delivery does not include the following safety devices in relation to escaping ammonia:

- Protective equipment (health and industrial safety)
- Gas warning device / gas warning sensors (included in the GEA BluAir and GEA BluAir duo series as standard)

In case of delivery according to EN 378 with CE label, all parts of the documentation mentioned in the regulation are also supplied in the national language.

All other approvals have to be agreed upon separately.

3.2.15 Safety devices for pressure limitation

The safety devices for pressure limitation of the product comply with EN 378-2.

The overflow valve for the protection of the compressor is designed according to EN 13136.

The blow-off pressure of the safety device is set to a pressure \leq the maximum permissible pressure of the system.

The blow-off pipe has been calculated according to EN 13136.

The electromechanical safety switching devices for pressure limitation comply with EN12263 and are type-tested. The settings correspond to the specifications of EN 378-2.

If electronic safety switching devices are used for pressure limitation, the setting may deviate from the standard specifications (see EN 378-2) due to the increased precision.

Notice

When using safety valves for pressure relief, the operator is responsible for:

- ▶ the calculation of the dimensioning of the blow-off pipes upstream of the safety valve,
- ▶ the safe discharge of refrigerant when the pressure relief device responds.

The safety equipment for pressure limitation according to EN 378-2 represents the minimum requirements. Therefore, before commissioning, the specifications from the national operational safety regulations must be compared with those of EN 378-2.

For the safe function of the safety devices for pressure limitation, the specified test intervals must be observed. These result from the respective industrial safety regulations.

3.2.16 Components installed by the client

Warning

GEA Refrigeration Germany GmbH does not assume any liability for arising damages or for the violation of the safety regulations resulting from the use of unsuitable materials or a modification to the product that is not included in the original safety concept.

- ▶ The material properties of components and system parts provided by and monitored by the customer, in particular in the secondary refrigerant and heat carrier or coolant circuit as well as in the oil circuit, must be suitable for the fluids flowing there. Furthermore, in the event of modifications to the product by the customer, the effects upon the safety devices must be checked.

4 GEA Omni control

4.1 Product highlights

GEA stands for sophisticated precision solutions. The system provider once again demonstrates its technological leadership and innovation with the new GEA Omni control system.

Powerful and practical, sophisticated and intuitive, refined and simple. This is GEA Omni.

GEA Omni delivers what it promises: maximum efficiency and reliable system operation. The next generation control integrates all important components of a refrigeration and gas compression plant. This permits the system to be operated according to demand and in a particularly efficient manner.

GEA Omni advantages at a glance:

- System control with one device
 - Control of the refrigeration system with GEA Omni
- High-resolution display
 - 1366 x 768 pixel
- Multitouch display
 - Ergonomic and intuitive input
- Easy integration
 - Easy installation on site, ideal for retrofitting existing systems
- Configurable Modbus TCP communication
 - Data exchange with other systems without additional cabling required
- Hardware design
 - Standard industrial components with modular design
- Individual user profiles and management
 - Setup of individual user profiles and record user entries made
- Drawings, manuals and videos
 - Technical documentation including helpful videos can be accessed directly via the touch panel
- Intelligent service intervals
 - Timely modification of maintenance recommendations depending on the operation
- GEA OmniLink
 - Application for remote control of the GEA Omni via Ethernet with integrated data transmission
- GEA OmniHistorian
 - Application for detailed analysis of recorded operating data histories
- Global product with local sales and service
 - Product available worldwide in a uniform design

- Production in North America, Europe and Asia
→ available in over 25 languages
- Reliability with GEA
→ Developed, manufactured and supported by the market leader for control systems for refrigeration and gas compression systems

4.2 View



Fig.12: GEA Omni exterior view without indicator lights



Fig.13: GEA Omni exterior view with indicator lights

4.3 Standard function

The GEA Omni supports the following standard functions:

- Display of all important physical and technical parameters, e.g. pressure, temperature, motor current, capacity, number of run hours, operation mode and status signals,

Different parameters and menus are hidden if they are not needed.

- Automatic start/stop of the product and capacity control depending on, for example:
 - Suction pressure
 - Discharge pressure
 - External setpoint value
 - External temperature
 - Network temperature
 - Inlet temperature (evaporator, secondary refrigerant)
 - Outlet temperature (evaporator, secondary refrigerant)
 - Inlet temperature (condenser, secondary refrigerant or heat carrier)
 - Outlet temperature (condenser, secondary refrigerant or heat carrier)
- Monitoring of all operating parameters.

- Limitation of the compressor capacity as soon as one of the defined limit values is reached or exceeded.
- Notification history (messages, warnings and faults) with date and time.
- Wire failure detection for all analogue input signals.
- Password protection to prevent unauthorised access to important parameters
- Saving of software, configuration and settings in non-volatile memory.
- Control via master controller via floating contacts.
- Programme saved on non-volatile CFast card.
- Possibility of communication with master controller via Modbus TCP, Ethernet/IP.
(optionally via Profibus-DP and ProfiNet)
- Remote access (optional via Ethernet)

4.4 Components of GEA Omni

- Control cabinet (different sizes and mounting options, see - IEC standard IP54 / NEMA 4 minimum classification)
- Control cabinet with:
 - Industrial PC with multi-touch screen and HD display for operation
 - EMERGENCY-OFF switch - directly connected to the control outputs to be able to switch off all rotating components immediately.
 - USB interface - with IP54 cover for data exchange with the industrial PC
 - Optional indicator lights for:
 - “operation” – for status displays start, operation or stop of the compressor
 - “warning” – for the display that an operating condition has exceeded the limit value for a warning.
 - “fault” – for indicating that the compressor is switched off.
- Control cabinet interior view:
 - Power supply for the industrial PC, input and output circuits and sensor
 - Frequency converter (optional or standard depending on the product)
 - I/O system – as interface for all monitored digital and analogue inputs and regulated outputs
 - Connections – for incoming power supply and cabling connections
 - Fuses and circuit breakers - as short-circuit and overvoltage protection. Industrial PC and I/O logic are protected with a fuse. The power supplies of the control system and the sensors are protected by circuit breakers
 - Cable ducts - as a guide for internal cabling



Fig.14: GEA Omni™ control cabinet interior view (frequency converter installed in control cabinet)

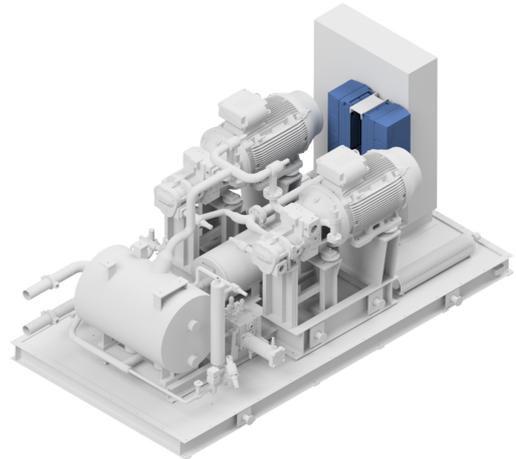


Fig.15: Arrangement of the frequency converter in the GEA BluAir and GEA BluAir duo chillers

4.5 Input and Output Signals

Low-voltage switchgear - GEA Omni	
from the low-voltage switchgear to the GEA Omni INPUTS	from the GEA Omni to the low-voltage switchgear OUTPUTS
Not applicable if the scope of delivery contains a low-voltage switchgear.	
Input: 100 ... 240 V, 50/60 Hz	
digital <ul style="list-style-type: none"> • Motor feedback • Motor protection compressor • Feedback external oil pump ³ 	digital <ul style="list-style-type: none"> • Run compressor • Run external oil pump ³ • Confirm malfunction
analogue (4-20 mA) <ul style="list-style-type: none"> • Motor current compressor drive motor • Speed compressor drive motor ⁴ 	analogue (4-20 mA) <ul style="list-style-type: none"> • Compressor drive motor speed setpoint ⁴

Remote controller or control system - GEA Omni	
from the remote controller (control system) to the GEA Omni INPUTS	from the GEA Omni to the remote controller (control system) OUTPUTS
digital <ul style="list-style-type: none"> • External ON/OFF • External "MORE" • External "LESS" • External run release • Confirm external fault • Switchover 2. Setpoint • Block compressor 	digital <ul style="list-style-type: none"> • Ready for external mode • Signal Compressor runs • Main failure • auxiliary output 1 (Default setting collective warning)
analogue (4-20 mA) <ul style="list-style-type: none"> • Remote setpoint 	analogue (4-20 mA) <ul style="list-style-type: none"> • Swept volume

³ If fitted.

⁴ Only when operated with a frequency converter.

Chiller / heat pump - GEA Omni	
from the cooling system / heat pump to the GEA Omni INPUTS	from the GEA Omni to the cooling system / heat pump OUTPUTS
<p>digital</p> <ul style="list-style-type: none"> external EMERGENCY-OFF (or EMERGENCY-STOP) Separator level ⁵ Eco-level ⁵ Gas sensor Discharge pressure safety switch min. oil level ⁶ max. oil level ⁶ Level of refrigerant top / bottom ⁵ 	<p>digital:</p> <ul style="list-style-type: none"> Solenoid valve capacity control max. ⁷ Solenoid valve capacity control min. ⁷ Solenoid valves capacity control ⁸ Solenoid valve check valve suction side ^{5, 7} Solenoid valves Vi-control ^{5, 7} Solenoid valve economizer operation⁵ Solenoid valve start-up unloading ⁵ Solenoid valves, oil return Solenoid valve low pressure-high pressure relief ³ Solenoid valve oil return from fine oil filter stage ³
<p>analogue (4-20 mA)</p> <ul style="list-style-type: none"> Control / primary slide position⁷ Vi / control slide stop position ^{5, 7} suction pressure discharge pressure Oil pressure Pressure after oil filter⁷ Crankcase pressure ⁸ Evaporating pressure ⁹ Suction temperature Discharge temperature Oil temperature Oil temperature oil separator sump ³ Oil temperature compressor on / off ¹⁰ Eco temperature³ Eco pressure³ Secondary refrigerant temperature on/off ¹¹ Inlet temp. refrigerant low pressure cooling system ¹² 	<p>analogue (4-20 mA)</p> <ul style="list-style-type: none"> Setpoint level control ⁵ Setpoint IntelliSOC injection valve ⁵ Setpoint motor valve suction line ³ Setpoint motor valve remote condenser control³ Setpoint motor valve hot gas bypass start-up unloading³

5 The signals refer in part to optional features (not available for all products).

6 For screw compressor, optional.

7 Depends on compressor type.

8 For reciprocating compressor.

9 For heat pumps with motor valve on the suction side.

10 For heat pumps with reciprocating compressor.

11 For heat pumps with water/saltwater-based heat sources.

12 For heat pumps with a heat source of NH₃-condensation of the low pressure cooling system.

Chiller / heat pump - GEA Omni	
from the cooling system / heat pump to the GEA Omni INPUTS	from the GEA Omni to the cooling system / heat pump OUTPUTS
<ul style="list-style-type: none"> • Outlet temp. refrigerant low pressure cooling system ¹³ • Heat carrier / cooling medium temperatures ¹⁴ 	

13 For heat pumps with a heat source of NH₃-condensation of the low pressure cooling system (is substituted with the discharge temperature sensor of the low pressure level for products of the GEA Blu-Red Fusion series).

14 For heat pumps heat carrier temperature sensors on/off for every heat exchanger standard, for chillers optional, only 1x inlet/outlet respectively into / out of the product.

5 Technical data

5.1 Dimensions, weights, fill quantities and connections

Notice

The data is applicable to the following conditions:

- ▶ Temperature of the coolant +12°C / +6°C
- ▶ Air inlet temperature +35 °C

Data may differ in other conditions.



Fig.16: GEA BluAir 400 ... GEA BluAir 1500

Characteristics								
Code	Parameter		GEA BluAir chiller					
			400 ¹⁵	500 ¹⁵	800 ¹⁵	900 ¹⁵	1000 ¹⁵	1500 ¹⁵
A	Length	mm	3000 ¹⁶ 8400	3000 ¹⁶ 8400	3000 ¹⁶ 9500	3000 ¹⁶ 10700	3500 ¹⁶ 12500	3500 ¹⁶ 15000
B	Width	mm	2400	2400	2400	2400	2400	2400
C	Height	mm	2850	2850	2850	2850	2850	2850
E	Cold water connection IN	DN	80	80	100	100	100	125
F	Cold water connection OUT	DN	80	80	100	100	100	125
	Connection of blow-off line to safety valve	DN	25	25	25	25	25	25
	Weight without charging	kg	5100 ¹⁶ 8700	5100 ¹⁶ 8700	5900 ¹⁶ 9900	6700 ¹⁶ 11300	7600 ¹⁶ 12800	8500 ¹⁶ 14000
	Filling quantity (Oil)	l	80	80	90	90	100	130
	Filling quantity (refrigerant NH ₃)	kg	70	74	86	106	136	155

15 subject to technical changes
16 without condenser

5.2 Application limits

The chillers of the series **GEA BluAir** and **GEA BluAir duo** for flooded evaporation can be operated within the specified application limits according to the respective specifications under diverse work conditions. The application limits listed below are based on the operating principle of the screw compressor, thermodynamic relations, containers and safety devices used as well as practical operating conditions. The appropriate compressor model should be selected for the particular operating conditions.

Application limits				
Parameter		Unit	Value	
Refrigerant				NH ₃
Speed	n	min ⁻¹	min	1000
			max	3600/4500 ¹⁷
Suction pressure	p ₀	bar (a)	min	1.9
			max	7.3
Outlet temperature of water as secondary refrigerant	t _{WA}	°C	min	+ 2.5
			max	+ 18
Outlet temperature with frost-resistant secondary refrigerants	t _{WA}	°C	min	- 15
			max	+ 18
Maximum permissible pressure	PS	bar (a)	min	7.3
			max	19.3
Condenser inlet temperature of cooling medium	t _{Kwe}	°C	min	Ambient temperature ¹⁸
			max	40
Condensing temperature	t	°C	min	15
			max	52
Discharge temperature at compressor outlet	t ₁	°C	min	50
			max	100
Pressure ratio p _c /p ₀)	π	-	min	> 1.5
Pressure difference (p _c -p ₀) ¹⁹	Δp	bar	min	3 ²⁰

¹⁷ depending on the frame size and design conditions

¹⁸ air cooled or evaporative condenser

¹⁹ The given pressure difference ensures reliable compressor operation. Furthermore, allowance must be made for the pressure difference necessary for the control valves fitted in the refrigerating plant.

²⁰ To comply with the minimum pressure difference, we recommend customer to provide a water-side 3-way valve.

Notes

- When considering a specific application, all the conditions specified in the table must be taken into account and adhered to.
- If the specified limits are exceeded for a specific application, the manufacturer must be consulted.
- In addition to the application limits given in the tables, consider the operating conditions which must be observed for the compressor (e.g. start-up regime, oil pressure, oil quantity, type of oil etc.).
- The oil temperature at the compressor inlet must be least 18 °C.
- The specified data refer to the operating conditions of a cooling or air-conditioning system.
During downtime or start-up, the limiting values may be exceeded or fallen short of for a short (never long-term) period of time.
- The operating parameters of the order confirmation apply for an agreed field test.

5.3 Water quality requirements, parameters

All water bearing components of the manufacturer provide optimum performance and maximum protection from corrosion, if all recommended limiting values of VDI 3803 issue 2010-02 (Tab. B3) for non-corrosive water and adequate water conditioning are met.

Notice

If the limits specified in VDI 3803 are not adhered to, the manufacturer cannot provide any warranty regarding the water-conducting parts of the delivered components.

- ▶ All components are designed for use with non-corrosive water. Water and glycol brine analysis is essential in protecting system components. Analyses prior to start up will prevent corrosion.

Following are shown required limiting values of VDI 3803, for use of carbon steel components in non corrosive water systems.

Water quality requirements, parameters			
Parameter		Value	Unit
Appearance		clear, without sediment	
Colour		colourless	
Odour		none	
pH-value at 20 °C		7.5 - 9.0	
Electrical conductivity	LF	< 220	mS/m
Soil alkali	Ca ²⁺ , Mg ²⁺	< 0.5	mol/m ³
General hardness, for stabilization	GH	< 20	°d
Carbonate hardness without hardness stabilizer	KH	< 4	°d
Chloride (see also following information)	Cl	< 150	g/m ³
Sulphur	SO ₄	< 325	g/m ³
Active biological components	KBE	< 10,000	per ml
Thickness factor	EZ	2 - 4	

The use of carbon steel and cast iron required in the most of applications water conditioning with corrosion inhibitors.

The use of stainless steel requires very special monitoring of water in apply to Chloride contents (risk of stress crack and pitting corrosion).

Notice

Recommend for use of plate heat exchangers

- ▶ < 100 ppm Cl for the use of 1.4301 (AISI 304) and maximum 40 °C wall temperature in the plate heat exchanger
- ▶ < 200 ppm Cl for the use of 1.4401 (AISI 316) and maximum 100 °C wall temperature in the plate heat exchanger

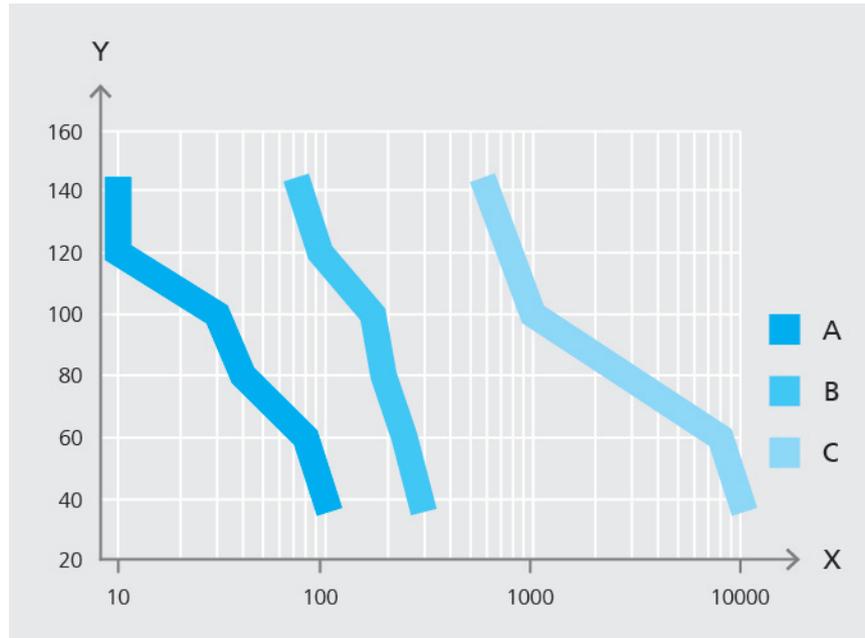


Fig.17: Corrosion resistance in presence of chlorides

X	Chloride ion concentration ppm Cl ⁻
Y	Wall temperature heat exchanger in °C
A	AISI 304
B	AISI 316
C	SMO 254

Notice

Manufacturer recommendation: Use uncontaminated cooling agents and cooling media, in particular in chillers / heat pumps and the use of plate heat exchangers.

- ▶ The media quality needs to be assured through an appropriate filter on the inlet to the heat exchanger. The mesh for these kinds of filters needs to be ≤ 0.9 mm!
- ▶ Should the system need to remain in operation during filter cleaning, double filters need to be used. Pressure loss through the filter need to be taken into consideration on the building side when configuring the pump.

The manufacturer will inform you on request about qualified specialist companies that can support you in the water analysis and the derived measures.

5.4 Performance characteristics

Cold water inlet temperature = 12 °C

Cold water outlet temperature = 6 °C

Q_0 : refrigerating capacity

P_e : driving power

Q_c : condensing capacity at air inlet temperature = 35 °C

Frame size	Performance parameters ²¹		
	Q ₀ in kW	P _e ²² in kW	Q _c ²³ in kW
GEA BluAir 400	370	112	470
GEA BluAir 500	520	168	660
GEA BluAir 800	680	219	865
GEA BluAir 900	795	248	1010
GEA BluAir 1000	1010	325	1265
GEA BluAir 1500	1270	396	1600

5.5 Sound pressure level

Notice

The measuring-surface sound-pressure level depends on the design in each case, in particular with regard to the selection of the air-cooled condenser and/or the drive motors of the compressor.

- ▶ The values in the tables are only guide values, which must be confirmed by the technical specifications of the project.
- ▶ The values in the tables are verified by actual measurement. If no values are specified for the installed components, these are not yet available or not applicable for the chiller size.

Measuring-surface sound pressure level GEA BluAir (A)

Measurement at a distance of 10 m from the GEA BluAir chiller envelope curve; free-field conditions.

Chillers are equipped with:

- 1 Motor
- 1 Screw compressor
- 1 Control cabinet with frequency inverter
- 1 Weatherproof housing
including 1 air cooled condenser (EC-ventilators)

Chillers dimension according product information

Determining the measured values:

- Operating point 12 °C/ 6 °C
- Air temperature 35°C
- Nominal capacity according product information
- Sound data +/- 3 dB(A)

²¹ subject to technical changes; the confirmation order applies in case of order

²² including electric consumer power losses

²³ including oil cooling capacity

Measuring-surface sound pressure level GEA BluAir (A)						
Motor size	Overall sound pressure level Lp (A)					
	Measurement at a distance of 10 m from the GEA BluAir chiller envelope curve ... (A):					
in kW	400	500	800	900	1000	1500
132	57					
160		57	60			
200			60	61	64	
250			61	61	64	
315				62	64	66
355					65	67
400						67

Measuring-surface sound pressure level GEA BluAir (R) / (W)

Measurement at a distance of 10 m from the GEA BluAir chiller surface; free-field conditions.

Chillers are equipped with:

- 1 Motor
- 1 Screw compressor
- 1 Control cabinet with frequency inverter
- 1 Weatherproof housing including a 1 water cooled condenser or without condenser

Chillers dimension according product information

Determining the measured values:

- Operating point 12 °C/ 6 °C
- with water-cooled condenser 30 / 35 °C;
for external condenser according to motor output
- Nominal capacity according product information
- Sound data +/- 3 dB(A)

Measuring-surface sound pressure level GEA BluAir (R) / (W)						
Motor size	Overall sound pressure level Lp (A)					
	Measurement at a distance of 10 m from the GEA BluAir (R) chiller envelope curve ... (W):					
in kW	400	500	800	900	1000	1500
132	49					
160		49	49			
200			50	50	50	
250			51	51	51	
315				53	53	54
355					55	56
400						57
450						

5.6 Sound power

Notice

The measuring-surface sound-pressure level depends on the design in each case, in particular with regard to the selection of the air-cooled condenser and/or the drive motors of the compressor.

- ▶ The values in the tables are only guide values, which must be confirmed by the technical specifications of the project.
- ▶ The values in the tables are verified by actual measurement. If no values are specified for the installed components, these are not yet available or not applicable for the chiller size.

Sound power GEA BluAir (A)

Free-field conditions

Chillers are equipped with:

- 1 Motor
- 1 Screw compressor
- 1 Control cabinet with frequency inverter
- 1 Weatherproof housing
including 1 air cooled condenser (EC-ventilators)

Chillers dimension according product information

Determining the measured values:

- Operating point 12 °C/ 6 °C
- Air temperature 35°C
- Nominal capacity according product information
- Sound data +/- 3 dB(A)

Sound power GEA BluAir (A)						
Motor size	Sound power Lw (A) - GEA BluAir chiller ... (A):					
in kW	400	500	800	900	1000	1500
132	90					
160		90	93			
200			93	94	97.5	
250			94	94	97.5	
315				95	97.5	99.5
355					98.5	100.5
400						100.5
Enveloping cuboid in m	8.2 x 2.4 x 2.5	9.0 x 2.4 x 2.5	10.0 x 2.4 x 2.5	12.0 x 2.4 x 2.5	13.0 x 2.4 x 2.5	15.5 x 2.4 x 2.5

Sound power GEA BluAir (R) / (W)

Free-field conditions

Chillers are equipped with:

- 1 Motor
- 1 Screw compressor
- 1 Control cabinet with frequency inverter
- 1 Weatherproof housing
including a 1 water cooled condenser or without condenser

Chillers dimension according product information

Determining the measured values:

- Operating point 12 °C/ 6 °C
- with water-cooled condenser 30 / 35 °C;
for external condenser according to motor output
- Nominal capacity according product information
- Sound data +/- 3 dB(A)

Sound power GEA BluAir (R) / (W)						
Motor size	Sound power Lw (A) - GEA BluAir (R) chiller ... (W):					
in kW	400	500	800	900	1000	1500
132	81					
160		81	81.5			
200			82	82.5	82.5	
250			83	83.5	83.5	
315				85.5	85.5	86.5
355					87.5	88.5
400						89.5
450						
Enveloping cuboid in m	3.5 x 2.4 x 2.5	3.5 x 2.4 x 2.5	3.5 x 2.4 x 2.5	4.0 x 2.4 x 2.5	4.0 x 2.4 x 2.5	4.0 x 2.4 x 2.5

6 Application form

GEA Refrigeration Germany GmbH supplies products of high quality and reliability. With regard to project requirements, every product is configured, constructed and manufactured individually.

Are you looking for the optimum solution for your application? Contact GEA sales and on request, we can provide you with an application form that you can also conveniently fill in and send away electronically.

You can find an overview of sales offices and contacts at:

www.gea.com

6.1 Manufacturer address

GEA Refrigeration Germany GmbH is a company of the GEA Group AG and provides its customers around the world with high-quality components and services for refrigeration and process technology applications.

Locations:

GEA Refrigeration Germany GmbH

Werk Berlin

Holzhauser Str. 165

13509 Berlin, Germany

Tel.: +49 30 43592-600

Fax: +49 30 43592-777

Web:www.gea.com

E-Mail: refrigeration@gea.com

GEA Refrigeration Germany GmbH

Werk Halle

Berliner Straße 130

06258 Schkopau/ OT Döllnitz, Germany

Tel.: +49 345 78 236 - 0

Fax: +49 345 78 236 - 14

Web:www.gea.com

E-Mail: refrigeration@gea.com

GEA Refrigeration Germany GmbH
Holzhauser Str. 165
13509 Berlin , Germany

Phone +49 30 43592-600

Copyright © GEA Refrigeration - All rights reserved - Subject to modifications.