



GEA Farm Technologies

OviTwin – the new sheep cluster

– small on the outside, large on the inside –



GEA Milking & Cooling | [WestfaliaSurge](#)

GEA Farm Technologies – The right choice.

Sheep milking made easy using the new OviTwin cluster


Specially developed for use in milking systems with overhead milking line, the new cluster is highly effective. Whether using the automatic control or the with simple hand removal, the OviTwin cluster milks at turbo-speed.

The OviTwin cluster is comprised of a small, handy-sized milk collecting piece, transparent teat cup sleeves and single-piece silicon teat cup liners with integral air inlet nozzles. The modified milk collecting piece electronically blocks the vacuum via the control unit dependent upon milk flow.

Remote start button for automatic control systems allows with a single push of the button to start the milking process.


The one piece silicon teat cup lineri within the transparent teat cup provides a good view. Smooth surfaces ensure hygienic cleanliness during and after milking.


Air inlet nozzle for high milk quality. The specific position of the air inlet nozzle ensures that the air and milk flow quickly and gently in the same direction to the milk collecting piece.

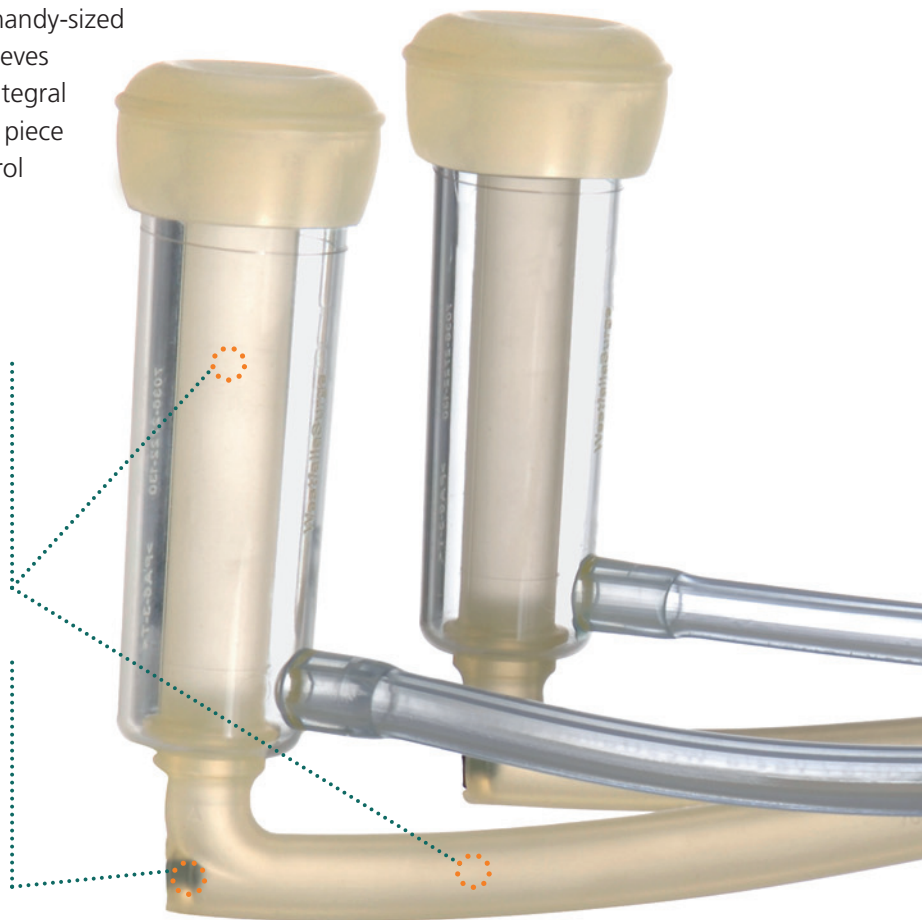

Fast and simple milking with the new OviTwin cluster for high line installations.

The core-element is the guide basin. Optimally designed and perfectly positioned it guides the milk smoothly along the wall into the large bottom vessel.

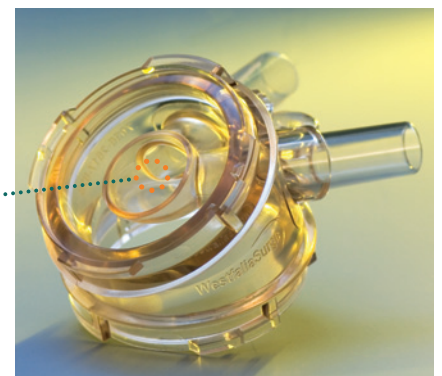


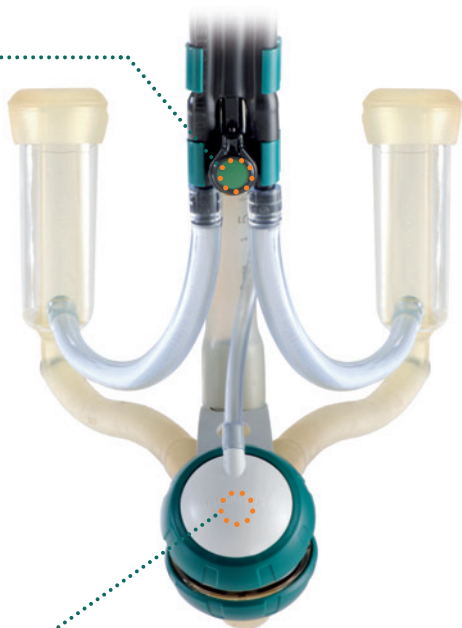

Milk collecting piece for automatic vacuum shut-off is simple to handle and in conjunction with the new control-unit family, enables quick milking.



The GEA Farm Technologies OviTwin cluster assures both clean and hygienic milking.

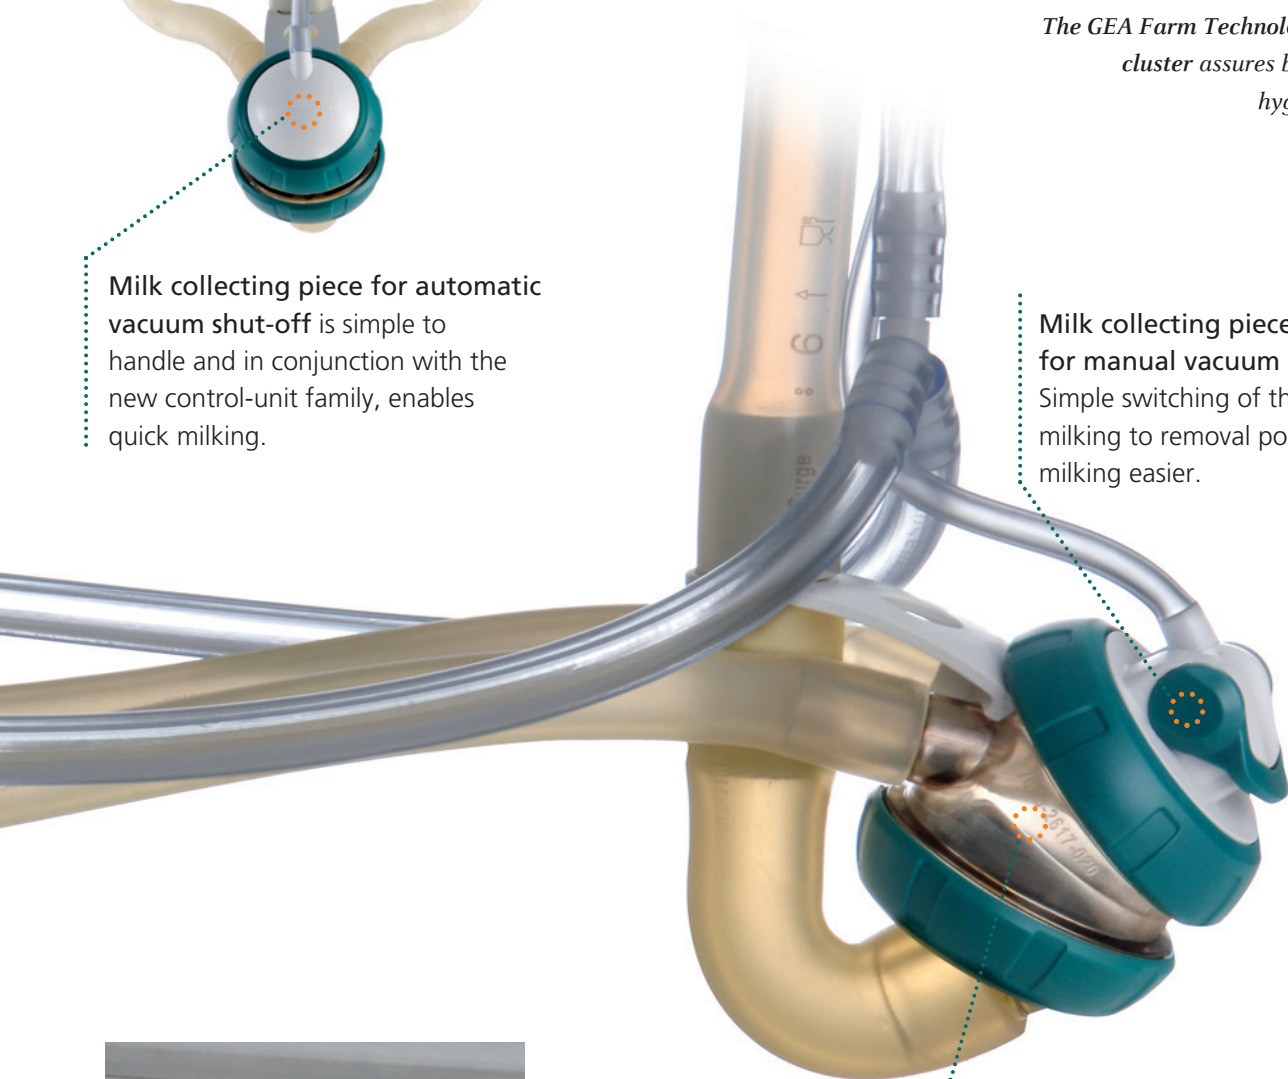

Milk collecting piece top part for manual vacuum shut-off. Simple switching of the lever from milking to removal position makes milking easier.



Cluster holder ensures reliable cleaning of the teat cup.

Milk collecting piece
The powerful mini amongst the giants. Light, handy and very easy to use. That's just how GEA Farm Technologies milk collecting piece introduces itself with its unmistakable design.

GEA Farm Technologies

The right choice.



GEA Farm Technologies GmbH

Siemensstraße 25 - 27, D-59199 Bönen
Tel. +49 (0) 23 83 93 7-0, Fax +49 (0) 23 83 93 8-0
www.gea-farmtechnologies.com