



RENT A PUMP

Your rental pump for full flexibility!

GEA Hilge HYGIA rental pumps

Your rental pump for full flexibility

No matter whether you are facing production peaks or are looking for a solution to bridge a bottleneck – we offer you two flexible, ready-to-connect rental pumps out of the GEA Hilge HYGIA series.

With our rental pumps you can pump liquid media such as beer, milk or water throughout a wide range of applications and parameters. The pumps are mounted on a chassis for maximum flexibility and equipped with an integrated frequency converter. The speed and power can be adjusted to your requirements via a potentiometer integrated in the motor protection switch. Our GEA Hilge specialists are by your side to consult you on the

application and adaption of the rental pumps to your specific needs as well as with technical support and maintenance during the leasing period. We offer to organize the delivery and return of the pumps according to your wishes as normal freight or express.

The conditions and cost of the rental will be tailored to your individual needs at fixed prices in order to find the best solution for your application. Should you rent the pump for one year, the ownership automatically transfers to you at no additional cost. Purchasing the pump during the leasing period at a discounted price is possible at any time.


Your benefits

- In the event of unforeseen **breakdowns**, you need to react quickly. Our rental pumps provide an interim solution to bridge the downtime during troubleshooting and repair.
- You have your pump in our workshop for **repair** and need an interim solution? In this case we gladly provide you our rental pump with a 20% discount on the leases.
- Also, in case you have ordered a pump from GEA Hilge and want to bridge the **delivery time**, we offer you a rental pump with a 20 % discount on the leases.
- Do you have temporary **production peaks** or seasonal business?
With a rental pump you can create additional capacities without long-term investment.
- Invest only where necessary: with our fixed prices you have **planning security and full cost control**.




GEA Hilge rental pump curves

HYGIA I, 50/50, 185x9 OU

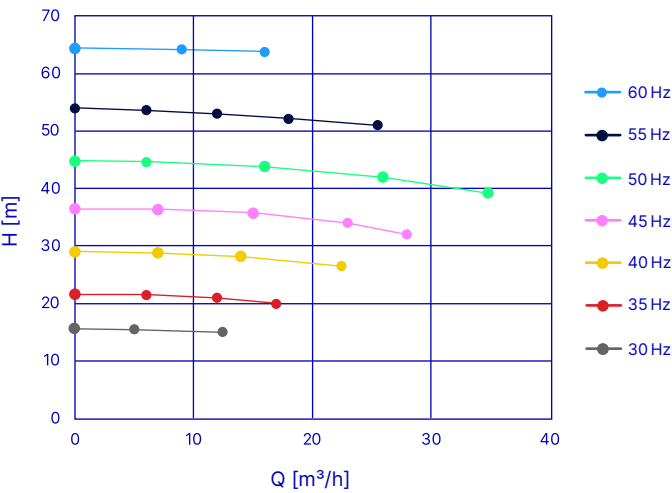

HYGIA II, 65/ 65. 230x9 OU

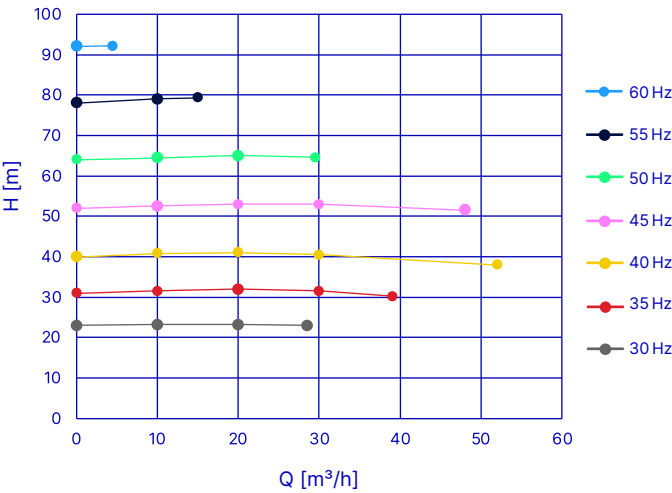

Technical data

Pump type	GEA Hilge HYGIA I	GEA Hilge HYGIA II
Construction	Single-stage centrifugal pump with stub shaft	Single-stage centrifugal pump with stub shaft
Pumped media (examples)	Beer, water, CIP	Beer, water, CIP
Max. flow rate	35 m³/h (@ 50 Hz)	52 m³/h (@ 40 Hz)
Max. pump head	65 m (@ 60 Hz)	92 m (@ 60 Hz)
System pressure	Max. 10 bar	Max. 10 bar
Temperatur medium	Max. 95 °C	Max. 95 °C
Properties	On trolley with integrated frequency converter	On trolley with integrated frequency converter
Material	Hydraulic parts made from Cr-Ni-Mo-steel (AISI 316)	Hydraulic parts made from Cr-Ni-Mo-steel (AISI 316)
Connections	DIN 11851, DN 50 / 50	DIN 11851, DN 65 / 65
Motor	2-pole three-phase motor	2-pole three-phase motor
Drive power	5,5 kW	11 kW
Drive accessories	Stepless speed adjustment via potentiometer integrated in motor protection switch incl. 16A Cekon plug, ready for connection	Stepless speed adjustment via potentiometer integrated in motor protection switch incl. 16A Cekon plug, ready for connection
Voltage	400 V / 50 Hz (more on request)	400 V / 50 Hz (more on request)
Mechanical seal	single acting Sic / Sic / EPDM	single acting Sic / Sic / EPDM
Rental price per day	22 €	37 €
Rental price per week	138 €	219 €
Rental price per month	489 €	790 €
One-time costs repair	449 €	484 €
Transport regular freight (2-3 days)	on request	on request
Transport Express (24 hours)	on request	on request

Terms and conditions

- Billing basis is the rental price times calendar day / week / month depending on model chosen.
- The rental period begins on the day of arrival or collection of the pump.
- The rental period ends upon written notice of collection readiness or delivery back on our premises.
- Freight is organized and billed at cost.
- Please provide a certificate of non-objection latest when returning the pump or upon collection readiness notice.
- Our general rental conditions apply.

GEA Hilge

Niederlassung der GEA Tuchenhausen GmbH
Hilgestraße 37-47
55294 Bodenheim, Germany

Tel +49 6135 7016-0
Fax +49 6135 1737
gea.com/contact