


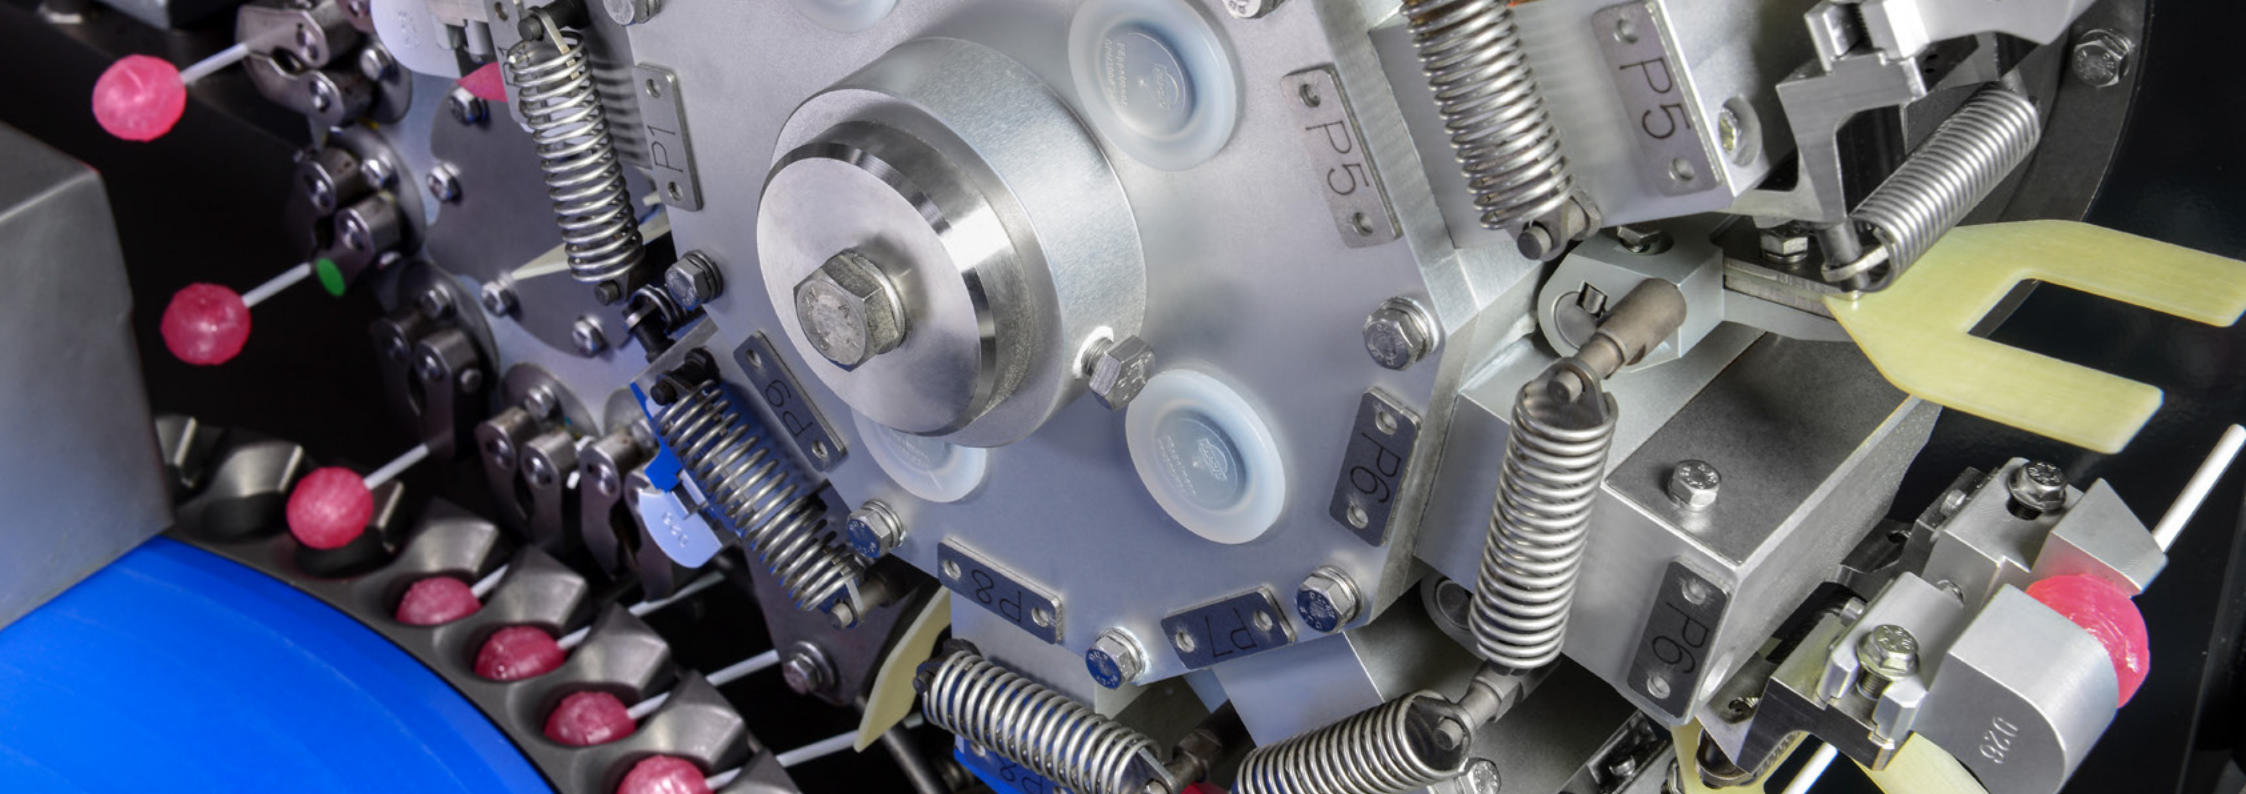

SIMPLE QUICK-CHANGE KIT

GEA Aquarius TwistWrapper

NEW LEVELS OF FLEXIBILITY IN LOLLIPOP WRAPPING

**Discover the Simple Quick-Change Kit,
an enhancement that propels GEA Aquarius
TwistWrapper continuous wrapping
machines to new heights.**

Our GEA Aquarius TwistWrapper has long been the choice of leading ball lollipop producers, known for its speed, cost-effectiveness and reliability. Now, with the introduction of the Quick-Change Kit, it is not just about fast continuous wrapping. It is about revolutionizing flexibility and swift adjustments to lollipop weight and diameter allowing you to respond to cost pressures and shifting market strategies.

Explore how the Simple Quick-Change Kit can elevate your Overall Equipment Effectiveness (OEE), making it more cost-effective, more flexible and perfectly attuned for confectionery excellence.



Overview Simple Quick-Change Kit format parts.

BOOSTING UPTIME AND FLEXIBILITY



Twisthead wheel three: easy replacement folding plates without further fine tuning.

GEA's Simple Quick-Change Kit optimizes the time required for a format change to a different weight or diameter lollipop. The frequency of changeovers can now be tailored to your needs, whether that's on a daily, weekly, or monthly basis, aligning with ever-changing market demands.

Say goodbye to the traditionally more time-consuming up to 7 to 9-hours changeovers. Embrace a streamlined process that now only takes 0,5 hour up to just max 1,5 hours. This operational flexibility and reduced changeover time maximizes production uptime and profitability.

EFFORTLESS CHANGEOVERS AND EASE OF USE

Designed with its operators in mind, the simple Quick-Change Kit embodies simplicity and ease of use. This is reflected in both the usage and cleaning of the components.

Getting underway with quick changes is simple:


1. Order the Kit: your kit consists of a set of numbered grippers and folding plates.

2. Simple Placement: Effortlessly position the grippers and plates within the designated slots in the twist head, aligning them with the corresponding numbers on the components.

3. Fixation: Secure the components with ease using a single bolt.

4. Zero fine-tuning needed: With no fine-tuning required, your production process can resume promptly.

Cleaning the components with only the use of hot water ensures that your production line stays efficient and ready.

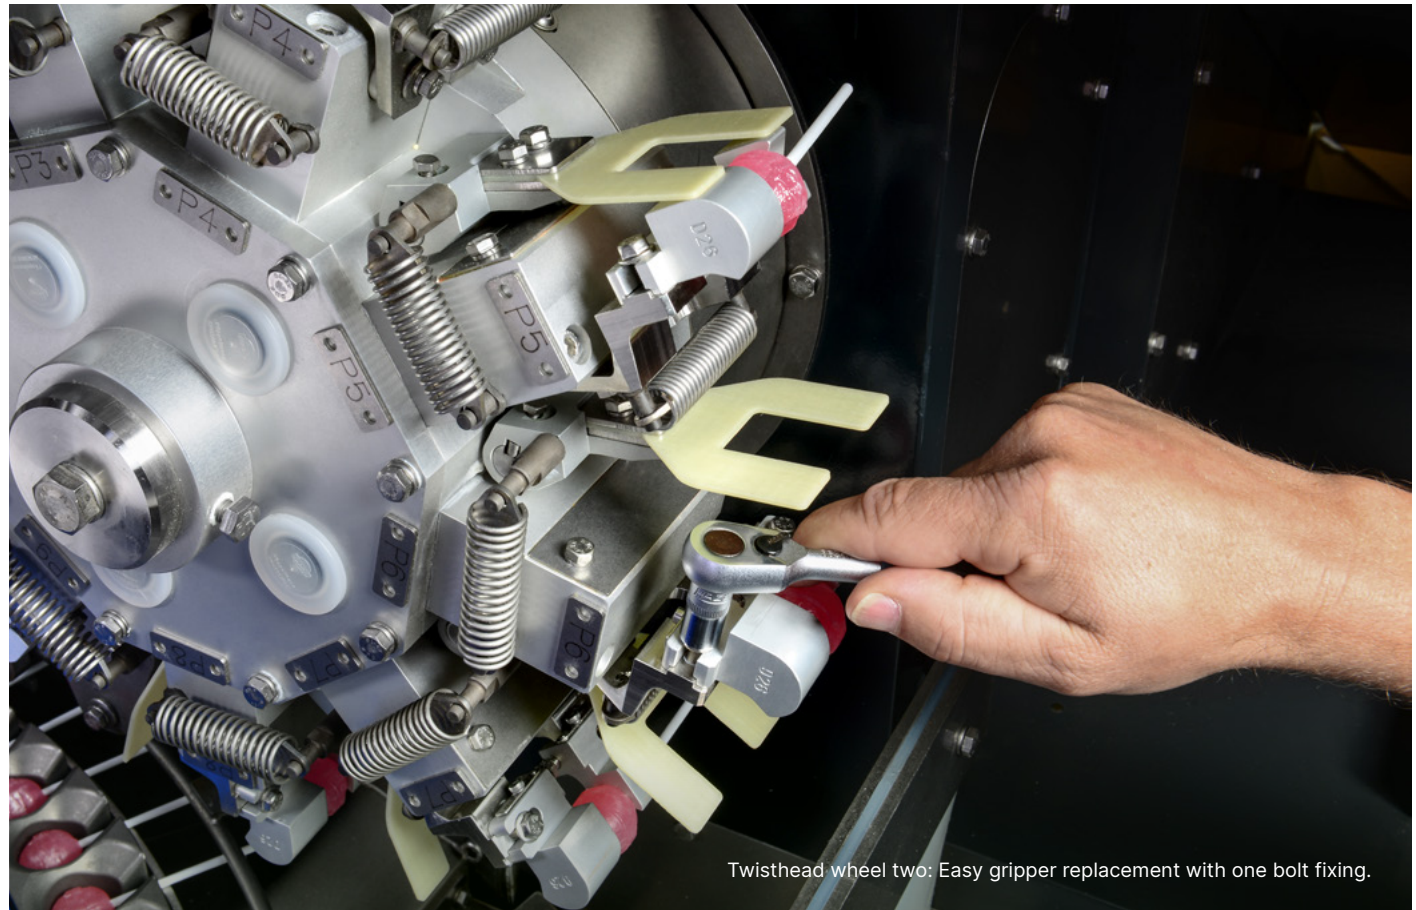

Twisthead wheel two: Easy gripper replacement with one bolt fixing.

UPGRADING NEW AND EXISTING MACHINES

With compatibility spanning our GEA Aquarius TwistWrapper 600, 800, and 1000 machines, the kit ensures seamless integration with your existing setup and provides you with a compelling ROI.

A one-time modification kit together with the Simple Quick-change kit for each field

machine, coupled with a sorting disk, is all it takes to unlock ultimate flexibility.

Get in touch and discover what results quick changeovers can bring to your operations.



GEA Aquarius TwistWrapper.



GEA Food Solutions Weert B.V.

De Fuus 8
6006 RV Weert
The Netherlands
Tel +31 (0)495 457 77

gea.com/contact

