



Tilting 3-Point Hitch Agi-Pompe®

PTO pumps

Instruction Manual / Installation Instructions
(Original instructions)

2010-9015-003
03-2014

Contents

1	Preface	4
1.1	Information on the instructions	4
1.2	Manufacturer address	5
1.3	Customer services	5
1.4	Guidelines, Laws, Standards	6
1.5	Installation declaration	7
1.6	Warranty and Exclusions	8
2	Safety	9
2.1	Owner's obligation of care	9
2.2	Explanation of the safety symbols used	11
2.3	Basic safety instructions	11
2.4	Personnel qualification	12
2.5	Protective devices	13
3	Description	15
3.1	Correct applications	15
3.2	Changes to the product	15
3.3	Design of the equipment	16
3.4	Functional description	16
3.5	Technical Data	16
3.6	Total Pumping Head Formula	18
3.7	Main view	20
3.8	Options	21
4	Transport	23
4.1	Special personnel qualification required for transport	23
4.2	Safety instructions for transport	23
4.3	Permissible devices and aids for transportation	24
4.4	Transport	25
4.5	Includes	25
4.6	Information on disposing of packing material	25
5	Installation	26
5.1	Special personnel qualification required for installation	26
5.2	Safety instructions for installation	26
5.3	Assembly preparations	27
5.4	Pump assembly	27
5.5	Information on disposing of installation material after installation is finished.	28
6	Initial Commissioning	29
6.1	Special personnel qualification required for initial commissioning	29
6.2	Safety instructions for initial commissioning	29
6.3	Checks before initial commissioning	30
6.4	First start	31
6.5	Checks after initial commissioning	31
6.6	Handing over to the owner	32

7	Operation	33
7.1	Special personnel qualification required for operation	33
7.2	Safety instructions for operation	33
7.3	Workplaces for operating personnel	37
7.4	Description of the operating elements	38
7.5	Operating	41
8	Operating faults	48
8.1	Special personnel qualification required for troubleshooting	48
8.2	Safety instructions for troubleshooting	48
8.3	Troubleshooting possible faults	50
9	Maintenance	51
9.1	Special personnel qualification required for maintenance work	51
9.2	Safety instructions for maintenance	51
9.3	Inspections and preventive maintenance	54
9.4	Repairs	58
10	Decommissioning	59
10.1	Special personnel qualification required for decommissioning	59
10.2	Safety instructions for decommissioning	59
10.3	Temporary decommissioning	60
10.4	Final decommissioning/disposal	60
11	Appendix	61
11.1	Label position	61
11.2	Abbreviations	64
11.3	Pumping Head Calculation	65
11.4	Hydraulic diagram	69

1 Preface

1.1 Information on the instructions

The manufacturer reserves the right to make changes due to technical developments in the data and images given in this manual.

Reproductions, translations and copies of any kind, even of extracts, require written authorization from the manufacturer.

Abbreviations, units, specialist terms, special names or specialist terminology are explained in more detail in the "Appendix".

These instructions are part of the supply.

- They should be kept close at hand and remain with the equipment even if the equipment is sold.
- This manual is not subject to an amendment service. The most recent version at any time can be obtained through the technical dealer or directly from the manufacturer.
- They are designed as modular and only refer to the stated product. More information on the product and components associated with the product may also be given in the corresponding documents and manuals. This applies especially for safety information!

Pictograms used

 This pictogram indicates information that will help towards better understanding of a procedure or operation.

 This pictogram indicates a special tool required for installation.

 A correction bar in the margin indicates changes to the previous edition. The character string "!!" in the search field of the PDF document locates the correction bar.

 This pictogram refers to another document or another section of this manual.

If a manual number is given, the middle 4 figures indicate the language, as follows:

	language		language		language
-9000-	German	-9013-	Dutch	-9032-	Serbian
-9001-	English (United Kingdom)	-9015-	English (North American)	-9034-	Slovak
-9002-	French (France)	-9016-	Polish	-9035-	Chinese
-9003-	Italian	-9018-	Japanese	-9036-	Lithuanian
-9004-	Romanian	-9021-	Danish	-9038-	Portuguese (Brazil)
-9005-	Spanish (Spain)	-9022-	Hungarian	-9039-	French (Canada)
-9007-	Swedish	-9023-	Czech	-9040-	Latvian
-9008-	Norwegian	-9024-	Finnish	-9041-	Estonian
-9009-	Russian	-9025-	Croatian	-9043-	Spanish (Central America)
-9010-	Greek	-9027-	Bulgarian		
-9012-	Turkish	-9029-	Slovenian		
Not all of the above languages may be available.					

1.2 Manufacturer address

GEA Farm Technologies Canada Inc. / Division GEA Houle
4591 boul. St-Joseph
Drummondville, Qc, J2A 0C6

 +1 819 477 - 7444

 +1 819 477 - 5565

 geahoule@gea.com

 www.gea-farmtechnologies.com

1.3 Customer services

authorized Technical Dealer

If necessary, please contact your nearest authorized technical dealer.

There is a comprehensive dealer Internet search function on our website at the following address:

www.gea-farmtechnologies.com

European Contact Information:

GEA Farm Technologies GmbH
Siemensstraße 25-27
D-59199 Bönen

 +49 (0) 2383 / 93-70

 +49 (0) 2383 / 93-80

 contact@gea.com

 www.gea-farmtechnologies.com

US Contact Information:

GEA Farm Technologies, Inc.
1880 Country Farm Dr.
Naperville, IL 60563

 +1 630 369 - 8100

 +1 630 369 - 9875

 contact_us@gea.com

 www.gea-farmtechnologies.com

1.4 Guidelines, Laws, Standards

The content and instructions of the following guidelines and regulations have been observed in the design and construction of this machine:

RL 98/37 EC	Machinery Directive
RL 93/68 EC	CE Marking
EN 12100-1	Machine safety, basic terms, general design guidelines. Part 1: Basic terminology, methods
EN 12100-2	Machine safety, basic terms, general design guidelines. Part 2: Technical guidelines and specifications
EN 294	Safety distances to prevent upper limbs from reaching dangerous points
EN 349	Minimum distances to prevent pinching parts of the body
EN 809	Pumps and pump units for fluids - general safety requirements
EN 953	Safety of machinery - General requirements for the design and construction of guards (fixed,movable)
EN 1050	Machine safety guidelines on risk assessment
EN 1152	Tractors and machinery for agricultural and forestry - Guards for power take-off (PTO) drive shafts - Wear and strength tests
EN 1553	Agricultural machinery - Agricultural self-propelled mounted, semi-mounted and trailed machines - Common safety requirements
NF X 08-003	Graphic and pictographic symbols - colors and safety signs

1.5 Installation declaration

Manufacturer:	GEA Farm Technologies Canada Inc. / Division GEA Houle 4591 boul. St-Joseph Drummondville, Qc, J2A 0C6	
Product category:	PTO pumps	
Type of product:	Tilting 3-point hitch Agi-Pompe	
The named product is in conformity with the requirements of the following European directives:		
98/37/EC	Machinery Directive	
93/68/EC	CE Marking	
Conformity with the requirements of these directives is testified by complete adherence to the following standards:		
<ul style="list-style-type: none"> Harmonized European standards RL 98/37 EC, RL 93/67 EC, EN 12100-1, EN 12100-2, EN 294, EN 349, EN 809, EN 953, EN 1050, EN 1152, EN 1553, NF X 08-003 		
Attention!		
We would point out that commissioning is not permitted until it has been established that the machine/system in which this product is installed meets the conditions of the directives on which they are based.		
Person responsible for compiling the relevant technical documents:	Josef Schröer GEA Farm Technologies GmbH Siemensstraße 25-27 D-59199 Bönen ✓ +49 (0) 2383 / 93-70	
Drummondville, 01 August 2009		Yann Desrochers (Head of Research and Development)
The undersigned is acting by virtue of power of attorney from the management of: GEA Farm Technologies Canada Inc. / Division GEA Houle, 4591 boul. St-Joseph, Drummondville, Qc, J2A 0C6		
This declaration certifies compliance with the guidelines indicated, but does not establish any guarantee in the sense of paragraphs 443, 444 of the BGB.		

1.6 Warranty and Exclusions



Note!

GEA Houle Inc. reserves the right to improve, change or modify the construction of equipment or any parts thereof without incurring any obligation to make the same changes on GEA Houle equipment previously sold.

1.6.1 Warranty

The company GEA Houle Inc. guarantees to the original buyer the parts of the equipment sold under the trademark GEA Houle for a period of twelve months from the date of original purchase. The written warranty in this manual has priority over any other publication previously made by GEA Houle Inc. The company, through its dealers, reserves the right to either repair or replace all parts deemed defective under the following conditions:

- 1 The equipment is installed, operated and maintained as per the company directives;
- 2 The buyer uses the equipment under normal conditions in accordance with the purpose for which the equipment was manufactured and as per operating instructions;
- 3 Defective parts must be returned prepaid to GEA Houle Inc.;
- 4 The buyer does not modify or try to repair the equipment or parts of the equipment without authorization;

The liability of the company GEA Houle Inc. and its dealers, in pursuance of this warranty, consists only in repairing or replacing the defective parts. GEA Houle Inc. and its dealers cannot be held responsible for indirect cost, damages or loss of production, freight expenses and any other expenses that may arise.

1.6.2 Warranty exclusions

- 1 Damage caused by lack of lubrication.
- 2 Damages caused by high speed traveling and / or long distance towing.
- 3 Operation that does not respect the company's instructions.
- 4 Damages caused by excessive horsepower or excessive PTO RPM, a misaligned PTO, a damaged or modified PTO (ie. modified shear bolts).
- 5 Wear caused by sand bedding or any other abrasive matter.
- 6 Damages caused by foreign matter in manure (ie. wood, steel, rock, concrete, twine, etc.).

1.6.3 Limited warranty

Any equipment used for custom pumping, rental or intensive work is guaranteed for a period of 30 days only.

2 Safety

2.1 Owner's obligation of care

The product has been designed and constructed while taking account of a potential risk analysis and after careful selection of the harmonized standards and other technical specifications to be complied with. It therefore guarantees a maximum level of safety.

This safety can only be achieved in practice on the farm however when all of the necessary measures have been taken. It is part of the owner's obligation of care to plan these measures and check that they are carried out.

In particular, the owner must ensure that

- Everyone who works with or performs activities in connection with the product must carefully read the instructions (especially the safety instructions and warnings) and sign to confirm that they have understood them and will act in accordance with them!
- A full set of legible instructions is always kept by the product.
- Anyone who has to carry out work on the product can look at the instructions at any time.
- The instructions in the section entitled "Basic safety instructions" are observed.
- The legal requirements are observed.
- The owner has to produce operating instructions for the farm which are especially adapted to the conditions of his business, once again expressly taking account of the safety aspects.
- The product
 - Should only be used for its intended purpose.
 - Should only be used if it is in perfect operating condition and, in particular, the safety equipment should be regularly checked to make sure it is in perfect operating condition.
- The work to be carried out is performed by a sufficiently qualified person!



In this respect, please also read the section on "Personnel Qualification".

- These personnel will be regularly instructed in all relevant matters of safety at work and protection of the environment and be familiar with the manual, particularly the safety instructions it contains.
- Operating personnel who require training may only work on the product under the supervision of an experienced person. The successful completion of training is to be confirmed in writing.
- All safety or warning instructions applied are not removed and remain legible.
- A DANGER! TOXIC GASES sign is posted at the eye level, at the entry of the pit area. Make sure this sign remains visible all the time.

Safety

Owner's obligation of care

- Escape routes are marked by means of signs in accordance with national regulations!
- The personal protective equipment required for personnel carrying out operation, maintenance and repairs is made available and used.
- No one must enter into a manure pit at any time.
- The “Safety Procedures for Confined Spaces” are always followed before operating or maintaining the pump. These safety procedures clearly explain the risks associated with manure, procedures for a safe access to work spaces and the minimum ventilation requirements to ensure the safety of humans and livestock. Find local safety procedures for confined spaces using Web Site below.

Location	Administrated by	Web Site
In Canada	Canadian Centre for Occupational Health and Safety	www.ccohs.ca
In USA	Occupational Safety and Health Administration	www.osha.gov
In European Union	European Agency for Safety and Health at Work	www.europe.osha.eu.int

- Unauthorized persons (e.g. children) are not allowed in hazardous areas and do not have access to cleaning agents or disinfectants.
- All guard are kept in place.
- Hands, feet and clothing are kept away from all moving parts.
- No one stands close to moving parts before starting the equipment.
- Never allow bystanders to stay close to the pump when it is lifted and / or in operation.
- The equipment is stopped before lubricating, maintaining and adjusting.

2.2 Explanation of the safety symbols used

Safety symbols draw attention to the importance of the adjacent text.

Safety symbols and signaling word

**Danger!**

The word "Danger" together with a symbol signals a danger to people's and/ or animals` lives and health.

**Warning!**

The indication "Warning" signals danger to life or health of personnel. Death or serious injury may result if the danger is not avoided.

**Attention!**

The word "Attention" together with a symbol signals a danger for product, material or the environment.

2.3 Basic safety instructions

**Danger!**

There are warnings about specific residual dangers in the corresponding chapters.

**Attention!**

If the work requires special qualifications, these are described in the corresponding chapters!

- There are risks involved in the operation and maintenance of equipment for dairy farms. For your own safety, read and follow the operating manual carefully (especially the section entitled "Safety information")!
- The chapter on "Technical data" gives the permissible working conditions (pressure ranges, temperature ranges, airflow quantities etc.) and these must be observed!
- Do not open or dismantle devices (risk of injury)!
- Do not remove any protective devices (risk of injury)!
- When working with products from other manufacturers always observe the warnings from the safety data sheets and operating instructions from the product manufacturer!
- Do not stand underneath suspended loads.

2.4 Personnel qualification

All personnel who perform work on or with the product must carefully read and understand the instructions and act in accordance with them!

- Participation in corresponding product training is necessary.
- In principle, any work on hydraulic and pneumatic equipment may only be carried out by specialist personnel who have received the necessary training.

In addition, special qualifications are required for the following activities:

- Transport
- Cleaning
- Installation
- Commissioning
- Operation
- Maintenance / servicing
- Troubleshooting
- Repairs
- Shut-down



Attention!

Particular qualifications are described in the corresponding chapters!

2.5 Protective devices

- Protective devices

Protective guard for power take off driveline
(part no. 2010-7600-960) European



Safety cap
(part no. 2010-7704-670)

- Safety symbols, warnings, warning signs and labels



Danger! - Toxic gases (American model)

Manure produces toxic gases that can cause loss of consciousness, asphyxia or death in few seconds.
(part no. 2099-4720-010)



Danger! (European model)

Manure produces toxic gases that can cause loss of consciousness, asphyxia or death in few seconds.
(part no. 2099-4725-210)



Danger! (European model)

Read the instruction manual before operating.
(part no. 2099-4725-100)



Danger!

Rotating driveline. Keep away!
(part no. 2099-4720-020)



Danger! (American model)

Before removing this cap, stop the pump.
Actuate directional valve cylinder a few times in order to relief pressure from the discharge pipe.
(part no. 2099-4720-070)



Danger! (European model)

High pressure
(part no. 2099-4725-400)



Warning!

Always stop the equipment before servicing and maintenance.
Never adjust the equipment while it is running.
Keep all shields and guards in place.
Keep hands and loose clothing away from moving parts.
Make sure everyone is clear from moving parts before starting the equipment.
Refer to the owner's manual for operating and maintenance instructions.
(part no. 2099-4721-020)



Warning! (European model)

(part no. 2099-4725-200)



Warning! (European model)

Read the instruction manual before operating, maintenance.
(part no. 2099-4725-130)

540 rpm

Maximum 540 RPM

(part no. 2010-4703-430)

1000 rpm

Maximum 1000 RPM

(part no. 2010-4703-440)

3 Description

3.1 Correct applications

GEA Houle products and equipment are designed exclusively for agricultural livestock farms.

Tilting 3-point hitch Agi-Pompe® is exclusively designed for:

- To homogenize and transfer liquid manure containing long bedding and bottom sediments.
 - Maximum consistency for agitation is 1½" [38 mm]
 - Maximum consistency for transfer is ¾" [19 mm]

Any applications that are not listed here are not part of the intended purpose and are therefore considered as improper use!

We would like to point out that the following in particular are prohibited:

- Processing substances other than manure and water through the pump.

The manufacturer/supplier is not liable for any resulting damage. The user alone bears the risk.

Correct use also includes reading the instructions and observing the inspection and maintenance conditions.

- The manufacturer expressly points out that only original parts and original accessories have been adapted, tested and authorized for use with the product.
- The installation or use of products from other manufacturers may affect the specified properties of the original parts and lead to injury to people and animals.
- The manufacturer does not accept any liability for injury to people or animals, or damage to the product, caused by the use of products from other manufacturers.

3.2 Changes to the product

Unauthorized modifications of the product can have a negative impact on the safety, life span or functionality of the product.

Any modifications not described in the product documentation are deemed to be prohibited.

For safety reasons, do not carry out any unauthorized modifications!

Planned changes must be approved by the manufacturer in writing.

Any unauthorized modifications to the product will invalidate the warranty and may invalidate the provided manufacturer's declaration or installation declaration.

Parts and special equipment which have been obtained elsewhere must be expressly authorized by GEA Houle, in writing, for use in GEA Houle components and installations.

3.3 Design of the equipment

Design

The Tilting 3-point hitch Agi-Pompe® consists of:

- a vertical pump fixed on a 3-point hitch on a farm tractor.
- a propeller which chops fibers in manure.
- an adjustable nozzle to homogenize manure.
- a directional valve to divert the flow to either the agitation nozzle or the discharge line.

Drive

The pump is driven with a PTO shaft connected to the tractor.

3.4 Functional description

Tilting 3-point hitch Agi-Pompe®

- The pump is mounted to the 3-point hitch of a farm tractor.
- Hydraulic hoses from the pump assembly are connected to the tractor to operate the cylinders and motors as well as the hydraulic controls.
- The tractor backs the pump up to the manure storage pit.
- The pump is tilted down into the pit.
- The pump will agitate, chop and transfer manure from the manure pit.
- The pump has a directional propeller which chops fibers in manure.
- The agitation nozzle is adjusted up and down plus rotated side to side to homogenize the manure in the pit.

3.5 Technical Data

Performance data

With 24" propeller - impeller 20" X 6 blades - 12" intake and 6" discharge.

RPM/ ratio	Horsepower	Nozzle diameter	Nozzle pressure	Shut-off pressure	Maximum head *
540 / 1:1	70	3" [76 mm]	16 psi [1.1 bar]	18 psi [1.2 bar]	29 ft [8.8 m]
540/ +10%	85	3" [76 mm]	20 psi [1.4 bar]	22 psi [1.5 bar]	36 ft [11.0 m]
540/ +26%	105	3" [76 mm]	26 psi [1.8 bar]	28 psi [1.9 bar]	45 ft [13.7 m]
1000/ -35%	125	3" [76 mm]	30 psi [2.1 bar]	33 psi [2.3 bar]	53 ft [16.2 m]
1000/ -26%	140	3" [76 mm]	35 psi [2.4 bar]	38 psi [2.6 bar]	61 ft [18.6 m]

* Maximum pumping head permitted.

Hydraulic hoses

I.D.	1/4"	1/2"	3/4"
O.D.	0.58"	0.86"	1.10"
Quantity of braids	2	2	1
Service pressure	400 bar (5,800 psi)	276 bar (4,000 psi)	105 bar (1,525 psi)
Service temperature	-40°C to 100°C (-40°F to 212°F)		

Description


Total Pumping Head Formula

3.6 Total Pumping Head Formula

3.6.1 S.A.E. Example

 Refer to Appendix: Pumping Head Calculation to correctly fill the formula.

- Determine the Wanted Transfer rate.
- Execute the manure Consistency Test.
- Sketch the Transfer Line with all lengths, diameters, elbows valves, adaptors material type and elevation like the example below.
- To get the Total length of the line, add length of pipes of same type to the Equivalent Linear Dimension of components of same diameter: Elbows, Adaptors and Valves are added with their PVC pipes or flexible hoses.
- Multiply the Total length of the line by its corresponding Friction Loss Coefficient.

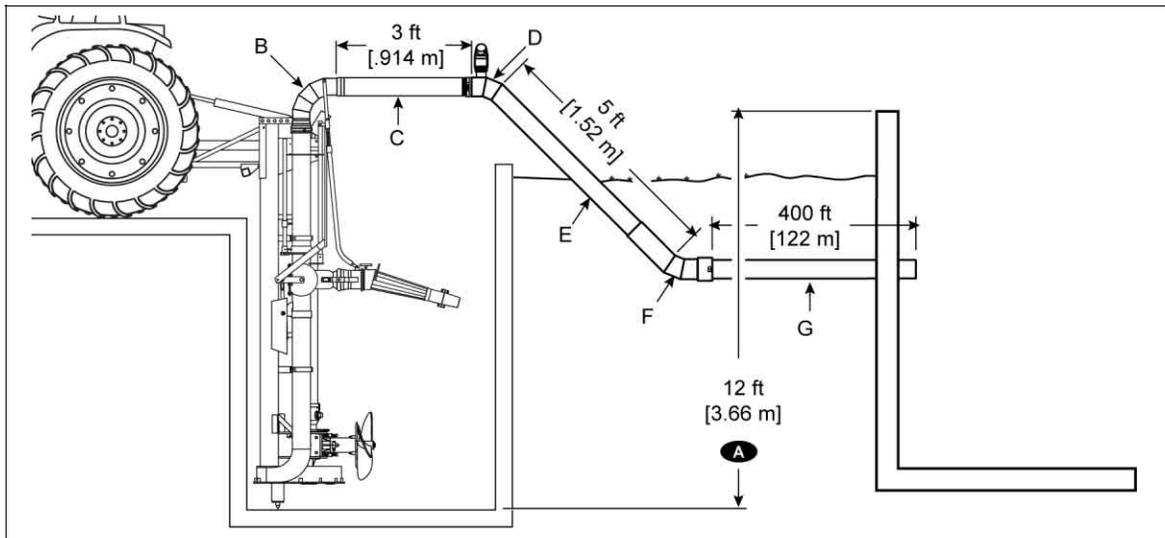


	Wanted Transfer Rate	Pipe Diameter	Consistency	Type of pipe or component		Evacuation Line Total or Equivalent Length (ft)		Friction Loss Coefficient		(ft)
A				elevation	>	12			=	12
B	600 gpm	6"	1/8"	90° Steel elbow	>	32	X	0.0344	=	1.101
C	600 gpm	6"	1/8"	hose	>	3	X	0.0344	=	0.103
D	600 gpm	6"	1/8"	45° Steel elbow	>	12	X	0.0344	=	0.413
E	600 gpm	6"	1/8"	steel pipe	>	5	X	0.0344	=	0.172
F	600 gpm	6"	1/8"	45° Steel elbow	>	12	X	0.0344	=	0.413
G	600 gpm	6"	1/8"	PVC pipe	>	400	X	0.0286	=	11.44
H	600 gpm	6"	1/8"	90° Steel elbow	>	32	X	0.0344	=	1.101
Total Pumping Head of Transfer Line (ft)										= 26.743
<small>(Add all components length to obtain the Total Pumping Head)</small>										

3.6.2 Metric Example


 Refer to Appendix: Pumping Head calculation to correctly fill the formula.

- Determine the Wanted Transfer rate.
- Execute the manure Consistency Test.
- Sketch the Transfer Line with all lengths, diameters, elbows valves, adaptors material type and elevation like the example below.
- To get the Total length of the line, add length of pipes of same type to the Equivalent Linear Dimension of components of same diameter: Elbows, Adaptors and Valves are added with their PVC pipes or flexible hoses.
- Multiply the Total length of the line by its corresponding Friction Loss Coefficient.

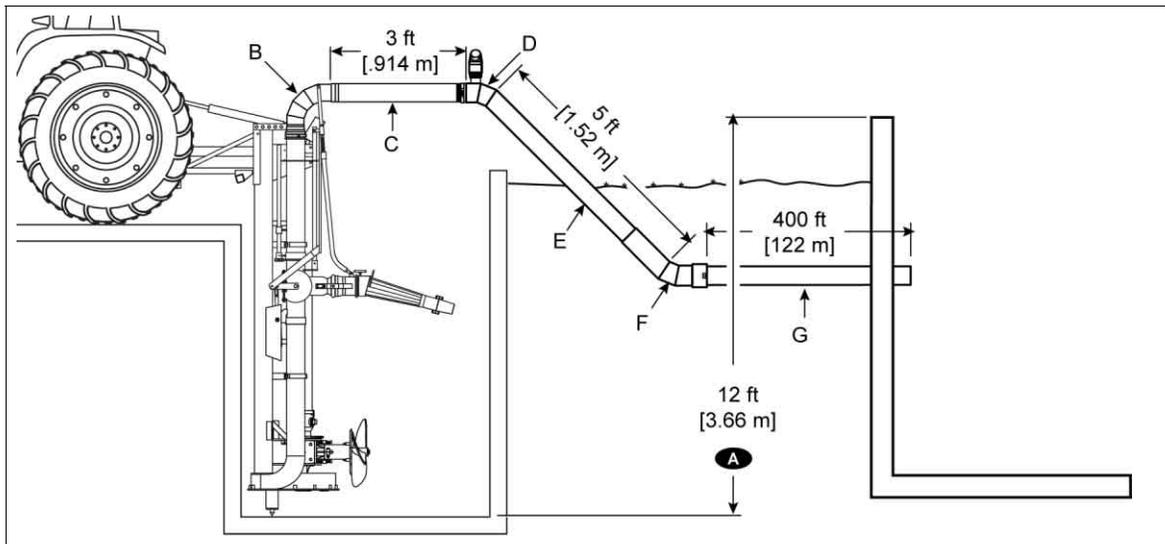

	Wanted Transfer Rate	Pipe Diameter	Consistency	Type of Pipe or component		Evacuation Line Total or Equivalent Length (m)		Friction Loss Coefficient		(m)	
A				elevation	>	3.658			=	3.658	
B	2280 lpm	150 mm	3 mm	90° Steel elbow	>	10	X	0.0344	=	0.344	
C	2280 lpm	150 mm	3 mm	hose	>	0.914	X	0.0344	=	0.031	
D	2280 lpm	150 mm	3 mm	45° Steel elbow	>	3.5	X	0.0344	=	0.120	
E	2280 lpm	150 mm	3 mm	steel pipe	>	1.524	X	0.0344	=	0.052	
F	2280 lpm	150 mm	3 mm	45° Steel elbow	>	3.5	X	0.0344	=	0.120	
G	2280 lpm	150 mm	3 mm	PVC pipe	>	122	X	0.0286	=	3.489	
H	2280 lpm	150 mm	3 mm	90° Steel elbow	>	10	X	0.0344	=	0.344	
Total Pumping Head of Transfer Line (m)										=	8.158
(Add all components length to obtain the Total Pumping Head)											


3.7 Main view

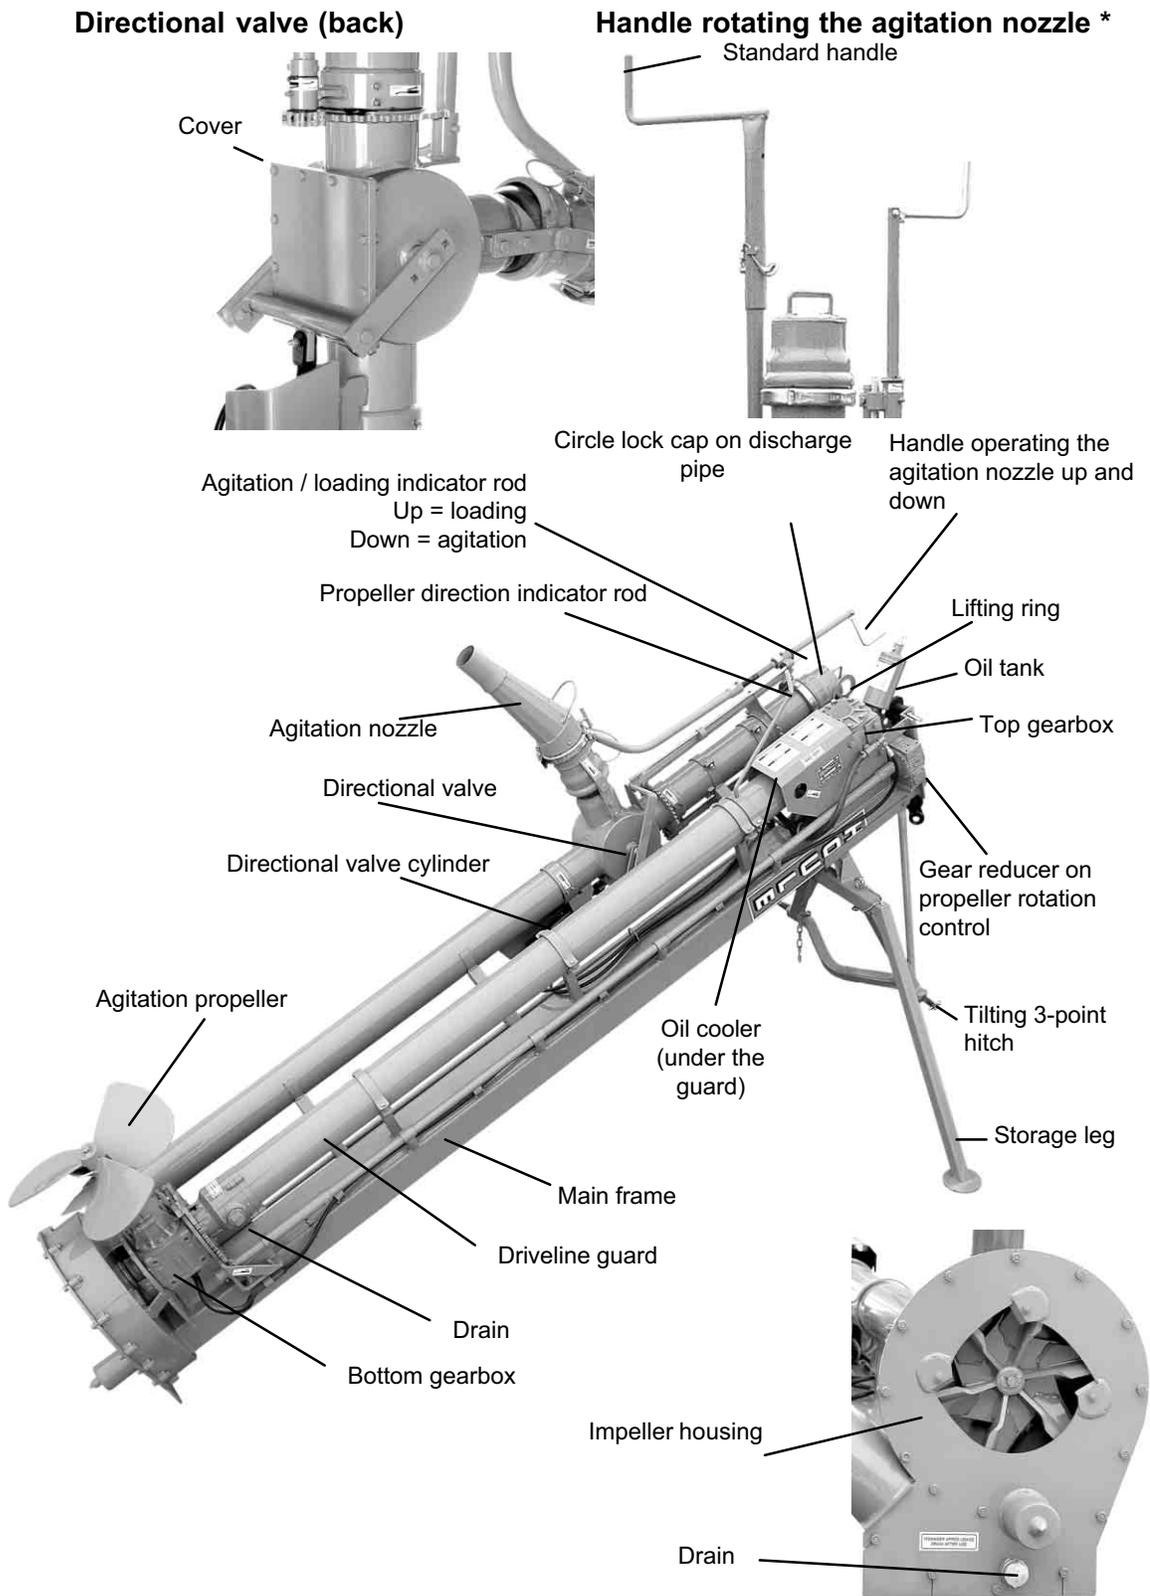


* Manual controls of the agitation nozzle and the rotation of the propeller can be replaced by optional hydraulic controls.

3.8 Options


Gear reducer to rotate the agitation nozzle

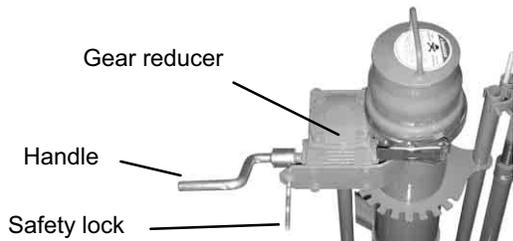

Hydraulic controls

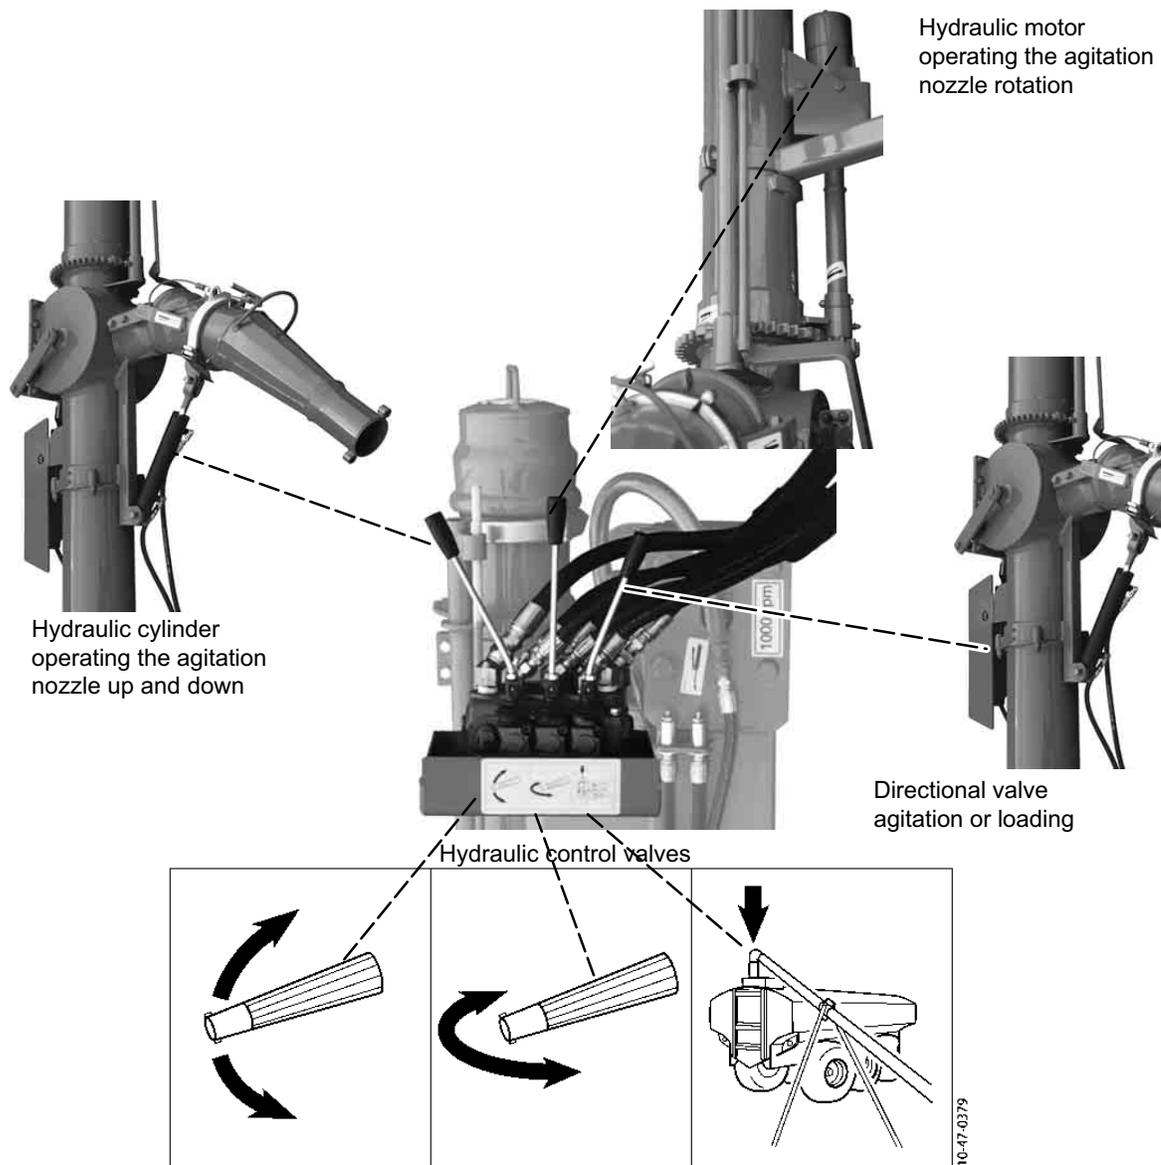

Knife kit

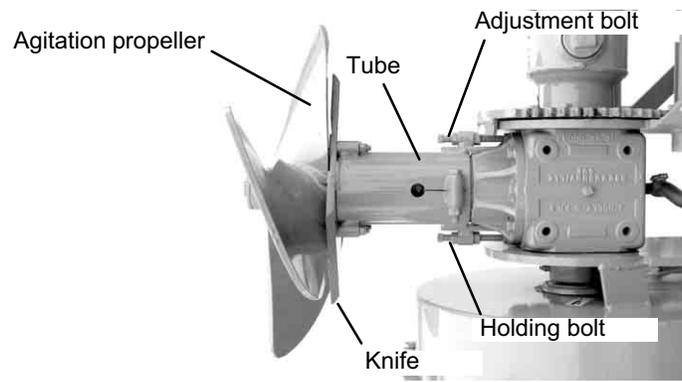

4 Transport

4.1 Special personnel qualification required for transport

Transport may only be performed by specially qualified personnel in accordance with the safety instructions.

- National driver's licence for drive-on machines, stackers and other trucks.



Also see the section on "Personnel qualification".

4.2 Safety instructions for transport

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- Only the load suspension and support equipment indicated here should be used, at the specified support points, for transport.



Also read the chapter on "Safety".

Special transport hazards:


- Projecting sharp edges may cause cuts.
- Suspended loads can fall and then there will be a risk of death - do not stand underneath suspended loads!
- Parts which are stacked too high can collapse.
- If load suspension devices other than those indicated here are used, this may lead to serious damage to property and/or life-threatening injury to people.
- There is a fire hazard due to the highly inflammable packing material - naked flames and smoking prohibited!
- If lubricants, preservatives, ... are not kept upright during transportation they can leak out and there is a risk of irritation if they come into direct contact with the skin.

4.3 Permissible devices and aids for transportation

The Pump is made up of heavy components.

Loading and unloading

Appropriate lifting gear and carrying devices such as, chain hoist, safety chain, fork lift truck or front loader is to be provided.

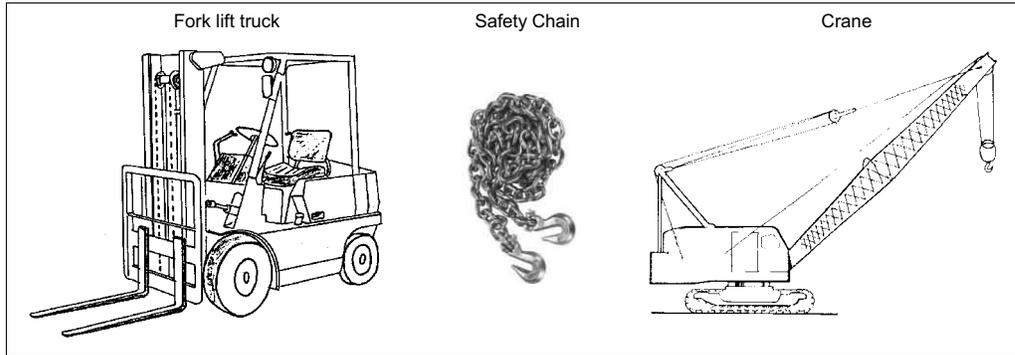

Danger!

Do not stand underneath suspended loads.


Suspended loads may fall, so there is a danger of death!

Travel (short distances)

The pump must be moved with a farm tractor.

Minimum towing capacity of;
6,000 lb [2700 kg]


Maximum speed;
10 mph [16 km/h]

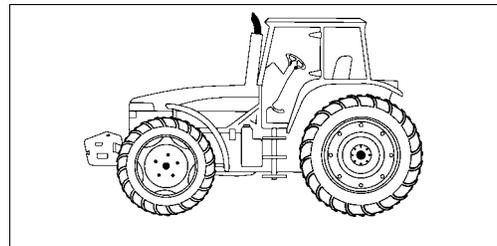

Travel (long distances)

For long distance transportation, use a truck or truck and trailer approved for public roads.

Minimum towing capacity of;
1,500 lb [680 kg]

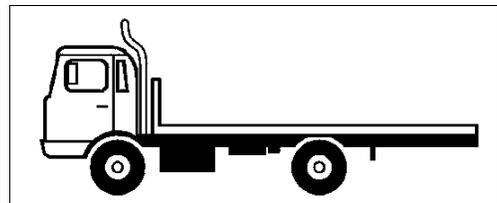

4.4 Transport



Attention! Moving the pump

The pump must be moved on a tractor 3-point hitch with a minimum capacity of; **6,000 lb [2700 kg]**

Make sure that both the tilting 3-point hitch cylinder and the tractor hydraulic circuit have enough oil to safely raise and lower the pump.

The 3-point hitch safety valves must be shut off when traveling.

Do not hook the PTO driveline to the tractor when traveling. The PTO driveline is hooked to the tractor only when agitating or transferring manure.

The pump is designed to be towed at a maximum speed of 10 mph or 16 km/h.

For long distance transportation, use a truck and trailer approved for public roads.

If a pump needs to be towed on a public road, use a farm tractor strong enough to easily tow and safely brake under the weight of the pump. The pump must be equipped with signal lights and reflectors recommended by the Standard ANSI/SAE S279.12 or better if required by local laws.

4.5 Includes

Check the goods supplied against the packing list enclosed for completeness and damage.

4.6 Information on disposing of packing material

After unpacking, the packing material is to be handled properly and disposed of carefully in accordance with the valid local regulations on waste disposal and utilization.

5 Installation

If necessary, please contact your nearest authorized technical dealer.

5.1 Special personnel qualification required for installation

Installation may only be carried out by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

5.2 Safety instructions for installation



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- Before installation, look for any damage caused during transport. Do not use damaged components!
- Use only the special tool indicated for assembly.
- In particular, make sure that the tightening torques specified are complied with.



Also read the chapter on "Safety".

Special hazards during installation:

Any on/off or emergency stop switches are to be fitted with a lock to immobilize them in the open position and a warning sign is to be put up.

- Components which have not been removed correctly may fall off or twist
- Parts loosely placed on top of each other can slip and fall off.
- Components with sharp edges which are still open and accessible represent a source of injury.
- Depressurize hydraulic/pneumatic components before working on them!
- Faulty pressure pipes and connections can lead to serious physical injury.
- Cleaning and disinfecting agents which are not connected properly may lead to caustic burns and the formation of gas.
- Leaking lubricants, solvents, preservatives, can cause injury if they come into direct contact with the skin.
- Serious injury to personnel or damage to property can be caused if the incorrect torque is applied when tightening screws.


5.3 Assembly preparations

Special tools



Attention!


To lift the pump and steady in place when assembling, use a lifting device with a minimum capacity of;
1,500 lb [680 kg].

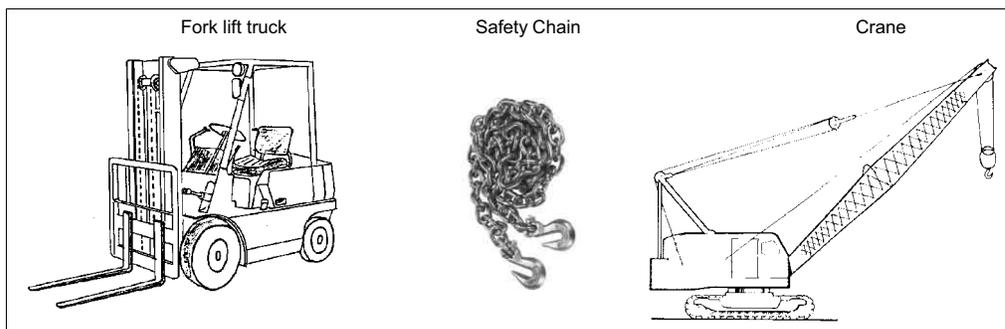

5.4 Pump assembly

Agitation nozzle


- Install the nozzle on the directional valve.
- Point the nozzle towards the ground.
- Install the circle lock and tighten the safety bolt to secure the nozzle;
- If required, install the reducer at the tip of the nozzle.

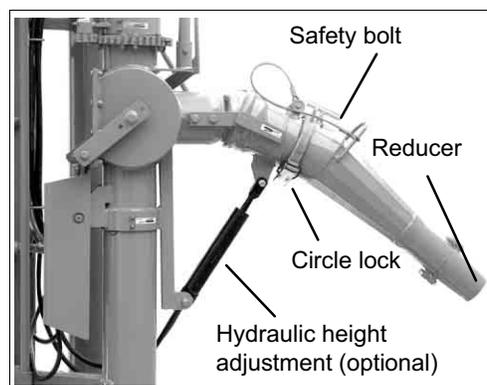

Note!


On certain pump models, the reducer is used to increase the pressure of the nozzle to reach farther, cut through thick floating crust material more effectively and/or to decrease tractor horsepower required.

- Install the handle rotating the agitation nozzle;
- Install the propeller direction indicator rod. The indicator rod must point in the same direction as the propeller.

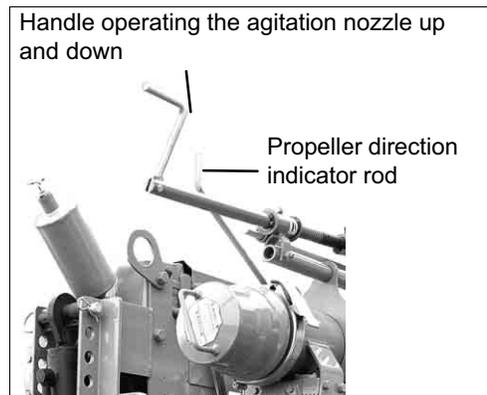

Tilting 3-point hitch

- Hook the lifting device to the lifting ring of the pump.
- Lift the top of the pump.
- Bolt the tilting 3-point hitch to the main frame.
- Install bolts with the heads and flat washers inside the main frame.
- Install the storage legs on the tilting 3-point hitch.
- Install the safety pins.
- Lower the pump on the storage legs.
- Install one end of the PTO driveline on the gearbox.
- Fasten the other end of the PTO to the tilting 3-point hitch.
- Before installing the cylinder of the tilting 3-point hitch, connect it to the tractor.

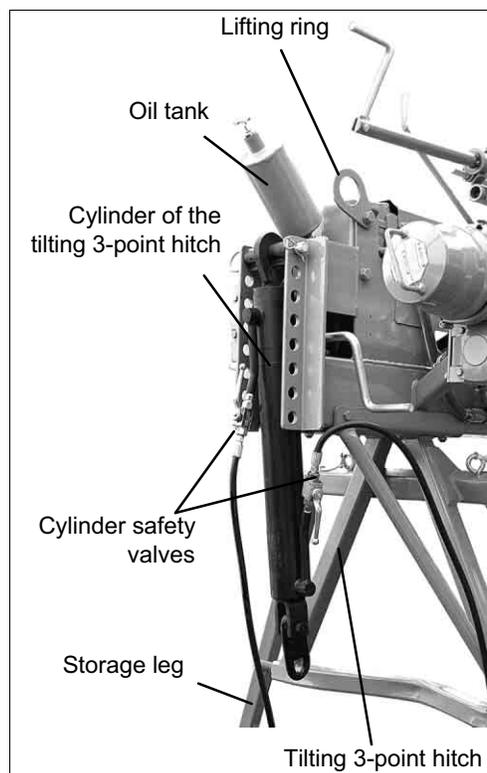

- Open the cylinder safety valves.
- Operate the cylinder many times at full stroke in order to fill it with oil.
- Close the cylinder.
- Shut off the cylinder safety valves.




Note!

Now check the hydraulic oil level of the tractor.

- When moving the pump attach the tilting 3-point hitch cylinder to the hole located on the top of the pump.

Oil tank and lubrication

- Install the oil tank on the gearbox;
- Fill up the oil tank with SAE 80W90 gear oil to the indicated level;
- Grease all parts labeled with.

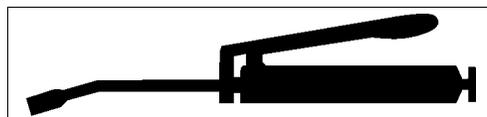

5.5 Information on disposing of installation material after installation is finished.

Handle unused installation material properly and dispose in accordance with current valid local regulations on waste disposal and utilization.

6 Initial Commissioning

6.1 Special personnel qualification required for initial commissioning

Initial commissioning may only be performed by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

6.2 Safety instructions for initial commissioning



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- Before starting for the first time, check that all tools and other parts have been removed from the danger area.
- Are all of the operating media suitable, present and connected?



Also read the chapter on "Safety".

Special risks involved in initial commissioning:

- If the hydraulic connections to the tractor are mixed up this may cause unexpected movements.
- Check all pressure areas for leaks.

6.3 Checks before initial commissioning

The owner should ensure that:

- Oil in the oil tank is at proper level.
 - Add SAE 80W90 gear oil if necessary.
- All grease zerks have been lubricated.
- Check the product for visible damage; immediately remove any faults that are found (note personnel qualification required) or send to the specialist dealer - the product may only be used if it is in perfect condition.
- Check and make sure that only authorized personnel are in the work area of the machine and no other people will be endangered by the machine starting.
- Check and make sure that there are no objects or materials in the working area if they are not necessary for operation.
- Make sure the hydraulic circuit of the tractor contains sufficient hydraulic oil to safely articulate the pump up and down.
- PTO driveline
 - Make sure the driveline guards turn freely;
 - Secure both ends of the driveline;
 - Keep all guards in place.

6.4 First start

 **Danger!**
Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.

 Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.

 **Danger!**
Rotating driveline keep away!



 **Danger!**
Hydraulic line under pressure

 Escaping fluid can penetrate skin causing serious injury or death. Never use your hand to feel for leaks. Hold a scrap of cardboard to feel around for leaks. Relieve pressure prior to servicing.

 **Attention!**
PTO driveline must always be activated when the propeller of the pump is immersed into the manure/water. Activating the pump out of manure is only allowed for testing without exceeding one minute of operation. Running the pump propeller out of manure for more than one minute may result in damage.

- Once the pump has been fully assembled in accordance with instructions and the operating instructions have been read carefully, the pump can be put into operation.
- Activate the pump and check the functions.



Refer to the Operation section for proper procedures.

6.5 Checks after initial commissioning

Check for:

- Signs of leaks.
- Loose or damaged equipment.
- Oil in the oil tank is at proper level.
 - Add SAE 80W90 gear oil if necessary.

6.6 Handing over to the owner

Declaration of conformity and CE mark

(only necessary for European Union member states)

A declaration of conformity must be produced and a CE mark applied if a total operational installation is assembled from individual components.

If several directives apply to the total installation, the CE mark means that the requirements of all relevant directives have been met.

The technical centre/specialist dealer performing the installation work must:

- perform the installation work in accordance with the installation and safety information given in the relevant operating and installation manuals
- complete the hand-over report and have it signed
- produce the declaration of conformity for the total installation being handed over
- apply the CE mark so that it is clearly visible on the installation.

7 Operation

7.1 Special personnel qualification required for operation

Operation may only be performed by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

7.2 Safety instructions for operation



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- Only fit or use the product for its intended purpose.
- If the correct procedure is not followed in case of an emergency, this can result in serious injury to personnel and damage to property - therefore familiarize yourself with the instructions on what to do in an emergency.



Also read the chapter on "Safety".

Special dangers involved in operation and normal operation:

- Incorrect use may lead to serious damage to property and/or life-threatening injury to people.
- The careless use of personal protection equipment can result in serious physical injury.
- If the hydraulic connections to the tractor are mixed up this may cause unexpected movements.

Before operating, make sure you are adequately familiar with the following:

- the operating and control elements
- the equipment
- The method of operation
- The immediate environment
- The safety devices



Danger!

Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.



Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.



Danger!

Rotating driveline keep away!



Danger!

Hydraulic line under pressure

Escaping fluid can penetrate skin causing serious injury or death.



Never use your hand to feel for leaks. Hold a scrap of cardboard to feel around for leaks. Relieve pressure prior to servicing.

Carry out the following checks before every start:

- Check the product for visible damage; immediately remove any faults that are found (note personnel qualification required) or send to the specialist dealer - the product may only be used if it is perfect condition.
- Check and make sure that only authorized personnel are in the work area of the machine and no other people will be endangered by the machine starting.
- Check and make sure that there are no objects or materials in the working area if they are not necessary for operation.
- Make sure the hydraulic circuit of the tractor contains sufficient hydraulic oil to safely articulate the pump up and down.
- PTO driveline
 - Make sure the driveline guards turn freely;
 - Secure both ends of the driveline;
 - Keep all guards in place.

In normal operation:

- The product may only be started from the location specified.
- During operation, operating personnel may only stand at the specified workplaces.




See section on "Workplaces for operating personnel"

- No safety equipment may be removed or put out of operation during operation.
- Do not remove the guards located on the PTO driveline of the tractor and on the pump.
- Keep hands, feet and clothing away from all moving parts.
- Make sure that no one stands in close proximity to any moving parts before engaging the PTO.
- Never leave the pump in operation without the supervision of a skilled operator.
- Make sure that no one stands in close proximity to the pump when lifted and / or in operation.
- During operation, it is strictly forbidden to remain within the hazard area!
- The following checks should be performed at least once a day:
 - Visual checks for any damage that can be seen on the outside.
 - check that all safety devices are working
 - check that all pneumatic and hydraulic hoses are leaktight and connected correctly
 - Never use the pump if parts of the equipment appear damaged or showing signs of abnormal wear

PTO driveline


Maximum Extension and Retraction

- While operating the pump, never exceed the maximum points indicated by the adhesive tapes on the male guard.
- The minimum retraction indicator must never disappear underneath the female guard.
- The maximum extension indicator must never be completely visible.

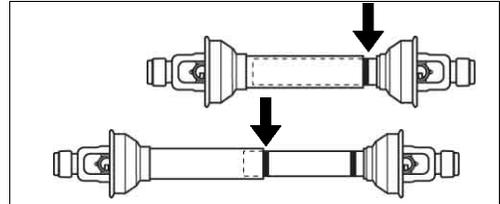

Maximum Angle of PTO joints = 15°

- Both PTO joints must be at the same angle (maximum 15°).
- Joints must always be directed towards the same side of the driveline.

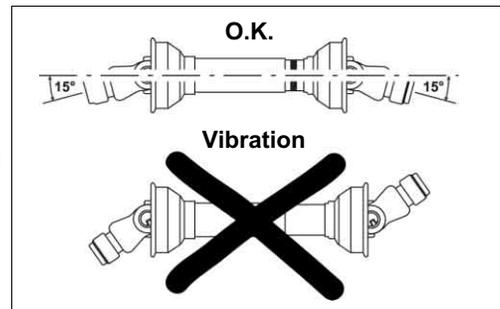


Lubrication

- On universal joints, use a high quality grease formulated specifically for intensive use.

Safety Chains (on European model only)

- Safety chains must be in place at all times to prevent the driveline guards from rotating.
- Make sure that the safety chains do not restrict the movement of the driveline when operating or transporting the equipment.

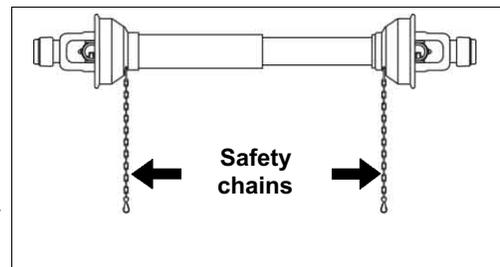

- Never use the safety chains to secure the PTO when disconnected from the tractor.
- Replace any damaged chain.

7.3 Workplaces for operating personnel



Danger!

Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.



Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.

Do not enter into a manure pit at any time.

Always follow the "Safety Procedures for Confined Spaces" before operating or maintaining the pump. These safety procedures clearly explain the risks associated with manure, procedures for a safe access to workplaces and the minimum ventilation requirements to ensure the safety of humans and livestock.



Refer to section 2.1

"Safety Procedures for Confined Spaces"



Danger!

Rotating driveline keep away!



Do not climb or stand on the 3-point hitch to operate the pump.



Danger!

Do not lean out over the pit to operate the pump.

7.4 Description of the operating elements


7.4.1 Manual controls

Nozzle rotation

- To rotate the nozzle CW turn the handle CCW.
- To rotate the nozzle CCW turn the handle CW.


Nozzle height adjustment

- To raise the nozzle turn the handle CW.
- To lower the nozzle turn the handle CCW.

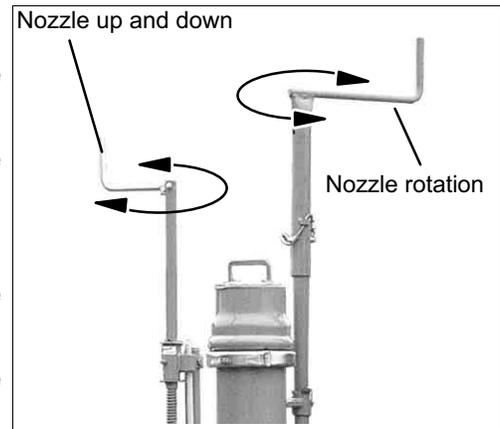


Optional speed reducer control


- Turn the safety lock CW to lock the handle.
- Turn the safety lock CCW to unlock the handle.
- To rotate the nozzle CW turn the handle CCW.
- To rotate the nozzle CCW turn the handle CW.

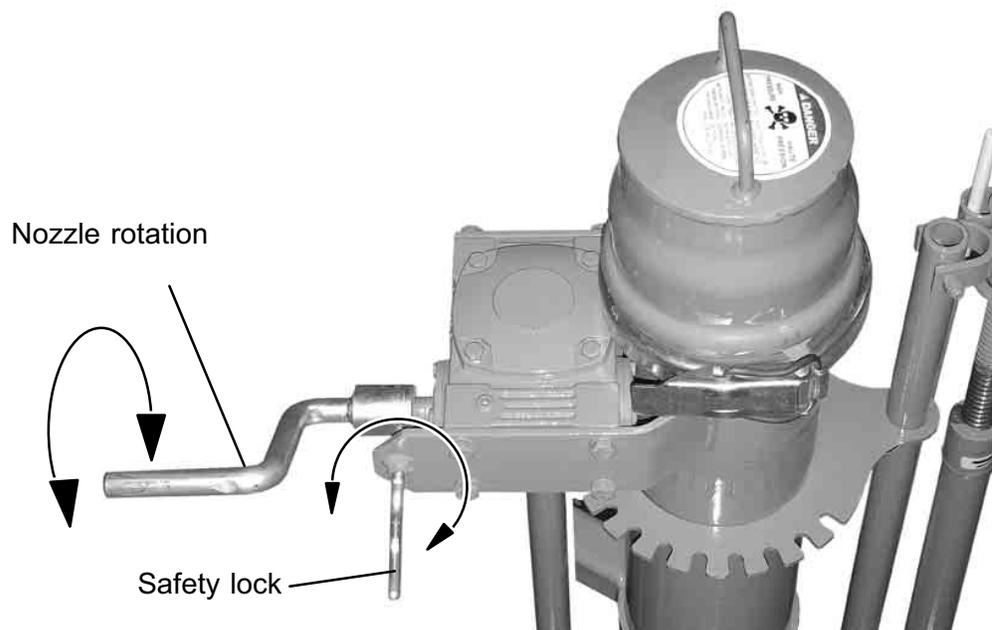


7.4.2 Hydraulic controls (optional)

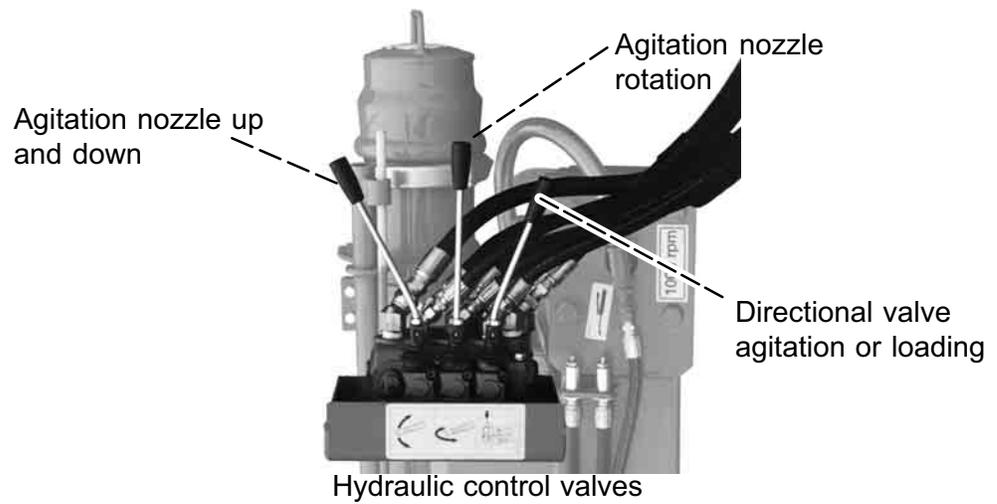


Agitation nozzle up / down

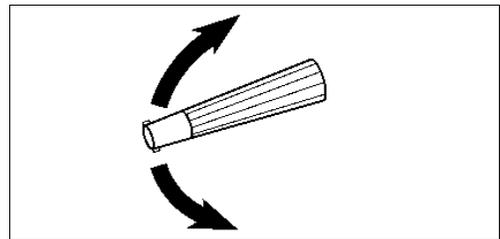


Agitation nozzle rotation

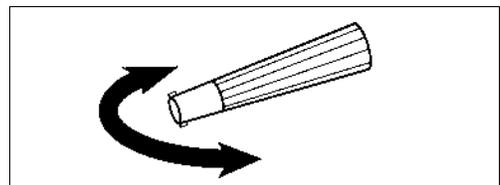

Directional valve agitation/ loading

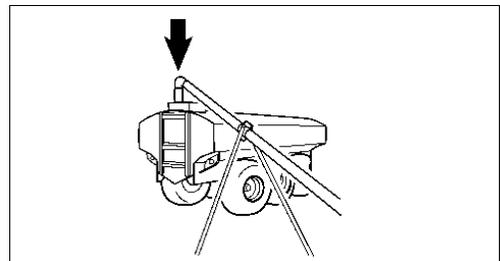


Agitation propeller rotation

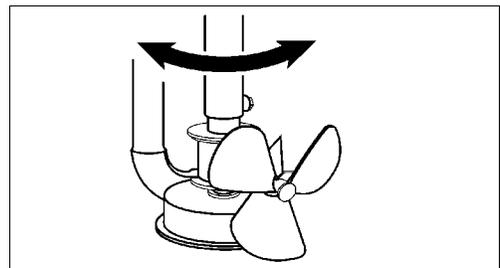

7.4.3 Circle lock cap on discharge pipe

If the transfer hose is not connected, install the circle lock on discharge pipe.

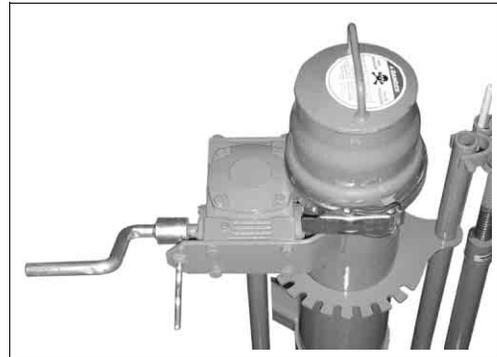


Danger!

Never unlock a circle lock cap under pressure!

Unlocking a circle lock cap under pressure could cause serious injuries to anyone standing near the cap. The compressed air inside the pump discharge pipe would propel the cap with force.

Before removing the cap of the discharge pipe, stop the tractor PTO. Actuate the directional valve a few times in order to relieve pressure from the discharge pipe. Then switch the directional valve to the loading position by setting the indicator rod at its highest position

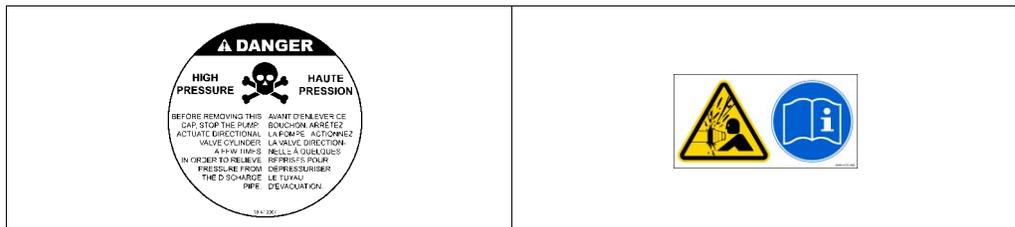

Function of the circle lock cap

When agitating manure, the loading pipe is usually not connected to the pump discharge. If the directional valve is accidentally activated, the operator could be blasted by manure projected with force. The circle lock cap is meant to eliminate the risk of being blasted by manure projected with force if the directional valve is accidentally activated.

Compressed air under the circle lock cap

If the directional valve changes position while agitating a pit, the impeller of the pump will force manure into the discharge pipe, compressing the air inside the pipe.

7.5 Operating



Danger!

Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.



Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.



Danger!

Do not enter into a manure pit at any time.



Always follow the Safety Procedures for Confined Spaces before operating or maintaining the pump. These safety procedures clearly explain the risks associated with manure, procedures for a safe access to work spaces and the minimum ventilation requirements to ensure the safety of humans and livestock.



See Safety section to find safety procedures for confined spaces.



Danger!

Rotating driveline keep away!



Turn off the tractor before installing or removing the PTO driveline.



Attention!

Make sure all control levers are locked at desired position before operating the pump.

7.5.1 Moving the pump



Attention! Moving the pump

The pump must be moved on a farm tractor with a minimum towing capacity of; **6,000 lb [2700 kg]**

Make sure that both the tilting 3-point hitch cylinder and the tractor hydraulic circuit have enough oil to safely raise and lower the pump.

The tilting 3-point hitch safety valves must be shut off when traveling.


Do not hook the PTO driveline to the tractor when traveling. The PTO driveline is hooked to the tractor only when agitating or transferring manure.

The pump is designed to be towed at a maximum speed of 10 mph or 16 km/h.


For long distance transportation, use a truck and trailer approved for public roads.

If a pump needs to be towed on a public road, use a farm tractor strong enough to easily tow and safely brake under the weight of the pump. The pump must be equipped with signal lights and reflectors recommended by the Standard ANSI/ASAE S279.12 or better if required by local laws.

- Remove the handle rotating the agitation nozzle (standard handle only);
- Hook the tilting 3-point hitch and cylinder to the tractor.
 - When moving the pump attach the tilting 3-point hitch cylinder to the hole located on the top of the pump.
 - Install the safety pins.
- Connect the cylinder hydraulic hoses to the tractor outlets.
- Open the safety valves of the 3-point hitch cylinder;

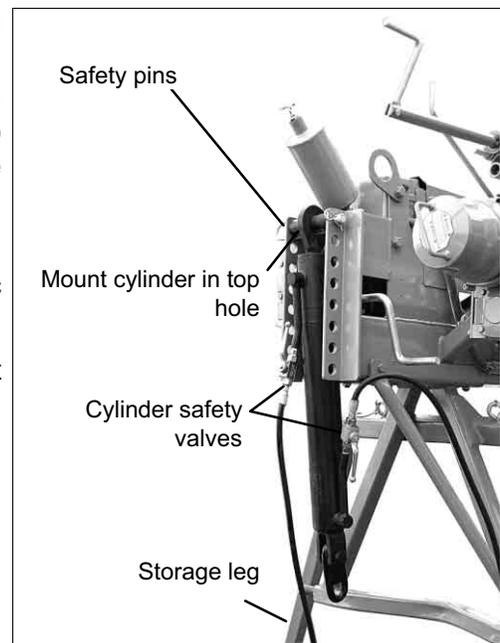

- To raise the pump to the maximum, gradually lift the tractor 3-point hitch while closing the cylinder of the tilting 3-point hitch.
- Remove the storage legs.
- Before moving, shut off the safety valves of the tilting 3-point hitch cylinder.

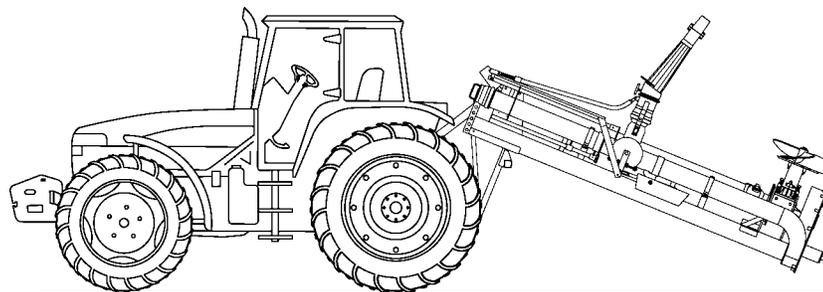


7.5.2 Positioning the pump



Note!

To speed up the agitation time, it is recommended to install the pump in liquid near solid masses.

- Open the safety valves of the tilting 3-point hitch;
- Back up the pump above the pit.
- Set the pump on the bottom of the pit by gradually lowering the 3-point hitch and extending the tilting 3-point hitch cylinder.
- To stabilize the pump, once the weight of the pump reaches the floor of the pit, keep the 3-point hitch cylinder under tension.
- Shut off the safety valves of the tilting 3-point hitch.

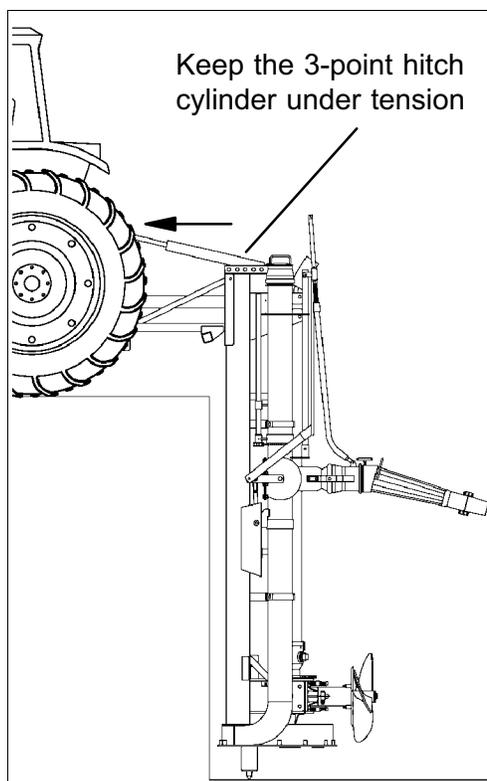

Note!

If required, change the position of the 3-point hitch cylinder on top of the pump.

7.5.3 Agitation mode



Danger!

Rotating driveline keep away!




Turn off the tractor before installing or removing the PTO driveline.



Attention!

The safety valves of the 3-point hitch cylinder must be shut off when agitating and transferring manure.

- Install the PTO driveline.
- Connect the pump's hydraulic controls to the tractor.
- Install the handle rotating the agitation nozzle (standard handle only);
- Set the directional valve to the agitation mode at its lowest position.
- Engage the PTO at minimum RPM.
- Gradually increase the PTO to 540 or 1000 RPM, depending on the PTO model.
- Using the nozzle controls (rotation, up/down) and the direction control of the propeller, agitate the content of the pit.
- Operate the agitation nozzle to break chunks and direct them towards the pump intake.
- A boltable tip may be installed on the nozzle to improve thick crust cutting. The tip should be removed when crust has been broken up or when there is a thin crust.

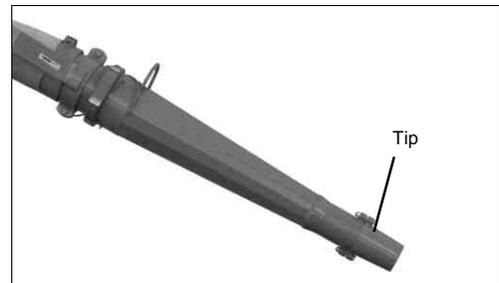

- To speed up agitation, move the agitation nozzle from liquid to solids.
- Tilt the pump lightly towards the tractor;



Note!

Never allow the propeller and the nozzle to operate in the same direction for long periods of time without supervision.

Agitate the pit thoroughly before transferring.

- When the whole content of the pit is mixed, gradually decrease the PTO to minimum RPM.
- Turn off the pump.

7.5.4 Manure transfer mode



Danger!

Rotating driveline keep away!



Turn off the tractor before installing or removing the PTO driveline.



Attention!

The safety valves of the 3-point hitch cylinder must be shut off when agitating and transferring manure.



Note!

Thoroughly agitate the content of the reservoir before transferring the manure.




Danger!

Never unlock a circle lock cap under pressure!

Unlocking a circle lock cap under pressure could cause serious injuries to anyone standing near the cap. The compressed air inside the pump discharge pipe would propel the cap with force.

Before removing the cap of the discharge pipe, stop the tractor PTO. Actuate the directional valve a few times in order to relieve pressure from the discharge pipe. Then switch the directional valve to the loading position by setting the indicator rod at its highest position

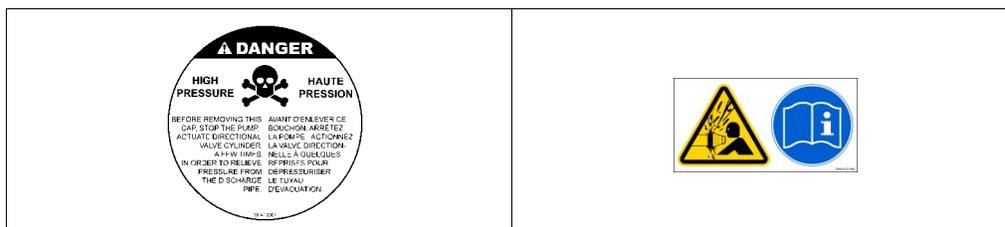

Function of the circle lock cap

When agitating manure, the loading pipe is usually not connected to the pump discharge. If the directional valve is accidentally activated, the operator could be blasted by manure projected with force. The circle lock cap is meant to eliminate the risk of being blasted by manure projected with force if the directional valve is accidentally activated.

Compressed air under the circle lock cap

If the directional valve changes position while agitating a pit, the impeller of the pump will force manure into the discharge pipe, compressing the air inside the pipe.

- Remove the cap of the discharge pipe.
- Install the loading pipe using the circle lock.
- Stabilize the loading pipe according to the instructions supplied with the loading pipe.
- Set the directional valve to the transfer mode (indicator rod at the highest position).
- Engage the PTO at minimum RPM.
- Gradually increase the PTO RPM until the desired transfer capacity is reached.
- Before loading is completed.
- Gradually decrease the PTO RPM to minimum.
- Stop the PTO.
- Set the directional valve to the agitation mode.
- Once finished, remove the loading pipe from the auxiliary pipe.
- Position back the circle lock cap on the auxiliary pipe using the circle lock.



Note

When the PTO RPM is at minimum, the directional valve can be switched from the loading mode to the agitation mode between two spreader loads.

7.5.5 Removing the pump from the tank




Danger!

Rotating driveline keep away!



Turn off the tractor before installing or removing the PTO driveline.

- Remove the PTO driveline.
- Open the safety valves of the tilting 3-point hitch.
- Lift the pump out of the pit by raising the 3-point hitch and stretching the 3-point hitch cylinder.
- Slowly move the pump away from the pit.
- Shut off the safety valves of the tilting 3-point hitch.

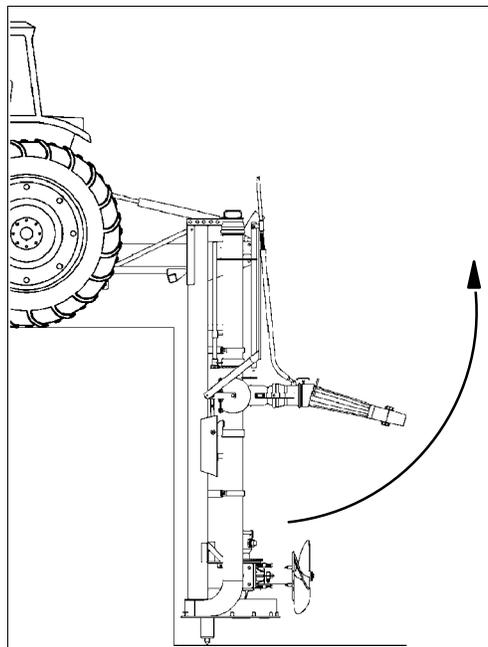

8 Operating faults

If necessary, please contact your nearest authorized technical dealer.

8.1 Special personnel qualification required for troubleshooting

Troubleshooting may only be performed by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

8.2 Safety instructions for troubleshooting



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- First of all, prevent the product from being restarted accidentally.
- Ensure that safe disconnection can be carried out by a second person at any time.
- Secure the range of action for any moving parts.



Also read the chapter on "Safety".

Special dangers involved in troubleshooting:

 **Danger!**
Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.

 Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.

 **Danger!**
Do not enter into a manure pit at any time.

 Always follow the Safety Procedures for Confined Spaces before operating or maintaining the pump. These safety procedures clearly explain the risks associated with manure, procedures for a safe access to work spaces and the minimum ventilation requirements to ensure the safety of humans and livestock.

 **Danger!**
Rotating driveline keep away!

 Turn off the tractor before working on the equipment.

 **Danger!**
Hydraulic line under pressure

 Escaping fluid can penetrate skin causing serious injury or death. Never use your hand to feel for leaks. Hold a scrap of cardboard to feel around for leaks. Relieve pressure prior to servicing.

8.3 Troubleshooting possible faults

Symptom	Possible cause	Remedy
Pump is not working properly or not at all.	Broken PTO shear bolts.	Replace PTO shear bolts.
	PTO driveline has a defective joint or is disconnected.	Inspect the drive line.
	Broken shaft in drive line.	Replace.
	Manure too thick	Refer to section; 11.3.3
	Foreign material in the directional valve.	Remove cover and clean out.
	Obstruction in the impeller intake.	Lift the pump and clear the obstruction.
	Worn out impeller/housing	Replace part.
	Lack of lubrication	Refer to section; 9.3
Vibration in the driveline Vibration in the driveline.	The PTO joints are out of alignment.	Refer to section; 7.2
	Foreign material wrapped on propeller	Remove foreign material; Adjust knife kit;
The pump will not tilt properly	Safety valve is closed.	Open valve.
	Lack of lubrication	Refer to section; 9.3
	The hydraulic hoses are not connected properly.	Verify connections.
	There is a leak in the hydraulic system.	Look for signs of fluid. Repair defective parts.
Symptom	Possible cause	Remedy
The pump will not tilt properly	Hydraulic fluid level in the tractor is low.	Add fluid as required in the tractor's manual.
	Cylinder is defective.	Replace defective part.
Not chopping long material	Knife kit worn or out of adjustment.	Replace or adjust knife kit; Refer to section; 9.4

9 Maintenance

If necessary, please contact your nearest authorized technical dealer.

9.1 Special personnel qualification required for maintenance work

Maintenance work may only be performed by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

9.2 Safety instructions for maintenance



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- Only use original spare parts / original wearing parts / original accessories. In the case of products by other manufacturers it cannot be ensured that they have been designed and produced from the point of view of loads and safety.
- All of the steps involved in the maintenance work must be worked through in the order specified.
- The maintenance work specified in the instructions (adjustment, cleaning, lubrication, inspection, etc.) must be performed at the times specified.
- Maintenance work should only be performed with the tools envisaged for this purpose.
- Also note the special information in this manual for the individual components.
- Only use the media specified.
- All warnings and warning signs must be present and legible.
- Immediately replace any components that are not in perfect condition.



Also read the chapter on "Safety".

Before carrying out any maintenance work, make sure of the following:

- The area for the maintenance work and access to the working area should be secured over a wide area and there should not be any unauthorized people in the working area.
- Disconnect all pressure units from the pressure source and make sure they cannot be switched back on again unintentionally.
- There are suitable hoists and load suspension devices available for changing larger parts.
- Suitable collection vessels are available for all substances that might be harmful to the ground water (oils, coolants, cleaning and disinfecting agents, etc.).

Special risks involved in maintenance work:

- Serious damage to property may occur if incorrect replacement or wearing parts are installed.
- If energy sources are switched on unintentionally, this may lead to serious bodily injury or damage to property.
- There is a risk of injury from components/tools... with accessible sharp edges.
- Injury can be caused by contact with leaking liquids (describe in more detail if necessary).



Danger!

Hydraulic line under pressure



Escaping fluid can penetrate skin causing serious injury or death. Never use your hand to feel for leaks. Hold a scrap of cardboard to feel around for leaks. Relieve pressure prior to servicing.

- Serious injury to personnel or damage to property can be caused if the incorrect torque is applied when tightening screws.
- Unsecured manual operation means a higher risk of injury due to crushing/shearing/being pulled in/...

After completing the maintenance work, check the following:

- The installation values set before the work are not altered by the work (report).
- Any screwed connections that were loosened earlier have been tightened.
- Any guards, cover, lids, sieves, filters, ... that were removed earlier have been put back again correctly.
- All safety equipment is working perfectly again.
- Have all of the tools, materials and other equipment that were used been removed from the working area again?
- The working area has been cleaned.
(possibly to remove any fluids or similar substances that came out of the machine)
- Operation has been checked after maintenance work has been completed or parts replaced. Produce a full test report if necessary.
- Follow the maintenance and safety instructions on the labels affixed to the pump.



**Refer to section 2.5 Protective devices
Maintenance and Safety Labels**

- Do not remove the labels at any time.
- Stop the PTO before lubricating, maintaining and adjusting.
- Lubricate, maintain and store the pump according to instructions in this Manual.

9.3 Inspections and preventive maintenance

Lubrication



Danger!

Manure produces toxic gases that can cause a loss of consciousness, asphyxia or death in a few seconds.



Manure agitation can produce toxic gases in buildings built above the pit. Toxic gases can also emanate in buildings situated by the pit and / or connected to the pit by an evacuation line.

Never attempt to change the oil or to grease the lower joint of the pump driveline while the pump is in the reception pit.



Danger!

Rotating driveline keep away!




Turn off the tractor before lubricating or cleaning the pump.

Oil level

- The oil tank must be filled to the indicated level when the pump is operating. Add oil when required;
- Add SAE 80W90 gear oil if necessary.

9.3.1 After emptying each pit

- Grease the upper and lower joints of the pump driveline;
- Grease the 3 shafts of the bottom gearbox.

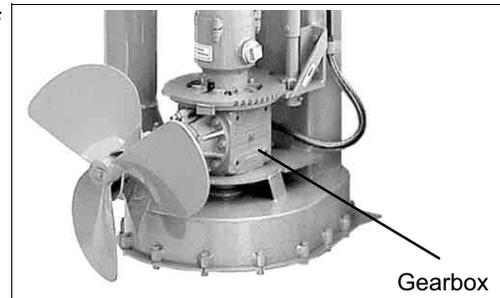

9.3.2 Every 5 hours



Note!

Use specified grease or equivalent:
Red Texas 880 crown and chassis® grade 0
(2010-4300-790)

- Grease joints and sliding section of PTO driveline.
On universal joints, use a high quality grease formulated specifically for intensive use.



9.3.3 Every 10 hours

- Grease the rotation pivots of the agitation nozzle;
- Grease the directional valve.

9.3.4 Every 50 hours

- Check the tension of the oil coolers belts.

9.3.5 Every 75 hours




Note!


Use gearbox oil SAE 80W90.

To change the oil of the pump main frame:


- Remove the magnetic plug located at the bottom of the oil cooler pipes.

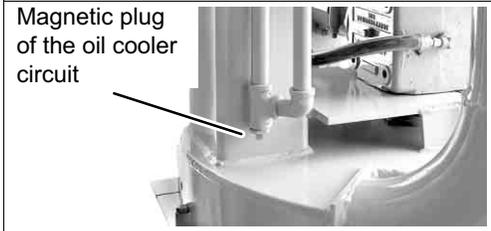


- Remove the magnetic plug located on the side of the bottom gearbox.

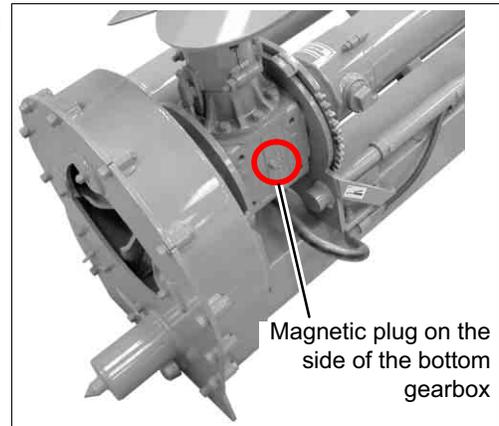

- Rotate the gearbox so that the hole of the magnetic plug faces downwards and remove the filling plug located on the other side of the gearbox. This allows air to enter at the top of the gearbox and the oil to drain from the bottom.

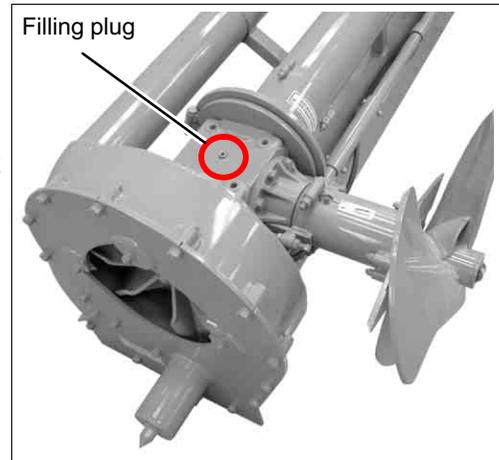

- Remove the oil tank located on the top gearbox;
- Use a siphon to complete the drainage of both gearboxes;

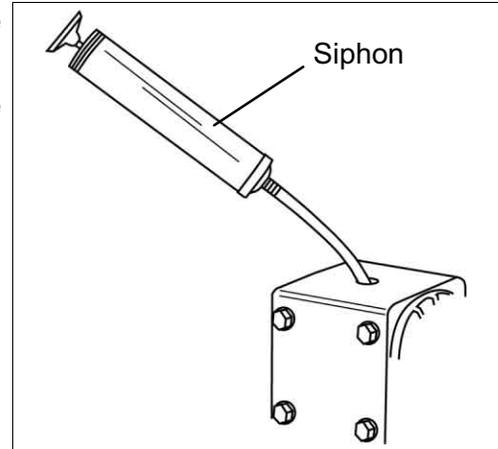

- Clean and reinstall both magnetic plugs;
- Fill the bottom gearbox with oil and reinstall the filling plug;
- Fill the top gearbox with oil and reinstall the oil tank;
- Fill up the oil tank to the indicated level.

**Attention!**

After an oil change, run the pump for 1 minute only. Stop the pump and check the oil level. Add oil if necessary.

**Attention!**

Wipe out any oil spill. Safely dispose of used oil by following local and/or state regulations concerning the proper handling of dangerous goods.

Cleaning the pump

**Attention!**

Pressure washer may damage the paint if it is not used properly. Use pressure washer not exceeding 2000 psi [105 bar]. Only use cold water when cleaning with a pressure washer. Keep the pressure washer nozzle at least 1 ft [30 cm] from the surface to be cleaned.

- Pressure wash the entire pump.




9.4 Repairs

PTO driveline shear bolts

Tractor PTO	Part No.	Dimensions	Grade	Quantity
1-3/8" - 6 splines	2018-2404-670	3/8"-16NC x 1	8	2
1-3/8" - 21 splines	2010-2404-010	3/8"-16NC x 1	2	2
1 3/4" - 20 splines	2018-2404-670	3/8"-16NC x 1	8	2


Knife Kit Adjustment

- Loosen up the holding bolts;
- Using the adjustment bolts, slide the tube so that the knife ends up being right next to the propeller;
- Tighten up the holding bolts.

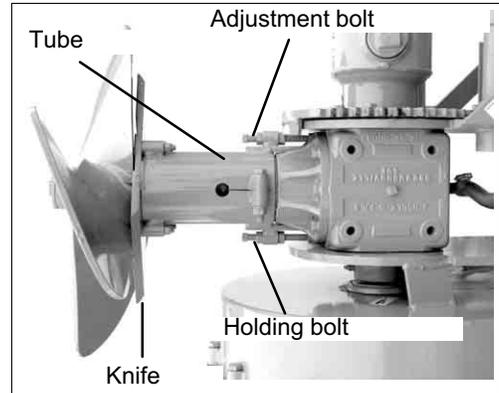

Adjustment of the bottom gearbox pivot on the main frame (when required)

- To reduce vibrations, tighten up the adjustment bolts of the bottom gearbox pivot. Allow just enough play so that the gearbox turns freely.

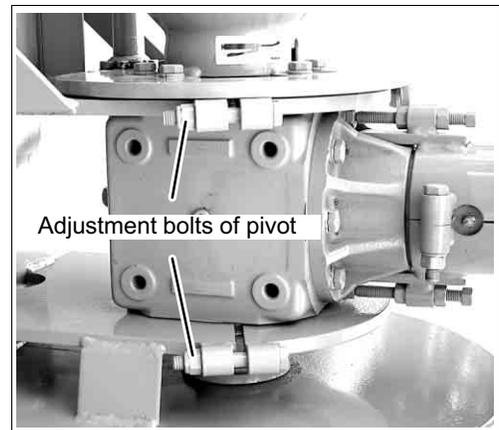

10 Decommissioning

10.1 Special personnel qualification required for decommissioning

Decommissioning may only be performed by specially qualified personnel in accordance with the safety instructions.



Also see the section on "Personnel qualification".

10.2 Safety instructions for decommissioning



Danger!

Read Instructions First! To prevent serious injury or death, do not operate or service this machine without first reading and understanding the operator's manuals for all of the equipment. If these manuals are lost, contact your nearest dealer or the manufacturer for replacements.

To prevent damage to property and/or life-threatening injury to personnel always observe the following:

- All of the steps involved in the decommissioning work must be worked through in the order specified.
- First of all, make the operating area for decommissioning completely safe.
- Make sure that operating media are disposed of without harming the environment.



Also read the chapter on "Safety".

Special dangers involved in decommissioning:

- Components which have not been removed correctly may fall off or twist.
- There is a risk of injury from open components / tools /... with sharp edges.
- Suspended loads can fall and then there will be a risk of death - do not stand underneath suspended loads!
- Using load suspension devices other than those specified here may result in serious injury to people and damage to property.

10.3 Temporary decommissioning



Danger!

Rotating driveline keep away!

Turn off the tractor before lubricating or cleaning the pump.



Storage

- Install the storage legs.
- Set the pump on a flat and firm surface;
- Remove the cover of the directional valve and clean the housing.
Be sure to clean out any accumulation of dry manure;



Attention!

Pressure washer may damage the paint if it is not used properly. Use pressure washer not exceeding 2000 psi [105 bar]. Only use cold water when cleaning with a pressure washer. Keep the pressure washer nozzle at least 1 ft [30 cm] from the surface to be cleaned.

- Pressure wash the entire pump.



- Drain the driveline guards (located on the main frame) and the impeller housing;
- Grease the driveline joints and all parts labeled with;



Refer to section 11.1 Label position


- To prevent corrosion, spread a film of oil on all moving parts.

10.4 Final decommissioning/disposal


After final decommissioning, handle all components properly and dispose of them in accordance with valid local regulations on waste disposal and utilization.

11 Appendix

11.1 Label position

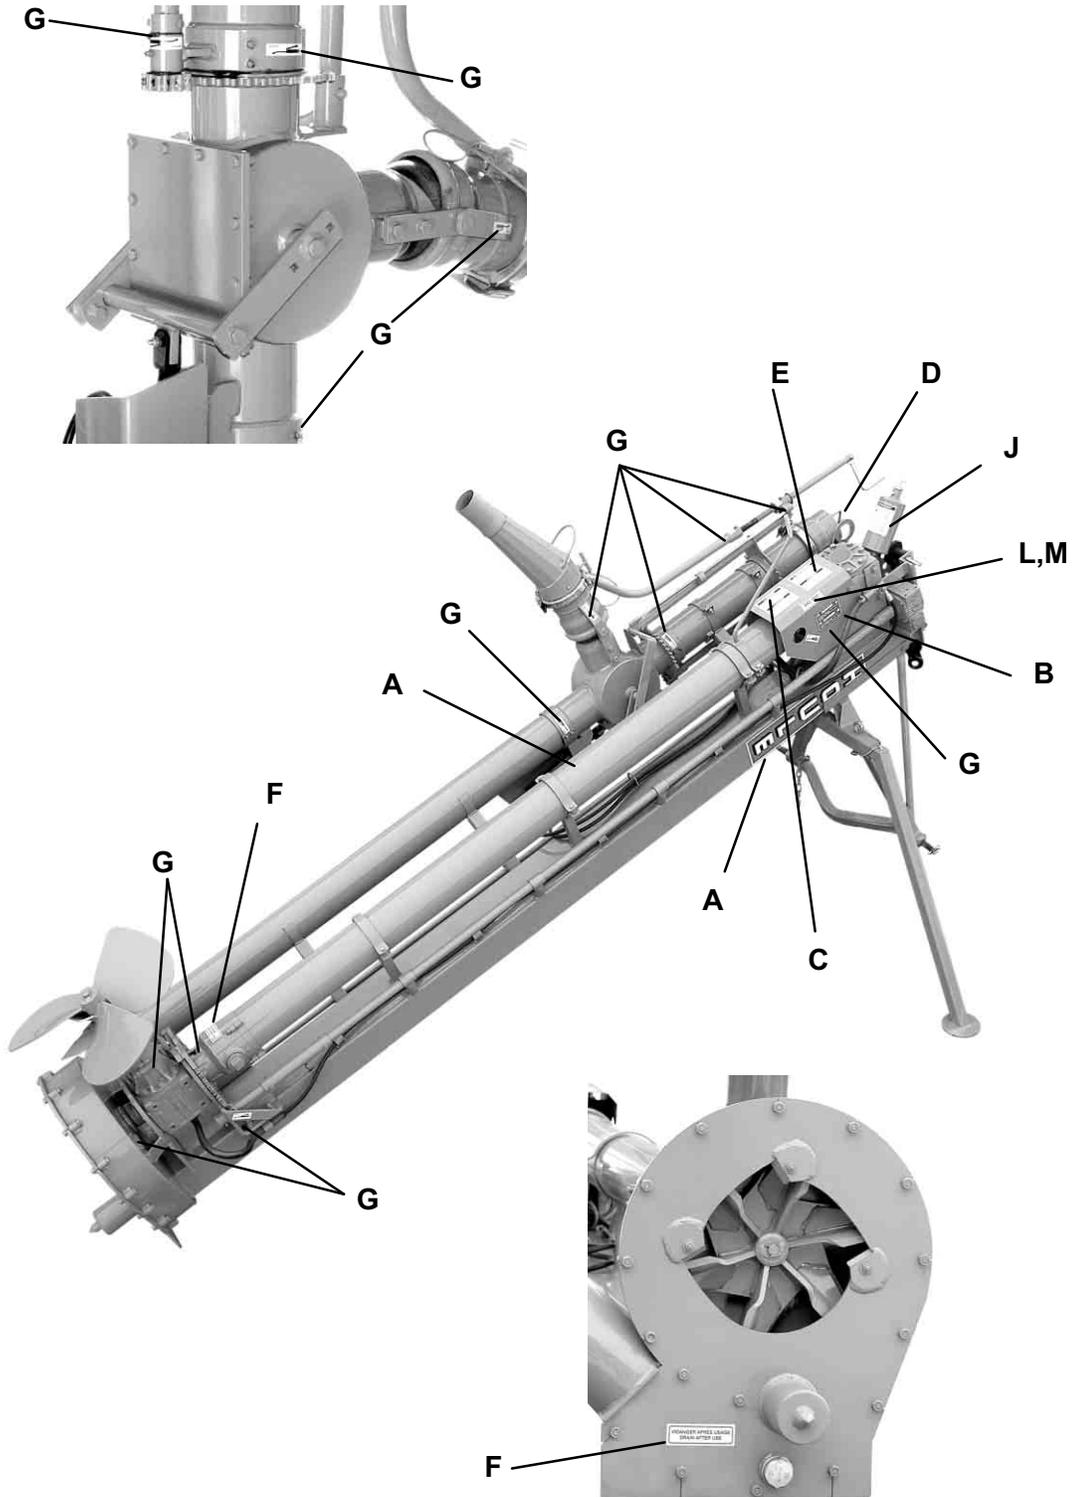

	American	European
A	 <p>2010-4700-400</p>	
B	 <div data-bbox="711 441 857 562"> <p>▲ DANGER</p> <p>TOXIC GASES MISEURE PRODUITES TOXIC GAZES POUX LES GAZES PEUVENT S'ACCUMULER EN AMBIANCE ET CAUSER LA MORT EN PEU DE TEMPS</p> <p>GAZ TOXICOUS LA COMBINAISON DE CERTAINS GAZES PEUT PROVOQUER LA MORT EN PEU DE TEMPS EN AMBIANCE ENFERMEUSE</p> </div> <p>2099-4720-010</p>	  <p>2099-4725-210 2099-4725-100</p>
C	 <div data-bbox="711 651 857 772"> <p>▲ DANGER</p> <p>ROTATING DRIVELINE, KEEP AWAY!</p> <p>ARBRE DE COMMANDE ROTATIF, GARDEZ VOS DISTANCES!</p> </div> <p>2099-4720-020</p>	
D	 <p>2099-4720-070</p>	  <p>2099-4725-400</p>
E	<div data-bbox="625 1102 795 1344"> <p>▲ WARNING</p> <ul style="list-style-type: none"> • AVOID STAYING NEAR HIGH PRESSURE SYSTEMS DURING OPERATION • NEVER ADJUST THE HIGH PRESSURE VALVE WHILE THE SYSTEM IS RUNNING • KEEP AWAY FROM HIGH PRESSURE SYSTEMS DURING OPERATION • ALWAYS WEAR PROTECTIVE GEAR WHEN WORKING WITH HIGH PRESSURE • ALWAYS SECURE THE CLEARANCE BEFORE WORKING WITH HIGH PRESSURE • NEVER TOUCH THE CLEARANCE WHEN THE SYSTEM IS RUNNING • NEVER TOUCH THE CLEARANCE WHEN THE SYSTEM IS RUNNING <p>▲ AVERTISSEMENT</p> <ul style="list-style-type: none"> • ÉVITEZ D'ÊTRE PROXIMÉ À L'ÉLOIEMENT DES SYSTÈMES À HAUTE PRESSION PENDANT LE FONCTIONNEMENT • NE JAMAIS RÉGLER LES ÉQUIPEMENTS À HAUTE PRESSION QUAND LE SYSTÈME EST EN MARCHÉ • GARDER À L'ÉLOIEMENT DES SYSTÈMES À HAUTE PRESSION PENDANT LE FONCTIONNEMENT • PORTER TOUJOURS UN ÉQUIPEMENT DE PROTECTION PERSONNELLE APPROPRIÉ LORS DU TRAVAIL À HAUTE PRESSION • NE TOUCHER JAMAIS LES ÉQUIPEMENTS À HAUTE PRESSION QUAND LE SYSTÈME EST EN MARCHÉ • NE TOUCHER JAMAIS LES ÉQUIPEMENTS À HAUTE PRESSION QUAND LE SYSTÈME EST EN MARCHÉ </div> <p>2099-4721-020</p>	  <p>2099-4725-200 2099-4725-130</p>
F	<div data-bbox="617 1396 901 1480"> <p>VIDANGER APRÈS USAGE DRAIN AFTER USE</p> </div> <p>2010-4701-590</p>	
G	 <p>2003-4701-240</p>	

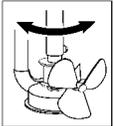	American	European
H	 <p>2010-4703-790</p>	
J	 <p>2099-4725-310</p>	
K	 <p>2010-4703-380</p>	
L	<p>540 rpm</p> <p>2010-4703-430</p>	
M	<p>1000 rpm</p> <p>2010-4703-440</p>	

11.2 Abbreviations

Units	
@	at
°	Degrees (angles)
CE/ EC	European Union
cm	Centimeters
CW	Clockwise
CCW	Counterclockwise
gal	Gallon
Hp	Horsepower
" (in)	Inch (= 25.4 mm)
Inc	Incorporated
kg	Kilograms
km/h	Kilometers per hour
L	Left or liters
lbs	Pounds
m	Meter
mm	Millimeters
max	Maximum
min	Minimum
mph	Miles per hour
NC	National coarse thread
PTO	Power take-off
QC	Quebec (Canada)
R	Right
RPM	Revolutions per minute
SAE	Society of Automotive Engineers
us/ USA	United States of America
www	World wide web

11.3 Pumping Head Calculation



Note!

Read the following information prior to calculate and fill the Total Pumping Head Formula.

11.3.1 Transfer rate

- In SAE, the Transfer Rate is expressed in US GPM.
- In Metric, the Transfer Rate is expressed in Liters per minute.

11.3.2 Difference in Elevation


Determined by the height between the pump intake and the top of the storage pit.

- In SAE, the Difference in Elevation is expressed in feet.
- In Metric, the Difference in Elevation is expressed in meters.

11.3.3 Consistency test

The following test must be performed to find the viscosity of well-agitated slurry.

- Set a 24" (60cm) disc over a pail.
- Slowly pour enough slurry to get overflow all around the disc.
- After 1 minute of rest, measure the thickness of slurry at the center of the disc.

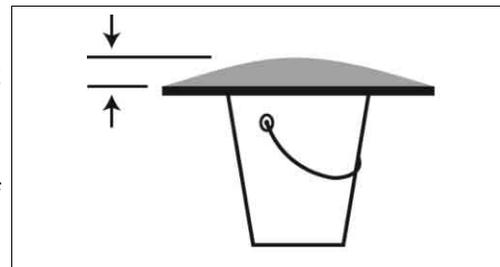

Ratio (Free stall manure vs Water added)	1 : 2	1 : 1 1/2	1 : 1	2 : 1
Approximate thickness on 24" (60cm) disc	1/8" (3mm)	1/4" (6mm)	1/2" (12mm)	3/4" (18mm)

11.3.4 Diameter, Length and Type of Transfer Line

Diameter, length and type of a line all affect friction loss. Total Pumping Head Calculation is the addition of each individual Transfer Line section of same type and diameter.

Line diameter is chosen in accordance with the Transfer Rate and available horsepower. We suggest to use line diameters are slightly larger than the minimum required for a new transfer line, intended that residues may build up inside pipes and thus decrease the effective line diameters through the years.

11.3.5 Straight pipe equivalent for components

To complete the total friction loss calculation, each elbow, adapter and valve must be converted into it's equivalent linear dimension of line and added to the length of line.

Components	Pipe Diameter													
	S.A.E.							METRIC						
	3"	4"	6"	8"	10"	12"	15"	75mm	100mm	150mm	200mm	250mm	300mm	350mm
45° PVC elbow	9 ft	12 ft	18 ft	24 ft	30 ft	36 ft	45 ft	3 m	3,5 m	5,5 m	7,5 m	9 m	11 m	14 m
90° PVC elbow	9 ft	32 ft	48 ft	64 ft				7,5 m	10 m	14,5 m	19,5 m			
45° Houle * steel elbow		8 ft	12 ft	16 ft		24 ft			2,5 m	3,5 m	5 m		7,5 m	
90° Houle * steel elbow*		22 ft	32 ft	42 ft		48 ft			7 m	10 m	13 m		14,5 m	
"Y" Houle * steel						48 ft							14,5 m	
Houle valve	8 ft		15 ft	20 ft				2,5 m		4,5 m	6 m			
Flush tank adaptor *						48 ft							14,5 m	
PVC adaptor from 12¼" to 15" diameter						45 ft								
PVC adaptor from 304,8mm to 381mm diameter													14 m	

* For 12" [300 mm] Houle steel components, use the Friction Loss Coefficient for PVC pipes.

11.3.6 Friction Loss Coefficient for PVC Pipes

PVC Pipes Diameter	US Gallons per minute	Liters per minute	Consistency of Liquids and Manure				
			Water	1/8" (3mm)	1/4" (6mm)	1/2" (12mm)	3/4" (18mm)
3" (75mm)	150	570	0.0526	0.0599	0.0710	0.1041	0.1519
	210	800	0.0980	0.1117	0.1323	0.1940	0.2832
	270	1020	0.1560	0.1778	0.2106	0.3088	0.4508
	330	1250	0.2261	0.2577	0.3052	0.4477	0.6534
4" (100mm)	200	760	0.0220	0.0251	0.0297	0.0436	0.0636
	280	1060	0.0410	0.0468	0.0554	0.0813	0.1186
	360	1360	0.0653	0.0745	0.0882	0.1294	0.1888
	440	1670	0.0947	0.1080	0.1278	0.1875	0.2737
	520	1970	0.1290	0.1470	0.1741	0.2554	0.3728
6" (150mm)	400	1510	0.0110	0.0125	0.0148	0.0218	0.0318
	500	1890	0.0166	0.0189	0.0224	0.0329	0.0480
	600	2280	0.0233	0.0265	0.0314	0.0461	0.0673
	700	2650	0.0310	0.0353	0.0418	0.0613	0.0895
8" (200mm)	500	1890	0.0041	0.0047	0.0055	0.0081	0.0118
	700	2650	0.0076	0.0087	0.0103	0.0151	0.0220
	900	3410	0.0121	0.0138	0.0164	0.0240	0.0350
	1100	4160	0.0176	0.0200	0.0237	0.0348	0.0508
10" (250mm)	800	3030	0.0033	0.0037	0.0044	0.0065	0.0095
	1100	4160	0.0059	0.0068	0.0080	0.0117	0.0171
	1400	5300	0.0093	0.0105	0.0125	0.0183	0.0267
	1700	6440	0.0133	0.0151	0.0179	0.0262	0.0383
12" (300mm)	1200	4540	0.0029	0.0033	0.0039	0.0057	0.0083
	1600	6060	0.0049	0.0056	0.0066	0.0096	0.0141
	2000	7570	0.0074	0.0084	0.0099	0.0146	0.0213
	2400	9480	0.0103	0.0118	0.0139	0.0204	0.0298
	2800	10600	0.0137	0.0156	0.0185	0.0272	0.0396
15" (350mm)	1500	5680	0.0015	0.0017	0.0020	0.0029	0.0042
	2000	7570	0.0025	0.0028	0.0033	0.0049	0.0072
	2500	9460	0.0037	0.0043	0.0051	0.0074	0.0108
	3000	11360	0.0053	0.0060	0.0071	0.0104	0.0152

11.3.7 Friction Loss Coefficient for Flexible Hoses and Steel Pipes

PVC Pipes Diameter	US Gallons per minute	Liters per minute	Consistency of Liquids and Manure				
			Water	1/8" (3mm)	1/4" (6mm)	1/2" (12mm)	3/4" (18mm)
3" (75mm)	150	570	0.0682	0.0777	0.0920	0.1350	0.1970
	210	800	0.1271	0.1448	0.1715	0.2516	0.3672
	270	1020	0.2023	0.2306	0.2730	0.4005	0.5845
	330	1250	0.2932	0.3342	0.3958	0.5805	0.8473
4" (100mm)	200	760	0.0286	0.0326	0.0386	0.0565	0.0825
	280	1060	0.0532	0.0607	0.0718	0.1054	0.1538
	360	1360	0.0847	0.0966	0.1144	0.1677	0.2448
	440	1670	0.1228	0.1400	0.1658	0.2431	0.3549
	520	1970	0.1673	0.1907	0.2258	0.3312	0.4834
6" (150mm)	400	1510	0.0143	0.0163	0.0193	0.0282	0.0412
	500	1890	0.0215	0.0246	0.0291	0.0427	0.0623
	600	2280	0.0302	0.0344	0.0408	0.0598	0.0873
	700	2650	0.0402	0.0458	0.0542	0.0795	0.1161
	800	3030	0.0514	0.0586	0.0694	0.1018	0.1486
	900	3410	0.0639	0.0729	0.0863	0.1266	0.1848
	1000	3790	0.0777	0.0886	0.1049	0.1538	0.2245
	1100	4160	0.0927	0.1056	0.1251	0.1835	0.2678
8" (200mm)	600	2280	0.0074	0.0085	0.0100	0.0147	0.0215
	800	3030	0.0126	0.0144	0.0171	0.0250	0.0365
	1000	3790	0.0191	0.0218	0.0258	0.0378	0.0552
	1200	4540	0.0268	0.0305	0.0361	0.0530	0.0774
	1400	5300	0.0356	0.0406	0.0481	0.0705	0.1029
	1600	6060	0.0456	0.0520	0.0616	0.0903	0.1318
	1800	6810	0.0567	0.0646	0.0765	0.1123	0.1638
	2000	7570	0.0689	0.0785	0.0930	0.1364	0.1991
	2200	8330	0.0822	0.0937	0.1109	0.1627	0.2375
	2400	9480	0.0965	0.1100	0.1303	0.1911	0.2790
	2600	9840	0.1119	0.1276	0.1511	0.2216	0.3235
	2800	10600	0.1284	0.1464	0.1733	0.2542	0.3710
3000	11360	0.1459	0.1663	0.1969	0.2888	0.4215	


11.4 Hydraulic diagram

Hydraulic controls



Note!


The diagram illustrates all hydraulic controls available on the pump. The dashed frame shows a component equipped with a control lever.

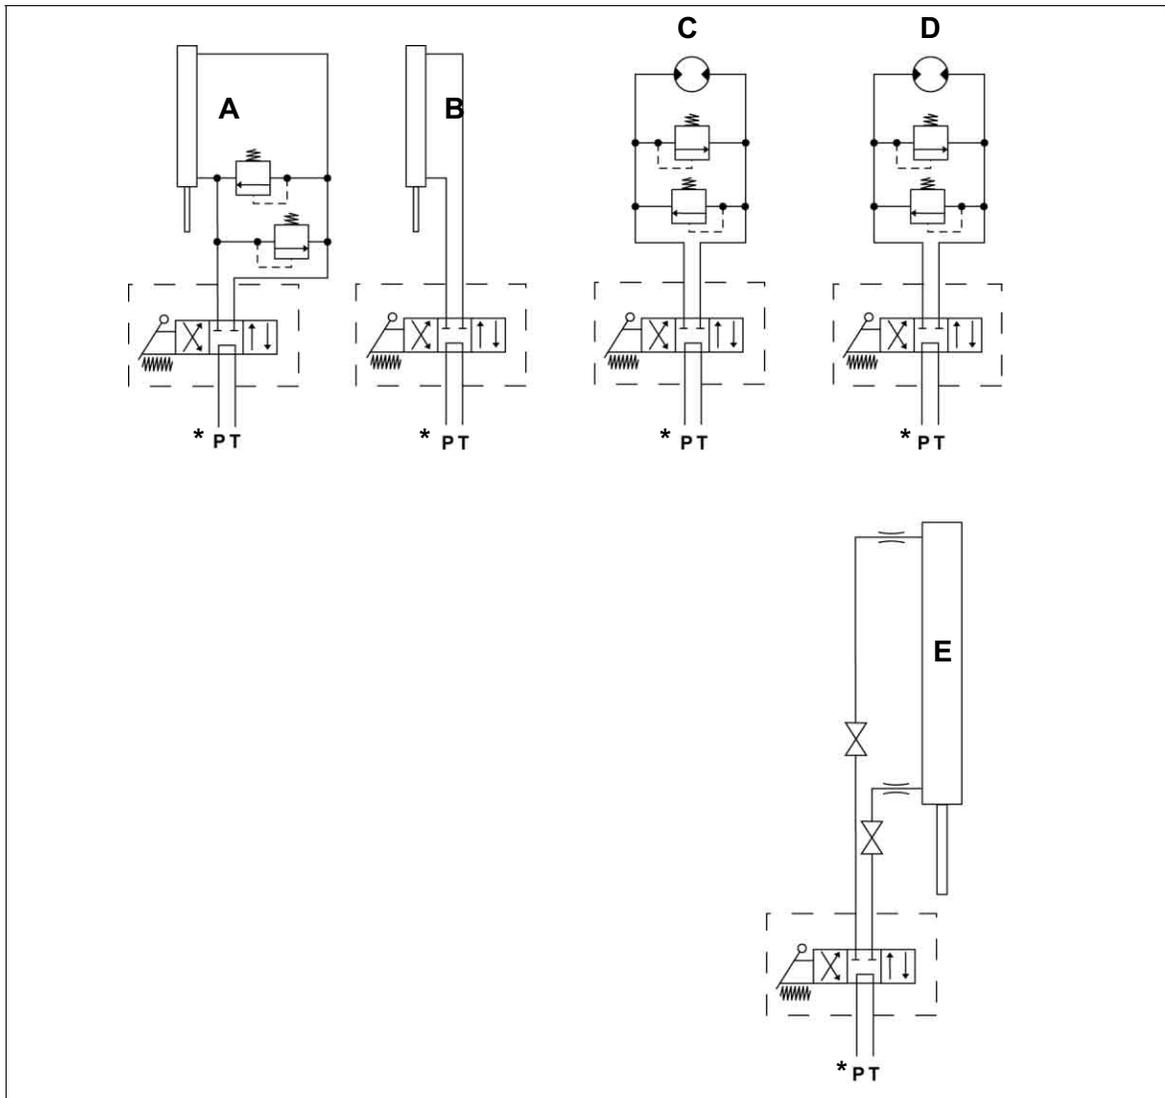

* All components equipped with a control lever may be connected together using the same tractor outlet.

A	Directional valve cylinder
B	Nozzle height cylinder
C	Nozzle rotation motor
D	Propeller rotation motor
E	3-point hitch cylinder

Cooling system

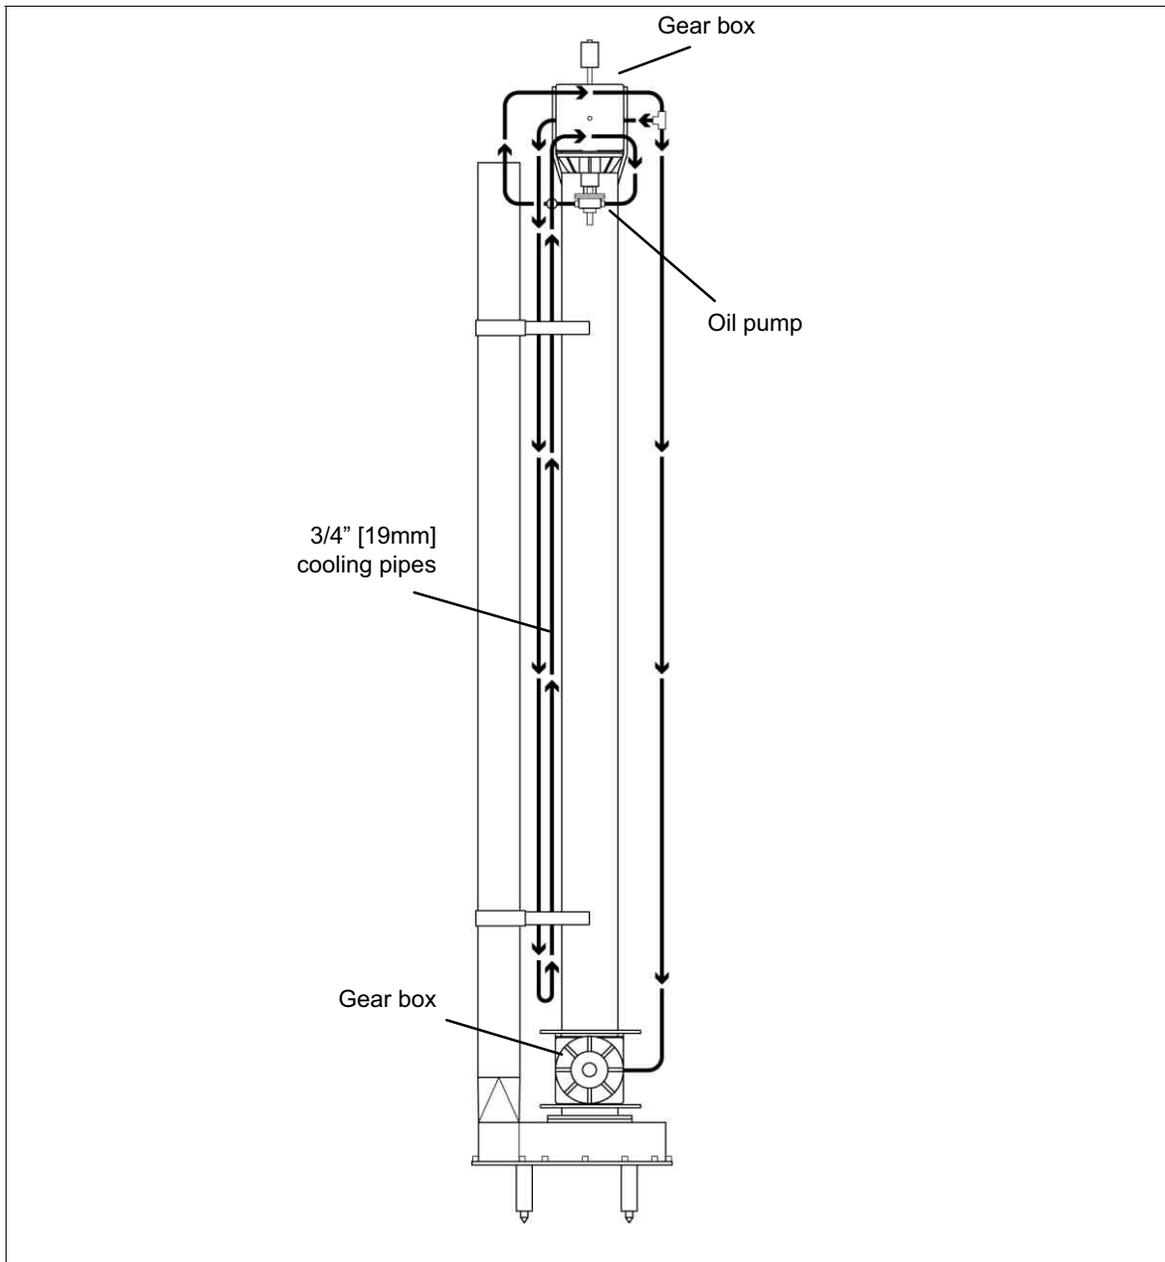



We live our values.

Excellence • Passion • Integrity • Responsibility • GEA-versity

GEA Group is a global engineering company with multi-billion euro sales and operations in more than 50 countries. Founded in 1881, the company is one of the largest providers of innovative equipment and process technology. GEA Group is listed in the STOXX® Europe 600 index.

GEA Farm Technologies Canada Inc. / Division GEA Houle

4591 boul. St-Joseph, Drummondville, Qc, J2A 0C6
✓ +1 819 477 - 7444, ☎ +1 819 477 - 5565
www.gea.com / www.gea-farmtechnologies.com

We always reserve the right to make structural and design modifications!

2010-9015-003 03-2014